



MERCURY®

V8 250/300 FourStroke AMS Outboard



SERVICE
MANUAL

VERADO




Starting serial number 2B529482

**V8 250/300
FourStroke AMS Outboard
SERVICE MANUAL**

90-8M0142590
JULY 2018

Notice to Users of This Manual

Throughout this publication, safety alerts labeled WARNING and CAUTION (accompanied by the International HAZARD

Symbol ) are used to alert the mechanic to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. Observe these alerts carefully.

These safety alerts alone cannot eliminate the hazards that they signal. Strict compliance to these special instructions when performing the service, plus common sense operation, are major accident prevention measures.

WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Additional alerts provide information that requires special attention:

NOTICE

Indicates a situation which, if not avoided, could result in engine or major component failure.

IMPORTANT: Indicates information essential to the successful completion of the task.

NOTE: Indicates information that helps in the understanding of a particular step or action.

This manual has been written and published by the Mercury Marine Service Department to aid our dealers' mechanics and company service personnel when servicing the products described herein. It is assumed that these personnel are familiar with marine product servicing procedures. Furthermore, it is assumed that they have been trained in the recommended service procedures of Mercury Marine power products, including the use of mechanics' common hand tools and the special Mercury Marine tools or recommended tools from other suppliers.

We could not possibly know of and advise the marine trade of all conceivable procedures and of the possible hazards and results of each method. Therefore, anyone who uses a service procedure or tool that is not recommended by the manufacturer must first completely satisfy himself that neither his nor the product's safety will be endangered.

All information, illustrations, and specifications contained in this manual are based on the latest product information available at the time of publication. As required, revisions to this manual will be sent to all dealers contracted by us to sell or service these products. We reserve the right to make changes to this manual without prior notification.

Refer to dealer service bulletins, operation and maintenance manuals, and installation manuals for other pertinent information concerning the products described in this manual.

Precautions

While working on the product, keep in mind that the electrical and ignition systems are capable of violent and damaging short circuits or severe electrical shocks. When performing any work where electrical terminals could possibly be grounded or touched by the mechanic, the battery cables should be disconnected at the battery.

Any time the intake or exhaust openings are exposed during service they should be covered to protect against accidental entrance of foreign material into the cylinders, which could cause extensive internal damage when the engine is started.

During any maintenance procedure, replacement fasteners must have the same measurements and strength as those removed. Numbers on the heads of the metric bolts and on the surfaces of metric nuts indicate their strength. American bolts use radial lines for this purpose, while most American nuts do not have strength markings. Mismatched or incorrect fasteners can result in damage or malfunction, or possibly personal injury. Therefore, fasteners removed should be saved for reuse in the same locations whenever possible. Where the fasteners are not satisfactory for reuse, care should be taken to select a replacement that matches the original.

Personnel should not work on or under an engine that is suspended. Engines should be attached to workstands, or lowered to the ground as soon as possible.

Replacement Parts

Use of parts other than the recommended service replacement parts will void the warranty on those parts that are damaged as a result.

WARNING

Avoid fire or explosion hazard. Electrical, ignition, and fuel system components on Mercury Marine products comply with federal and international standards to minimize risk of fire or explosion. Do not use replacement electrical or fuel system components that do not comply with these standards. When servicing the electrical and fuel systems, properly install and tighten all components.

Cleanliness and Care of Product

A Mercury Marine power product is a combination of many machined, honed, polished, and lapped surfaces with tight tolerances. When any product component is serviced, care and cleanliness are important. Proper cleaning and protection of machined surfaces and friction areas is an implied part of the repair procedure. This is considered standard shop practice even if not specifically stated.

Whenever components are removed for service, they should be retained in order. At the time of installation, they should be installed in the same locations and with the same mating surfaces as when removed.

Copyright and Trademark Information

© **MERCURY MARINE. All rights reserved. Reproduction in whole or in part without permission is prohibited.**

Alpha, Axius, Bravo One, Bravo Two, Bravo Three, Circle M with Waves Logo, GO BOLDLY, K-planes, Mariner, MerCathode, MerCruiser, Mercury, Mercury with Waves Logo, Mercury Marine, Mercury Precision Parts, Mercury Propellers, Mercury Racing, MotorGuide, OptiMax, Pro XS, Quicksilver, SeaCore, Skyhook, SmartCraft, Sport-Jet, Verado, VesselView, Zero Effort, Zeus, #1 On the Water and We're Driven to Win are registered trademarks of Brunswick Corporation. Mercury Product Protection is a registered service mark of Brunswick Corporation.

Manual Outline

1 - Important Information

- A - Master Specifications
- B - Maintenance
- C - General Information
- D - Outboard Installation
- E - Storage
- F - General Troubleshooting

2 - Electrical

- A - Ignition
- B - Charging and Starting System
- C - Accessories
- D - Electronic Shift

3 - Fuel System

- A - Induction System
- B - Service Procedures
- C - Emissions

4 - Powerhead

- A - Cylinder Block/Crankcase
- B - Cylinder Head
- C - Lubrication
- D - Cooling

5 - Midsection

- A - Pedestal/Mount Cradle and Driveshaft Housing
- B - Advanced Midsection (AMS) Power Trim
- C - Upper and Lower Cowls

6 - Gear Housing

- A - Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

7 - Steering

- A - Power Steering
- B - AMS Tie Bar Kits

8 - Color Diagrams

- A - Color Diagrams

Important Information

1

Electrical

2

Fuel System

3

Powerhead

4

Midsection

5

Gear Housing

6

Steering

7

Color Diagrams

8

Important Information

Section 1A - Master Specifications

**1
A**

Table of Contents

V8 AMS General Specifications.....	1A-2	Cooling System Specifications.....	1A-6
Ignition Specifications.....	1A-3	AMS Pedestal/Mount Cradle and Driveshaft Housing	
Charging and Starting Specifications.....	1A-3	Specifications.....	1A-6
Fuel System Specifications.....	1A-3	Advanced Midsection (AMS) Power Trim Specifications	
V8 Cylinder Block/Crankcase Specifications.....	1A-4	1A-6
V8 Cylinder Head Specifications.....	1A-4	Gear Housing Specifications (5.44 in. Diameter).....	1A-6
Lubrication System Specifications.....	1A-6	Power Steering Specifications.....	1A-7

V8 AMS General Specifications

Description		Specification
Kilowatts (horsepower)		184 kW (250 hp) 221 kW (300 hp)
Cylinder configuration		V8—64°, with dual overhead cam (DOHC) and 32 valves
Dry weight*	L	272 kg (600 lb)
	XL	277 kg (610 lb)
	XXL	281 kg (620 lb)
Displacement		4576 cc/4.6 L (279.2 cid)
Cylinder bore		92 mm (3.62 in.)
Stroke		86 mm (3.38 in.)
Engine speed	Idle speed in neutral**	600 RPM
	Idle charge compensation***	600–725 RPM
	Troll control speed (if equipped)	550–1000 RPM
	WOT	250/300 Verado—5200–6000 RPM 300 SeaPro—4800–5600 RPM
Induction system		SmartCraft DTS® electronic throttle, naturally aspirated
Fuel system		Electronic fuel injection—EFI computer controlled with Advanced Range Optimization
Recommended fuel		Unleaded Regular 87 Octane minimum (R+M/2) or 91 RON fuel, 10% Ethanol maximum
Ignition system		SmartCraft propulsion control module (PCM) 112 digital inductive
Charging system		Regulated belt-driven 85 A, 1150 W maximum output Regulated belt-driven 115 A, 1550 W maximum output
Starting system		Electric start with SmartStart protection
Recommended spark plug		NGK LKAR7C-9
Spark plug gap		0.9 mm (0.035 in.)
Spark plug hex size		14 mm
Spark plug torque		20 Nm (177 lb-in.)
Spark plug hole size		12 mm
Firing order		1-2-7-3-4-5-6-8
Required battery type		12-volt absorbed glass mat (AGM)
Minimum battery rating****	USA (SAE)	800 marine cranking amps (MCA) with a minimum reserve capacity of 135 RC25 rating
	International (EN)	975 cold cranking amps (CCA) with a minimum 65 amp-hour (Ah)
Exhaust system		Through the propeller
Cooling system		Water-cooled; thermostat with pressure control
Thermostat	Valve stroke—minimum, at full open temperature	10.0 mm (0.39 in.)
	Start to open temperature	57–61 °C (134.6–141.8 °F)
	Full open temperature	77 °C (170.6 °F)
Lubrication system		Integrated dry sump
Oil capacity		6.6 L (7.0 US qt)
Recommended oil	Verado	NMMA™ Certified FC-W® SAE 10W-30
	SeaPro	NMMA™ Certified FC-W® SAE 25W-40 or FC-W® SAE 10W-30
Engine control system		SmartCraft PCM 112 digital throttle and shift (DTS)
Trim system		Power trim
Maximum trim range		20° (–6° to 14°)

Description	Specification
Power trim fluid	Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) Type F, FA, Dexron II, or Dexron III
Steering system	Power—required
CARB star rating	3

* Dry weight includes gear lube and steering cylinder.

** Engine at normal operation temperature.

*** The idle charge compensation may automatically increase the engine speed up to 725 RPM to compensate for a low battery charge condition. The increased idle RPM will charge the battery at a higher rate. Activating troll control (optional accessory) will override the idle charge compensation feature.

**** Battery manufacturers may rate and test their batteries to different standards. MCA, CCA, Ah, and reserve capacity (RC) are the ratings recognized by Mercury Marine. Manufacturers that use standards different than these, such as equivalent MCA, do not meet Mercury Marine battery requirements.

Ignition Specifications

Description	Specification
Full throttle RPM range	SeaPro
	Verado
Idle RPM	4800–5600
Idle RPM	5200–6000
Idle RPM	600
Ignition type	Digital inductive
Spark plug type	NGK LKAR7C-9
Spark plug gap	0.9 mm (0.035 in.)
Spark plug hex size	14 mm
Spark plug torque	20 Nm (177 lb-in.)
Firing order	1-2-7-3-4-5-6-8
Ignition timing at idle	Not adjustable; PCM controlled (approximately 2° ATDC)
Ignition timing at WOT	Not adjustable; PCM controlled

Charging and Starting Specifications

Description	Specification
Alternator model series	8Si
Alternator output (regulated)	9Si
1800 RPM	37 A
6000 RPM	42 A
Regulator voltage set point	85 A
14.5 ± 0.25 V	115 A
Starter current draw	Under load
170–190 A	No load
60–80 A	

Fuel System Specifications

Fuel System Specifications	
Recommended fuel octane rating	87 (R+M)/2, 91 RON
Approximate fuel pressure at idle	290–340 kPa (42.1–43.9 psi)
Approximate fuel pressure engine not running	340–370 kPa (49.3–53.7 psi)
Fuel filtration	
Inlet filter, engine mounted	10 microns
Inlet filter, remote boat mounted	10 microns
High-pressure, at fuel rail inlet	46 microns
Fuel pump current draw	12 A ± 2 A (at 14.4 V)
Maximum fuel system inlet vacuum	10.16 kPa (3.0 in. Hg), (1.47 psi)

V8 Cylinder Block/Crankcase Specifications

V8 Cylinder Block/Crankcase Specifications	
Number of cylinders	8
V-angle	64°
Displacement	4576 cc/4.6 L (279.2 cid)
Compression ratio	10:1
Standard bore	92.00 mm (3.6220 in.)
Standard bore service limit	92.015 mm (3.6226 in.)
Stroke	86.00 mm (3.386 in.)
Cylinder bore maximum taper	0.02 mm (0.0007 in.)
Cylinder bore maximum out of round	0.015 mm (0.0006 in.)
Cylinder block main bearing bore	64.988–65.012 mm (2.5586–2.5595 in.)
Crankshaft main bearing journal	59.984–60.000 mm (2.3616–2.3622 in.)
Connecting rod bearing journal	53.984–54.000 mm (2.1254–2.1259 in.)
Crankshaft end play	0.00–0.432 mm (0.000–0.017 in.)
Crankshaft runout	0.05 mm (0.002 in.)
Crankshaft main bearing oil clearance—measured at 20 °C (68 °F), 90° from the split line	0.036–0.070 mm (0.0015–0.0027 in.)
Connecting rod bearing oil clearance—measured at 20 °C (68 °F), 90° from the split line	0.046–0.074 mm (0.0019–0.0029 in.)
Crankshaft thrust bearing surface width	25.95–26.05 mm (1.0217–1.0255 in.)
Connecting rod wrist pin bore diameter	20.014–20.022 mm (0.7880–0.7882 in.)
Connecting rod bore diameter (without bearing inserts)	57.000–57.016 mm (2.2441–2.2447 in.)
Piston skirt standard diameter	91.927–91.937 mm (3.6192–3.6195 in.)
Piston wrist pin bore diameter	20.005–20.010 mm (0.7876–0.7878 in.)
Wrist pin diameter	19.996–20.001 mm (0.7873–0.7874 in.)
Top ring groove width	1.22–1.25 mm (0.0480–0.0492 in.)
Second ring groove width	1.01–1.03 mm (0.0398–0.0405 in.)
Third ring groove width	2.01–2.03 mm (0.0791–0.0799 in.)
Top ring thickness—maximum	1.20 mm (0.0472 in.)
Second ring thickness—maximum	1.00 mm (0.0393 in.)
Top ring side clearance	0.02–0.05 mm (0.0008–0.0019 in.)
Second ring side clearance	0.01–0.03 mm (0.0004–0.0011 in.)
Top ring end gap	0.20–0.215 mm (0.008–0.0084 in.)
Second ring end gap	0.40–0.425 mm (0.016–0.0167 in.)
Oil ring end gap (top and bottom) (expander not applicable)	0.40–0.425 mm (0.016–0.0167 in.)

V8 Cylinder Head Specifications

Description	Specification
Head deck maximum warp	0.1 mm (0.0039 in.)
Number of valves	32
Number of valves per cylinder	4

Description	Specification
Camshaft bearing inside diameter (cylinder head)	26.000–26.021 mm (1.0236–1.0244 in.)
Camshaft bearing journal	25.96–25.98 mm (1.022–1.023 in.)
Camshaft lobe height	
Intake	43.02 mm (1.694 in.)
Exhaust	44.24 mm (1.742 in.)
Valve lash clearance	
Intake	0.125–0.225 mm (0.005–0.009 in.)
Exhaust	0.300–0.400 mm (0.012–0.016 in.)
Valve seat angles (referenced relative to the valve guide axis)	
Intake	30°, 44° ± 0.25°, 60°
Exhaust	35°, 44° ± 0.25°, 55°
Valve seat width (44°)	
Intake	1.0 ± 0.1 mm (0.039 ± 0.0039 in.)
Exhaust	1.2 ± 0.1 mm (0.047 ± 0.0039 in.)
Valve spring height	
Uncompressed	Reference 46.1 mm (1.815 in.)
Compressed to 33.66 mm (1.3252 in.)	157–173 Nm (35.295–38.892 lb-ft) spring load
Compressed to 24.31 mm (0.9149 in.)	356–390 Nm (80.03–87.67 lb-ft) spring load
Valve outside diameter	
Intake	36.9–37.1 mm (1.4528–1.4606 in.)
Exhaust	30.9–31.1 mm (1.2165–1.2244 in.)
Valve face angle (referenced relative to the end face of the valve)	
Intake	44.75°–45.25°
Exhaust	43.75°–44.25°
Valve margin width	
Intake	0.875 mm (0.034 in.)
Exhaust	1.331 mm (0.052 in.)
Valve stem diameter	
Intake	5.4645–5.4805 mm (0.2151–0.2158 in.)
Exhaust	5.456–5.472 mm (0.2148–0.2154 in.)
Valve stem runout (service limit measured at valve face)	
Intake and exhaust	0.030 mm (0.0012 in.)
Valve height	
Intake	88.49 ± 0.25 mm (3.484 ± 0.0098 in.)
Exhaust	87.667 ± 0.25 mm (3.451 ± 0.0098 in.)
Valve guide bore inside diameter	
Intake and exhaust	5.500–5.512 mm (0.2165–0.217 in.)
Valve stem to valve guide clearance	
Intake	0.0195–0.0475 mm (0.0008–0.0019 in.)
Exhaust	0.028–0.056 mm (0.0011–0.0022 in.)
Valve guide height (dimension from spring seat to end of guide)	
Intake	14.5 mm (0.570 in.)
Exhaust	14.5 mm (0.570 in.)
Valve bucket	
Intake bucket bore inside diameter	32.000–32.025 mm (1.2589–1.2608 in.)
Exhaust bucket bore inside diameter	32.005–32.025 mm (1.2600–1.2608 in.)
Valve bucket outside diameter	31.964–31.980 mm (1.2584–1.2591 in.)
Bucket to bore clearance	0.020–0.061 mm (0.0008–0.0024 in.)

Lubrication System Specifications

Description		Specification
Engine capacity with filter replacement		6.6 L (7.0 US qt)
Oil pressure	Idle RPM (oil cold or warm)*	150–650 kPa (21–95 psi)
	WOT RPM (oil cold or warm)*	400–900 kPa (58–130 psi)
	Idle RPM (oil hot)	60–150 kPa (8–22 psi)
	WOT RPM (oil hot)	350–550 kPa (50–80 psi)
<i>*When the oil is cold, the pressure will be toward the upper end of the range. As the oil warms, the pressure will be toward the lower end of the range.</i>		

Cooling System Specifications

Description		Specification
Cooling system		Water cooled, thermostat control
Water pressure	At 600 RPM (idle)	10–20 kPa (1.5–2.9 psi)
	At 6000 RPM (WOT)	60–260 kPa (8.7–37.7 psi)
Thermostat	Valve stroke (minimum) at full open temperature	10.0 mm (0.39 in.)
	Start to open temperature	57–61 °C (134.6–141.8 °F)
	Full open temperature	77 °C (170.6 °F)

AMS Pedestal/Mount Cradle and Driveshaft Housing Specifications

Description		Specification
Recommended transom height	L shaft	508 mm (20 in.)
	XL shaft	635 mm (25 in.)
	XXL shaft	762 mm (30 in.)
Steering pivot range		60°
Full tilt up angle		67°
Trim angle (on 14° boat transom)		–6° to +14°
Allowable transom thickness	Minimum	44.5 mm (1.75 in.)
	Maximum	70 mm (2.75 in.)

Advanced Midsection (AMS) Power Trim Specifications

Power Trim Specifications	
Trim up relief valve—tilt extended relief pressure	17554 kPa (2546 psi) minimum
Trim down relief valve pressure	1758–2978 kPa (255–432 psi)
System fluid	Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) Type F, FA, Dexron II, or Dexron III

Gear Housing Specifications (5.44 in. Diameter)

Description	Specification
Propeller shaft	31.75 mm (1.25 in.) diameter, 19-spline
Propeller hub	
Option 1	Flo-Torq II HD solid hub kit
Option 2	Flo-Torq SSR HD hub kit
Gear ratio	
Standard	1.75:1
Optional	1.85:1
Gear teeth count pinion/forward	
1.75:1	12/21

Description	Specification
1.85:1	13/24
Gear housing lubricant capacity	
Right-hand	720 ml (24.4 fl oz)
Left-hand	680 ml (23.0 fl oz)
Right-hand—SeaPro	980 ml (33.1 fl oz)
Left-hand—SeaPro	980 ml (33.1 fl oz)
Gear lubricant type	High Performance Gear Lubricant
Propeller shaft lubricant	2-4-C with PTFE
Propeller shaft runout limit (bent)	0.23 mm (0.009 in.)
Propeller shaft end play	No end play
Pinion height tool (optional)	91-8M0046443
Pinion height	0.635 mm (0.025 in.)
Backlash indicator tool	8M0053505
Align dial indicator pin with mark	5
Front gear backlash—right-hand rotation (forward gear)	0.508–0.609 mm (0.020–0.024 in.)
Front gear backlash—left-hand rotation (reverse gear)	0.787–0.965 mm (0.031–0.038 in.)
Rear gear backlash—right-hand rotation 1.75:1 (reverse gear)	0.787–0.940 mm (0.031–0.037 in.)
Rear gear backlash—right-hand rotation 1.85:1 (reverse gear)	1.067–1.219 mm (0.042–0.048 in.)
Rear gear backlash—left-hand rotation (forward gear)	0.457–0.584 mm (0.018–0.023 in.)
Water pressure	
At 600 RPM (idle)	10–20 kPa (1.5–2.9 psi)
At 6000 RPM (WOT)	60–260 kPa (8.7–37.7 psi)
Gear housing leak test pressure (without gear lubricant, 5 minutes without leakage)	103.4 kPa (15 psi)

IMPORTANT: Backlash values are as measured with the backlash indicator tool set at the "5" mark and are only valid if the pinion height is within specification.

Power Steering Specifications

Power Steering Specifications	
Fluid type	SAE 0W-30 Synthetic Power Steering Fluid
Capacity	Typical 1–2 liters (1–2 US qt)
Current draw	Shall not exceed 75 amps
Steering ratio (40 cc helm and single steering cylinder, lock to lock)	4.1 turns
Steering ratio (50 cc helm with dual steering cylinders, lock to lock)	6.5 turns

Notes:

Important Information





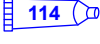


Section 1B - Maintenance

1 B



Table of Contents

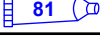Cleaning Care Recommendations.....	1B-2	Fuel System.....	1B-10
Do Not Use Caustic Cleaning Chemicals.....	1B-2	Fuel Line Inspection.....	1B-10
Cleaning Gauges.....	1B-2	Low-Pressure Fuel Filter.....	1B-10
Cleaning Remote Controls.....	1B-3	Corrosion Control Anodes.....	1B-12
Cleaning Care for Top and Bottom Cowls.....	1B-3	Propeller Replacement—31.75 mm (1-1/4 in.) Diameter	
Cleaning Care for the Powerhead (Saltwater Use).....	1B-3	Propeller Shaft.....	1B-12
EPA Emissions Regulations.....	1B-3	Spark Plug Inspection and Replacement.....	1B-13
Emission Certification Label.....	1B-4	Fuses.....	1B-15
Owner Responsibility.....	1B-4	Alternator Drive Belt	1B-16
Inspection and Maintenance Schedule.....	1B-4	Checking Power Trim Fluid.....	1B-16
Before Each Use.....	1B-4	Checking Power Steering Fluid.....	1B-16
After Each Use.....	1B-4	Changing Engine Oil and Filter.....	1B-17
Every 100 Hours of Use or Once Yearly, Whichever		Engine Oil Capacity.....	1B-17
Occurs First.....	1B-4	Oil Change On Land Procedure.....	1B-17
Every 300 Hours of Use or Three Years.....	1B-5	Oil Change On Water Procedure.....	1B-17
Before Periods of Storage.....	1B-5	Changing Oil Filter	1B-19
Maintenance Schedule Decals.....	1B-5	Oil Filling.....	1B-19
Maintenance Schedule Decal Icons	1B-5	Checking Engine Oil Level.....	1B-19
Verado V8 Models Maintenance Schedule Decal.....	1B-6	Dipstick Bead Oil Level Overview.....	1B-20
SeaPro V8 Models Maintenance Schedule Decal.....	1B-7	Exhaust Water Strainer Inspection.....	1B-20
Flushing the Cooling System.....	1B-7	Gearcase Lubricant.....	1B-21
Top Cowl Removal and Installation.....	1B-7	Gearcase Lubrication.....	1B-21
Removal.....	1B-7	Recommended Gearcase Lubrication.....	1B-21
Installation.....	1B-8	Gearcase Lubricant Capacity.....	1B-21
Battery Inspection	1B-9	Draining and Filling the Gearcase - 137 mm (5.4 in.)	
Battery Cables and Clean Power Harness.....	1B-9	1B-21
Battery Connections.....	1B-9	Draining and Filling the Gearcase SeaPro Models...	1B-22
Order of Connection.....	1B-10		

Lubricant, Sealant, Adhesives

Tube Ref No.	Description	Where Used	Part No.
	Quickleen Engine & Fuel System Cleaner	Fuel tank	8M0047931
	Extreme Grease	Propeller shaft splines	8M0071842
	Anti-Seize Compound	Spark plug threads	92-898101389
	2-4-C with PTFE	Fuel filter grommet	92-802859A 1
		Propeller shaft splines	
	Power Trim and Steering Fluid	Power trim system	92-858074K01
	Corrosion Guard	External metal surfaces of the powerhead and powerhead components.	92-802878 55
	Synthetic Power Steering Fluid SAE 0W-30	Power steering system	92-858077K01

Special Tools

Crankcase Oil Pump	802889A1
 11591	Aids in the removal of engine oil without draining the crankcase.
Oil Drain Hose	8M0137866
 64627	Aids in the removal of engine oil without draining the crankcase. Connect to the crankcase oil pump.

Cleaning Care Recommendations

Do Not Use Caustic Cleaning Chemicals

IMPORTANT: Do not use caustic cleaning chemicals on the outboard power package. Some cleaning products contain strong caustic agents such as hull cleaners with hydrochloric acid. These cleaners can degrade some of the components they come in contact with including critical steering fasteners.

Damage to steering fasteners may not be obvious during visual inspection and this damage may lead to catastrophic failure. Some caustic cleaning chemicals may cause or accelerate corrosion. Exercise caution when using cleaning chemicals around the engine and follow the recommendations on the packaging of the cleaning product.

Cleaning Gauges

IMPORTANT: Never use high-pressure water to clean gauges.

Routine cleaning of the gauges is recommended to prevent a buildup of salt and other environmental debris. Crystallized salt can scratch the gauge display lens when using a dry or damp cloth. Ensure that the cloth has a sufficient amount of fresh water to dissolve and remove salt or mineral deposits. Do not apply aggressive pressure on the display lens while cleaning.

When water marks cannot be removed with a damp cloth, mix a 50/50 solution of warm water and isopropyl alcohol to clean the display lens. **Do not use** acetone, mineral spirits, turpentine type solvents, or ammonia based cleaning products. The use of strong solvents or detergents may damage the coating, the plastics, or the rubber keys on the gauges. If the gauge has a sun cover available, it is recommended that the cover be installed when the unit is not in use to prevent UV damage to the plastic bezels and rubber keys.

Cleaning Remote Controls

IMPORTANT: Never use high-pressure water to clean remote controls.

Routine cleaning of the remote control external surfaces is recommended to prevent a buildup of salt and other environmental debris. Use a cloth towel which has a sufficient amount of fresh water to dissolve and remove salt or mineral deposits.

When water marks cannot be removed with a damp cloth, mix a 50/50 solution of warm water and isopropyl alcohol to clean the remote control. **Do not use** acetone, mineral spirits, turpentine type solvents, or ammonia based cleaning products. The use of strong solvents or detergents may damage the coating, the plastics, or the rubber components on the remote control.

Cleaning Care for Top and Bottom Cowls


IMPORTANT: Dry wiping (wiping the plastic surface when it is dry) will result in minor surface scratches. Always wet the surface before cleaning. Do not use detergents containing hydrochloric acid. Follow the cleaning and waxing procedure.

Cleaning and Waxing Procedure

1. Before washing, rinse the cowls with clean water to remove dirt and dust that may scratch the surface.
2. Wash the cowls with clean water and a mild nonabrasive soap. Use a soft clean cloth when washing.
3. Dry thoroughly with a soft clean cloth.
4. Wax the surface using a nonabrasive automotive polish (polish designed for clear coat finishes). Remove the applied wax by hand using a clean soft cloth.
5. To remove minor scratches, use Mercury Marine Cowl Finishing Compound (92-859026K 1).

Cleaning Care for the Powerhead (Saltwater Use)

IMPORTANT: If the outboard is operated in saltwater, remove the top cowl. Inspect the powerhead and powerhead components for salt build-up. Wash off any salt build-up from the powerhead and powerhead components with fresh water. Keep water spray out of the air filter/intake and alternator. After washing, allow the powerhead and components to dry. Apply Quicksilver or Mercury Precision Lubricants Corrosion Guard spray on the external metal surfaces of the powerhead and powerhead components. Do not allow the Corrosion Guard spray to come in contact with the alternator drive belt, belt pulleys, or the outboard motor mounts. The alternator drive belt could slip and be damaged if it becomes coated with any lubricant or Corrosion Guard spray.


Tube Ref No.	Description	Where Used	Part No.
 120	Corrosion Guard	External metal surfaces of the powerhead and powerhead components.	92-802878 55

EPA Emissions Regulations

All new outboards manufactured by Mercury Marine are certified to the United States Environmental Protection Agency, as conforming to the requirements of the regulations for the control of air pollution from new outboard motors. This certification is contingent on certain adjustments set to factory standards. For this reason, the factory procedure for servicing the product must be strictly followed and, wherever practicable, returned to the original intent of the design. **Maintenance, replacement, or repair of the emission control devices and systems may be performed by any marine spark ignition (SI) engine repair establishment or individual.**

Emission Certification Label

An emission certification label, showing emission levels and engine specifications directly related to emissions, is placed on the engine at the time of manufacture.

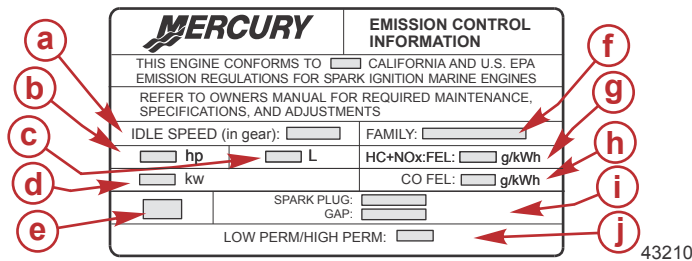

- a - Idle speed
- b - Engine horsepower
- c - Piston displacement
- d - Engine power - kilowatts
- e - Date of manufacture
- f - US EPA engine family name
- g - Regulated emission limit for the engine family
- h - Regulated emission limit for the engine family
- i - Recommended spark plug and gap
- j - Percent of fuel line permeation

Owner Responsibility

The owner/operator is required to have routine engine maintenance performed to maintain emission levels within prescribed certification standards.

The owner/operator is not to modify the engine in any manner that would alter the horsepower or allow emission levels to exceed their predetermined factory specifications.

Inspection and Maintenance Schedule

Before Each Use

- Check engine oil level. Refer to **Checking Engine Oil Level**.
- Check that the lanyard stop switch stops the engine.
- Inspect the outboard for tightness to the boat transom. If any looseness of the outboard or mounting fasteners exist, tighten the outboard mounting fasteners to the specified torque. When looking for signs of looseness, look for loss of outboard transom bracket material or paint caused by movement between the outboard mounting fasteners and the outboard transom brackets. Also look for signs of movement between the outboard transom brackets and the boat transom (lift plate/ setback bracket).

Description	Nm	lb-in.	lb-ft
Outboard mounting locknuts and bolts - standard boat transom	75	–	55.3
Outboard mounting locknuts and bolts - metal lift plates and setback brackets	122	–	90

- Visually inspect the fuel system for deterioration or leaks.
- Check the steering system for binding or loose components.
- Check the propeller blades for damage.
- Inspect the hydraulic steering fittings and hoses for leaks or damage, if equipped.
- Inspect the hydraulic steering fluid level, if equipped.

After Each Use

- Flush out the outboard cooling system if operating in salt, polluted, or muddy water. Refer to **Flushing the Cooling System**.
- Wash off all salt deposits and flush out the exhaust outlet of the propeller and gearcase with fresh water if operating in saltwater.
- If operating in saltwater, inspect the powerhead and powerhead components for salt buildup. Refer to **Cleaning Care for the Powerhead (Saltwater Use)**.


Every 100 Hours of Use or Once Yearly, Whichever Occurs First

- Inspect the exhaust water strainer. Refer to **Exhaust Water Strainer Inspection**.
- Change engine oil and replace the oil filter. The oil should be changed more often when the engine is operated under adverse conditions, such as extended trolling. Refer to **Changing Engine Oil and Filter**.
- Check the engine mounted water-separating low-pressure fuel filter for water or contaminants. Replace the filter if required. Refer to **Fuel System**.


- Check the boat mounted water-separating fuel filter for the presence of water or contaminants. Drain the water or replace the filter if required.
- Remove the propeller and lubricate the propeller shaft. Refer to **Propeller Replacement**.
- Inspect the thermostat visually for corrosion or a broken spring. Ensure the thermostat closes completely at room temperature—dealer service.
- Check the outboard mounting fasteners that fasten the outboard to the boat transom. Tighten the fasteners to the specified torque—dealer service.

Description	Nm	lb-in.	lb-ft
Outboard mounting locknuts and bolts - standard boat transom	75	–	55.3
Outboard mounting locknuts and bolts - metal lift plates and setback brackets	122	–	90

- Check corrosion control anodes. Check more frequently when used in saltwater. Refer to **Corrosion Control Anodes**.
- Drain and replace gearcase lubricant. Refer to **Gearcase Lubrication**.
- Inspect battery. Refer to **Battery Inspection**.
- Saltwater usage: Remove and inspect spark plugs for corrosion and replace as necessary. Apply Anti-Seize Compound only on threads of spark plug prior to installation. Refer to **Spark Plug Inspection and Replacement**.

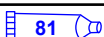Tube Ref No.	Description	Where Used	Part No.
 81	Anti-Seize Compound	Spark plug threads	92-898101389

- Check tightness of bolts, nuts, and other fasteners—dealer service.
- Add Quickleen to the fuel tank.

Tube Ref No.	Description	Where Used	Part No.
	Quickleen Engine & Fuel System Cleaner	Fuel tank	8M0047931

- Check cowl seals to ensure seals are intact and not damaged.
- Check that the intake silencer is in place, if equipped.
- Check that the idle relief muffler is in place, if equipped.
- Check for loose hose clamps and rubber boots on the air intake assembly, if equipped.

Every 300 Hours of Use or Three Years

- Check power trim fluid. Refer to **Checking Power Trim Fluid**.
- Replace water pump impeller—dealer service.¹
- Lubricate the splines on the upper driveshaft—dealer service.
- Check wiring and connectors—dealer service.
- Replace alternator drive belt. Refer to **Alternator Drive Belt**—dealer service.
- Replace the spark plugs.



Before Periods of Storage

- Refer to **Storage** section.

Maintenance Schedule Decals









Maintenance Schedule Decal Icons

A maintenance schedule decal is located on the engine to remind the owner or operator when the power package important maintenance items require attention. The following table shows the icons and a general description of the scheduled maintenance items.

Icon	Definition	Icon	Definition
 58249	Replace	 58250	Inspect

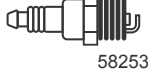










1. Replace the water pump impeller more often if overheating occurs or reduced water pressure is noted.

Maintenance


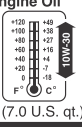
Icon	Definition	Icon	Definition
 58251	Engine oil and filter	 58252	Gearcase lubricant
 58253	Spark plugs	 58254	Thermostat
 58255	Low-pressure fuel filter	 58256	Anodes
 58257	Accessory drive belt	 58258	Water pump impeller

Verado V8 Models Maintenance Schedule Decal

MAINTENANCE SCHEDULE
FOURSTROKE

EVERY 100 HOURS OF USE OR ONCE YEARLY	EVERY 300 HOURS OF USE OR THREE YEARS
REPLACE	REPLACE
<ul style="list-style-type: none">  Engine Oil and Filter  Gearcase Lubricant 	<ul style="list-style-type: none">  Spark Plugs*  Low Pressure Fuel Filter
INSPECT	
<ul style="list-style-type: none">  Anodes  Thermostat  Spark Plugs*  Low Pressure Fuel Filter 	<ul style="list-style-type: none">  Accessory Drive Belt  Water Pump Impeller
	
For additional maintenance and storage preparation see Owner's Manual	

Specifications

<p>Full Throttle RPM: 5200-6000</p> <p>Neutral Idle RPM: 600</p>	<p>* In Saltwater: Apply Anti-Seize 20 Nm (15 lb-ft)</p> <p>8M0135348 0.9 mm (0.035 in.)</p>	<p>Engine Oil</p>   <p>6.6 L (7.0 U.S. qt.)</p>
--	--	---

64043

SeaPro V8 Models Maintenance Schedule Decal

COMMERCIAL MAINTENANCE SCHEDULE

EVERY 100 HOURS	SEAPRO	EVERY 300 HOURS
REPLACE		REPLACE
Engine Oil and Filter		Spark Plugs*
Gearcase Lubricant		Low Pressure Fuel Filter
INSPECT		Accessory Drive Belt
Anodes		Water Pump Impeller
Thermostat		
Spark Plugs*		
Low Pressure Fuel Filter		

For additional maintenance and storage preparation see Owner's Manual

Specifications

Full Throttle RPM: 4800-5600 Neutral Idle RPM: 600 Valve Lash: Inspect Every 1000 Hrs	*In Saltwater: Apply Anti-Seize 20 Nm (15 lb-ft) 8M0135348 0.9 mm (0.035 in.)	Engine Oil  6.6 L (7.0 U.S. qt.)
---	---	--


64045

Flushing the Cooling System

Flush the internal water passages of the outboard with fresh water after each use in salt, polluted, or muddy water. This will help prevent a buildup of deposits from clogging the internal water passages.

NOTE: The outboard can be tilted or in the vertical operating position during flushing.

1. With the engine turned off, place the outboard in either the operating position (vertical) or in a tilted position.
2. Remove the flush connector from the bottom cowl.
3. Remove the cover from the flush connector and thread a water hose into the flush connector.

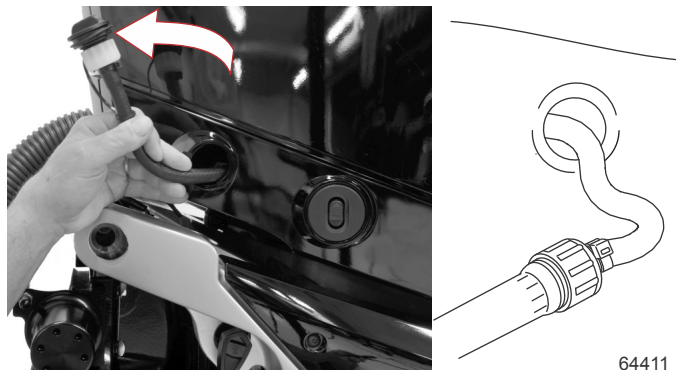

4. Turn on the water tap (1/2 maximum) and let the water flush through the cooling system for about 15 minutes.
5. When flushing is complete, turn off the water and disconnect the water hose.
6. Install the cover on the flush connector. Place the flush connector back into the bottom cowl.


Top Cowl Removal and Installation

NOTE: It is recommended to remove and install the cowl while standing inside the boat.

Removal


1. Tilt the outboard up so the top of the cowl is facing you.

2. Push down on the port side of the service access door to unlock and open the door.

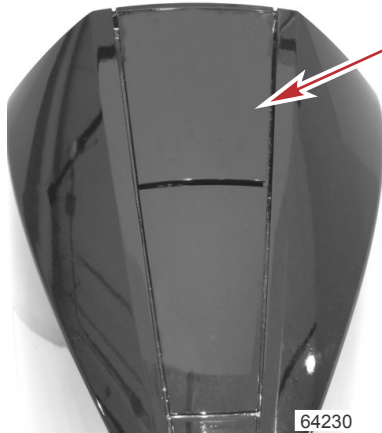

Push here to unlock

3. Press on the red lock button and lift the handle.

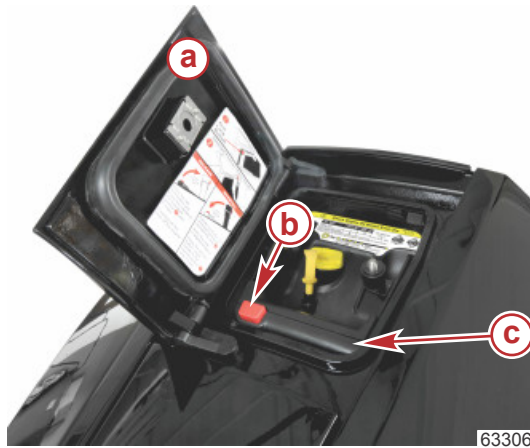

- a - Service access door
- b - Red lock button
- c - Handle

4. Push the handle towards the aft to lock the handle into the cowl lift position.



Handle locked in the lift position

5. With a firm grip on the handle, carefully lift the cowl off the engine.

Installation

1. With a firm grip on the handle, carefully lower the top cowl over the engine.

- Verify the cowl is correctly aligned by checking the cowl alignment guides on the port and starboard side of the cowl. If there is misalignment, one side of the cowl will have a gap that is larger than the other side.
NOTE: It may be necessary to slightly lift the larger gap side of the cowl to correctly position the alignment guides.
- Gently push down on the cowl.
- Push the red lock button and pull the handle. Continue to push the handle down into the locked position.
- Close the service access door.

Battery Inspection


The battery should be inspected at periodic intervals to ensure proper engine starting capability.

IMPORTANT: Read the safety and maintenance instructions which accompany your battery.

- Turn off the engine before servicing the battery.
- Ensure the battery is secure against movement.
- Battery cable terminals should be clean, tight, and correctly installed. Positive to positive and negative to negative.
- Ensure the battery is equipped with a nonconductive shield to prevent accidental shorting of battery terminals.


Battery Cables and Clean Power Harness

The battery cable connections should be checked often for corrosion or loose retaining hardware. Maintaining this electrical connection helps ensure the engine operation and accessories functionality remains trouble-free. The engine starting battery cables and the clean power harness wires must be secured to the engine starting battery with nuts. Wing nuts are not acceptable. The clean power harness must be secured to one of the battery cables with a cable tie or other type of secure fastener.

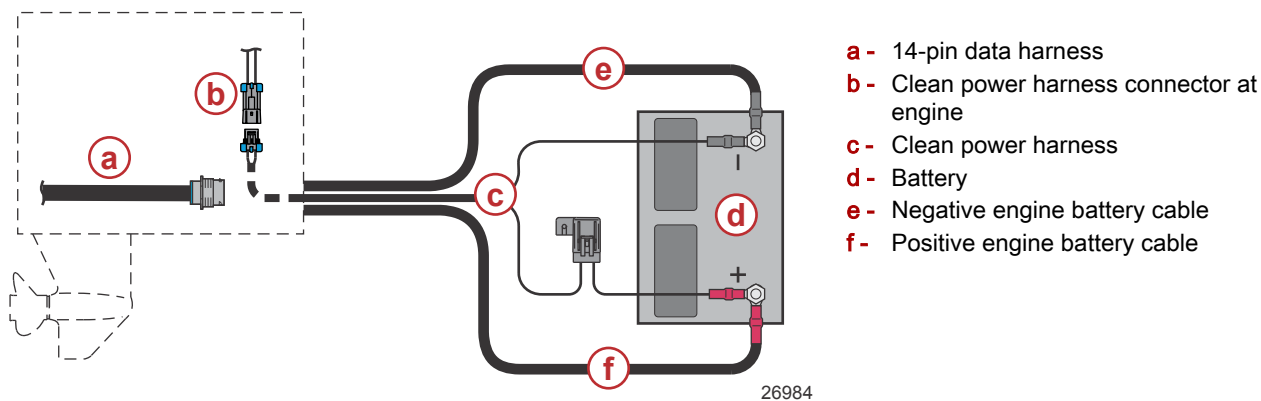

If the clean power harness fuse is open, try to locate and correct the cause of the overload. If the cause is not found, the fuse may open again. Remove the clean power fuse and look at the silver band inside the fuse. If the band is broken (open), replace the fuse with the same rating (5 amp) and type fuse.

IMPORTANT: An ATC fuse has the fuse element enclosed or sealed inside the plastic housing. This type of fuse must be used for marine applications. Marine applications are exposed to environments that may have the potential to accumulate explosive vapors. ATO fuses have exposed elements and should never be used in marine applications.

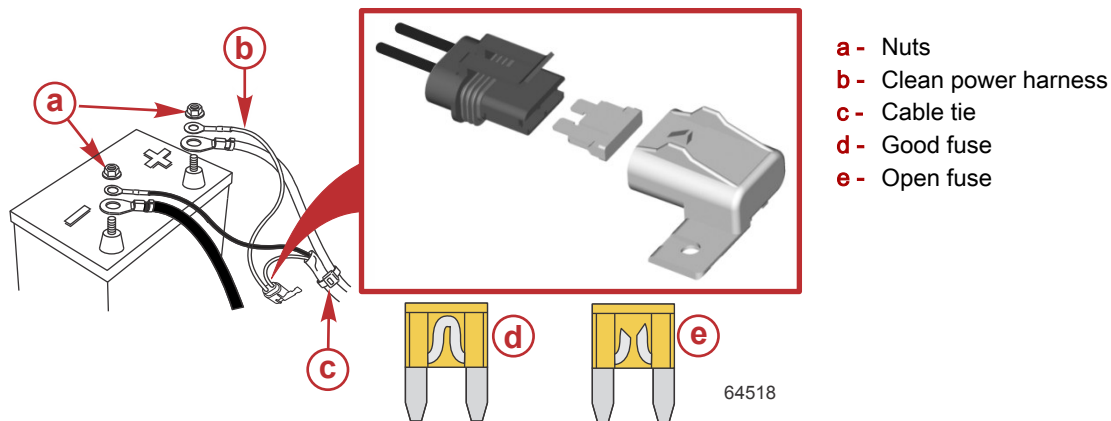

Battery Connections

IMPORTANT: The engine electrical system is negative (-) ground.

Maintenance

When connecting the engine battery, hex nuts must be used to secure the battery leads to the battery posts. Tighten the hex nuts to the specified torque.

Description	Nm	lb-in.	lb-ft
Battery hex nuts	13.5	120	–

Order of Connection

Connect the battery cables in the following order:

1. All jumpers between parallel, multiple battery packs
2. From the batteries to the positive (+) engine lead
3. From the batteries to the positive (+) clean power
4. From the batteries to the negative (-) engine lead
5. From the batteries to the negative (-) clean power
6. From the batteries or main ground (-) bus to the negative (-) starboard helm main power relay

Fuel System

WARNING

Fuel is flammable and explosive. Ensure that the key switch is off and the lanyard is positioned so that the engine cannot start. Do not smoke or allow sources of spark or open flame in the area while servicing. Keep the work area well ventilated and avoid prolonged exposure to vapors. Always check for leaks before attempting to start the engine, and wipe up any spilled fuel immediately.

IMPORTANT: Use an approved container to collect and store fuel. Wipe up spilled fuel immediately. Material used to contain spilled fuel must be disposed of in an approved receptacle.

Before servicing any part of the fuel system:

1. Stop engine and disconnect the battery.
2. Perform fuel system service in a well-ventilated area.
3. Inspect any completed service work for sign of fuel leakage.

Fuel Line Inspection

Visually inspect the fuel line for cracks, swelling, leaks, hardness, or other signs of deterioration or damage. If any of these conditions are found, the fuel line must be replaced.

Low-Pressure Fuel Filter

The low-pressure fuel filter can be serviced as a general maintenance item when the water-in-fuel alarm is activated.

WARNING


Fuel is flammable and explosive. Ensure that the key switch is off and the lanyard is positioned so that the engine cannot start. Do not smoke or allow sources of spark or open flame in the area while servicing. Keep the work area well ventilated and avoid prolonged exposure to vapors. Always check for leaks before attempting to start the engine, and wipe up any spilled fuel immediately.

Removal

IMPORTANT: Use an approved container to collect and store fuel. Wipe up spilled fuel immediately. Material used to contain spilled fuel must be disposed of in an approved container.


1. Verify the ignition key switch is in the OFF position and that the lanyard switch is positioned so the engine cannot start.
2. Remove the top cowl.
3. Locate the fuel filter on the starboard aft side of the engine near the bottom spark plug.
4. Push in on the fuel hose release tabs and disconnect the fuel hoses from the fuel filter.
5. Disconnect the water-in-fuel sensor harness.

NOTE: If there is a boat mounted water-separating fuel filter with a water-in-fuel sensor installed, the sensor harness would be connected to the boat mounted filter.

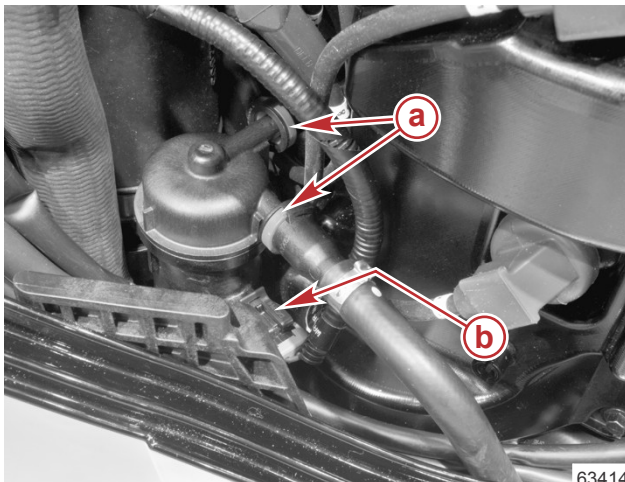

- a - Fuel hose release tabs
- b - Water-in-fuel sensor harness

6. Rotate the filter clockwise approximately 1/4 of a turn and lift the filter out.

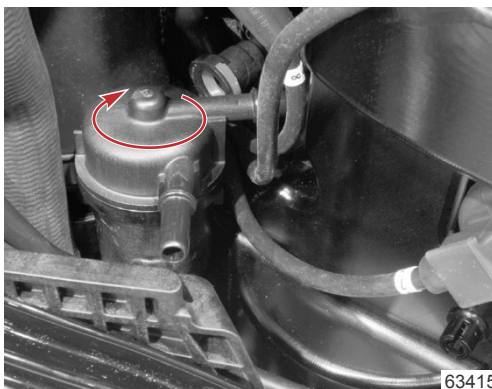



Filter rotated 1/4 turn

7. Empty the fuel filter contents into an approved container and dispose according to local regulations.
8. Wipe up any spilled fuel.

Installation

1. Apply a small amount of 2-4-C with PTFE to the fuel filter grommet.

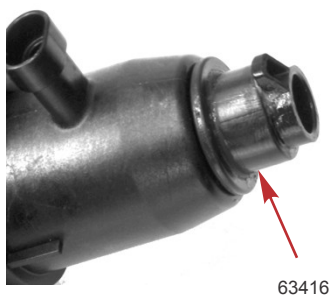

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Fuel filter grommet	92-802859A 1

2. Install the fuel filter and rotate counterclockwise 1/4 turn to retain the filter.
3. Connect the water-in-fuel sensor.

NOTE: If there is a boat mounted water-separating fuel filter with a water-in-fuel sensor installed, the sensor harness would be connected to the boat mounted filter.


4. Connect the fuel hoses to the fuel filter securely with the locking hose connections.
5. Turn the key to the RUN position and inspect for fuel leaks. Repair any fuel leaks if necessary.

Corrosion Control Anodes

The outboard has corrosion control anodes at different locations. Anodes help protect the outboard against galvanic corrosion by sacrificing its metal to be slowly eroded instead of the outboard metals.

Each anode requires periodic inspection, especially in saltwater, which will accelerate the corrosion. To maintain corrosion protection, always replace the anode before it is completely corroded. Never paint or apply a protective coating on the anode, as this will reduce the effectiveness of the anode.

Two anodes are located on the bracket mounted to the transom bracket assembly. Three anodes are mounted on the trim assembly; one on the bottom of the pedestal and one anode located on the bottom of each power trim ram. Another anode is located on the underside of the gear housing above the propeller.

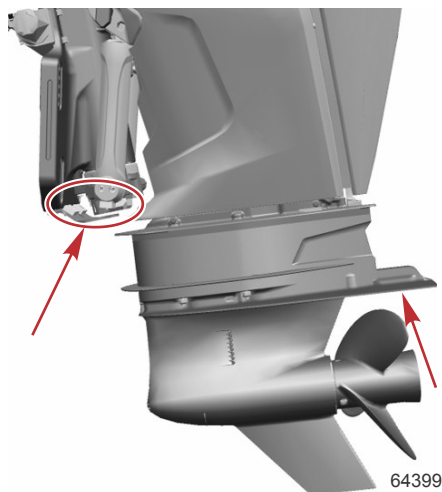


Propeller Replacement—31.75 mm (1-1/4 in.) Diameter Propeller Shaft

⚠ WARNING

Rotating propellers can cause serious injury or death. Never operate the boat out of the water with a propeller installed. Before installing or removing a propeller, place the drive unit in neutral and engage the lanyard stop switch to prevent the engine from starting. Place a block of wood between the propeller blade and the anti-ventilation plate.

1. Shift the outboard into neutral position.
2. Place a block of wood between the gearcase and the propeller to hold the propeller and remove the propeller nut.

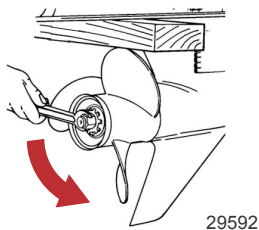


3. Pull the propeller straight off the shaft. If the propeller is seized to the shaft and cannot be removed, have the propeller removed by an authorized dealer.
4. To aid in future removal of the propeller, liberally coat the propeller shaft splines with one of the following Mercury/Quicksilver products:


Tube Ref No.	Description	Where Used	Part No.
	Extreme Grease	Propeller shaft splines	8M0071842
	2-4-C with PTFE	Propeller shaft splines	92-802859A 1

NOTE: Propellers used on the 31.75 mm (1-1/4 in.) diameter propeller shaft require the heavy-duty propeller hub kit.

5. **Heavy-duty propeller hub**—Install the propeller hub, propeller, washer, Belleville washer, washer, and propeller nut onto the shaft.

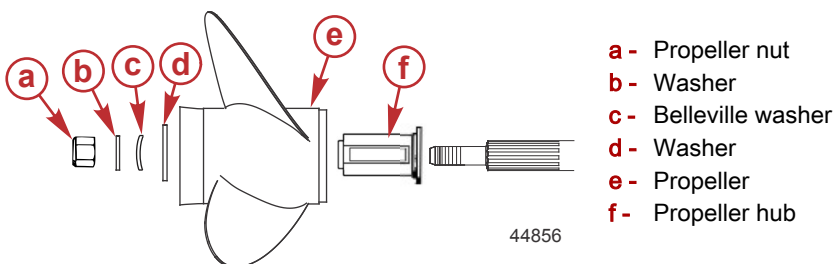


6. Place a block of wood between the gearcase and the propeller. Tighten the propeller nut to the specified torque.

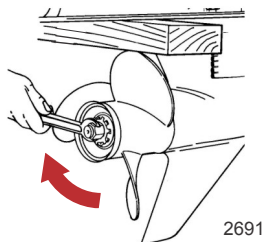

Description	Nm	lb-in.	lb-ft
Propeller nut	75	-	55.3

Spark Plug Inspection and Replacement

1. Remove the top cowl. Refer to **Top Cowl Removal and Installation**.
2. Grasp the spark plug boot and use a twisting motion to assist removing the spark plug boot from the spark plugs.

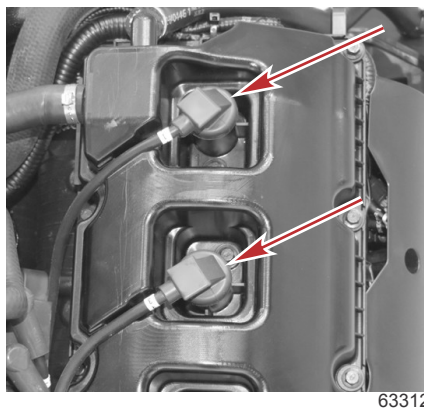


Spark plug boot

3. Remove the spark plug with a 14 mm deep socket.


NOTE: Replace the spark plug if the electrode is worn; the insulator is rough, cracked, broken, or blistered; or if the precious metal is not visible on the spark plug electrode.

IMPORTANT: The color of the plug may not accurately reflect its condition. To accurately diagnose a faulty plug, inspect the precious metal on the plug's electrode. If no precious metal is visible, replace the plug.

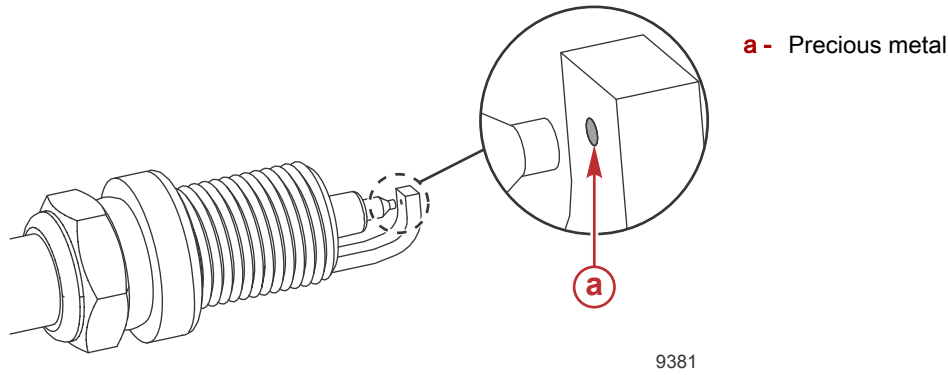


9381

4. Check the spark plug gap. Refer to **General Information - Specification**.

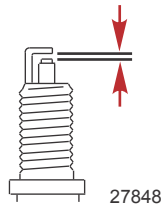

27848

- a. All of the spark plugs should have the gap checked and corrected as necessary before installation.
 - b. Measure the gap with a feeler gauge or pin gauge. Never use a wedge-type gap checking tool to inspect or to adjust the gap.
 - c. If an adjustment is necessary, do not pry or apply any force on the center electrode. This is critical with any type of spark plug that has a wear surface, such as platinum or iridium added to either the ground electrode or the center electrode.
 - d. When it is necessary to widen the gap, use a tool that only pulls back on the ground electrode without touching the center electrode, the porcelain, or the wear portion of the ground electrode.
 - e. When it is necessary to close the gap, gently tap the plug ground electrode on a hard surface.
5. Saltwater use—Apply Anti-Seize Compound only onto the threads of the spark plugs.

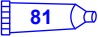
Tube Ref No.	Description	Where Used	Part No.
 81	Anti-Seize Compound	Spark plug threads	92-898101389

6. Before installing the spark plugs, remove any dirt on the spark plug seat area. Install the plugs finger-tight and then tighten an additional 1/4 turn or tighten to the specified torque.

Description	Nm	lb-in.	lb-ft
Spark plug	20	177	–

7. Insert the spark plug boot into the valve cover. The boot is self-aligning with the spark plug.

- Push on the end of the spark plug boot to ensure the boot is completely engaged and seated onto the spark plug.

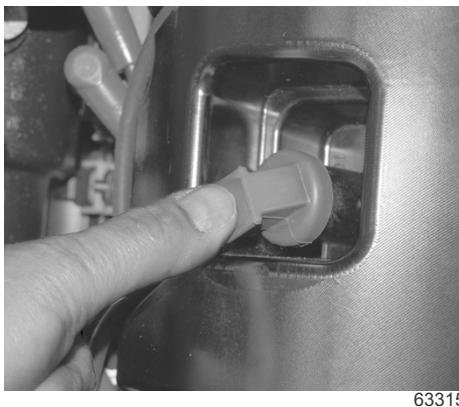

63315

Push the spark plug boot


- Install the top cowl.

Fuses

IMPORTANT: An ATC fuse has the fuse element enclosed or sealed inside the plastic housing. This type of fuse must be used for marine applications. Marine applications are exposed to environments that may have the potential to accumulate explosive vapors. ATO fuses have exposed elements and should never be used in marine applications.




The electrical wiring circuits on the outboard are protected from overload with fuses. If a fuse is open, try to locate and correct the cause of the overload. If the cause is not found, the fuse may open again.

- Locate the fuse holder on the port side of the engine and remove the cover from the fuse holder.

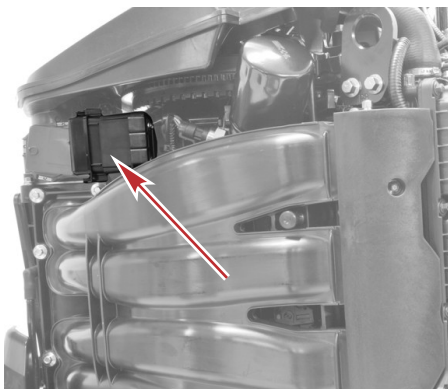

63317

- Remove the suspected open fuse and look at the silver band inside the fuse. If the band is broken (open), replace the fuse. **IMPORTANT:** Replace the fuse with a new fuse with the same amp rating.

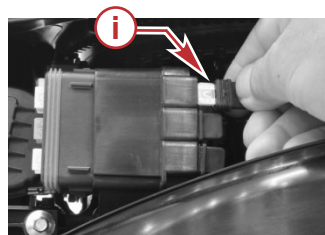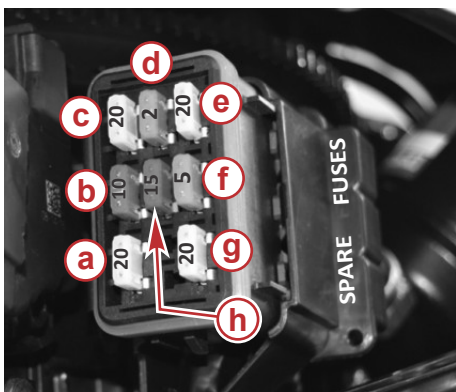

64390


- a - Ignition coils - 20 amp
- b - Oxygen sensor - 10 amp
- c - Fuel pumps - 20 amp
- d - Diagnostics - 2 amp
- e - Fuel injectors - 20 amp
- f - Advanced sound control driver - 5 amp
- g - Power driver - 20 amp
- h - TVM power -15 amp—DTS products only
- i - Spare fuses (3)
- j - Good fuse
- k - Open fuse

Alternator Drive Belt

The alternator drive belt is located under the flywheel shroud–intake air induction plenum. The alternator drive belt inspection must be completed by an authorized Mercury dealer at the recommended interval. Refer to **Inspection and Maintenance Schedule**.


Checking Power Trim Fluid

1. Tilt outboard to the full up position.
2. Rotate the tilt support bracket down.
3. Lower outboard until tilt support bracket rests on pedestal.
4. Remove the power trim fill cap. The fill cap only requires 1/4 turn to remove.

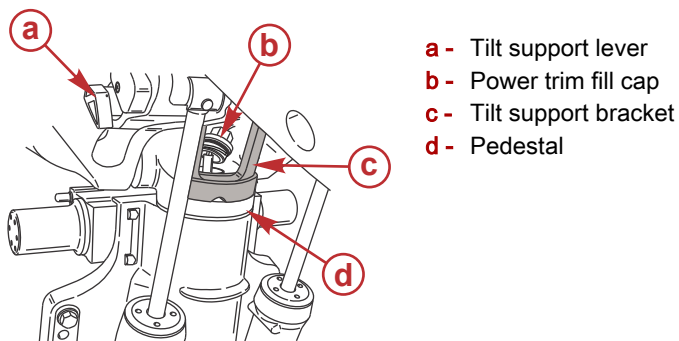

29312

5. The fluid level should be approximately 25 mm (1 in.) from the top of the fill neck. Add Quicksilver or Mercury Precision Lubricants Power Trim and Steering Fluid. If not available, use automotive automatic transmission fluid (ATF).

Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Power trim system	92-858074K01


6. Install the power trim fill cap. Tighten fill cap 1/4 turn. Cap will snap in place. Do not tighten beyond this point.

Checking Power Steering Fluid


⚠ WARNING

Dirt or contaminants in the hydraulic steering system can damage the steering system's internal components. Damaged components can lead to serious injury or death due to loss of boat control. Do not allow dirt or contamination to enter the helm, lines, or cylinder of this steering system and perform all hydraulic inspections, service, or assembly procedures in a clean work area.

Remove the power steering cover and fill cap to check the fluid level. The fluid level should be slightly below the bottom of the fill hole. Use Synthetic Power Steering Fluid SAE 0W-30, if needed.

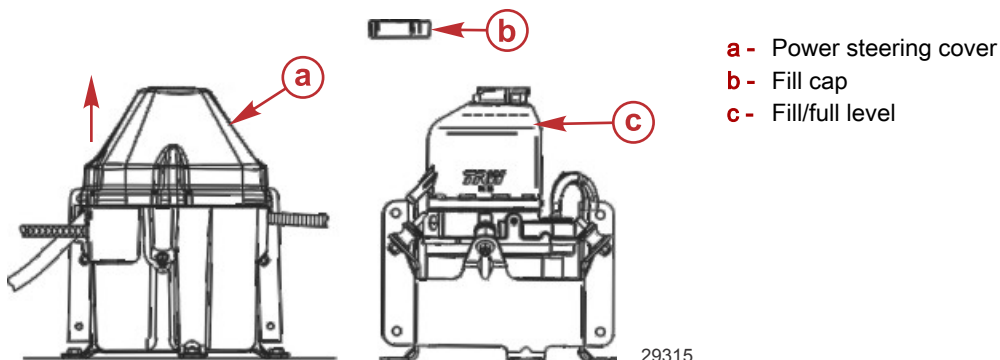

29315

Tube Ref No.	Description	Where Used	Part No.
 138	Synthetic Power Steering Fluid SAE 0W-30	Power steering system	92-858077K01

Changing Engine Oil and Filter

Engine Oil Capacity


Engine oil capacity is approximately 6.6 Liter (7.0 US qt).

IMPORTANT: Tilt the outboard out/up past vertical for approximately one minute to allow any trapped oil to drain back to the oil sump.

Oil Change On Land Procedure

1. Tilt the outboard out/up past vertical for approximately one minute to allow any trapped oil to drain back to the oil sump.
2. Tilt the outboard to a vertical position.
3. Use a 16 mm (5/8 in.) wrench and loosen the oil drain valve so that it can be turned by hand. Be careful not to open the valve too far allowing oil to drain.
4. Attach a 12 mm (7/16 in.) inside diameter drain hose to the oil drain valve. Position the opposite end of the hose into an appropriate container. The container should be large enough to hold more than 9.8 Liter (10 US qt).
5. Loosen the oil drain valve 2-1/2 turns to allow oil to drain. Do not exceed 2-1/2 turns.

IMPORTANT: Do not loosen the oil drain valve more than 2-1/2 turns out. The oil seal could get damaged beyond 2-1/2 turns.

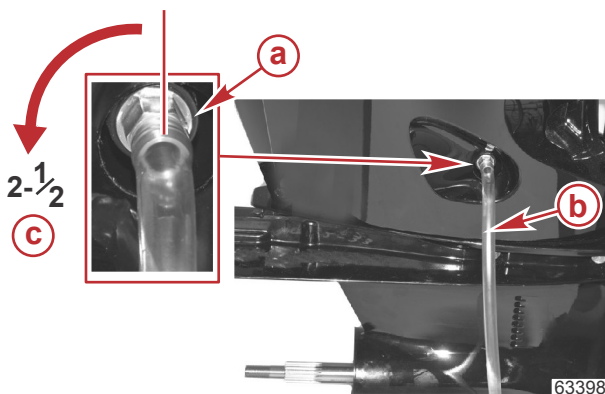

- a - Oil drain valve
- b - Drain hose
- c - Loosen 2-1/2 turns maximum

6. After the oil has drained, hand-tighten the oil drain valve (clockwise) and remove the oil drain hose.
7. Tighten the oil drain valve to the specified torque. Clean up any oil in the valve area.

Description	Nm	lb-in.	lb-ft
Oil drain valve	15	132.7	-


IMPORTANT: Overtightening the oil drain valve can damage the oil sump.

8. Add the appropriate amount of engine oil.

Oil Change On Water Procedure


1. Tilt the outboard out/up past vertical for approximately one minute to allow any trapped oil to drain back to the oil sump.
2. Tilt the outboard to a vertical position.

3. Push down on the port side of the service access door to unlock and open the door.

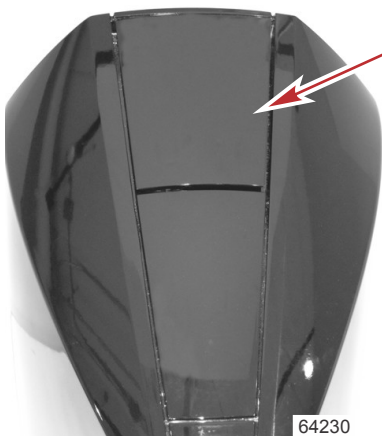

Push here to unlock


4. Remove the dipstick.
5. Install the oil drain hose onto the crankcase oil pump. Verify the hose is securely attached.

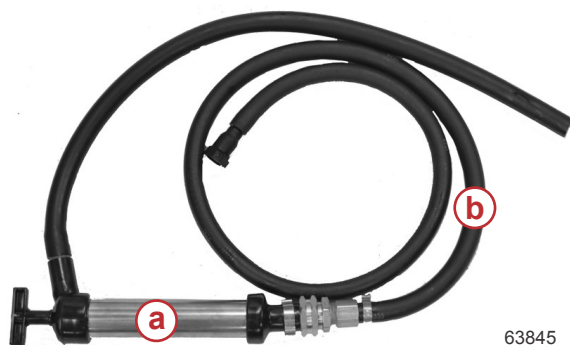

a - Crankcase oil pump
b - Oil drain hose

Crankcase Oil Pump	802889A1
Oil Drain Hose	8M0137866

6. Install the crankcase oil pump assembly onto the dipstick tube. Verify the pump is securely attached to the tube by pulling it up lightly.

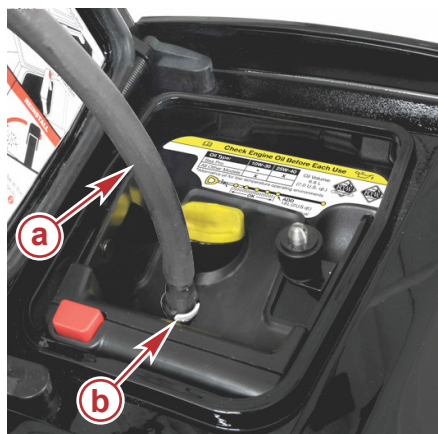


a - Oil drain hose
b - Lock button

7. Place the drain tube of the crankcase oil pump into an appropriate container. The container should be large enough to hold more than 9.8 Liter (10 US qt).
8. Extract the engine oil with the pump.
9. Allow the drain tube to completely drain before removing the oil pump from the dipstick tube.
10. Press on the oil drain hose lock button to release it from the dipstick tube.
11. Install the dipstick. Verify it is completely inserted.

12. Add the appropriate amount of engine oil.

Changing Oil Filter

1. Remove the plug from the oil trough and attach a 12 mm (7/16 in.) I.D. drain hose to the fitting. Place the opposite end of the hose into an appropriate container.
2. Remove the old filter by turning the filter counterclockwise.

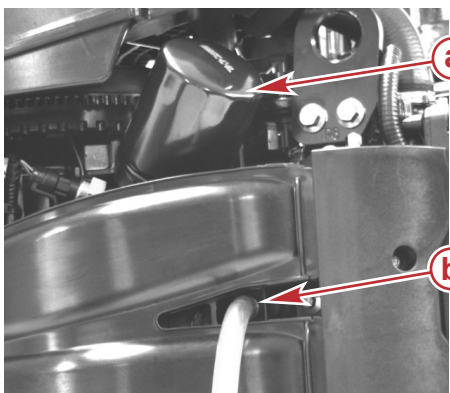

- a - Oil filter
- b - Drain hose

3. Allow the oil in the trough to drain.
4. Clean the remaining oil from the oil trough and filter mounting base area.
5. Remove the hose and install the plug.
6. Apply a film of clean oil to the filter gasket. Do not use grease. Install the new filter until the gasket contacts the base and then tighten 3/4 to 1 turn.

Oil Filling

Remove the oil fill cap and add approximately 6.6 Liter (7.0 US qt) of the recommended oil. This will bring the oil level within the operating range.



- a - Oil fill cap
- b - Dipstick

NOTE: It is not necessary to check the oil level immediately after changing the oil. The engine must be run for a while and then turned off for one hour or longer before checking the oil level. Refer to **Checking Engine Oil Level**.

Checking Engine Oil Level

After the engine oil has been changed, the engine should be run for a few minutes and then turned off, allowing one hour or longer before checking the oil level.

IMPORTANT: For an accurate oil level reading, the engine must be vertical for several minutes before removing the dipstick.

1. Remove the dipstick and observe the area of the five beads.
2. The bead or crosshatch which shows oil furthest from the end is the oil level.



Oil level example

Dipstick Bead Oil Level Overview

New oil (level) may be difficult to identify which is why the crosshatch between the beads are part of the dipstick assembly. When checking the oil level, if oil is on any of the five oil range beads or four crosshatch, the oil level is within the safe operating range. When the oil level is only on the lowest oil range bead, the operator can add 1.8 Liter (2 US qt) of oil and the level will remain within the safe operating range. When the oil becomes dark from hours of product use, it will be easier to identify the oil level on the dipstick.


IMPORTANT: Repeated removal and insertion of the dipstick to check the oil level will subsequently deposit oil further up the dipstick tube which potentially may cause an error reading the oil level.



Exhaust Water Strainer Inspection

IMPORTANT: The water strainer is an integral component of the cooling system. It should be inspected every 100 hours of operation or once a year, whichever occurs first.


1. Remove the top cowl. Refer to **Top Cowl Removal and Installation**.
2. Remove the hose from the exhaust water spray inlet assembly. Press on the hose lock and pull the hose off the assembly.

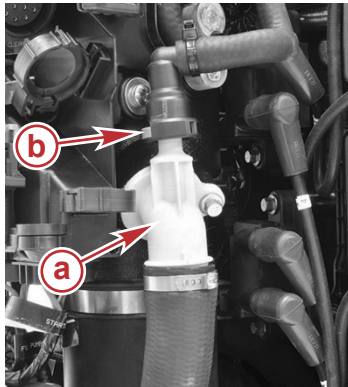

64629

- a** - Exhaust water spray inlet assembly
- b** - Hose lock

3. Remove the strainer from the assembly.

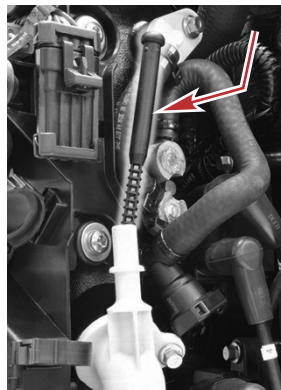

64630

Strainer

4. Inspect the strainer for debris, blockage, or accumulation of mineral deposits. Flush the strainer with fresh water. Use a nylon bristle brush to help remove debris, blockage, or mineral deposits. If the strainer cannot be cleared of debris, blockage, mineral deposits, or if the strainer is damaged, replace the strainer.



64631

5. Install the strainer into the exhaust water spray inlet assembly.

6. Install the hose onto the assembly. Verify the hose is secure by pulling up on the hose.

Gearcase Lubricant

Gearcase Lubrication

When adding or changing gearcase lubricant, visually check for the presence of water in the lubricant. If water is present, it may have settled to the bottom and will drain out prior to the lubricant, or it may be mixed with the lubricant, giving it a milky colored appearance. If water is noticed, have the gearcase checked by your dealer. Water in the lubricant may result in premature bearing failure or, in freezing temperatures, will turn to ice and damage the gearcase.

Examine the drained gearcase lubricant for metal particles. A small amount of metal particles indicates normal gear wear. An excessive amount of metal filings or larger particles (chips) may indicate abnormal gear wear and should be checked by an authorized dealer.

Recommended Gearcase Lubrication

Mercury or Quicksilver High Performance Gear Lubricant.

Gearcase Lubricant Capacity


NOTE: Gearcase lubricant capacity is approximate.

Gearcase Lubricant Capacity		
137 mm (5.44 in.)	Right-hand rotation	720 mL (24.4 fl oz)
	Left-hand rotation	680 mL (23.0 fl oz)
SeaPro 137 mm (5.44 in.)	Right-hand rotation	980 mL (33.1 fl oz)
	Left-hand rotation	

Draining and Filling the Gearcase - 137 mm (5.4 in.)

Draining Gearcase

1. Place the outboard in a vertical operating position.
2. Remove the propeller. Refer to **Propeller Replacement**.
3. Place a pan below the gear housing to capture the lubricant.
4. Remove the lubricant level plug and fill/drain plug. Allow a sufficient amount of time for the gearcase to drain. Depending on the ambient air temperature, it may take 30 minutes for the gearcase to completely drain.

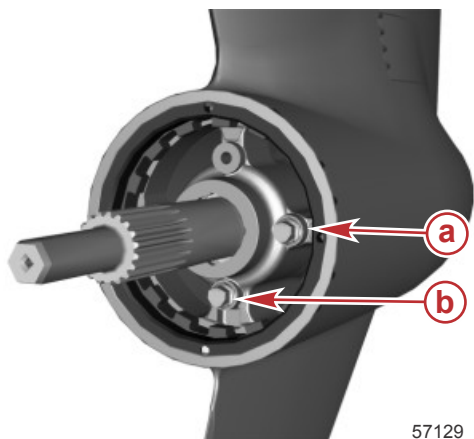

a - Lubricant level plug

b - Fill/drain plug

57129

Filling the Gearcase

1. After the gearcase has been drained, fill the gearcase through the fill/drain hole.
2. Add the specified gear lubricant.
IMPORTANT: Replace the sealing washers if damaged.
3. Allow a few minutes for the lubricant level to stabilize in the gearcase before installing the lubricant level plug. Install the lubricant level plug.
4. Remove the tube and install the fill/drain plug.
5. Tighten the plugs to the specified torque.

Description	Nm	lb-in.	lb-ft
Plugs	11.3	100	–

Checking Lubricant Level

1. Place the outboard in a vertical operating position. Allow up to 30 minutes for the lubricant level to stabilize in the gear housing.
2. Remove the lubricant level plug. Verify the sealing washer is not adhered to the bearing carrier. The lubricant should be level with the hole or slowly leak from the hole.


IMPORTANT: Replace the sealing washers if damaged.

3. If the lubricant is not visible at the lubricant level hole, remove the fill/drain plug and add lubricant until it appears at the lubricant level hole.
4. Stop adding lubricant.
5. Remove the lubricant tube and install the fill/drain plug and sealing washer.
6. Tighten the plugs to the specified torque.

Description	Nm	lb-in.	lb-ft
Plugs	11.3	100	–

Draining and Filling the Gearcase SeaPro Models

1. Tilt the engine so the leading edge of the skeg is level when horizontal, or the engine can be tilted full up.
2. Place a pan below the gear housing to capture the lubricant.
3. Remove the lubricant level plug and fill/drain plug. Allow a sufficient amount of time for the gearcase to drain. Depending on the ambient air temperature, it may take 30 minutes for the gearcase to completely drain.

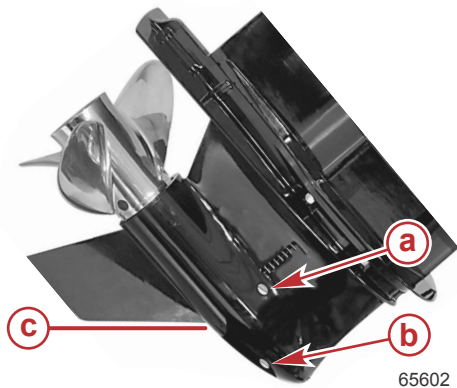

- a - Lubricant level plug
- b - Fill/drain plug
- c - Leading edge of skeg is level

Filling the Gearcase

1. After the gearcase has been drained, fill the gearcase with the specified gear lubricant through the fill/drain hole.
IMPORTANT: Replace the sealing washers if damaged.
2. The lubricant must flow out of the lubricant level hole without air bubbles.
3. Allow a few minutes for the lubricant level to stabilize in the gearcase before installing the lubricant level plug. Install the lubricant level plug.
4. Remove the tube and install the fill/drain plug.
5. Tighten the plugs to the specified torque.

Description	Nm	lb-in.	lb-ft
Plugs	11.3	100	–

Checking Lubricant Level

1. Tilt the engine so the leading edge of the skeg is level when horizontal. Allow up to 30 minutes for the lubricant level to stabilize in the gear housing.
2. Remove the lubricant level plug. Do not lose the sealing washer. The lubricant should be level with the hole or slowly leak from the hole.

IMPORTANT: Replace the sealing washers if damaged.

3. If the lubricant is not visible at the lubricant level hole, remove the fill/drain plug and add lubricant until it appears at the lubricant level hole.

4. Install the lubricant level plug.
5. Remove the lubricant tube and install the fill/drain plug and sealing washer.
6. Tighten the plugs to the specified torque.

Description	Nm	lb-in.	lb-ft
Plugs	11.3	100	-

Notes:

Important Information


Section 1C - General Information

**1
C**

Table of Contents


Recording Serial Number.....	1C-2	Engine Submerged While Running (Special Instructions).....	1C-12
Selecting Accessories for Your Outboard.....	1C-2	Freshwater Submersion (Special Instructions).....	1C-12
Front View.....	1C-3	Saltwater Submersion (Special Instructions).....	1C-13
Port Aft View.....	1C-4	Power Trim and Tilt.....	1C-13
Starboard Aft View from Above.....	1C-5	Power Trim And Tilt.....	1C-13
Starboard Aft View.....	1C-6	Power Trim Operation.....	1C-13
Starboard View.....	1C-8	Tilting to Full Up Position.....	1C-14
Port View.....	1C-10	Manual Tilting.....	1C-14
Conditions Affecting Performance.....	1C-11	Auxiliary Tilt Switch.....	1C-15
Weather.....	1C-11	Operating in Shallow Water.....	1C-15
Weight Distribution (Passengers and Gear) Inside the Boat.....	1C-11	Cylinder Leakage Testing.....	1C-15
Bottom of Boat	1C-11	Analysis.....	1C-15
Water Absorption.....	1C-11	Painting Procedures.....	1C-16
Cavitation.....	1C-12	Propellers.....	1C-16
Ventilation.....	1C-12	Gear Housing.....	1C-16
Detonation.....	1C-12	Decal Removal.....	1C-17
Following Complete Engine Submersion	1C-12	Raised Decal Removal.....	1C-17

Special Tools

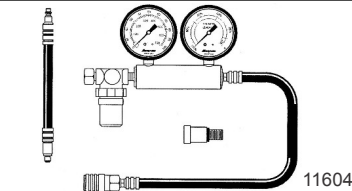Cylinder Leakage Tester	Snap-On EEPV309A
 11604	Aids in checking cylinder leakdown.

Recording Serial Number

It is important to record this number for future reference. The serial number is located on the outboard, as shown.

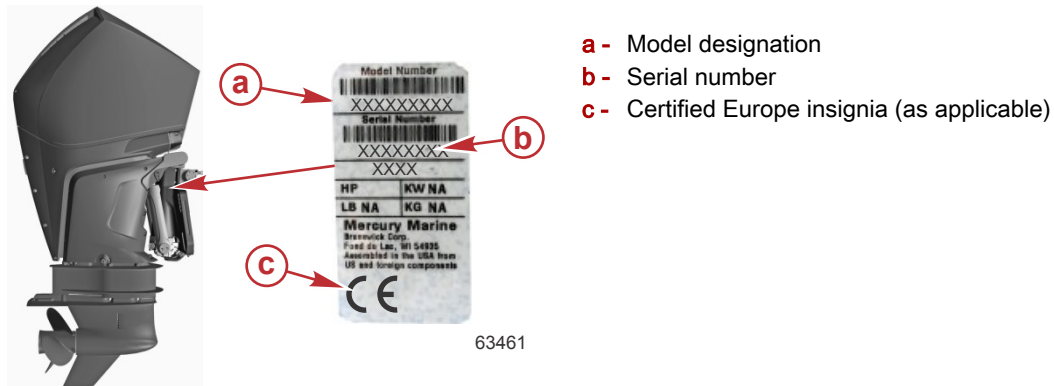


Selecting Accessories for Your Outboard

Genuine Mercury Precision or Quicksilver Accessories have been specifically designed and tested for your outboard. These accessories are available from Mercury Marine dealers.

IMPORTANT: Check with your dealer before installing accessories. The misuse of approved accessories or the use of nonapproved accessories can damage the product.

Some accessories not manufactured or sold by Mercury Marine are not designed to be safely used with your power package and may void warranty. Acquire and read the installation and operation manuals for each selected accessory.

Front View

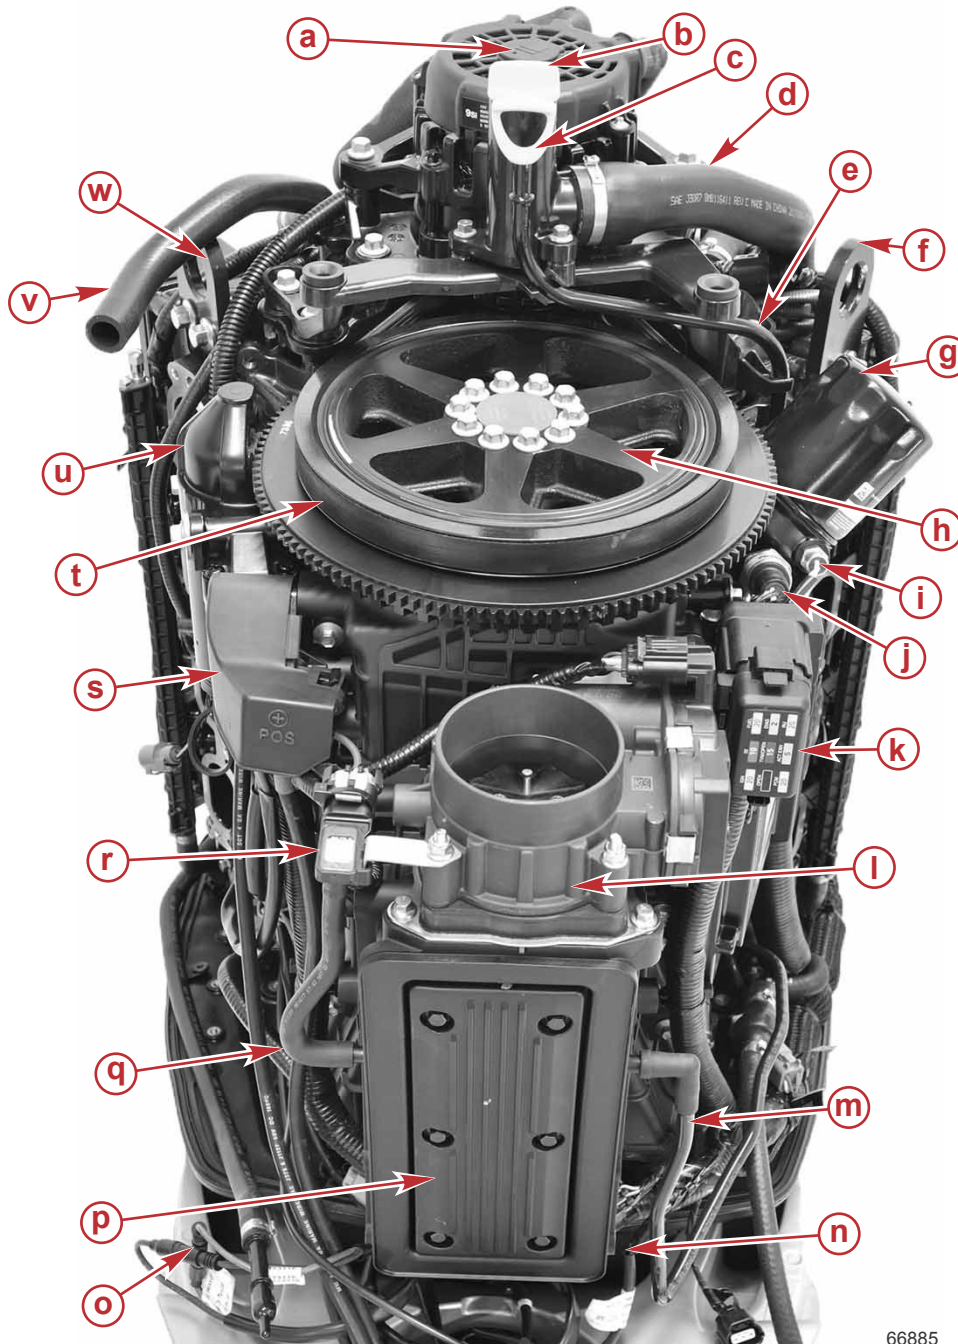


Shown without intake runners, flywheel cover, fuel rail cover, electrical panel cover, and lower cowls

- a** - Alternator
- b** - Oil fill cap
- c** - Dipstick
- d** - Oil fill hose
- e** - Dipstick tube
- f** - Port lifting eye
- g** - Oil filter
- h** - Flywheel
- i** - Oil temperature sensor
- j** - Oil pressure sensor
- k** - Fuse block
- l** - Electronic throttle body
- m** - Fuel supply module (FSM) reference hose
- n** - Trim position sensor connector
- o** - Power trim motor connectors
- p** - Intake plenum
- q** - Manifold absolute pressure (MAP) reference hose
- r** - Manifold absolute pressure (MAP) sensor
- s** - Battery cable cover
- t** - Alternator belt
- u** - Starter motor
- v** - Breather hose to cold air intake
- w** - Starboard lifting eye

66885


Port Aft View

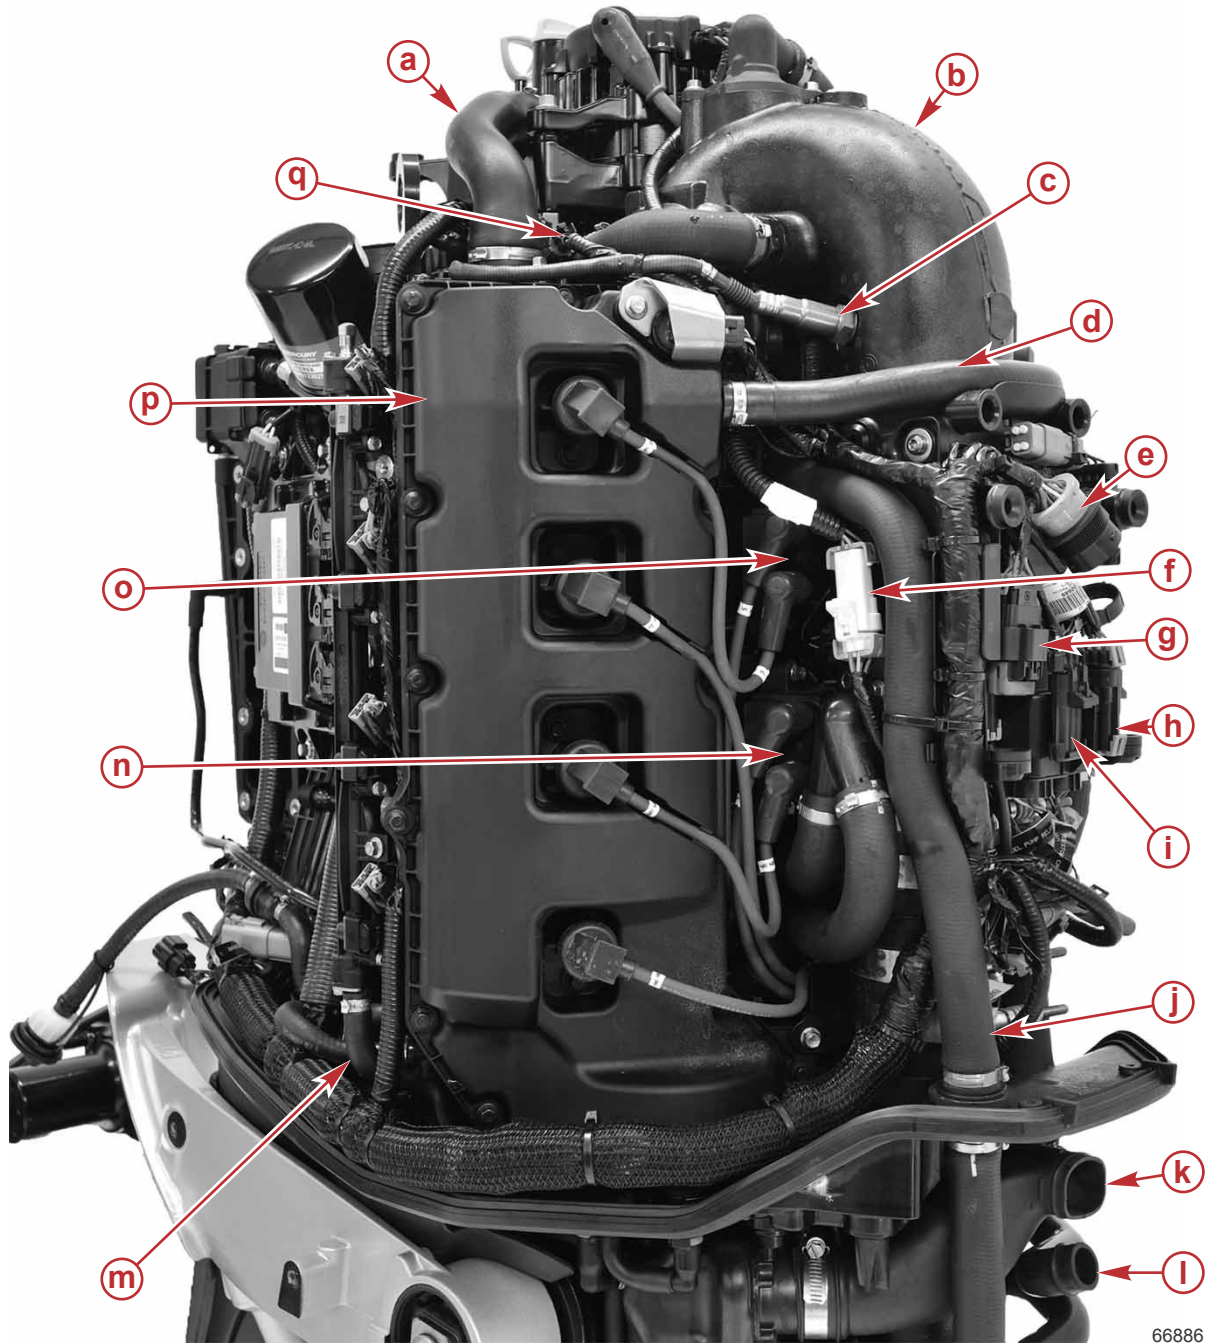

Shown without intake runners, flywheel cover, fuel rail cover, electrical panel cover, and lower cowls

- a - Oil fill hose
- b - Exhaust tube
- c - Oxygen sensor
- d - Breather hose
- e - 14-pin connector
- f - Ignition coil primary lead connector
- g - 10-pin CAN terminator
- h - 6-pin boat harness connector
- i - 3-pin power steering connector
- j - Thermostat dump hose
- k - Advanced sound control exhaust exit
- l - Idle exhaust relief
- m - Fuel hose from fuel supply module (FSM)
- n - #6, #7 ignition coil
- o - #5, #2 ignition coil
- p - Port camshaft cover
- q - Crankshaft position sensor connector

Starboard Aft View from Above

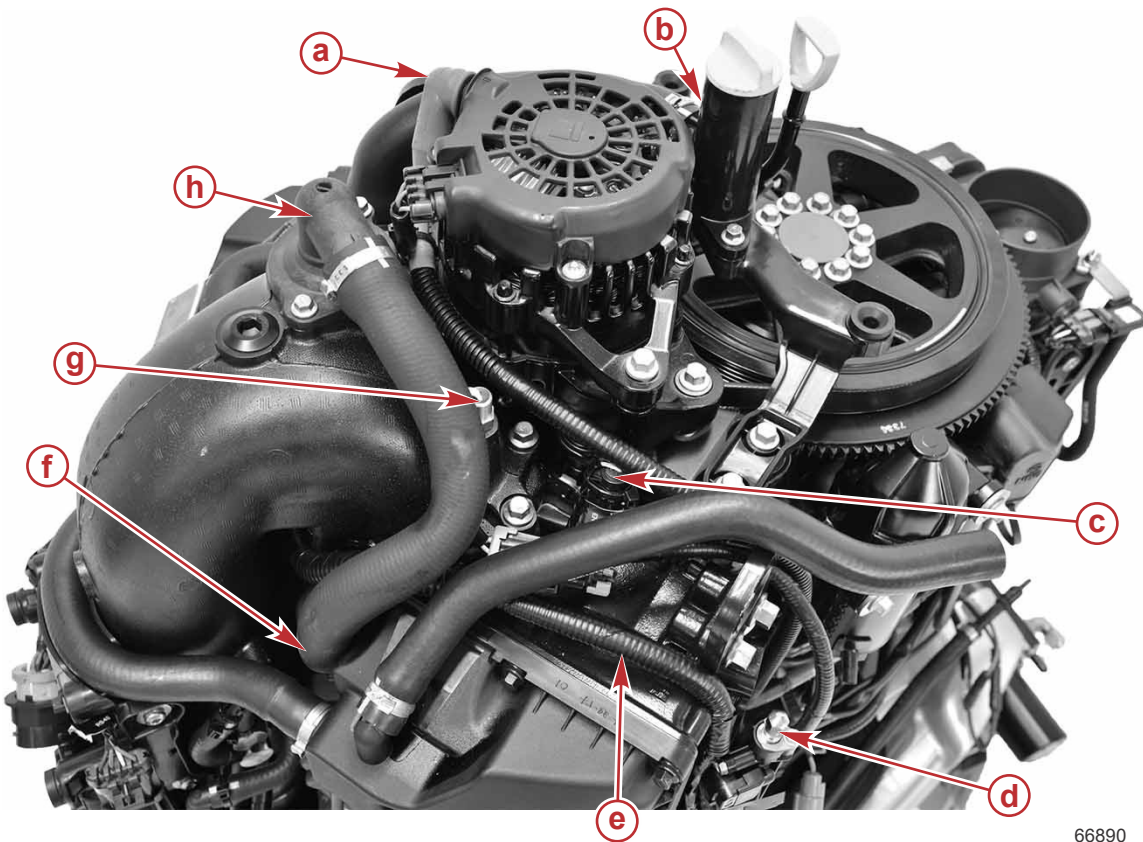


66890

Shown without intake runners, flywheel cover, fuel rail cover, electrical panel cover, and lower cowls

- a - Positive charge lead from the alternator
- b - Oil fill tube
- c - Block water pressure sensor
- d - Schrader valve on starboard fuel rail
- e - Starboard injector harness
- f - Thermostat dump hose
- g - Engine coolant temperature sensor
- h - Thermostat housing

Starboard Aft View

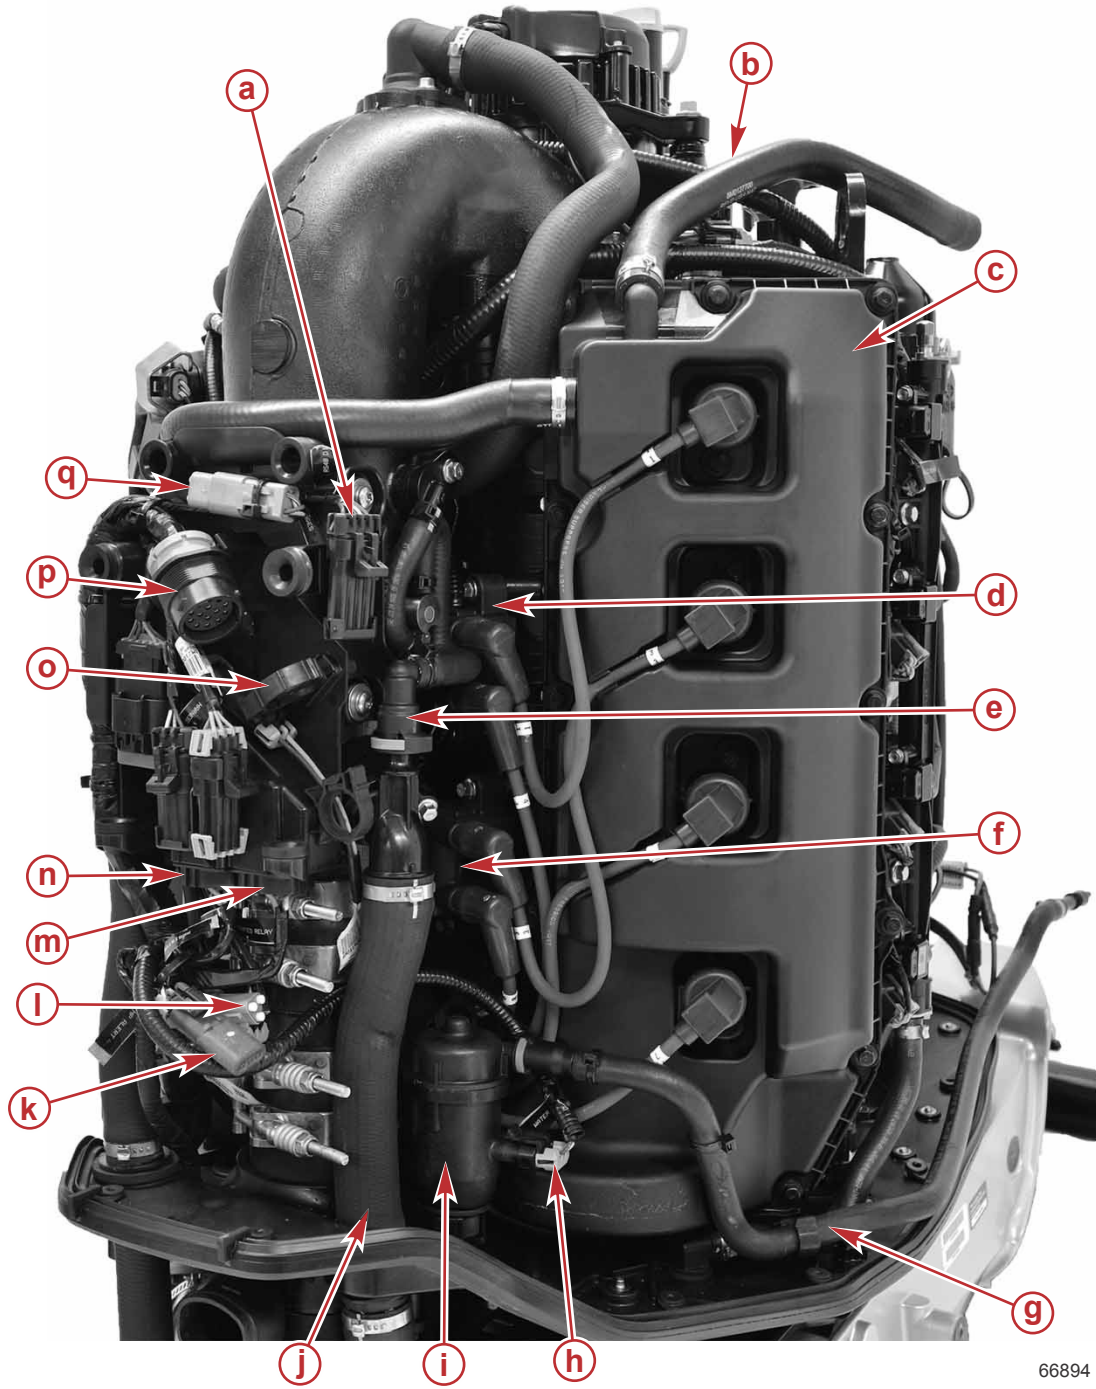


66894

Shown without intake runners, flywheel cover, fuel rail cover, electrical panel cover, and lower cowls

- a** - 4-pin depth transducer connector
- b** - Breather hose to cold air intake
- c** - Starboard camshaft cover
- d** - #1, #4 ignition coil
- e** - Water strainer fitting
- f** - #3, #8 ignition coil
- g** - Fuel inlet hose
- h** - Water-in-fuel (WIF) sensor connector
- i** - Fuel filter
- j** - Cooling water supply hose
- k** - CAN X termination resistor
- l** - Moving propeller (MP) alert connector
- m** - Start relay
- n** - Fuel pump relay
- o** - Ring clip for 14-pin data harness
- p** - 14-pin connector
- q** - Analog gauge connector

Starboard View

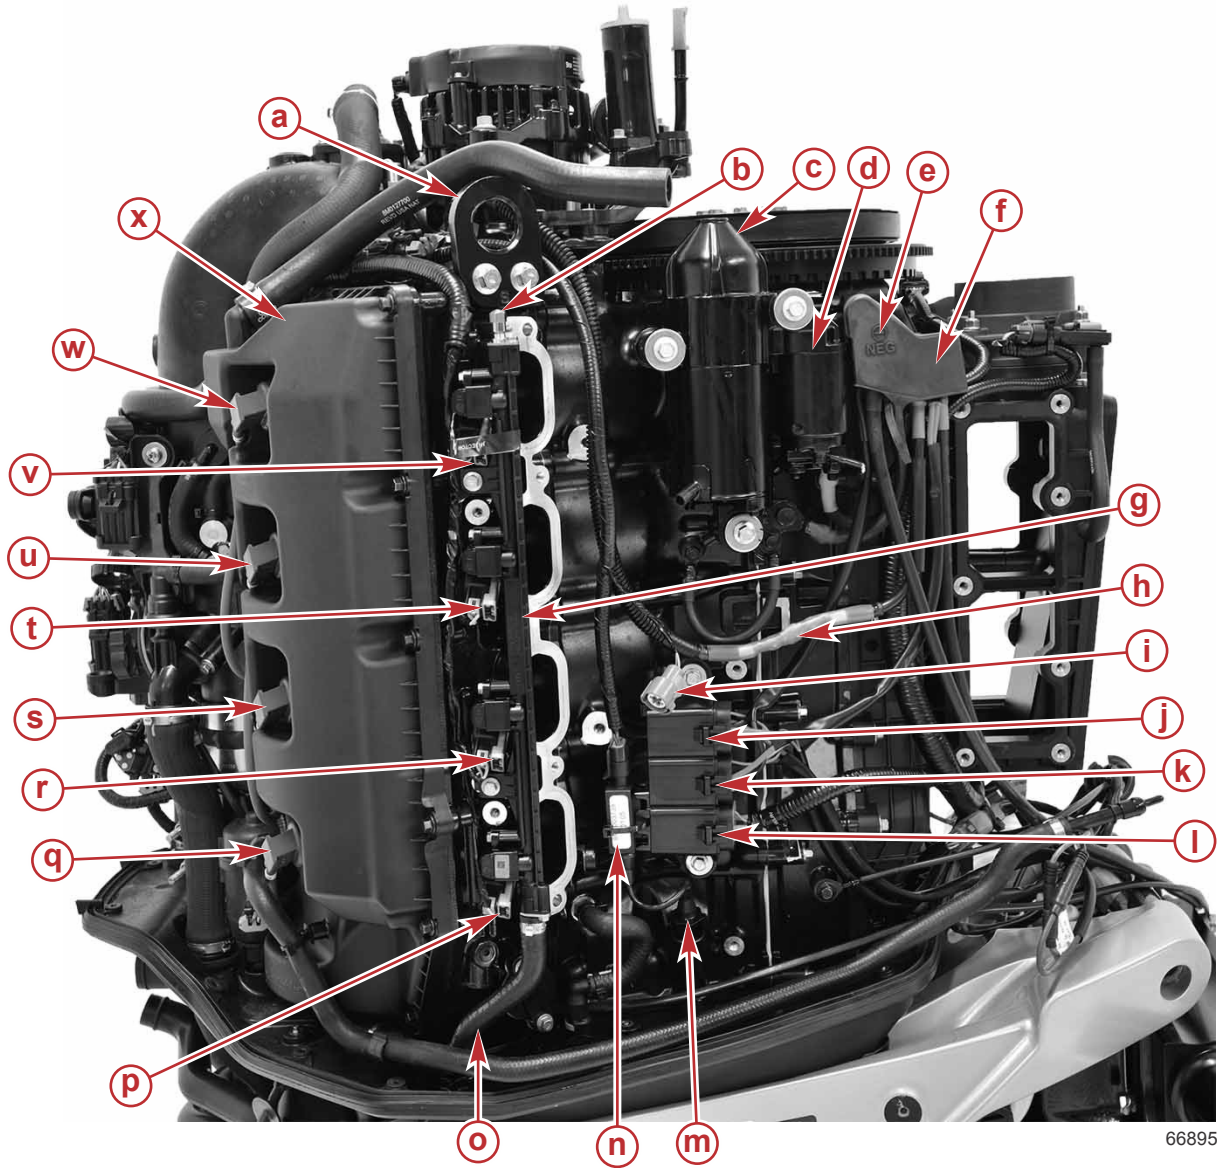


66895

Shown without intake runners, flywheel cover, fuel rail cover, electrical panel cover, and lower cowls

- a** - Starboard lifting eye
- b** - Schrader valve
- c** - Starter motor
- d** - Starter solenoid
- e** - Negative battery cable connection (under cover)
- f** - Positive battery cable connection (under cover)
- g** - Starboard fuel rail
- h** - 150-amp fusible link
- i** - Manifold air temperature (MAT) sensor connector (sensor is on intake runner)
- j** - Trim down relay
- k** - Trim up relay
- l** - Main power relay
- m** - Oil level sensor
- n** - Oil level module
- o** - Fuel hose from fuel supply module (FSM)
- p** - #7 injector
- q** - Cylinder #7 high-tension lead
- r** - # 5 injector
- s** - Cylinder #5 high-tension lead
- t** - #3 injector
- u** - Cylinder #3 high-tension lead
- v** - #1 injector
- w** - Cylinder #1 high-tension lead
- x** - Starboard camshaft cover

Port View

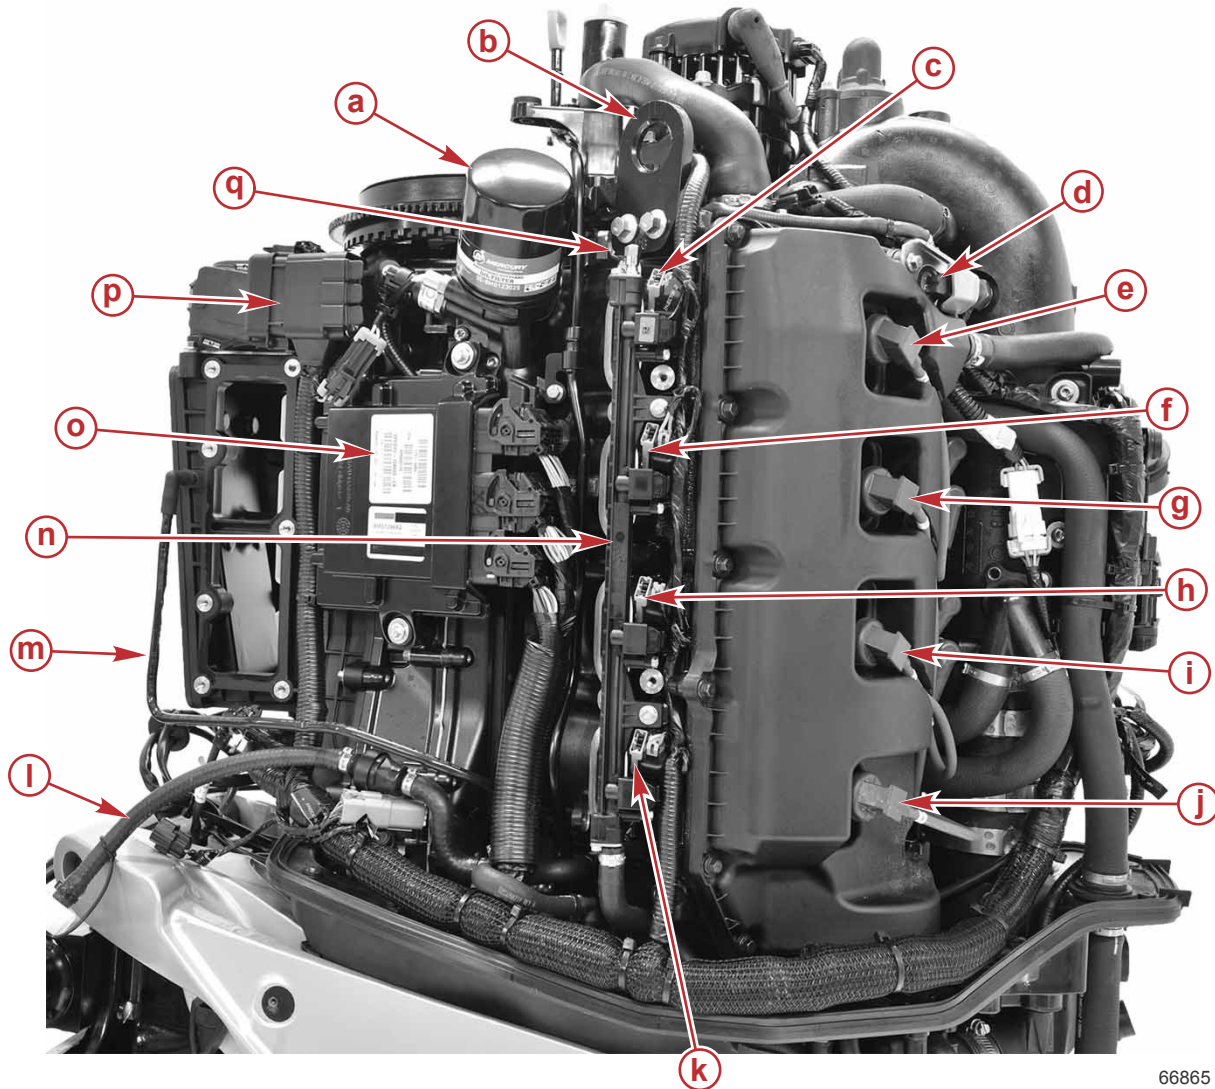

66865

Shown without intake runners, flywheel cover, fuel rail cover, electrical panel cover, and lower cowls

- a** - Oil filter
- b** - Port lifting eye
- c** - Cylinder #2 injector
- d** - Camshaft position sensor
- e** - Cylinder #2 high-tension lead
- f** - #4 injector
- g** - Cylinder #4 high-tension lead
- h** - #6 injector
- i** - Cylinder #6 high-tension lead
- j** - Cylinder #8 high-tension lead
- k** - #8 injector
- l** - Flush hose
- m** - Fuel supply module (FSM) reference hose
- n** - Port fuel rail
- o** - PCM
- p** - Fuse holder
- q** - Schrader valve

Conditions Affecting Performance

Weather

It is a known fact that weather conditions exert a profound effect on the power output of internal combustion engines. Established horsepower ratings refer to the power the engine will produce at its rated RPM under a specific combination of weather conditions.

Corporations internationally have settled on adoption of International Standards Organization (ISO) engine test standards, as set forth in ISO 3046 standardizing the computation of horsepower from data obtained on the dynamometer. All values are corrected to the power the engine will produce at sea level, at 30% relative humidity, at 25 °C (77 °F) temperature, and a barometric pressure of 29.61 inches of mercury.

Summer conditions of high temperature, low barometric pressure, and high humidity all combine to reduce the engine power. This, in turn, is reflected in decreased boat speeds as much as 3 to 5 km/h (2 to 3 MPH) in some cases. Nothing will regain this speed for the boater but cooler, dry weather.

Pointing out the consequences of weather effects, an engine running on a hot, humid day may encounter a loss of as much as 14% of the horsepower it would produce on a dry, brisk day. The horsepower that any internal combustion engine produces, depends upon the density of the air that it consumes. The density of air is dependent upon the ambient air temperature, the barometric pressure, and the humidity (water vapor) content.

Accompanying the effects of weather inspired loss of power is a second, but more subtle loss. Consider a boat rigged during cooler, less humid weather with a propeller that allowed the engine to turn within its recommended RPM range at full throttle. Higher temperatures with high humidity weather will consequently decrease the available horsepower. The propeller, in effect, is too large for the atmospheric conditions and the engine operates at less than its recommended RPM.

The engine-rated horsepower is a direct relation to the engine's RPM. An engine with too large of a propeller will have a further loss of horsepower and subsequent decrease in boat speed. This secondary loss of RPM and boat speed can be regained by switching to a smaller pitch propeller that allows the engine to run at recommended RPM.

For boaters to realize optimum engine performance under changing weather conditions, it is essential the engine has the proper propeller to allow it to operate at, or near, the top end of the recommended maximum RPM range at wide-open throttle with a normal boat load. Not only does this allow the engine to develop full power, but equally important, the engine will be operating in an RPM range that discourages damaging detonation. This enhances overall reliability and durability of the engine.

Weight Distribution (Passengers and Gear) Inside the Boat

Shifting weight to rear (stern):

- Generally increases speed and engine RPM
- Causes bow to bounce in choppy water
- Increases danger of following wave splashing into the boat when coming off plane
- At extremes, can cause the boat to porpoise

Shifting weight to front (bow):

- Improves ease of planing
- Improves rough water ride
- At extremes, can cause the boat to veer back and forth (bow steer)

Bottom of Boat

For maximum speed, a boat bottom should be nearly a flat plane where it contacts the water and particularly straight and smooth in fore and aft direction.

- **Hook:** Exists when bottom is concave in fore and aft direction when viewed from the side. When boat is planing, hook causes more lift on bottom near transom and allows bow to drop, thus greatly increasing wetted surface and reducing boat speed. Hook frequently is caused by supporting boat too far ahead of transom while hauling on a trailer or during storage.
- **Rocker:** The reverse of hook and much less common. Rocker exists if bottom is convex in fore and aft direction when viewed from the side, and boat has strong tendency to porpoise.
- **Surface roughness:** Moss, barnacles, etc., on boat or corrosion of outboard's gear housing increase skin friction and cause speed loss. Clean surfaces when necessary.

Water Absorption

It is imperative that all through-the-hull fasteners be coated with a quality marine sealer at time of installation. Water intrusion into the transom core and/or inner hull will result in additional boat weight (reduced boat performance), hull decay, and eventual structural failure.

Cavitation

Cavitation occurs when water flow cannot follow the contour of a fast-moving underwater object, such as a gear housing or a propeller. Cavitation increases propeller speed while reducing boat speed. Cavitation can seriously erode the surface of the gear housing or the propeller. Common causes of cavitation are:

- Weeds or other debris snagged on the propeller
- Bent propeller blade
- Raised burrs or sharp edges on the propeller

Ventilation

Ventilation is caused by surface air or exhaust gases that are introduced around the propeller resulting in propeller speed-up and a reduction in boat speed. Air bubbles strike the propeller blade and cause erosion of the blade surface. If allowed to continue, eventual blade failure (breakage) will occur. Excessive ventilation is usually caused by:

- Drive unit trimmed out too far
- A missing propeller diffuser ring
- A damaged propeller or gear housing, which allows exhaust gases to escape between propeller and gear housing
- Drive unit installed too high on transom

Detonation

Detonation in a 4-cycle engine resembles the pinging heard in an automobile engine. It can be otherwise described as a tin-like rattling or plinking sound.

Detonation is the explosion of the unburned fuel/air charge after the spark plug has fired. Detonation creates severe shock waves in the engine. These shock waves often find or create a weakness: the dome of a piston, cylinder head or gasket, piston rings or piston ring lands, piston pin, and roller bearings.

A few of the most common causes of detonation in a marine 4-cycle application are as follows:

- Over-advanced ignition timing
- Use of low octane gasoline
- Propeller pitch too high: engine RPM below recommended maximum range
- Lean fuel mixture at, or near, wide-open throttle
- Spark plugs: heat range too hot, incorrect reach, cross-firing
- Deteriorated or inadequate engine cooling system
- Combustion chamber deposits: result in higher compression ratio

Detonation usually can be prevented if:

- The engine is correctly set up
- Regular maintenance is scheduled

Following Complete Engine Submersion

Engine Submerged While Running (Special Instructions)

When an engine is submerged while running, the possibility of internal engine damage is greatly increased. After the engine is recovered, remove the spark plugs. If the engine fails to turn over freely when turning the flywheel, the possibility of internal damage (bent connecting rod and/or bent crankshaft) exists. The powerhead must be disassembled for inspection.

Freshwater Submersion (Special Instructions)

1. Recover the engine as quickly as possible.
2. Place the engine at full trim in.
3. Remove all cowling.
4. Flush the exterior of the outboard with freshwater to remove mud, weeds, etc. Do not attempt to start the engine if sand has entered the powerhead. Disassemble the powerhead, if necessary, to clean components.
5. Remove the spark plugs and get as much water as possible out of the powerhead. Most of the water inside the combustion chambers can be eliminated by rotating the flywheel while the engine is tilted in.
6. Pour approximately one teaspoon of engine oil into each spark plug opening. Rotate the flywheel to distribute oil in the cylinders.
7. Change the engine oil. Run the outboard for a short time, and check for the presence of water in the oil. If water is present, the oil will appear milky. Drain and replace the oil.
8. Dry all wiring and electrical components using compressed air.

9. Install the spark plugs.
10. Attempt to start the engine, using a fresh fuel source.
 - If the engine starts, run it for at least one hour, to eliminate any water remaining in the engine. Check again for the presence of water in the oil. If water is present, the oil will appear milky. Drain and replace the oil.
 - If the engine fails to start, determine if the cause is fuel, electrical, or mechanical.

NOTE: The fuel system is closed to the ambient air at all times when the engine is not running.

IMPORTANT: The engine should be run within two hours after recovery from the water, or serious internal damage will occur. If unable to start engine within two hours of recovery, completely disassemble the engine and clean all parts. Apply oil as soon as possible.

Saltwater Submersion (Special Instructions)


Due to the corrosive effect of saltwater on internal engine components, complete disassembly of the engine is necessary before any attempt is made to start the engine.

Power Trim and Tilt

The outboard has a trim/tilt control called power trim. This enables the operator to easily adjust the position of the outboard by pressing the trim switch. Moving the outboard in closer to the boat transom is called trimming in or down. Moving the outboard further away from the boat transom is called trimming out or up. The term trim generally refers to the adjustment of the outboard within the first 20° range of travel. This is the range used while operating the boat on plane. The term tilt is generally used when referring to adjusting the outboard further up out of the water. The outboard can be tilted up past the trim range for shallow water operation or loading the boat onto a trailer. With the engine turned off and ignition switch turned on, the outboard can be tilted out of the water.

- Below 2000 RPM the engine can be trimmed or tilted to any range. Caution is advised when operating the engine past the trim range. Ensure the water pickups are submerged.
- While in the trim range and the engine is above 2000 RPM, you can only trim to the maximum trim range.
- If the engine is below 2000 RPM and is in the trailer range, advancing the throttle will allow the engine to achieve a maximum RPM of 4250. Engine operation in this capacity (above the normal 2000 limit) should only be used for loading or unloading the boat onto or off the trailer. It should not be used during normal boat operation.

NOTE: Exceeding 4250 RPMs the engine PCM will begin Engine Guardian protection.

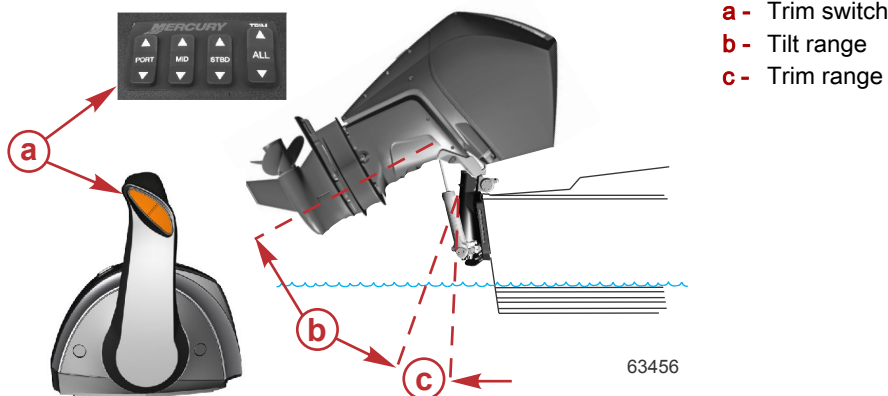

Power Trim Operation

With most boats, operating around the middle of the trim range will give satisfactory results. However, to take full advantage of the trimming capability there may be times when you choose to trim the outboard all the way in or out. Along with an improvement in some performance aspects comes a greater responsibility for the operator, this being an awareness of some potential control hazards.

Consider the following lists carefully:

1. Trimming in or down can:
 - Lower the bow.
 - Result in quicker planing off, especially with a heavy load or a stern heavy boat.
 - Generally improve the ride in choppy water.
 - In excess, can lower the bow of some boats to a point where they begin to plow with their bow in the water while on plane. This can result in an unexpected turn in either direction (called bow steering or oversteering) if any turn is attempted, or if a significant wave is encountered.

⚠ WARNING

Operating the boat at high speeds with the outboard trimmed too far under can create excessive bow steer, resulting in the operator losing control of the boat. Install the trim limit pin in a position that prevents excessive trim under and operate the boat in a safe manner.

2. Trimming out or up can:
 - Lift the bow higher out of the water.
 - Generally increase top speed.
 - Increase clearance over submerged objects or a shallow bottom.
 - In excess, can cause boat porpoising (bouncing) or propeller ventilation.
 - Cause engine overheating if any cooling water intake holes are above the waterline.

Tilting to Full Up Position

Tilt at Helm

NOTE: The trim/tilt switch will remain active for 15 minutes after the ignition key switch has been turned off.


1. If the ignition key switch has been turned off for over 15 minutes, turn it to the "ON" position.
2. Press the trim/tilt switch to the up position. The outboard will tilt up until the switch is released or it reaches its maximum tilt position.

Tilt at Engine

The cowl mounted auxiliary tilt switch can be used to tilt the outboard with the key switch in the "OFF" position.

Tilt Support Lever

1. Rotate the tilt support lever down.
2. Lower outboard until tilt support bracket rests on the pedestal.
3. Disengage the tilt support bracket, by raising the outboard up and rotating the tilt support lever up. Lower the outboard.

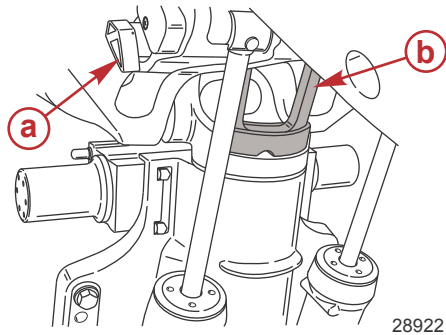

- a - Tilt support lever
- b - Tilt support bracket

Manual Tilting

If the outboard cannot be tilted using the power trim/tilt switch, the outboard can be manually tilted.




NOTE: The manual tilt release valve must be tightened before operating the outboard to prevent the outboard from tilting up during reverse operation.

Turn out the manual tilt release valve three turns counterclockwise. This allows manual tilting of the outboard. Tilt the outboard to the desired position and tighten the manual tilt release valve.

Auxiliary Tilt Switch

The auxiliary tilt switch can be used to tilt the outboard up or down using the power trim system.

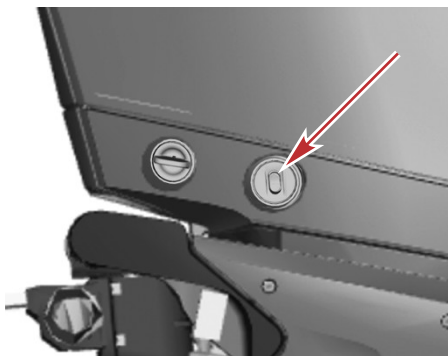

63459

Operating in Shallow Water

When operating your boat in shallow water, you can tilt the outboard beyond the maximum trim range to prevent hitting bottom.

1. Reduce the engine speed below 2000 RPM.
2. Tilt the outboard up. Make sure all the cooling water intake holes stay submerged at all times.
 - Below 2000 RPM the engine can be trimmed or tilted to any range. Caution is advised when operating the engine past the tilt range. Ensure the water pickups are submerged.
 - If the engine is below 2000 RPM and is in the trailer range, advancing the throttle will allow the engine to achieve a maximum RPM of 4250. Engine operation in this capacity (above the normal 2000 limit) should only be used for loading or unloading the boat onto or off the trailer. It should not be used during normal boat operation.

NOTE: Exceeding 4250 RPMs the engine PCM will begin Engine Guardian protection.

Cylinder Leakage Testing

Model	Cylinder Firing Order
V8 models	1-2-7-3-4-5-6-8
V6 models	1-2-3-4-5-6

NOTE: Cylinder leakage testing can help the mechanic pinpoint the source of a mechanical failure by gauging the amount of leakage in an engine cylinder. Refer to the manufacturer's tester instructions for proper testing procedures.

Cylinder Leakage Tester	Snap-On EEPV309A
-------------------------	------------------

1. Remove all spark plugs.
2. Rotate the engine clockwise until cylinder #1 is at its compression stroke.
3. Complete the cylinder leak down test on the #1 spark plug hole. Refer to the manufacturer's tester instructions for proper testing procedures.
4. After testing cylinder #1, install a dial indicator on the next firing order sequence cylinder.
5. Rotate the flywheel so the piston is at TDC.
6. Complete the cylinder leak down test.
7. Proceed with the succeeding firing order cylinder TDC and complete the cylinder leak down test.
8. Complete the procedure in sequence on the remaining cylinders.

Analysis

Due to standard engine tolerances and engine wear, no cylinder will maintain a 0% of leakage. It is important only that cylinders have somewhat consistent reading between them. Differences of 15 to 30% indicate excessive leakage. Larger engines tend to have a larger percentage of cylinder leakage than smaller engines.

If excessive leakage is present, first check that the piston is at top dead center of its compression stroke. Leakage will naturally occur if the exhaust or intake valve is open.

General Information

To determine the cause of high percentage leaks, you must locate where the air is escaping from. Listen for air escaping through the intake, adjacent spark plug holes, exhaust pipe, and crankcase oil fill plug. Use the following table to aid in locating the source of cylinder leakage.

Air Escaping From	Possible Location
Air induction	Intake valve
Exhaust system	Exhaust valve
Oil fill plug	Piston/rings
Adjacent cylinder	Head gasket

Painting Procedures

WARNING

Continuous exposure to airborne particles such as chemical vapors, dust, or spray can cause serious injury or death. Ensure that the work area is properly ventilated and wear protective eyewear, clothing, and respirators.

Propellers

1. Sand the entire area to be painted with 3M 120 Regalite Polycut or coarse Scotch-Brite disc or belts.
2. Feather edges of all broken paint edges. Try not to sand through the primer.
3. Clean the surface to be painted using PPG Industries DX330 Wax and Grease Remover or equivalent (Xylene or M.E.K.).
4. If bare metal has been exposed, use Mercury/Quicksilver Light Gray Primer.
5. Allow a minimum of one hour dry time and no more than one week before applying the finish coat.
6. Apply the finish coat using Mercury/Quicksilver EDP Propeller Black.

Gear Housing

The following procedures should be used in refinishing gear housings. This procedure will provide the most durable paint system available in the field. The materials recommended are of high quality and approximate marine requirements. The following procedure will provide a repaint job that compares with a properly applied factory paint finish. It is recommended the listed materials be purchased from a local Ditzler Automotive Finish Supply Outlet. The minimum package quantity of each material shown following is sufficient to refinish several gear housings.

1. Wash the gear housing with a muriatic acid base cleaner to remove any type of marine growth, and rinse with water.
2. Wash the gear housing with soap and water. Rinse with clean water.
3. Sand blistered area with 3M 180 grit sandpaper or P180 Gold Film Disc to remove paint blisters only. Feather edge all broken paint edges.
4. Clean gear housing thoroughly with DX-330 Wax and Grease Remover.
5. Spot repair surfaces where bare metal is exposed with DX-503 Alodine Treatment.
IMPORTANT: Do not use aerosol spray paints as the paint will not properly adhere to the surface, nor will the coating be sufficiently thick to resist future paint blistering.
6. Mix Epoxy Chromate Primer DP-90LF with equal part catalyst DP-402LF per the manufacturer's instructions. Allow proper induction period for permeation of the epoxy primer and catalyst.
7. Allow a minimum of one hour drying time and no more than one week before the top coat application.
8. Use Ditzler Urethane DU9300 for Mercury Black, DU34334 for Mariner Grey, DU35466 for Force Charcoal, DU33414M for Sea Ray White, and DFHS 37372H for Verado Silver. Catalyze all five colors with Ditzler DU5 catalyst mixed 1:1 ratio. Reduce with solvents per Ditzler label.

WARNING

Continuous exposure to airborne particles such as chemical vapors, dust, or spray can cause serious injury or death. Ensure that the work area is properly ventilated and wear protective eyewear, clothing, and respirators.

NOTE: Apply one half to one mil even film thickness with a spray gun. Allow the paint to flash off for five minutes before applying the second even coat of one half to one mil film thickness. Urethane paint will dry to the touch in a matter of hours, but will remain sensitive to scratches and abrasions for a few days.

9. The type of spray gun used will determine the proper reduction ratio of the paint.

IMPORTANT: Do not paint the sacrificial anode.


10. Cut out a cardboard plug for trim tab pocket to keep paint off of mating surface to maintain good continuity circuitry between trim tab and gear housing.

Decal Removal

1. Mark decal location before removal to assure proper alignment of new decal.
2. Carefully soften decal and decal adhesive with a heat gun or heat blower while removing old decal.
3. Clean decal contact area with a 1:1 mixture of isopropyl alcohol and water.
4. Thoroughly dry decal contact area and check for a completely cleaned surface.


Raised Decal Removal

1. Use fishing line (obtain locally) to cut the decal from the foam backing.

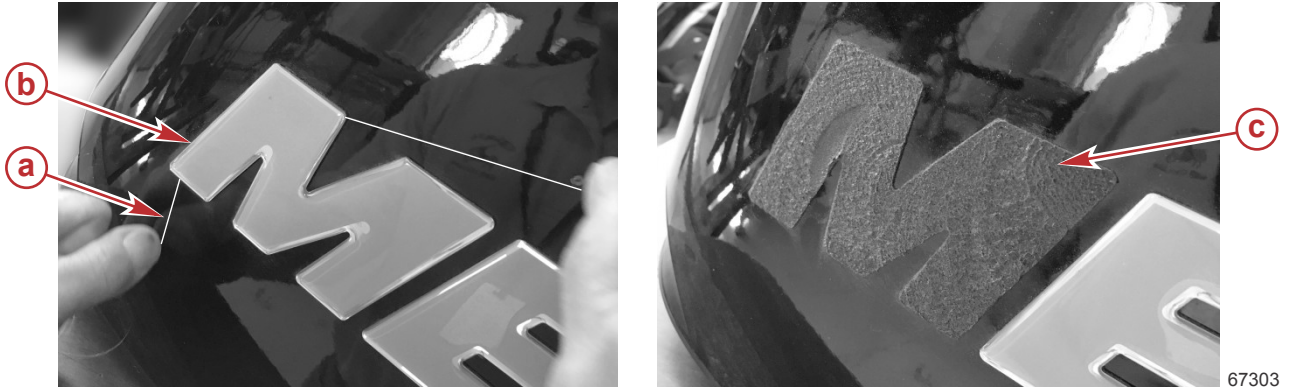

- a - Fishing line
- b - Raised decal
- c - Foam backing

2. Remove the foam backing and adhesive with a 3M™ Stripe Off Wheel (obtain locally) and a standard 3/8 in. electric drill. Follow the instructions included with the kit.

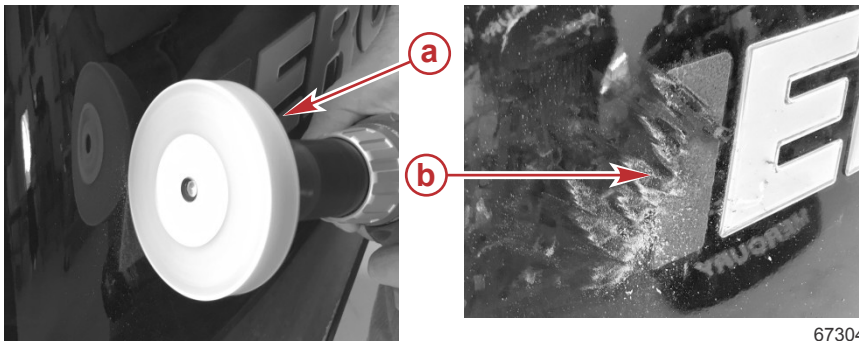

- a - 3M™ Stripe Off Wheel (obtain locally)
- b - Foam backing, partially removed

3. Brush the loose foam debris away with a dry soft cloth.



- a - Loose foam debris
- b - Intact raised decal

General Information

4. Use an adhesive remover, such as acetone, to wipe away any remaining adhesive.



67306

a - Location of removed raised decal, after cleaning with acetone

b - Intact raised decal



Important Information

Section 1D - Outboard Installation




Table of Contents

Important Information.....	1D-2	DTS Special Notices and Guidelines.....	1D-21
Important Steering Installation Guidelines.....	1D-2	Harness and Connector Guidelines.....	1D-22
Multiple Engine Steering Requirements.....	1D-2	Data Harness Pulling Procedure.....	1D-22
Multiple Steering Cylinders.....	1D-3	System Wiring Reference Points.....	1D-22
Notice to Installer.....	1D-3	Wiring Accessories.....	1D-23
Mercury Marine Validated Engine Mounting Hardware		Rigging the Engine.....	1D-23
.....	1D-4	Rigging Tube and Rigging Adapter.....	1D-23
Fastening Hardware Specification (Not Factory		Connections at the Engine.....	1D-23
Supplied).....	1D-4	Water Tubing Connection.....	1D-26
Accessories Mounted to the Transom Clamp Bracket		Rigging Grommet.....	1D-27
.....	1D-5	Installing the Steering System.....	1D-28
Avoiding Loss of Throttle and Shift Control.....	1D-6	Battery Connections.....	1D-28
Boat Horsepower Capacity.....	1D-7	Order of Connection.....	1D-28
Battery Requirements.....	1D-7	Connecting Battery Cables and Clean Power Harness... 1D-29	
Battery Cables.....	1D-7	Fuel System.....	1D-30
Battery Switches.....	1D-9	Accessory Electric Fuel Pump.....	1D-30
Battery Isolation.....	1D-10	Avoiding Fuel Flow Restriction.....	1D-30
Engine Battery Specifications.....	1D-11	Low Permeation Fuel Hose Requirement	1D-30
Installing the Outboard.....	1D-13	Fuel Demand Valve.....	1D-31
Installation Specifications.....	1D-13	Fuel Supply Module Priming Procedure.....	1D-31
Determining Recommended Outboard Mounting		Adaptive Speed Control (ASC) Propping with CDS G3... 1D-32	
Height.....	1D-14	Adaptive Speed Control (ASC) Propping without CDS G3	
Maximum Outboard Mounting Height.....	1D-14	1D-33
Before You Drill.....	1D-15	System Wiring Installation Checklist.....	1D-33
Drilling Outboard Mounting Holes.....	1D-16	Data Cable.....	1D-33
Lifting the Outboard.....	1D-16	Junction Box (if equipped).....	1D-33
Transom Mounting Hardware.....	1D-17	Non-Mercury Marine Supplied Ignition Key Switch.. 1D-33	
Fastening the Outboard to the Transom.....	1D-17	Electronic Remote Control.....	1D-33
Fastening the Engine Using a Lift Plate or Setback		DTS Command Module Harness.....	1D-33
Bracket.....	1D-19	Battery.....	1D-34
Checking Boat Transom Construction.....	1D-21	Lanyard Stop Switch.....	1D-34
Wiring Guidelines.....	1D-21		

Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Battery connections at the engine	92- 25711 3
 120	Corrosion Guard	Battery terminals	92-802878 55

Special Tools

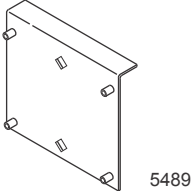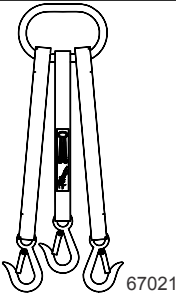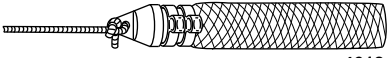Transom Drilling Fixture 	91-98234A2 Aids in engine installation by acting as a template for engine mounting holes.
Lifting strap 	883705T01 Use with an overhead hoist to lift an engine.
Data Cable Puller 	888462A 1 Attaches to end of DTS data harness to aid in pulling harness through boat. Prevents damage to DTS data harness.

Important Information

Important Steering Installation Guidelines

IMPORTANT: Joystick piloting has its own special requirements and is not part of this steering installation.

IMPORTANT: Do not use more than two cylinders with non-joystick multiengine installations. The power steering pump is designed to support the displacement of two steering cylinders. Address concerns to your Mercury product application engineer.

There are a few important installation guidelines that must be considered when installing the steering components on multiengine installations. Installing the wrong steering helm and cylinder configuration may result in a less than acceptable steering wheel lock-to-lock ratio.

- A 40 cc displacement helm should be used on single cylinder and liquid tie bar installations. This will yield 4 full turns, lock to lock.
- A 50 cc displacement helm should be used on all dual cylinder installations rigged in parallel. This will yield 6.4 turns, lock to lock.

Multiple Engine Steering Requirements

Tie Bar

To install the front-mounted steering tie bars, follow the instructions included with the steering tie bar kit and observe the following guidelines:

- Dual Engine Application—Dual Outboard Tie Bar kit
- Triple Engine Application—Dual Outboard Tie Bar kit with a Plus One Tie Bar Kit (two steering cylinders—starboard and port engines)

- Quad Engine Application—Dual Outboard Tie Bar kit with two Plus One Tie Bar Kits (two steering cylinders—starboard and port engines)

⚠ CAUTION

Coupling multiple engines of this model with a rear-mounted tie bar can cause cylinder distortion and premature engine failure. Use a front-mounted tie bar on multiple-engine applications of this model.


Multiple Steering Cylinders

On some large/heavy dual-outboard boats, the steering forces generated in extreme maneuvers may create loads that exceed the pump's pressure capacity, where the operator may feel intermittent periods of load feedback at the steering wheel. The steering wheel may feel hard to turn for brief periods during these extreme maneuvers. If this happens and steering performance is deemed unacceptable for the application, a second (accessory) steering cylinder can be installed. When using a second steering cylinder, the 40 cc helm should be replaced with a 50 cc helm.

Applications with multiple engines of 350 hp or higher **require** two of the engines to be equipped with a power steering cylinder along with the use of a 50 cc or greater displacement helm. Address concerns to your Mercury product application engineer.

⚠ CAUTION

Avoid momentary loss of steering control caused by high steering forces. Installations with multiple engines of 350 hp or higher must have two steering cylinders.

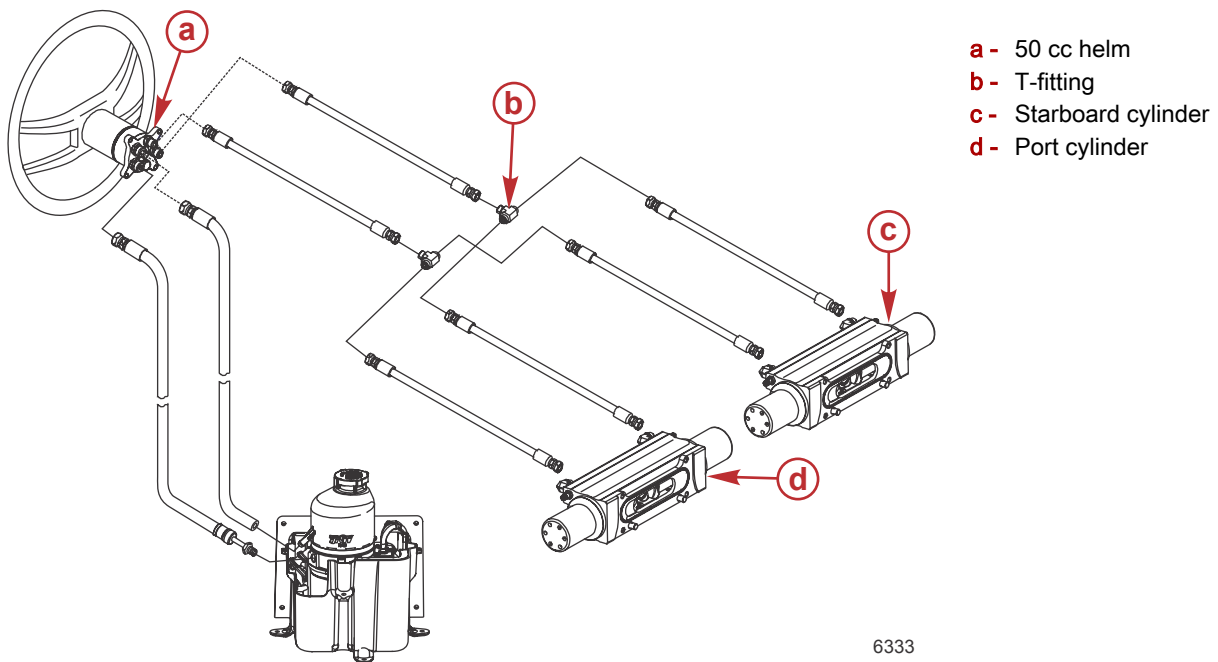

Notice to Installer

Installation of this product will require electronic calibration. This calibration must not be attempted by anyone other than the original equipment manufacturer (OEM) or a Mercury technician trained in digital throttle and shift (DTS) systems at an authorized Mercury dealership. Improper installation and calibration of the DTS product will result in a system that is inoperable or unsafe for use.

Mercury Marine Validated Engine Mounting Hardware

IMPORTANT: Mercury Marine provides validated fasteners and installation instructions, including torque specifications, with all our outboards so they can be properly secured to boat transoms. Improper installation of the outboard can cause performance and reliability issues which can lead to safety concerns. Follow all of the instructions relating to the outboard installation. **DO NOT** mount any other accessory onto the boat with the fasteners provided with the outboard. For example, do not mount a tow sports bar or boarding ladder onto the boat using the mounting hardware included with the outboard. Installing other products onto the boat that utilize the outboard mounting hardware will compromise the ability of that hardware to properly and safely secure the outboard to the transom.

Outboards that require validated mounting hardware will have the following decal on the transom clamp.



51965

Fastening Hardware Specification (Not Factory Supplied)

IMPORTANT: Mercury Marine has designed and tested the engine when it is directly mounted to the transom using the mounting hardware included with the engine. Torque requirements have been established using the hardware included with the engine. The use of mounting hardware not supplied by the factory, must be equal to, or greater than the following specifications.

- Screw specifications:

Must be a hex head screw with an unthreaded shank length of not less than 1 in.	
Thread size	0.50-20 in. UNF - 2A thread
Material	Austenitic stainless steel grade 304 or 316
Minimum mechanical properties	90,000 psi ultimate tensile strength/50,000 psi yield strength. This corresponds to a F593C screw head marking per American Society for Testing and Materials (ASTM).



48016

- Nut specifications:

Nut to be a prevailing torque, full height nut, nylon 6/6 or equivalent insert	
Thread size	0.50-20 in. UNF thread
Material	Brass, Grade Cu 613 per ASTM
Minimum mechanical properties	80,000 psi proof stress. This corresponds to a F467F mechanical marking per ASTM.

- Washer specifications:

This washer is for use on the transom bracket side of the application	0.88 x 0.53 x 0.104 in. flat washer, 630 (H1025) hardened stainless steel
This washer is for use on the transom side of the application	1.5 x 0.515 x 0.125 in. flat washer, 302, 304, or 316 stainless steel

Accessories Mounted to the Transom Clamp Bracket

Mercury Marine has been made aware that certain aftermarket marine accessories, such as emergency boarding ladders, shallow water anchors, transom wedge kits, and tow sport attaching devices, have been mounted to the boat by use of the same fasteners that secure the outboard to the transom or jack plate. Using the same fastener to secure both an accessory and the engine to the boat compromises the ability of the fasteners to maintain the proper clamp load. A boat with loose engine mounting fasteners creates the possibility of performance, durability, and safety issues.

⚠ WARNING

Avoid serious injury or death resulting from a loss of boat control. Loose engine fasteners could cause the transom bracket to fail, resulting in a loss of the driver's ability to control the boat. Always ensure that the engine fasteners are tightened to the specified torque.

Acceptable Accessory Mounting to the Transom Clamp Bracket

After the engine is mounted to the transom or jack plate in accordance with the engine installation instructions, it is acceptable to attach an accessory to the boat by use of the unused bolt holes in the transom clamp bracket as shown in Figure 1.

The following list provides additional guidelines for mounting accessories to the transom clamp bracket.

- The accessory fasteners must pass through the boat transom or jack plate.
- The installation must not create interference issues, as would an accessory mounting plate resting in the radius of the transom clamp bracket. Refer to Figure 1.

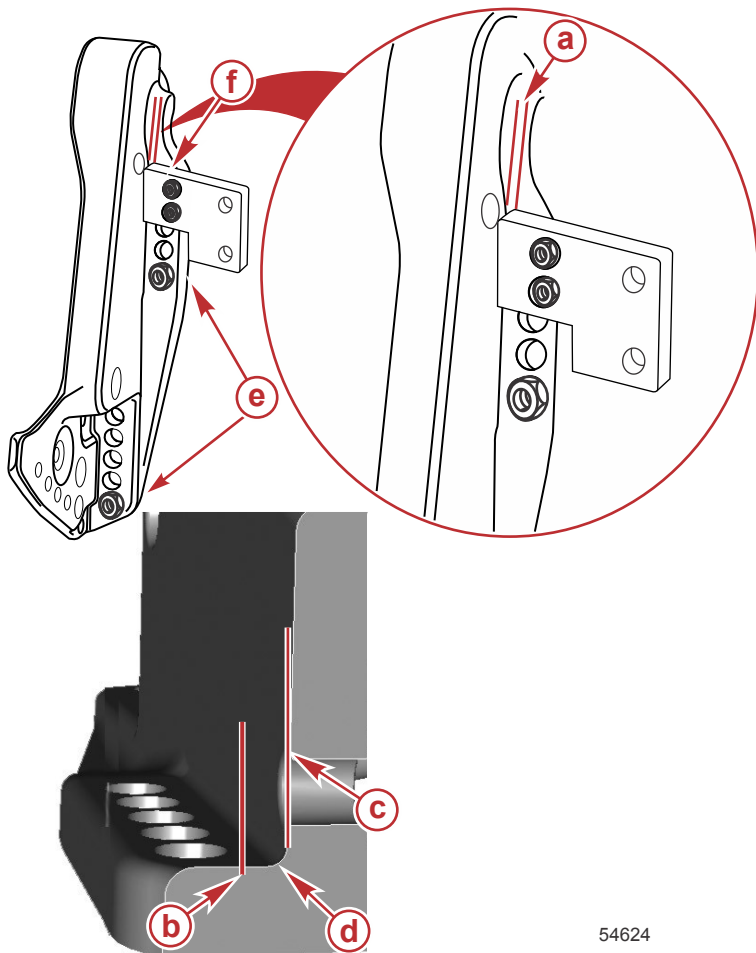


Figure 1

- a** - Minimum clearance 3.175 mm (0.125 in.)
- b** - Edge of accessory bracket
- c** - Transom clamp bracket wall
- d** - Radius
- e** - Engine supplied mounting fasteners
- f** - Fasteners supplied by the accessory manufacturer installed through unused engine mounting bracket holes

54624

Unacceptable Accessory Mounting

IMPORTANT: Do not use the fasteners that secure the engine to the boat (either the transom or the jack plate) for any purpose other than securing the engine to the boat.

1. Do not mount an accessory to the transom clamp bracket in an unsupported condition. Refer to Figure 2.

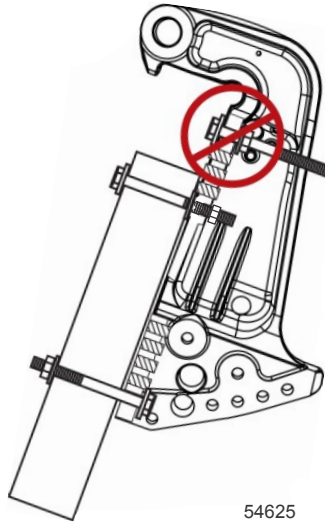


Figure 2

2. Do not attach an accessory to the boat by use of the engine mounting hardware. Refer to Figure 3.

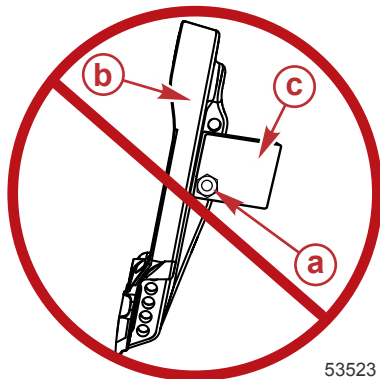


Figure 3

- a - Engine supplied mounting fasteners
- b - Transom clamp bracket
- c - Accessory

3. Do not install wedges or plates between the transom clamp brackets and the transom (or jack plate). Refer to Figure 4.

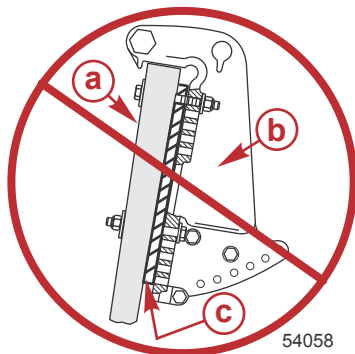


Figure 4

- a - Boat transom or jack plate
- b - Transom clamp bracket
- c - Wedge/plate

Avoiding Loss of Throttle and Shift Control

WARNING

Splicing or probing will damage the wire insulation allowing water to enter the wiring. Water intrusion may lead to wiring failure and loss of throttle and shift control. To avoid the possibility of serious injury or death from loss of boat control, do not splice or probe into any wire insulation of the DTS system.

Boat Horsepower Capacity

⚠ WARNING

Exceeding the boat's maximum horsepower rating can cause serious injury or death. Overpowering the boat can affect boat control and flotation characteristics or break the transom. Do not install an engine that exceeds the boat's maximum power rating.

Do not overpower or overload your boat. Most boats will carry a required capacity plate indicating the maximum acceptable power and load as determined by the manufacturer following certain federal guidelines. If in doubt, contact your dealer or the boat manufacturer.

U.S. COAST GUARD CAPACITY	
MAXIMUM HORSEPOWER	XXX
MAXIMUM PERSON CAPACITY (POUNDS)	XXX
MAXIMUM WEIGHT CAPACITY	XXX

26777

Battery Requirements

The following specifications are regarding marine battery systems and their connectivity to outboard propulsion systems. Adherence to the following requirements is mandatory for all engine installations. Failure to follow the requirements may result in loss of warranty coverage for electrical components and systems.

Standards


The following Mercury requirements are considered supplemental to existing ABYC Standard E-11 requirements. Refer to the most current standards and recommended practices published by the American Boat and Yacht Council (ABYC).

Overcurrent Protection

All Mercury Marine alternators are current-limiting power sources.

Battery Cables

- Select the proper size positive (+) and negative (-) battery cables by using the following chart.
- Cable length is calculated by adding the total length of the positive cranking circuit to that of the negative cranking circuit (positive battery post to negative battery post). Always round up to the next whole number when determining length.

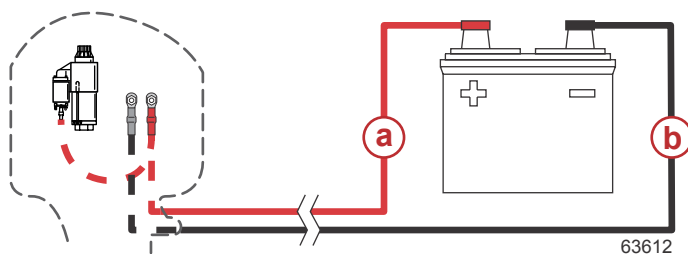

Cable length = a + b

- a** - Positive cranking circuit (battery to starter)
- b** - Negative cranking circuit (battery to engine ground)

- The battery cable terminals must be soldered to the cable ends to ensure continuity. Only use electrical grade resin flux solder on cable terminals. Do not use acid flux. Acid flux will cause corrosion and subsequent failure.
- Apply heat shrink to the cranking circuit terminals and the clean power circuit terminals.
- Color coding must be in compliance with ABYC E-11 electrical standards.


Battery Cable Sizing

Total Cable Length (a + b)		Minimum Cable Size
Minimum	Maximum	
6.8 m (22.3 ft)	7.4 m (24.3 ft)	21.2 mm ² (4 AWG)
7.4 m (24.3 ft)	12.2 m (40.0 ft)	33.6 mm ² (2 AWG)
12.2 m (40.0 ft)	15.2 m (49.9 ft)	42.4 mm ² (1 AWG)
15.2 m (49.9 ft)	19.6 m (64.3 ft)	53.5 mm ² (0 AWG)
19.6 m (64.3 ft)	24.4 m (80.0 ft)	67.7 mm ² (00 AWG)

Cranking Circuit Cables

- Cables must be one size throughout the entire cranking circuit.
NOTE: Cables connecting the starter to the engine positive (+) connection point (hot stud) and cables contained within the engine envelope as part of the engine system are excluded from this requirement.
- Two numbers are provided in the preceding minimum cable size chart:
 - The first number represents the approximate cross sectional area that is equivalent to the American Wire Gauge (AWG) number, expressed in square millimeters (mm²). This equivalent number is used as the minimum cable size when selecting cables not denoted in gauge, such as ISO sizes.
IMPORTANT: SAE wire size is not the same as AWG.
 - The number in parentheses is the American Wire Gauge (AWG) cable recommended by Mercury for the indicated cranking circuit length.
- All cables listed in the preceding chart are sized for engine cranking only.
- Always route cranking cables with forward and return current carrying conductors as neighboring pairs. Cables may diverge only at connection points such as the battery, engine, switches, or other devices.

NOTE: Ground cables connecting an engine-to-engine or battery-to-battery are excluded from this requirement.

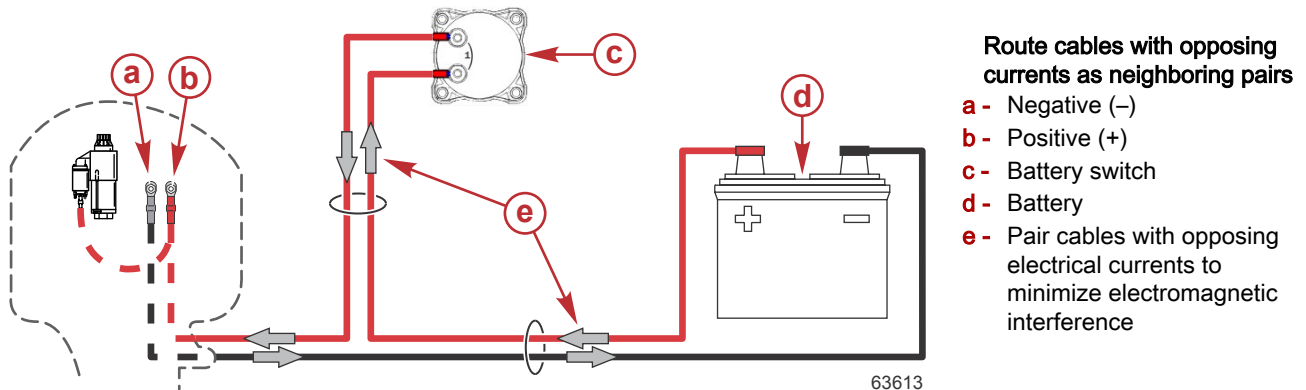

- Multiple cables can be run in parallel to reduce voltage drop but not to increase current carrying capacity.

Clean Power Connections

Mercury clean power harnessing must be connected directly to the positive and negative posts of the corresponding propulsion engine's cranking battery.

IMPORTANT: Any deviations from the clean power connection requirement must be approved by Mercury Marine.

Battery Cable Connections

- Apply Corrosion Guard to the battery terminal connections to prevent corrosion.

Tube Ref No.	Description	Where Used	Part No.
120	Corrosion Guard	Battery terminals	92-802878 55

IMPORTANT: Locking hex nuts are required on battery posts. If the battery is equipped with wing nuts, remove the wing nuts and install hex nuts. Do not use wing nuts on battery post connections.

- Tighten the battery terminal nuts to the specified torque.

Description	Nm	lb-in.	lb-ft
Battery terminal nuts	13.5	120	–


IMPORTANT: Local laws may require that both battery terminals are covered.

3. Use an insulating sleeve on positive terminal connections to prevent accidental shorts.
4. Additional requirements for positive cranking cables:
 - a. One positive cable union (connection at bulkhead or splice) is allowed between the battery and the battery switch.
 - b. One positive cable union (connection at bulkhead or splice) is allowed between the battery switch and the engine cranking battery connection.
5. Additional requirements for negative cranking cables:
 - a. One negative cable union (connection at the bulkhead or splice) is allowed between the engine ground connection and main vessel DC ground bus.
 - b. Bulkhead connections or splicing between the main vessel DC ground bus and the engine cranking battery must not be used.
6. When stacking multiple battery cable connections, observe the following:
 - a. There can be a maximum of four connections per battery post/connection point.
 - b. Do not use washers between ring terminals on battery post/connections.
 - c. Ensure that the highest current carrying conductor is in direct contact with the largest surface area of the battery post conducting surface.
 - d. Terminals should be grouped by size. Install largest to smallest ring terminal size.
 - e. Ensure that each ring terminal makes full contact with the ring terminal beneath it.

Battery Switches

1. All power sources with a stand-alone or combined cold cranking amps (CCA) of greater than 800 amps must have a battery switch installed in-line for the vessel to remain ABYC compliant.
2. Electrically or mechanically operated switches are allowed for switching the cranking circuit.
3. Electrical control switches require visual indication of the actual battery switch state. This applies to momentary or stationary switches that result in a permanent state change of the electrically controlled battery switch.


NOTE: *Electrical control switches used for momentary emergency parallel are exempt.*
4. Mechanical control battery switches must have text to indicate the battery switch state, for example: all, off, 1, or 2.
5. Integrated emergency parallel switching is not preferred.
 - a. Standard – Each engine will have a separate two-position switch for the cranking battery or a multiposition switch for each battery bank with a separate emergency parallel switch (labeled as such).

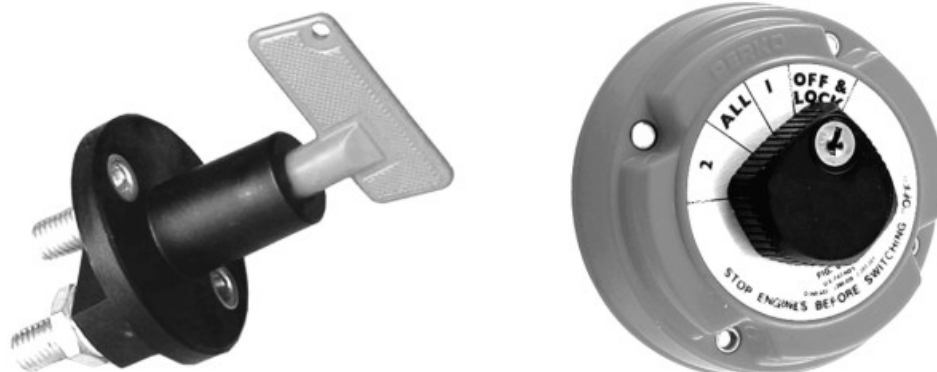

Two-position and multiposition battery switches

Outboard Installation

- b. An optional emergency parallel switch integrated between the engine and the house switch must be clearly identified, stating that the emergency parallel position should not be used during normal operation.

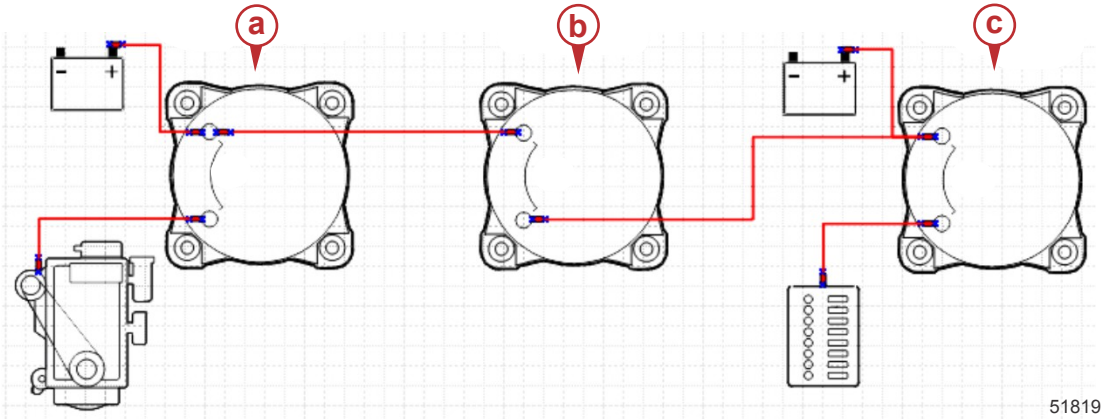

Emergency parallel circuit

- a - Engine switch
- b - Parallel switch
- c - House switch

6. Switches with multiple throws must make contact before they break contact (make-before-break).
7. Battery switch positions must be labeled to indicate battery/engine system or location (port engine, house, genset, etc.).
8. For applications requiring battery switches, each propulsion cranking battery must have its own set of switching contacts and cannot be shared with another propulsion cranking system.
 - a. Standard – Individual switch housing with individual switch contacts for each cranking battery (On/Off)
 - b. Optional – Individual switch housing with multiple switch contacts for all cranking batteries (On/Off/Both)
9. Isolated charging system note: Vessel loads and propulsion loads must have separate contacts, but are allowed to share the same switch housing.

Battery Isolation

Control, Isolation, and Charging Components

Diode/semiconductor isolation is the isolation method supported and recommended by Mercury Marine. Other (nonsupported) isolation methods include low-voltage disconnects (LVDs), voltage sensing relays (VSRs), and automatic closing/charging relays (ACRs). Consult with the device manufacturer for proper use and installation.

NOTE: Mechanical devices can have unintended operation due to mechanical shock. This is the primary reason solid-state isolation techniques should be chosen over mechanical devices.

1. The shore power AC-to-DC converter connection to the battery bank must be on an unswitched battery circuit with appropriate circuit protection.
2. When using cranking battery DC chargers (AC-DC or DC-DC) that require specific settings for different battery types, the vessel manufacturer must convey initial charger settings for the cranking batteries in an easily identifiable format. Ensure that the battery charger matches the battery type.
3. Engines that are connected to multiple battery sources must use a control/isolation device capable of charging both batteries automatically from the engine alternator regardless of the battery switch state.

NOTE: This requirement does not apply to the emergency parallel circuit, only to the battery selector circuit.

Isolation Cable Sizing

Observe the following specifications for alternator-to-isolator and isolator-to-battery wiring:

1. Cables for isolator wiring must have a rating of 105 °C (221 °F).

NOTE: Refer to ABYC E-11 for all cable insulation requirements.

2. If the specification in the battery isolator connection chart differs from the specification shown in the battery cable sizing chart, then the ground lead must match the larger of the two specifications.

Use the following charts when selecting cables for battery isolator installations.

Cable Size from Auxiliary Hot Stud to Battery Isolator (10% Allowable Voltage Drop)							
Maximum Alternator Output	3 m (10 ft)	4.5 m (15 ft)	6 m (20 ft)	7.6 m (25 ft)	9.1 m (30 ft)	12.2 m (40 ft)	15.2 m (50 ft)
85 A	21.2 mm ² (4 AWG)	21.2 mm ² (4 AWG)	21.2 mm ² (4 AWG)	21.2 mm ² (4 AWG)	33.6 mm ² (2 AWG)	33.6 mm ² (2 AWG)	33.6 mm ² (2 AWG)
115 A	21.2 mm ² (4 AWG)	33.6 mm ² (2 AWG)	33.6 mm ² (2 AWG)	33.6 mm ² (2 AWG)	33.6 mm ² (2 AWG)	33.6 mm ² (2 AWG)	42.4 mm ² (1 AWG)

Auxiliary Loads and Power Source

1. The MerCathode controller must be connected to the nonswitched side of the respective engine cranking battery or the house battery pack. It must be protected by a 5-amp fuse or circuit breaker. If switching of the MerCathode power is desired, then a switchable circuit breaker can be used.
2. Trim pumps must be connected to the switched side of the battery if a battery switch is used.

Isolated Battery Architecture

The isolated Mercury battery architecture specification is designed for powering the cranking system and specified critical vessel loads only. If any auxiliary vessel components (loads or other power sources) are connected to the engine power source, they must be connected in a way such that they are not allowed to degrade the propulsion power source to less than 11.5 VDC. The battery system architecture must protect the primary propulsion system voltage from nonessential power drains. Final verification of appropriate cable size for the entire system load is the responsibility of the vessel manufacturer.

Battery connections for **noncritical auxiliary loads** are as follows:

1. Standard connection: Noncritical loads must be connected to an independent battery bank, not to a propulsion cranking battery.
2. Optional connection:
 - a. Noncritical vessel loads cannot derive power or ground from the cranking circuit. Both the positive and negative cables associated with noncritical vessel loads must have independent connections to the power source.
 - b. The cranking battery can only be used as the reserve capacity power source to the house battery bank if the minimum voltage requirement of 11.5 VDC is maintained.

Battery connections for **critical vessel and propulsion loads** are as follows:

IMPORTANT: The following table identifies components that may source power from the cranking battery. The 11.5 VDC requirement mentioned above does not apply to these components. The components may be connected directly to the battery or anywhere along the cranking circuit.

Components that can be connected to the cranking battery		
Propulsion	Vessel	Charging
Propulsion cranking motor	Navigation lights	AC/DC converter
Trim pump	Bilge blower	Diode isolator
Steering pump	Bilge pumps	ACR/VSR
Clean power	Wipers	Other load shedding device
Helm/steering engine MPR	Emergency radio	–
MerCathode	Depth sounder	–
Propulsion gauges/sensors	Generator cranking motor	–

IMPORTANT: The generator cranking motor must be connected directly to the battery.

Engine Battery Specifications

IMPORTANT: This engine requires a 12-volt absorbed glass mat (AGM) marine starting battery that meets the minimum ratings.

Do not use flooded (wet cell), gel cell type lead acid batteries or lithium ion batteries for starting marine engines.

Each engine must be equipped with its own starting battery.

If the boat application requires additional battery loads for boat accessories or marine electronics, install an auxiliary battery, or batteries.

Outboard Installation

Required 12-Volt Absorbed Glass Mat (AGM) Battery Ratings	
USA (SAE) starting battery rating:	800 minimum marine cranking amps (MCA) with a minimum reserve capacity of 135 minutes RC25 rating
International (EN) starting battery rating:	975 minimum cold cranking amps (CCA) with a minimum of 65 amp hours (Ah)

NOTE: Do not use an engine starting battery that does not meet the specified ratings. If a battery that does not meet the ratings is used, the electrical system may perform poorly.

IMPORTANT: Boating industry standards (BIA, ABYC, etc.), federal standards, and Coast Guard regulations must be adhered to when installing the battery. Ensure that the battery cable installation meets the pull test requirements and that the positive battery terminal is properly insulated in accordance with regulations.

It is recommended (required in some states) that the battery be installed in an enclosed case. Refer to regulations for your area.


⚠ WARNING

Failure to properly secure the battery leads can result in a loss of power to the Digital Throttle and Shift (DTS) system, leading to serious injury or death due to loss of boat control. Secure the battery leads to the battery posts with hex nuts to avoid loose connections.

Description	Nm	lb-in.	lb-ft
Battery hex nuts	13.5	120	–

IMPORTANT: Battery cable size and length is critical. Refer to the Battery Cable Sizing table for size requirements.

A decal advising against using deep cycle batteries and wing nuts should be placed on or near the battery box for future service reference. One 5/16 in. and one 3/8 in. hex nut are supplied per battery for wing nut replacement. Metric hex nuts are not supplied.

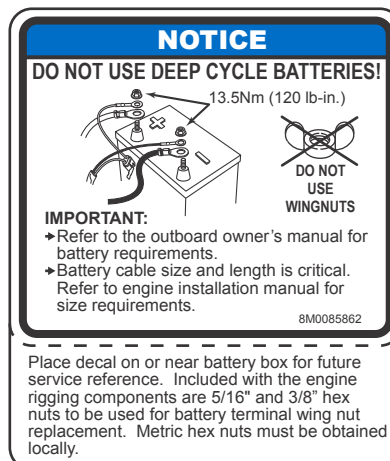


54395

Installing the Outboard

Installation Specifications

NOTICE

Care must be taken to prevent water from entering the cowl. Mounting height and location will affect how water is deflected between engines (multiple applications) and between the engine and transom under hard acceleration or deceleration forces. The installing dealer or boat builder is responsible for proper installation of the engine as explained in the installation instructions for the product. Engine damage resulting from water ingestion is not covered by the product warranty, unless the damage is the result of a defective part supplied by the engine manufacturer.

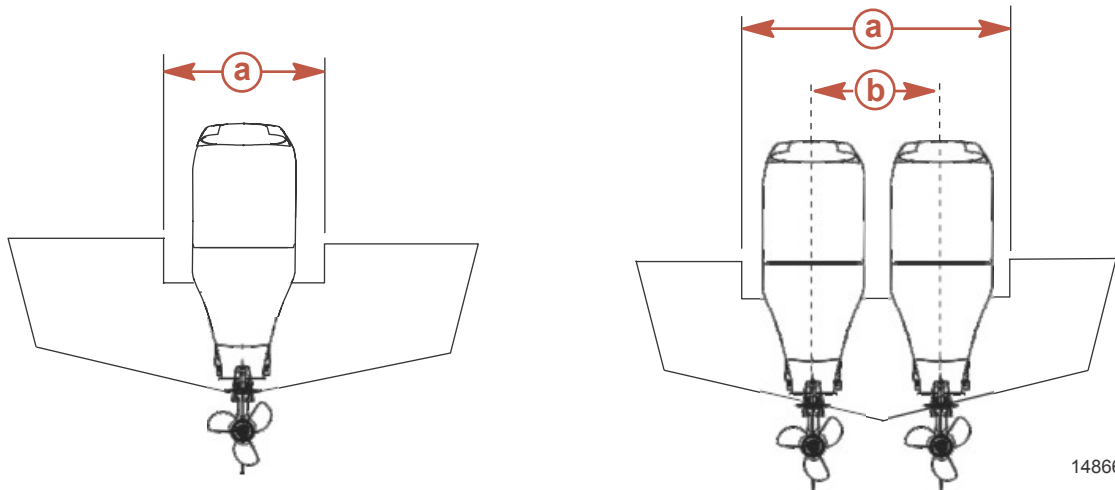


14866

- a** - Minimum transom opening
- b** - Minimum engine centerline for multiple engines - 66.0 cm (26 in.)

Minimum Transom Opening	
Single engine	99.0 cm (39 in.)
Dual engine	130.8 cm (51.5 in.)
Triple engine	196.9 cm (77.5 in.)
Quad engine	262.9 cm (103.5 in.)

NOTE: The minimum transom opening must be 64.8 cm (25.5 in.) greater than the distance between the centerlines of the outer engines.

Determining Recommended Outboard Mounting Height

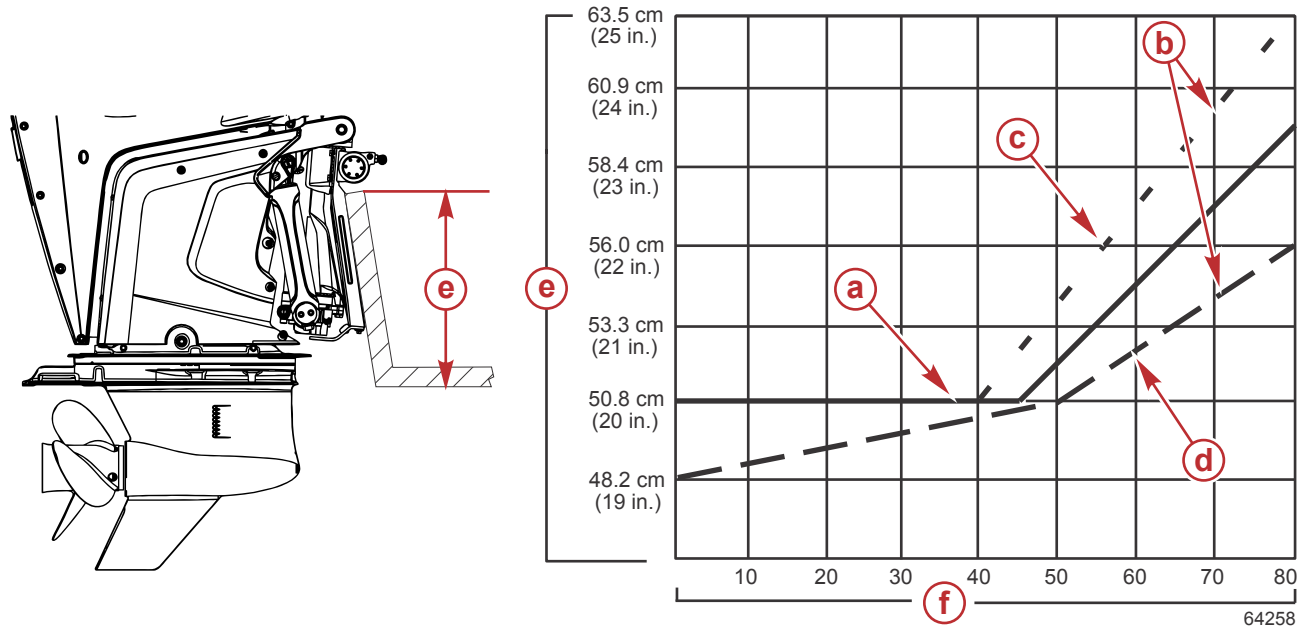

- a** - Solid line: recommended outboard mounting height
- b** - Dashed lines: Extremes of known successful outboard mounting heights
- c** - Short dashes: Preferred outboard mounting height if maximum speed is the only objective
- d** - Long dashes: Preferred outboard mounting height for dual-outboard installation
- e** - Outboard mounting height (height of outboard mounting brackets from bottom of boat transom)
- f** - Maximum boat speed (mph) anticipated

NOTICE

- Add 12.7 cm (5 in.) for XL models and 25.4 cm (10 in.) for XXL models to listed outboard mounting height.
- The mounting height of the outboard must not exceed 63.5 cm (25 in.) for L models, 76.2 cm (30 in.) for XL models, and 88.9 cm (36 in.) for XXL models. Mounting the outboard higher may cause damage to the gearcase components.

For heights over 56.0 cm (22 in.), a propeller designed for surfacing operation is usually preferred.

Increasing the mounting height will usually:


- Increase top speed
- Increase boat stability
- Cause propeller to break loose during planing or turning

Maximum Outboard Mounting Height

The mounting height of the outboard must not exceed the specified maximum:

Model	Maximum Mounting Height
L models	63.5 cm (25 in.)
XL models	76.2 cm (30 in.)
XXL models	88.9 cm (35 in.)

Mounting the outboard higher than the specified maximum may cause damage to the gearcase components.

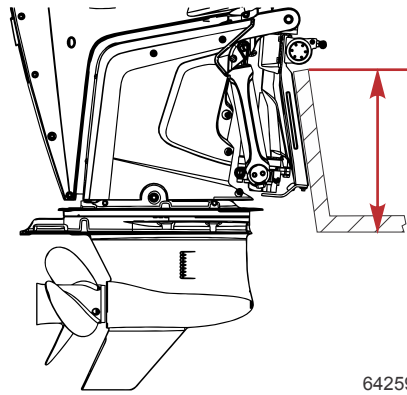


64259

Before You Drill

Required Mounting Installation (250–300)


The outboard must be secured to the boat transom with the four 12.7 mm (1/2 in.) diameter mounting screws, locknuts, and washers provided. Install two screws through the upper set of mounting holes and two screws through the lower set of mounting holes.

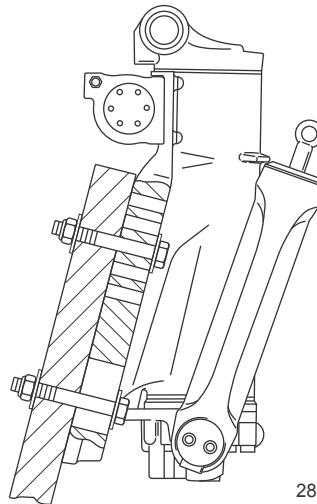

28923

Alternate Mounting Installation (300)

The outboard should be secured to the boat transom with the six 12.7 mm (1/2 in.) diameter mounting screws with two nuts on each screw. The two top screws must have one vacant transom mounting bracket hole between the screws. Only one locknut per screw is allowed.

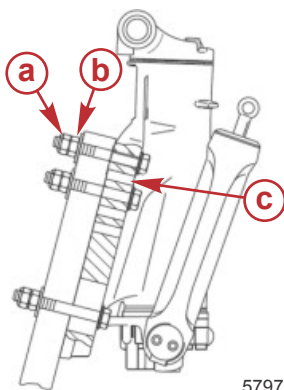


57973

- a** - Locknut
- b** - Nut
- c** - Vacant transom mounting bracket hole

Drilling Outboard Mounting Holes

IMPORTANT: Before drilling any mounting holes, carefully read **Determining Recommended Outboard Mounting Height** and install outboard to the nearest recommended mounting height.


1. Mark four mounting holes on the transom using the transom drilling fixture.

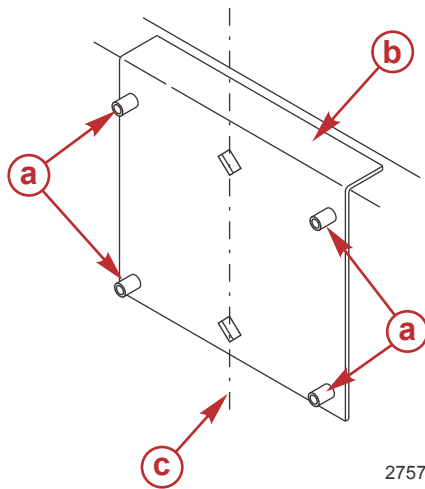

- a - Drill guide holes
- b - Transom drilling fixture
- c - Transom centerline

Transom Drilling Fixture	91-98234A2
--------------------------	------------

2. Drill four 13.5 mm (17/32 in.) mounting holes.

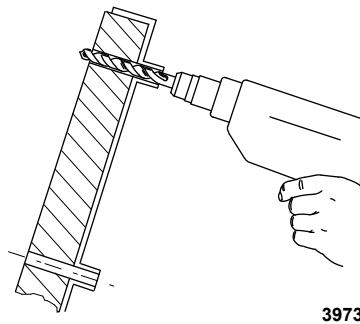

Lifting the Outboard

⚠ CAUTION


Improper lifting during removal or installation of the engine can cause injury or damage to engine components. Use a hoist, lifting arm, or other approved lifting device. Do not allow the lifting device to hook or compress any engine components.

IMPORTANT: All engine lifting devices (straps, slings, chains, or hoists) must have a minimum capacity of 450 kg (1000 lb).

1. Remove the top cowl from the engine.
2. Attach the two equal length (longer) straps of the lifting strap to the port and starboard lifting eyes on the engine. Secure the third strap (red) out of the way, to avoid damaging engine components.

Lifting strap	883705T01
---------------	-----------

3. Lift the engine into position with an overhead hoist.

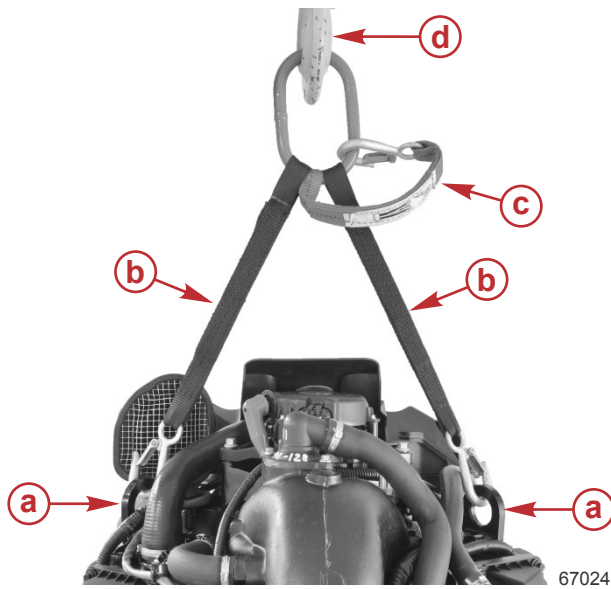

- a - Lifting eyes on engine
- b - Equal length straps (black)
- c - Short strap (red); secure out of the way
- d - Overhead hoist

Transom Mounting Hardware

Outboard Transom Mounting Hardware - Supplied with Outboard		
Part Number	Part Name	Description
8M0038370	Outboard mounting bolt	½-20 x 5.50 in. long (3.25 in. thread)
826711-17	Nylon insert locknut	½-20
28421	Flat washer	1.50 in. diameter
54012	Flat washer	0.875 in. diameter

Available Outboard Mounting Bolts	
Part Number	Description
67755005	½-20 x 2.50 in. long (1.25 in. thread)
67755006	½-20 x 3.50 in. long (1.25 in. thread)
814259	½-20 x 4.00 in. long (2.25 in. thread)
67755-1	½-20 x 4.50 in. long (2.25 in. thread)
8M0071543	½-20 x 5.00 in. long (3.25 in. thread)
8M0038370	½-20 x 5.50 in. long (3.25 in. thread)
67755-2	½-20 x 6.50 in. long (2.75 in. thread)
8M0028080	½-20 x 7.50 in. long (2.75 in. thread)
8M0032860	½-20 x 8.00 in. long (2.75 in. thread)


Fastening the Outboard to the Transom

IMPORTANT: Mercury Marine provides validated fasteners and installation instructions, including torque specifications, with all our outboards so they can be properly secured to boat transoms. Improper installation of the outboard can cause performance and reliability issues that can lead to safety concerns. Follow all of the instructions relating to the outboard installation.

Do not mount any other accessory onto the boat with the fasteners provided with the outboard. For example, do not mount tow sport bars or boarding ladders onto the boat using the mounting hardware included with the outboard. Using the outboard mounting hardware to install other products onto the boat will compromise the ability of that hardware to properly and safely secure the outboard to the transom.


Transom Surface Flatness

IMPORTANT: The transom mounting surface must be flat within 3.17 mm (0.125 in.). No step in the transom mounting surface is allowed. The inside transom mounting bolt washer surface must be flat within 3.17 mm (0.125 in.).

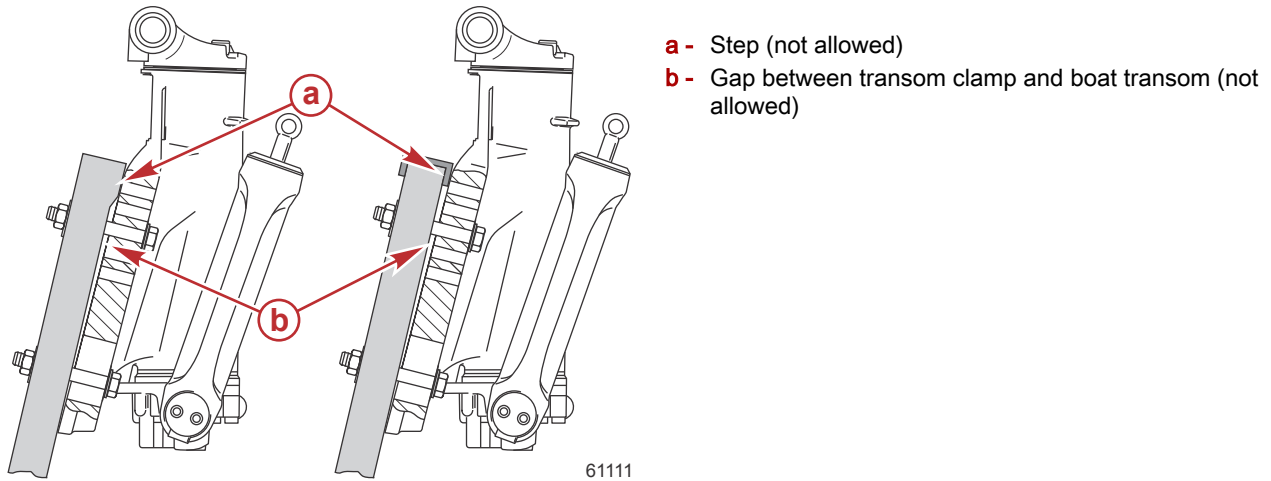

Required Mounting Installation


The outboard must be secured to the boat transom with the four 12.7 mm (0.5 in.) diameter mounting screws, locknuts, and washers provided. If the mounting screws are not appropriate, purchase alternate length screw kits. Mercury Marine screw kit part numbers are provided in **Transom Mounting Hardware**.

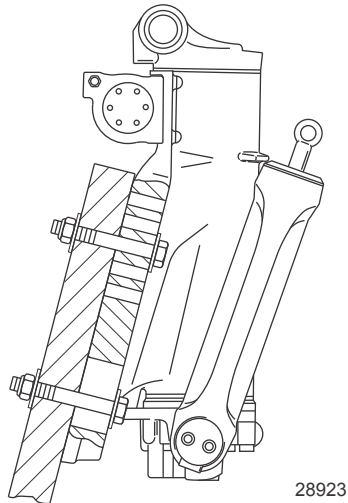

Alternate Six-Fastener Mounting Installation (300 HP)

The engine may be attached to the boat with four or six fasteners. Proper attachment of the engine can be accomplished with four screws and appropriate hardware if the proper torque is applied to and maintained on the screws.

Installers may elect to use an alternate six-fastener system for those installations where high mounting stress may be present. In these applications, the engine can be secured with six 12.7 mm (0.5 in.) diameter mounting screws, with at least one vacant transom mounting bracket hole between any two screws. The use of double nuts on each screw is acceptable, but only the outer nut may be a locknut. When using double nuts, the inner nut must be first tightened to the specified torque, and then the outer nut should be tightened against the inner nut.

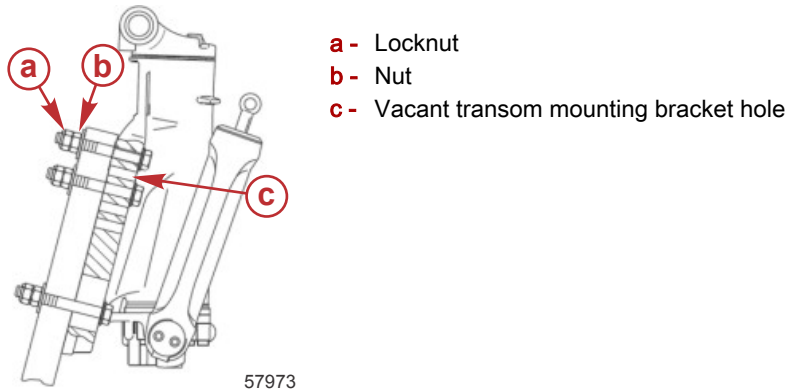

Installation


IMPORTANT: The following procedure refers to the required mounting installation with the engine mounted directly to the transom.

1. Apply marine sealer to the shanks (not the threads) of the transom screws.
2. Place the lower transom screws into the mounting slots before placing the outboard on the transom.
3. Refer to **Determining Recommended Outboard Mounting Height**, and install the outboard to the nearest recommended mounting height.
4. Fasten the outboard with the stainless steel transom screws, nylon insert locknuts, and flat washers as shown. Tighten the locknuts or transom screws to the specified torque.

IMPORTANT: Ensure that a minimum of two full threads of the mounting bolts extend beyond the locknut after tightening. The locknut must be drawn tight while still engaging the bolt threads and not contacting the shank of the bolt.

NOTE: For more accurate torque, whenever possible tighten the locknuts rather than the transom screws.

Description	Nm	lb-in.	lb-ft
Transom screws and nylon insert locknuts	75	–	55.3

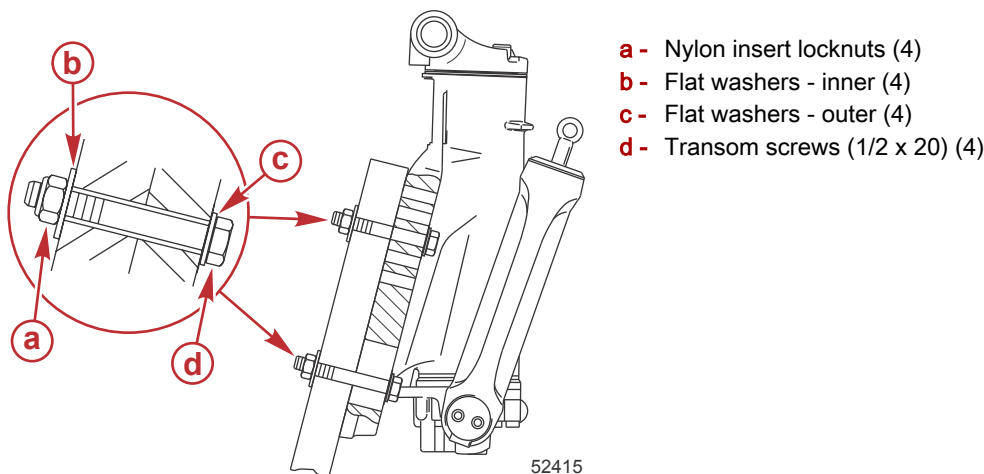

Fastening the Engine Using a Lift Plate or Setback Bracket

IMPORTANT: The following procedure refers to the required mounting installation with the engine mounted to a lift plate (jack plate) or setback bracket.

Outboard Installation

IMPORTANT: Boats that make use of setback brackets or metal lift plates have been associated with loosened mounting fasteners. Loose mounting fasteners allow for more vibration and introduce other loads that can lead to fatigue related failures. As a result, for boats that make use of such products, it is particularly important to use proper fasteners, to follow recommended inspection protocol, and to maintain the proper mounting screw clamp load.

- Use a Mercury transom screw kit that is appropriate for mounting the metal lift plate (jack plate) or setback bracket to the boat transom.
- Use a Mercury high strength transom screw kit that is appropriate for mounting the engine to the metal lift plate (jack plate) or setback bracket.

Part Number	Part Name	Description
67755A22	High strength transom screw kit	1/2-20 x 2.50 in. screws (4) with nuts (4) and washers (8)
67755A26	High strength transom screw kit	1/2-20 x 3.50 in. screws (4) with nuts (4) and washers (8)


1. Attach the metal lift plate (jack plate) or setback bracket to the boat transom:
 - a. Apply marine sealer to the shanks (not the threads) of the transom screws.
 - b. Refer to **Determining Recommended Outboard Mounting Height**, and install the metal lift plate or setback bracket to the nearest recommended mounting height.
 - c. Fasten the metal lift plate or setback bracket using the stainless steel transom screws, nylon insert locknuts, and flat washers. Tighten the locknuts to the specified torque.

Description	Nm	lb-in.	lb-ft
Locknuts	75	–	55.3

2. Place the lower high strength transom screws into the mounting slots before placing the outboard on the metal lift plate or setback bracket.
3. Fasten the outboard with the high strength transom screws, nylon insert locknuts, and flat washers as shown. Tighten the locknuts or transom screws to the specified torque.

NOTE: For more accurate torque, whenever possible tighten the mounting locknuts rather than the transom screws.

Description	Nm	lb-in.	lb-ft
High strength transom screws and locknuts	122	–	90

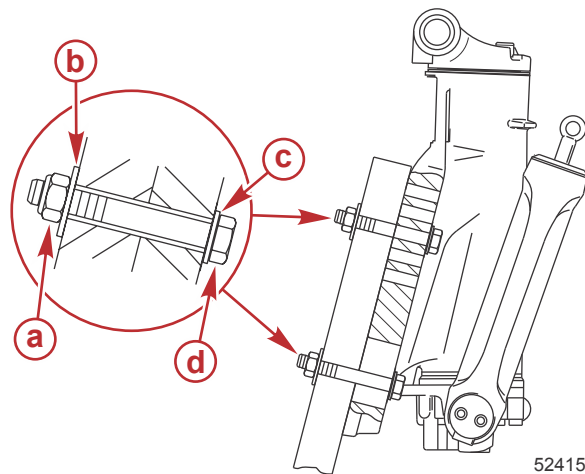


- a - Nylon insert locknuts (4)
- b - Flat washers (4)
- c - Flat washers (4)
- d - High strength transom screws (1/2 x 20) (4)


52415

Checking Boat Transom Construction

IMPORTANT: Determine the strength of the boat transom. The outboard mounting locknuts and screws should be able to hold 75.0 Nm (55.3 lb-ft) of torque without the boat transom yielding or cracking. If the boat transom yields or cracks under this torque, the construction of the transom may not be adequate. The boat transom must be strengthened or the load carrying area increased.

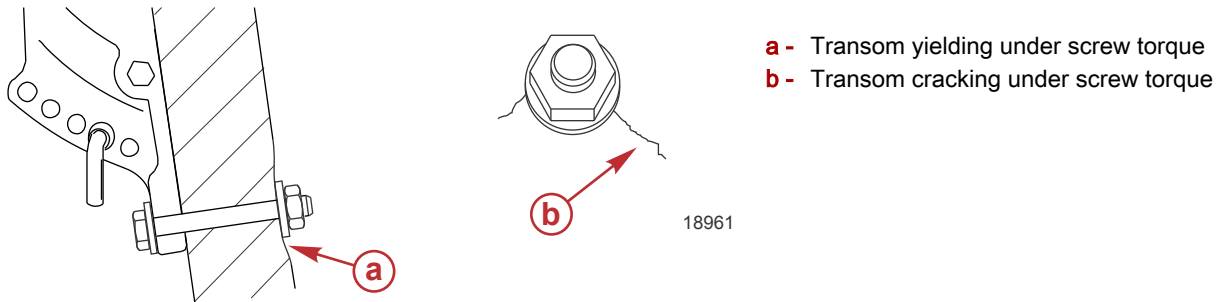

Use a dial torque wrench to determine transom strength. If the screw or nut continues to turn without the torque reading on the dial increasing, it is an indication that the transom is yielding. The load area can be increased by using a larger washer or a transom reinforcement plate.

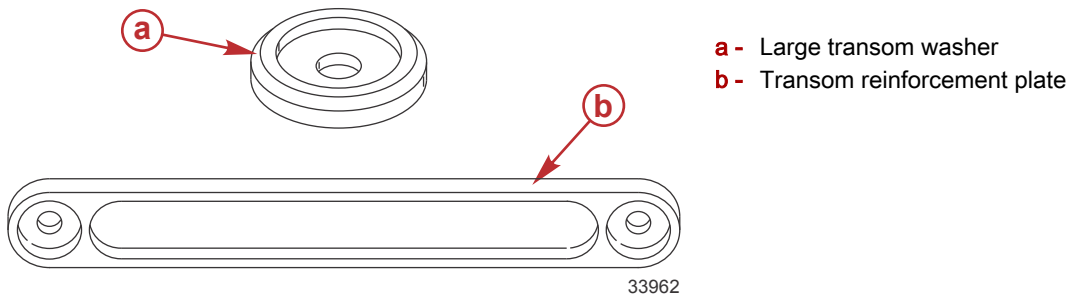

Wiring Guidelines

DTS Special Notices and Guidelines

⚠ WARNING

Splicing or probing will damage the wire insulation allowing water to enter the wiring. Water intrusion may lead to wiring failure and loss of throttle and shift control. To avoid the possibility of serious injury or death from loss of boat control, do not splice or probe into any wire insulation of the DTS system.

⚠ WARNING

Prevent serious injury or death from a loss of boat control. Pulling on or flexing connectors can loosen terminals and cause open or intermittent electrical connections, which will interrupt control of throttle and shifting. Do not pull on cable connectors when pulling cables through the boat. Do not allow cables to flex at connection points. Fasten all electrical harnesses within 25 cm (10 in.) of any connection.

⚠ WARNING

Excessive voltage drop may compromise the DTS system, leading to serious injury or death from loss of throttle and shift control. Do not wire any electrical accessory into the 12-volt ignition key switch circuits of the DTS system.

IMPORTANT: Do not connect boat accessories to 12-volt or ignition key switch DTS circuits. Use a separate switched 12-volt source for wiring boat accessories.

The DTS system requires a consistent 12-volt power source. Splicing or connecting accessories to the 12-volt or ignition key switch DTS circuits (purple, purple/white, or red wires) could blow a fuse or overload circuits, causing intermittent or complete loss of operation.

- Never attempt to connect, network, tie into, switch, or sink source voltage or current from the DTS wiring harnesses.
- Never attempt to tap directly into any of the DTS electrical wiring harnesses for a source of power.
- Never attempt to connect any type of communication or navigation equipment into the DTS wiring harnessing other than at the designated connection point.

Harness and Connector Guidelines

Harness Installation Guidelines

- Locate a routing path for the harness connections so they reach their installation points.
- Fasten and support the harness with clamps or cable ties along the routing path. A clamp or cable tie must be used within 25.4 cm (10 in.) of any connection in the electrical system.
- Ensure that all connections are tight, and seal all unused connectors with weather caps.

Connectors

IMPORTANT: Connectors should never have to be forced into the receptacle. Ensure that connectors are free of any lubricant or dielectric grease before installation. When the connector is properly aligned, it will only take a small amount of pressure to insert it into the receptacle. On round, 14-pin connectors, rotate the locking collar to secure the electrical connection.

Data Harness Pulling Procedure


IMPORTANT: Do not route data harness near engine ignition components (coils, spark plug leads, and spark plugs), high power VHF coax, or radios. An electrical field generated from these components could cause interference with data transmission.

IMPORTANT: Do not route data harness near sharp edges, hot surfaces, or moving parts. Fasten cables away from any sharp edges, fasteners, or objects that could wear into the harness.

IMPORTANT: Avoid sharp bends in the data harness. Minimum bend radius should be 7.6 cm (3 in.) for the final wiring installation.

1. Inspect the routing path to ensure surfaces are free of any sharp edges or burrs that could cut the harness.
2. Install cable pulling tool to data harness.
3. Secure pulling tool with two cable ties.

IMPORTANT: The cable ties must be tight to prevent any slipping during installation.



3836

Data Cable Puller	888462A 1
-------------------	-----------


IMPORTANT: Carefully inspect data harness pins to ensure that all pins are securely fastened to data harness connector end following installation.

NOTE: Data harness should be secured with mounting clips or cable ties along the routing path.

System Wiring Reference Points

- **14-pin data harness** - Connects between the command module harness at the helm and the engine.
- **Battery cables** - Connect to the engine starting battery.
- **2-pin clean power harness** - Requires connection to the engine starting battery. Provides 12 V power to the engine control module. If the starting battery is located at the helm, a clean power accessory power harness kit is required to minimize voltage drop. Use cable ties to secure the power harness leads to the battery cables, beginning within 15 cm (6 in.) of the battery posts and continuing along the entire length of the harness.
- **3-pin power steering pump harness plug** - The power steering pump harness connects between the connector on the engine and the power steering pump, if equipped.

- **6-pin vessel sensor harness plug** - The vessel sensor harness connects between the connector on the engine and the main fuel tank sensor, auxiliary fuel tank, and the paddle wheel speed/temperature sensor, if equipped.

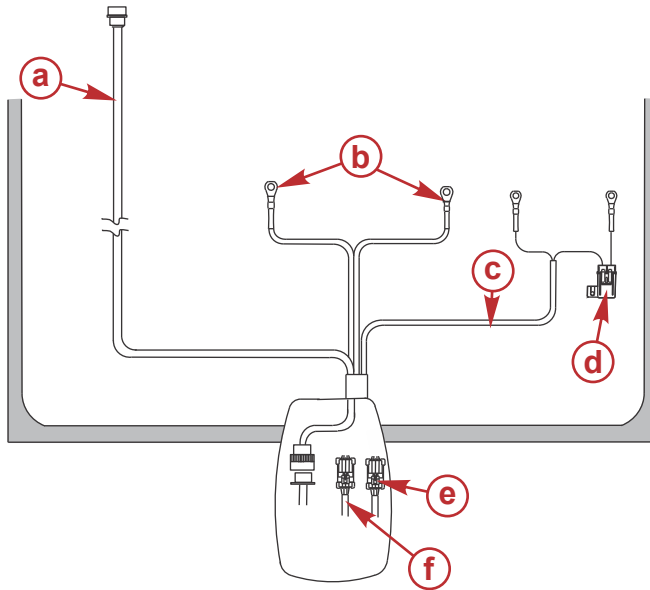

- a - 14-pin data harness
- b - Battery cables
- c - 2-pin clean power harness
- d - 5-amp fuse
- e - 3-pin power steering pump harness connector
- f - 6-pin vessel sensor harness connector

Wiring Accessories

NOTE: Refer to Mercury Precision Parts Accessories Guide.

Rigging the Engine

IMPORTANT: Leave sufficient slack in wiring harnesses, battery cables, and hoses that are routed between the rigging grommet and engine attachment points, to relieve stress and prevent hoses from being kinked or pinched.

Rigging Tube and Rigging Adapter

IMPORTANT: A rigging tube is recommended, but is not required. The use of the rigging adapter and rigging grommet is mandatory.

1. If you are using a rigging tube, thread the rigging adapter onto the end of the rigging tube.
2. Ensure that all applicable items are routed through the rigging tube (if used) and the rigging adapter, allowing enough slack to make the connections on the engine:
 - Battery cables
 - 14-pin data harness
 - 2-pin clean power harness
 - 3-pin power steering harness
 - 10-pin network device harness (optional; refer to device instruction sheet)
 - 6-pin boat harness
 - Fuel line
 - Speedometer water pickup tubing (black)


Connections at the Engine

The space available for rigging is extremely tight. Follow these guidelines to ensure a trouble-free rigging process.

1. Connect the battery cables to the engine.
 - Pro XS models are shipped with the cables installed.


Outboard Installation


- Models without installed cables have fish lines with clips secured to the power and ground studs, to allow the cables to be easily fed behind the intake runners. Remove the lines from the engine, prior to securing the cables to the appropriate studs.

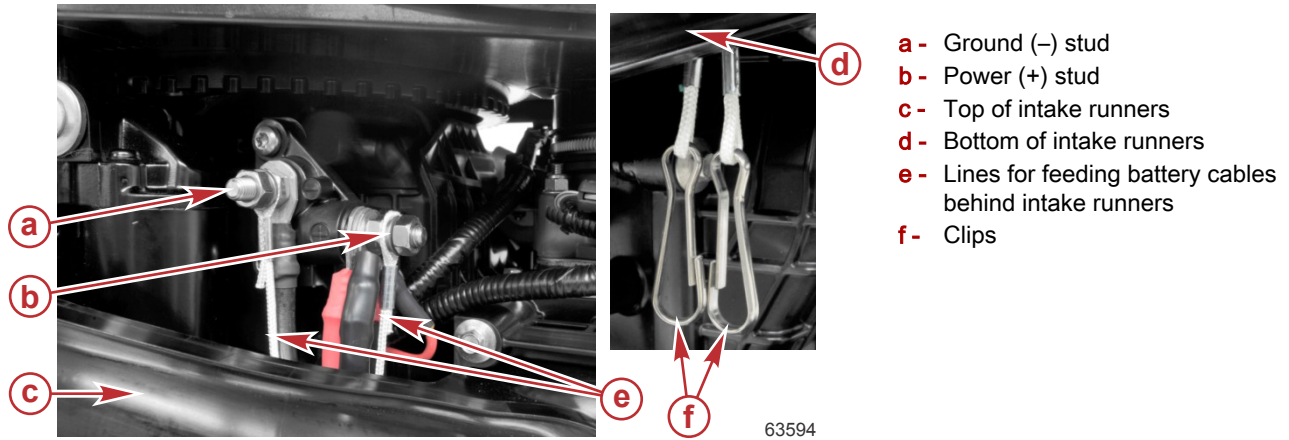


- Tighten the nuts on the battery connections to the specified torque, apply Liquid Neoprene to the connections, and install the cover.

Description	Nm	lb-in.	lb-ft
Battery connection nuts	17	150	-


Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Battery connections at the engine	92- 25711 3

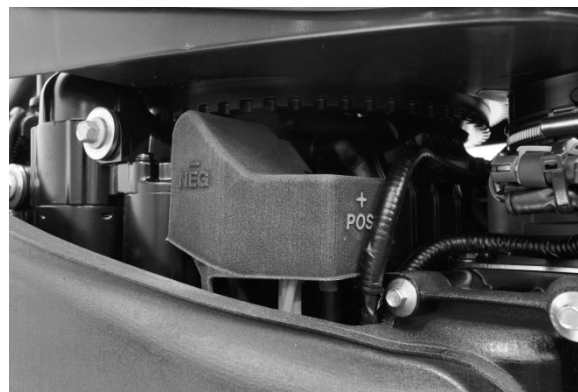

- Remove the electrical panel cover by pulling the top rearward until the pins are clear of the grommets, and then lift up.

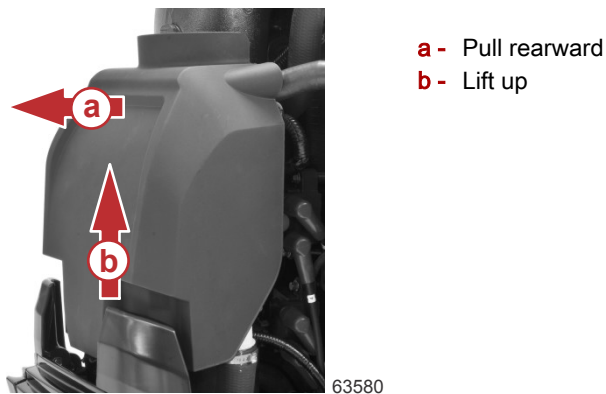

4. Remove the weather caps from the boat harness connector and the power steering connector, if applicable.

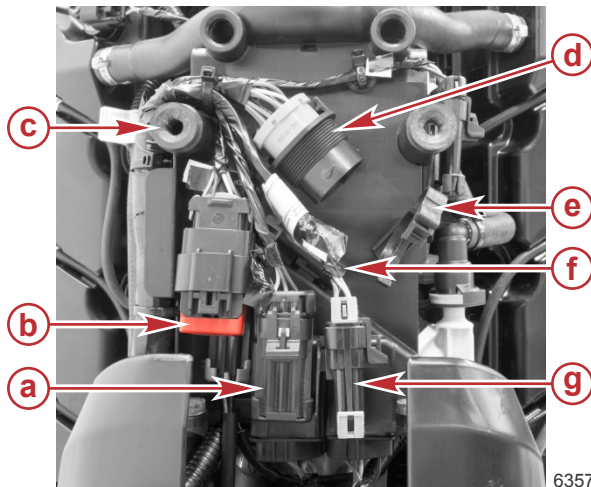

- a - 3-pin power steering harness connector
- b - 10-pin CAN terminator

NOTE: Remove only if an optional network cable or device is being connected. Refer to the instruction sheet accompanying the device or cable.


- c - Electrical panel cover grommet (one of four)
- d - 14-pin connector
- e - Ring clip for 14-pin data harness (one of two)
- f - 2-pin clean power harness connector (behind power steering connector wires)
- g - 6-pin boat harness connector with weather cap

5. Route the 14-pin data harness to the rear of the engine.

- a. Feed the connector through the rigging ingress, and route it to the rear of the engine.

IMPORTANT: There may be some residual fuel in the fuel line, from manufacturer testing of the engine. Be certain to capture and properly dispose of any spilled fuel.

- b. Disconnect the fuel line from the fuel filter, and route the harness beneath the fuel line.
- c. Ensure that the harness passes below the cowl latch.

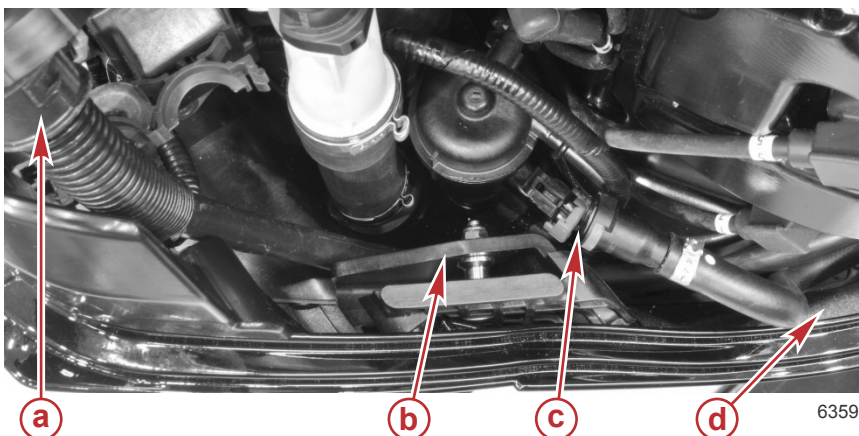

- a - 14-pin data harness connector
- b - Cowl latch
- c - Fuel line disconnected at fuel filter
- d - 14-pin data harness routed from rigging ingress

- d. Connect the 14-pin data harness. Secure the harness with the two ring clips.
- e. Reconnect the fuel line.

IMPORTANT: When routing and connecting the harnesses:


- All harnesses must route beneath the rear cowl latch.
- As each connection is made, secure it to the appropriate tab on the electrical panel.

6. Route the remaining harnesses to the rear of the engine and connect to the appropriate engine harness connectors. It is easiest to route the harnesses according to connector size, from largest to smallest:

- a. 10-pin harness, if required
- b. 6-pin boat harness
- c. 3-pin power steering harness

Outboard Installation

- d. 2-pin clean power harness

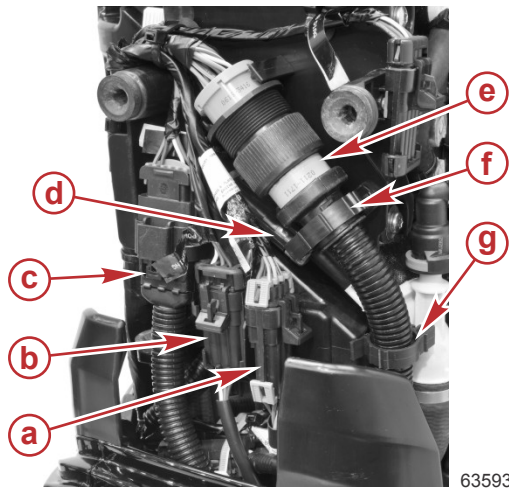

- a - 6-pin boat harness
- b - 3-pin power steering harness (optional)
- c - 10-pin harness for network cable or device; refer to instruction sheet
- d - 2-pin clean power harness
- e - 14-pin data harness
- f - Large ring clip
- g - Small ring clip

7. Connect the remote fuel line to the fitting at the ingress.
- The minimum fuel hose inside diameter (ID) is 9.5 mm (3/8 in.), with a separate fuel hose/fuel tank pickup for each engine.
 - Fasten the hose with a clamp. Position the clamp so that it will not chafe or cut into the adjacent wiring harness.

NOTICE

Inspect the position of the hose clamp to ensure that it will not chafe or cut into the adjacent wiring harnesses.

Water Tubing Connection


Speedometer Tubing Connection

This outboard has a speedometer water pickup located in the leading edge of the gearcase. To use this water pickup for the speedometer, feed the black tubing through the accessories opening in the rigging grommet, as shown. Remove the plug from the coupler fitting, and make the connection to the tubing that runs to the speedometer.

If the tubing will not be used for a gauge:

1. Tuck the tubing inside the front of the engine cowling.
2. Ensure that the plug remains locked into the coupler fitting.


Connections at Rigging Tube

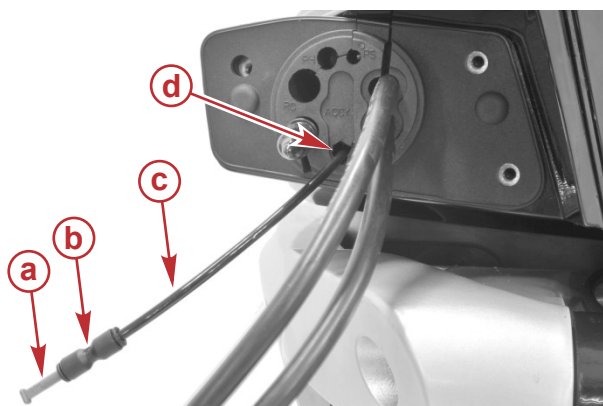

- a - Plug
- b - Coupler fitting
- c - Water pickup tubing (black)
- d - Accessories opening in rigging grommet

Rigging Grommet

IMPORTANT: A rigging tube is recommended, but is not required.
The use of the rigging adapter and rigging grommet is mandatory.

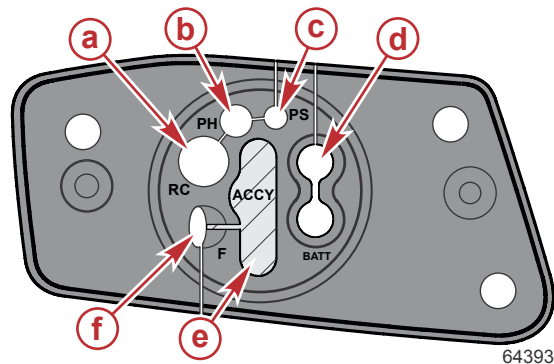

64393

Ref	Marking	Opening used for
a.	RC	14-pin data harness
b.	PH	2-pin clean power harness
c.	PS	3-pin power steering harness
d.	BATT	Battery cables
e.	ACCY	6-pin boat harness, 10-pin network harness, other accessories Analog speedometer tubing NOTE: Use a knife to remove the material from this opening, and create an access slit from the fuel (F) opening.
f.	F	Fuel line NOTE: Insert the fuel line fitting into the grommet with the hose and hose clamp on the outside of the grommet.

1. If required, use a knife to remove the material from the **ACCY** portion (cross-hatched in the preceding illustration) of the grommet. Cut an access slit from the fuel hose hole (**F**) to the new hole.
2. Arrange the harnesses and fuel hose in the approximate positions they will occupy in the rigging grommet.
3. Work the grommet around the harnesses and fuel hose. Start with the inboard and innermost items, and work outward.
4. Press the rigging grommet into the opening.



64394


NOTICE

Inspect the position of the hose clamp located on the fuel hose to ensure that it will not chafe or cut into the adjacent wiring harnesses.

5. Slide the rigging adapter and rigging tube (if used) into place over the grommet.

Outboard Installation

6. Fasten the rigging grommet and rigging adapter with three screws. Tighten the screws to the specified torque.

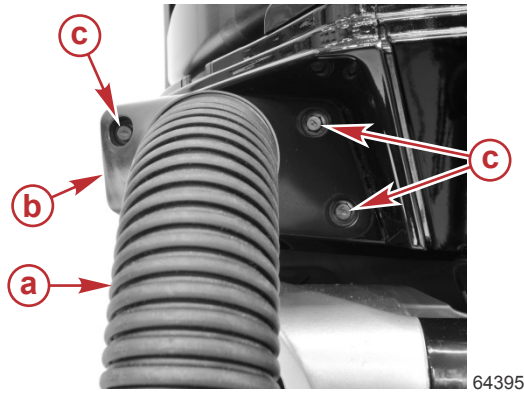

- a - Rigging tube (optional)
- b - Rigging adapter
- c - Screws (3)

Description	Nm	lb-in.	lb-ft
Screws for attaching the rigging adapter	6.0	53.1	–

7. If a rigging tube is not used, secure the wiring and fuel hose together with a cable tie.



Installing the Steering System

Refer to the instruction sheet that accompanied your steering kit.

Battery Connections

⚠ WARNING

Failure to properly secure the battery leads can result in a loss of power to the Digital Throttle and Shift (DTS) system, leading to serious injury or death due to loss of boat control. Secure the battery leads to the battery posts with hex nuts to avoid loose connections.

IMPORTANT: The engine electrical system is negative (–) ground.

When connecting the engine battery, hex nuts must be used to secure the battery leads to the battery posts. Tighten the hex nuts to the specified torque.

Description	Nm	lb-in.	lb-ft
Hex nuts	13.5	120	–

Order of Connection

Connect the battery cables in the following order:

1. All jumpers between parallel, multiple battery packs
2. From the batteries to the positive (+) engine lead
3. From the batteries to the positive (+) clean power
4. From the batteries to the negative (–) engine lead
5. From the batteries to the negative (–) clean power

- From the batteries or main ground (-) bus to the negative (-) starboard helm main power relay

Connecting Battery Cables and Clean Power Harness


⚠ CAUTION

The DTS power harness connection may be pulled off the battery, resulting in a possible loss of electrical power and loss of throttle and shift control. To avoid the possibility of serious injury or death from a loss of boat control, fasten the DTS power harness to one of the battery cables near the battery with cable tie.


NOTE: Do not extend the lead length of the clean power harness (sometimes referred to as the DTS power harness).

- Install the clean power harness directly to the starting battery.

NOTE: The clean power harness is provided with the 20 in. L models. For XL and XXL models, refer to the **Mercury Precision Parts Accessories Guide** for the required clean power harness kit.

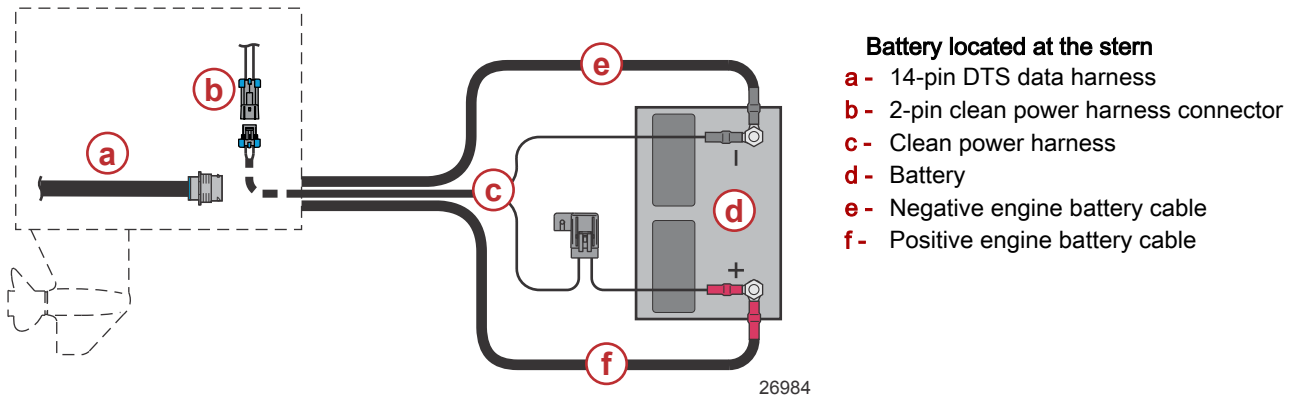


NOTE: For batteries located at the helm, refer to the **Mercury Precision Parts Accessories Guide** for an optional clean power harness connection kit.

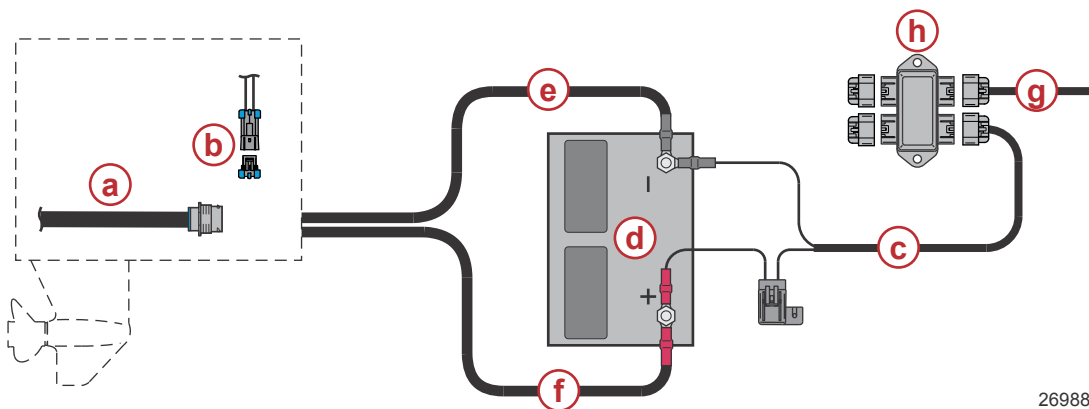

Battery located at the helm

- a** - 14-pin DTS data harness
- b** - 2-pin clean power harness connector - weather cap
- c** - Helm clean power harness (optional)
- d** - Battery
- e** - Negative engine battery cable
- f** - Positive engine battery cable
- g** - DTS command module harness
- h** - Junction box

- Fasten the clean power harness to one of the battery cables with a cable tie.

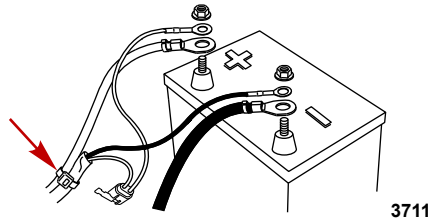

Fuel System

Accessory Electric Fuel Pump

IMPORTANT: Do not install an accessory electric fuel pump into the fuel system of this engine.

Avoiding Fuel Flow Restriction

IMPORTANT: Adding components to the fuel supply system (for example, filters, valves, or fittings) may restrict the fuel flow. This may cause engine stalling at low speed or a lean fuel condition at high RPM, which could cause engine damage.

IMPORTANT: Because of the high fuel flow rates at WOT, engines with horsepower ratings of 300 hp and higher are especially susceptible to fuel flow restrictions. If your application encounters difficulty in achieving the stated specification at WOT, consider replacing the stock fuel filter with a high capacity, lower restriction filter and increasing the boat fuel line diameter to 13 mm (0.5 in.).


Description	Specification
Maximum fuel system inlet vacuum (see NOTE)	10.16 kPa (3.0 in. Hg) (1.47 psi)

NOTE: This maximum value applies only to measurements taken at the engine, not to measurements taken elsewhere in the boat. The maximum value is with the fuel tank at half volume.

The following configuration can be used to test the fuel system inlet vacuum. Make the T-fitting connection between the engine and the boat fuel line. The measurement should be taken at the elevation where the fuel line enters the cowl.

NOTE: 1 kPa of vacuum is equal to approximately 13 cm (5 in.) of gasoline.

1 psi of vacuum is equal to approximately 94 cm (37 in.) of gasoline.

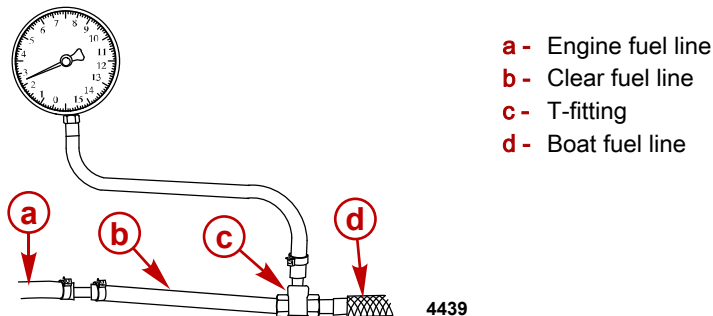

A restriction in the fuel system will result in a vacuum reading higher than the allowable maximum. Some common causes of excessive vacuum include:

- Restricted antisiphon valve
- Restricted or malfunctioning primer bulb
- Kinked or collapsed fuel hose
- Plugged water-separating fuel filter (in the boat)
- Restriction in the fuel line through-the-hull fitting
- Restriction in the fuel tank switching valves
- Plugged fuel tank pick-up screen

Low Permeation Fuel Hose Requirement

Required for outboards manufactured for sale, sold, or offered for sale in the United States.


- The Environmental Protection Agency (EPA) requires that any outboard manufactured after January 1, 2009, must use low permeation fuel hose for the primary fuel hose connecting the fuel tank to the outboard.

- Low permeation hose is USCG Type B1-15 or Type A1-15, defined as not exceeding 15 g/m²/24 h with CE 10 fuel at 23 °C as specified in SAE J 1527 - marine fuel hose.

Fuel Demand Valve

Some boat fuel systems incorporate a fuel demand valve between the fuel tank and the engine and others do not. This engine can be operated with or without a fuel demand valve.

The fuel demand valve has a manual release. The manual release can be used (pushed in) to open (bypass) the valve in case of a fuel blockage in the valve.

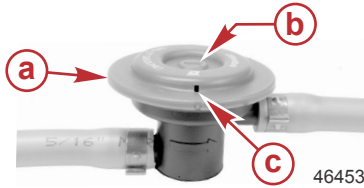

- a - Fuel demand valve - installed in the fuel hose between the fuel tank and primer bulb
- b - Manual release
- c - Vent/water drain holes

Fuel Supply Module Priming Procedure

The fuel supply module (FSM) is not vented to the ambient air. The air trapped in the FSM, fuel lines, and fuel rail, will be slightly compressed during the initial ignition key "ON" with a dry or drained fuel system. Additional key "ON" events under these conditions, will not compress the air further to finish the priming of the FSM. Excessive number of key "ON" events may eventually damage the fuel pumps. The volume of air trapped in the FSM must be purged to prime the fuel system. This can be achieved by connecting a tool to the fuel rail Schrader valve fitting to quickly purge the system into an approved container, or by cranking the engine.

Priming the FSM with a Purge Tool

The use of a purge tool for priming the FSM is the preferred method, but is not always practical. The objective is to purge the air entrained in the fuel system through a purge tool connected to the fuel rail Schrader valve test port. During the key "ON," opening the dump valve will allow the air to be purged from the FSM and fuel rail. This method should be used on vessels where the fuel inlet system to the outboard is restrictive; anti-siphon valve or holds a relatively large volume of fuel because of a long fuel supply line or water separating fuel filter. If a primer bulb is installed, it can be used during the priming event to shorten the amount of time required to start the engine.

1. Verify the engine is in a level vertical position.
2. Verify the vessel fuel supply line is connected to the outboard fuel system inlet fitting.
3. Connect a fuel pressure gauge to the fuel rail Schrader valve.
4. Secure the fuel pressure gauge purge hose into an appropriate fuel container to collect excess fuel.
5. Open the fuel pressure gauge purge valve and turn the ignition key "ON." The fuel pumps will run for approximately five seconds.
6. Turn the ignition key "OFF" and then back "ON." The fuel pumps will run for approximately five seconds. Continue this ignition key cycle until the purged fuel is relatively clear of air bubbles.

NOTE: If the outboard fuel system does not prime within 15 key "ON" events, check for leaks in the fuel supply line to the outboard. Repair as needed. If no leak is found, the fuel supply system to the outboard may be too restrictive. Correct the condition and try again.

7. Remove the fuel pressure gauge.
8. Turn the ignition key "ON." When the fuel pumps stop running, start the engine. The engine may not start on the first attempt. The engine will run rough at idle for up to two minutes while the residual air is purged from the fuel system.

Priming the FSM (Ran out of Fuel Condition)

The use of a purge tool for priming the FSM is the preferred method, but is not always practical. When the vessel fuel system is void of fuel volume, it can be primed without the use of a purge tool. The objective is to purge the air entrained in the fuel system through the fuel injectors during engine cranking to allow fuel to enter the fuel module. This method can be used on vessels where the fuel inlet system to the outboard is less restrictive and holds a relatively small volume of fuel; a short fuel supply line, no water separating fuel filter, or water separating fuel filter is already primed. If a primer bulb is installed, it can be used during the priming event to shorten the amount of time required to start the engine.

1. Verify the engine is in a level vertical position.
2. Verify the vessel fuel supply line is connected to the outboard fuel system inlet fitting.
3. Turn the ignition key "ON." The fuel pumps will run for approximately five seconds.
4. Turn the ignition key to the "START" position and release the key. The ECM controls the activation of the starter. The starter may continue cranking for up to eight seconds.

NOTE: When priming a drained fuel system, residual fuel may cause the engine to flare and stall which shortens the engine cranking event.

5. Continue with the ignition key "ON" and "START" sequence until the engine continues to run.
IMPORTANT: Allow the starter motor to cool for 20 to 30 seconds between full eight second crank events. Limit the number of events to a maximum of 10 full eight second cranking events.
6. Once the engine starts, it may run rough at idle for up to two minutes while the residual air is purged from the fuel system.
7. If the fuel system will not prime within 10 full eight second cranking events, use the previous procedure **Priming the FSM with a Purge Tool** to prime the fuel system.

Adaptive Speed Control (ASC) Propping with CDS G3

A special propping procedure using CDS G3 should be used for optimum propping.

1. Install the best guess propeller.
2. Connect CDS G3 to the engine, and monitor the following values:
 - **RPM** - engine speed. In this example, for a new boat with a new engine, the ideal RPM is at the upper end of the RPM range.
 - **DemandLinear** - requested handle position. This should be at 100% at wide-open throttle. If this value is not at 100% when the handle is in the full forward position, the throttle cable needs to be adjusted (mechanical engine) or the helm config needs to be performed (DTS engine).
 - **DemandLinear_with_Guardian** - software controlled limit with any engine protection/Guardian limits applied. This value should also be at 100% when underway and with the handle in the full forward position. If this value is less than the **DemandLinear** value, check faults for Guardian cause and correct the issue.
 - **Demand** - the final demand value requested by the software. If the engine is propped correctly, with engine speed at wide-open throttle falling within the operating range at optimum trim, this value should be at 100%.

NAME	VALUE	DESCRIPTION
RPM	5212 RPM	Engine speed
Demand	100.00 %	Demand request by control software
DemandLinear_with_Guardian	100.00 %	Demand request by Guardian
TrimPospercent	19.35 %	Trim Position
DemandLinear	100.00 %	Demand request by operator

65614

3. Run the engine with the handle at wide-open throttle (100% **DemandLinear**) at optimum trim. Use the following chart to aid in final propeller selection.

Scenario		Engine Speed (see NOTE 1.)				
#	Description	<5,200 RPM	At or Just Above 5,200 RPM	Within Operating Range	At or Just Below 6,000 RPM	>6,000 RPM
1	DemandLinear = 100% DemandLinear with Guardian = 100% Demand = 100%	Decrease propeller pitch until engine speed falls within operating range.	Consider a slightly lower pitch propeller. (See NOTE 2.)	No change needed.	Consider a slightly higher pitch propeller. (See NOTE 3 and 4.)	N/A
2	DemandLinear = 100% DemandLinear with Guardian = 100% Demand < 100%	N/A	N/A	N/A	N/A	Increase propeller pitch until engine speed falls within operating range.
3	DemandLinear < 100% with throttle lever at max	Adjust throttle cable or reconfigure DTS handle so that 100% DemandLinear can be reached.				
4	DemandLinear = 100% DemandLinear with Guardian < 100%	Check faults for cause of Guardian condition.				

NOTE: Refer to the following notes:

1. The range of 5,200–6,000 RPM is an example only. Actual RPM ranges vary by model. Refer to the applicable specifications for your particular engine model.
2. Lowering the pitch of the propeller will increase the engine speed above the 5,200 RPM lower threshold, to account for variations in loading and ambient conditions.
3. Increasing the pitch of the propeller will decrease the engine speed below the 6,000 RPM upper threshold, to account for variations in loading and ambient conditions.
4. Demand may be slightly less than 100%.

Adaptive Speed Control (ASC) Propping without CDS G3

IMPORTANT: Boat propping can be performed using the normal method used for Mercury Outboards. To achieve optimum propeller selection, however, follow the Adaptive Speed Control (ASC) Propping with CDS G3 procedure.

IMPORTANT: To operate the engine at full throttle before the break-in period is complete, follow this procedure.

1. Place the remote control in neutral, idle speed and start engine.
2. Slowly advance the throttle until the engine reaches 1300 RPM (\pm 100 RPM).
3. Watch all gauges for normal readings.
4. When the engine reaches normal operating temperature, run the boat up on plane.
5. Advance the engine RPM (in 200 RPM increments) until the engine reaches its maximum rated RPM. Refer to the appropriate outboard owner's manual or service manual for the engines full throttle RPM range.
6. To test if the correct propeller has been installed, operate the boat (with normal load on board) at WOT and check RPM with an accurate tachometer. The engine RPM should be near the top of the specified range so that, under a heavy load, the engine speed will not fall below specifications. If the engine speed is too high, replace the propeller with a higher pitch propeller. Normally a 25 mm (1 in.) propeller pitch change causes an RPM change of 150 RPM.
7. Return to idle speed.
8. Shut off the engine.

System Wiring Installation Checklist

Data Cable

- Verify the data harness is not routed near sharp edges, hot surfaces, or moving parts.
- Verify data harness is not routed near ignition components (coils, spark plug leads, and spark plugs), high power VHF coax, or radios.

Junction Box (if equipped)

- Verify the data harness is not routed near sharp edges, hot surfaces, or moving parts.
- Ensure the harness connections are fastened within 25.4 cm (10 in.) of the junction box.
- Verify that all unused receptacles are covered with a weather cap.

Non-Mercury Marine Supplied Ignition Key Switch

- If a non-Mercury Marine ignition key is used, verify that it passes the ingress protection testing per IEC IP66 specification minimum. Ignition switches must pass this specification.

Electronic Remote Control

- Ensure electronic remote control (ERC) connections are completed following ERC installation instructions prior to engine operation.

DTS Command Module Harness

- Verify that all connectors are properly inserted and locked in their receptacle (remote control, key switch, command module, lanyard stop switch, and junction box, if equipped).
- Verify that while moving the remote control handle (full forward and full reverse) the harness has unobstructed movement (moves freely).
- Verify that the lanyard stop switch is wired into the system correctly.
- Verify that the harness is fastened along the routing path.
- Verify that all unused connectors have weather caps to prevent corrosion.

Battery

- Verify that wing nuts have been replaced with hex nuts, provided.
- Verify that all engine battery cables are connected to the correct terminals.
- Verify that the DTS power harness leads are connected to the starting battery and secured with locknuts.
- Ensure the 5 amp fuse for the DTS power harness is accessible.

Lanyard Stop Switch

- Verify that the switch is installed.
- Verify that the switch is connected to the DTS command module harness.

Important Information




Section 1E - Storage



Table of Contents

Storage Preparation.....	1E-2	Gearcase.....	1E-3
Fuel System.....	1E-2	Positioning Outboard for Storage.....	1E-3
Protecting External Outboard Components.....	1E-2	Battery Storage.....	1E-3
Protecting Internal Engine Components.....	1E-2		

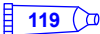Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
 119	Storage Seal Rust Inhibitor	Spark plug holes	92-858081K03
 120	Corrosion Guard	External metal surfaces	92-802878 55
 124	Quickstor Fuel Stabilizer	Fuel tank	92-8M0047932

Storage Preparation

The major consideration in preparing your outboard for storage is to protect it from rust, corrosion, and damage caused by freezing of trapped water.

The following storage procedures should be followed to prepare your outboard for out of season storage or prolonged storage (two months or longer).

NOTICE

Without sufficient cooling water, the engine, the water pump, and other components will overheat and suffer damage. Provide a sufficient supply of water to the water inlets during operation.


Fuel System

IMPORTANT: Gasoline containing alcohol (ethanol or methanol) can cause a formation of acid during storage and can damage the fuel system. If the gasoline being used contains alcohol, it is advisable to drain as much of the remaining gasoline as possible from the fuel tank, remote fuel line, and engine fuel system.

IMPORTANT: This outboard is equipped with a closed fuel system when the engine is not running. With this closed system, fuel within the engine's fuel system, other than the fuel tank, will remain stable during normal storage periods without the addition of fuel treatment stabilizers.


Fill the fuel tank and engine fuel system with treated (stabilized) fuel to help prevent formation of varnish and gum. Proceed with the following instructions.

- Portable fuel tank - Pour the required amount of Quickstor Fuel Stabilizer (follow instructions on container) into fuel tank. Tip fuel tank back and forth to mix stabilizer with the fuel.
- Permanently installed fuel tank - Pour the required amount of Quickstor Fuel Stabilizer (follow instructions on container) into a separate container and mix with approximately one liter (one quart) of gasoline. Pour this mixture into fuel tank.

Tube Ref No.	Description	Where Used	Part No.
 124	Quickstor Fuel Stabilizer	Fuel tank	92-8M0047932

Protecting External Outboard Components


- Touch up any paint nicks. See your dealer for touch-up paint.
- Spray Quicksilver or Mercury Precision Lubricants Corrosion Guard on external metal surfaces (except corrosion control anodes).

Tube Ref No.	Description	Where Used	Part No.
 120	Corrosion Guard	External metal surfaces	92-802878 55

Protecting Internal Engine Components

IMPORTANT: Refer to Maintenance - Spark Plug Inspection and Replacement for correct procedure for removing spark plugs.

- Remove the high tension spark plug leads and spark plugs.
- Spray approximately 30 ml (1 fl oz) of Storage Seal Rust Inhibitor into each spark plug hole.

Tube Ref No.	Description	Where Used	Part No.
 119	Storage Seal Rust Inhibitor	Spark plug holes	92-858081K03

- Actuate key/push button start switch to crank the engine through one start cycle, which will distribute the storage seal throughout the cylinders.

- Install spark plugs and the high tension spark plug leads.

Gearcase

- Drain and refill the gearcase lubricant.

Positioning Outboard for Storage

Store outboard in an upright (vertical) position to allow water to drain out of the outboard.

NOTICE

Storing the outboard in a tilted position can damage the outboard. Water trapped in the cooling passages or rain water collected in the propeller exhaust outlet in the gearcase can freeze. Store the outboard in the full down position.

Battery Storage

- Follow the battery manufacturer's instructions for storage and charging.
- Remove the battery from the boat and check water level. Charge if necessary.
- Store the battery in a cool, dry place.
- Periodically check the water level and charge the battery during storage.

Notes:

Important Information


Section 1F - General Troubleshooting

1
F


Table of Contents

Troubleshooting without the Computer Diagnostic System (CDS G3).....	1F-2	Troubleshooting Guide.....	1F-2
Troubleshooting with the Computer Diagnostic System (CDS G3).....	1F-2	Audio Warning System.....	1F-5
About CDS G3.....	1F-2	Caution.....	1F-6
Additional Information.....	1F-2	Critical.....	1F-6
		Nonconfigured Alarm.....	1F-6
		Testing the Audio Warning System.....	1F-6

Lubricant, Sealant, Adhesives

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	All ring terminal connections	92- 25711 3

Special Tools

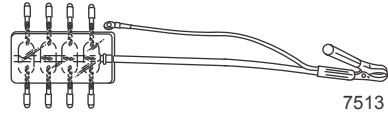Spark Gap Tester	91-850439T 1
	Provides a visual indication of spark/coil efficiency.


Troubleshooting without the Computer Diagnostic System (CDS G3)

Troubleshooting without the computer diagnostic system (CDS G3) is limited to checking resistance on some of the sensors. Typical failures do not involve the propulsion control module (PCM). Faulty connectors, improper setup, and mechanical wear are more likely to be the cause of failure.

- Verify that the spark plug wires are securely installed onto the ignition coils and the spark plugs.
- Verify that the correct spark plugs are installed.
- Swap ignition coils to see if the problem follows the coil or stays with the particular cylinder.

IMPORTANT: Disconnecting a sensor while the engine is running may result in a fault recording in the PCM fault history. Use CDS G3 to view the PCM fault history when troubleshooting and repair is completed.

- If all cylinders exhibit similar symptoms, the problem is with a sensor or harness input to the PCM.
- If a problem is speed related or intermittent, it is probably connector or contact related. Inspect connectors for corrosion, loose wires, or pins pushed back into the connector. Verify the connectors are properly seated.
- Inspect the harness for damage, including pinched or cut wires and chafing.
- Secure the ground connections and all connections involving ring terminals. Apply Liquid Neoprene to all ring terminal connections.

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	All ring terminal connections	92- 25711 3

- Inspect the fuel pump harness connector for corrosion, loose wires, or pins pushed back into the connector.
- Check the fuel pump pressure.

Troubleshooting with the Computer Diagnostic System (CDS G3)

The PCM is designed such that if a sensor fails, the PCM will prevent the engine from going into an overly rich condition. This means that disconnecting a sensor for troubleshooting purposes may have no noticeable effect, presenting the technician with a difficult diagnostic challenge. To meet this challenge, Mercury Marine has developed the CDS G3 diagnostic tool.

About CDS G3

CDS G3 is a standalone program that provides diagnostic support for select Mercury engines and engine control systems. CDS G3 also supports all configuration functions necessary for preparing these systems for delivery. CDS G3 provides a clean, easy-to-navigate interface.

While the engine is operating, the PCM records various data, including the state of engine sensors. The recorded information can be reviewed with CDS G3, to help diagnose intermittent engine problems. Refer to the documentation included within the CDS G3 program, for additional details.

Additional Information

For additional information about the CDS G3 diagnostic tool, refer to the documentation within the tool and to the **Diagnostic Manual**.

Troubleshooting Guide

Spark Gap Tester	91-850439T 1
------------------	--------------

IMPORTANT: This is a quick troubleshooting guide, only. For complete troubleshooting information, refer to the Diagnostics Manual.

1. Engine Will Not Crank

	Cause	Action
1.1	Lanyard stop switch is in the wrong position	Reset the lanyard stop switch.
1.2	Open start circuit fuse	Check for an open 20-amp fuse.
1.3	Defective main power relay	Test the relay for proper operation; replace if defective.
1.4	Clean power fuse open	Check for an open clean power fuse.
1.5	Low battery voltage	Check battery voltage.

2. Engine Cranks, But Will Not Start

	Cause	Action
2.1	Weak battery or bad starter motor, battery voltage drops below 11 volts while cranking (PCM cuts out below 8 volts) (fuel pump requires 9 volts)	Replace/recharge the battery. Inspect the condition of starter motor. Check the condition of the battery terminals and cables.
2.2	No fuel	Key-on the engine to verify that the fuel pump runs for 3 seconds. If the pump is not heard running, inspect the fuel pump fuse as well as the fuel pump relay and its mating electrical connector. IMPORTANT: Running the fuel pump for up to 180 seconds due to lack of fuel will damage the fuel pump.
2.3	Low fuel pressure	Measure the fuel pressure at the Schrader valve on top of the fuel rail. Fuel pressure at engine key-up should be between 340–370 kPa (49.3–53.7 psi).
2.4	Flywheel dowel not installed	Remove the flywheel and inspect.
2.5	Open fuse	Inspect the 20-amp fuse in fuse holder and replace if open.
2.6	Main power relay not functioning	Listen for the relay to click when the key switch is turned on. If the relay does not click, inspect the harness and connector pins for damage.
2.7	Spark plugs (see NOTE)	<ol style="list-style-type: none"> 1. Remove the fuel pump fuse. 2. Remove the spark plugs from each cylinder. 3. Connect the spark gap tester to each ignition coil (two cylinders per coil). 4. Crank the engine and observe spark. If no spark is present, replace the appropriate ignition coil. If spark is present, replace the spark plugs.
<p>NOTE: Spark jumping the gap from all cylinders at the same time in the spark gap tool may cause interference in the PCM. The interference may cause the absence of spark on some cylinders and a false diagnosis of a no spark condition. Crank the engine over with a single pair of spark plug wires (both plugs associated with a given ignition coil) connected to the spark gap tool at a time.</p>		
2.8	Propulsion control module (PCM) not functioning	Fuel injection system: Listen for injector ticking when cranking or connect spare injector to each respective harness
		Ignition system: <ul style="list-style-type: none"> • Install spark gap tool between ignition coil and engine ground. Check for a purple/white colored spark while cranking the engine. • Check for battery voltage (red/yellow lead) at ignition coils. • Check for open 20-amp fuse. • Check for shorted stop wire (black/yellow lead).
		Power supply: Inspect and clean the remote control male and female harness connectors.
		Defective PCM

General Troubleshooting

	Cause	Action
2.9	Crankshaft position sensor not functioning	Check that magnet is not missing from end of sensor. Perform a resistance check of sensor (300 to 350 ohms between red and white leads). Defective crankshaft position sensor.

3. Engine Cranks, Starts, and Stalls

	Cause	Action
3.1	Low fuel pressure in fuel rail	See 2.3
3.2	Air in fuel system/lines	Crank and start engine several times to purge.
3.3	Remote control to engine harness connection is poor	Clean and inspect male and female connections.
3.4	Defective electronic throttle	<ul style="list-style-type: none">Refer to the Diagnostic Manual to determine proper functioning of the electronic throttle.Replace the throttle body assembly.
3.5	Flywheel misaligned during installation	Flywheel dowel pin is missing.
3.6	Abnormally high friction in engine	Check for scuffed piston or other sources of high friction.
3.7	MAP sensor hose is disconnected	Connect the MAP sensor hose.

4. Engine Idle Is Rough

	Cause	Action
4.1	Fouled spark plug	Replace the spark plug if: <ul style="list-style-type: none">Carbon bridges electrode gap or if it is completely blackIt is not firing and is wet with fuel <i>NOTE: A spark plug that is gray or completely black with aluminum specks indicates a scuffed piston.</i>
4.2	Failed fuel injector	Refer to the Diagnostic Manual for resistance test.
4.3	Bad ignition coil/weak spark	Refer to the Diagnostic Manual for resistance test.
4.4	Flywheel misaligned during installation	Flywheel dowel pin is missing.
4.5	Engine not running on all cylinders	Inspect for mechanical damage.
4.6	Bad spark plug wire	Replace spark plug wire.

5. Engine Idles Fast (RPM Above 700) or Surges

	Cause	Action
5.1	Defective electronic throttle	<ul style="list-style-type: none">Refer to the Diagnostic Manual to determine proper functioning of the electronic throttle.Replace the throttle body assembly.
5.2	Vacuum leak in the intake tract, downstream from the throttle	Inspect the throttle body isolator for tears, loose connections, or other leaks.

6. Engine Runs Rough (RPM Below 3000)

	Cause	Action
6.1	Fouled spark plug	Replace the spark plug if: <ul style="list-style-type: none">Carbon bridges electrode gap or if it is completely blackIt is not firing and is wet with fuel <i>NOTE: A spark plug that is gray or completely black with aluminum specks indicates a scuffed piston.</i>
6.2	Low fuel pressure in fuel rail	Measure the fuel pressure (valve on top of the fuel rail). Fuel pressure should be 290–340 kPa (42.1–49.3 psi).
6.3	Defective electronic throttle	<ul style="list-style-type: none">Refer to the Diagnostic Manual to determine proper functioning of the electronic throttle.Replace the throttle body assembly.

	Cause	Action
6.4	Bad ignition coil/weak spark	Refer to the Diagnostic Manual for the resistance test.
6.5	Engine not running on all cylinders	Inspect for mechanical damage.
6.6	Bad spark plug wire	Replace the spark plug wire.
6.7	Air in the fuel system	Purge air from the fuel system.
6.8	Aerated fuel	Tighten all fuel line connections.

7. Engine Runs Rough (RPM Above 3000)

	Cause	Action
7.1	Fouled spark plug	Replace the spark plug if: <ul style="list-style-type: none"> • Carbon bridges electrode gap or if it is completely black • It is not firing and is wet with fuel <p><i>NOTE: A spark plug that is gray or completely black with aluminum specks indicates a scuffed piston.</i></p>
7.2	Defective electronic throttle	<ul style="list-style-type: none"> • Refer to the Diagnostic Manual to determine proper functioning of the electronic throttle. • Replace the throttle body assembly.
7.3	Low fuel pressure in fuel rail	Measure the fuel pressure (valve on top of the fuel rail). Fuel pressure should be 290–340 kPa (42.1–49.3 psi)
7.4	Speed reduction	Refer to SmartCraft gauges for low oil, engine overheat, or sensor/actuator out of range. Refer to the Diagnostic Manual to identify proper functioning of sensors/actuator.
7.5	Defective crankshaft position sensor	Refer to the Diagnostic Manual for fault identification.
7.6	Fuel restriction	Inspect all fuel lines, remove primer bulb, and check filters.
7.7	Aerated fuel	Tighten all fuel line connections.

8. Speed Reduction (RPM Reduced to Idle)

	Cause	Action
8.1	Engine communication/remote control failure	Refer to the Diagnostic Manual for fault identification.
8.2	Sensor/actuator is out of range	Refer to the Diagnostic Manual for fault identification.
8.3	Low oil pressure	Check the oil dipstick for proper oil level.
8.4	Engine overheat	Check the engine cooling system for proper functioning.

9. Speed Reduction (RPM Reduced to 75%)

	Cause	Action
9.1	Sensor/actuator is out of range	Refer to the Diagnostic Manual for fault identification.
9.2	Low oil pressure	Check the oil dipstick for proper oil level.
9.3	Engine overheat	Check the engine cooling system for proper functioning.

Audio Warning System

IMPORTANT: The audio warning system alerts the operator that a problem has occurred. It does not protect the engine from damage.

Most faults cause the warning horn circuit to activate. How the warning horn activates depends upon the severity of the problem.


There are two warning horn states:

- Caution
- Critical

There is also an alarm that sounds if the helm has not been properly configured using the G3 service tool.


Caution

If a caution state is detected, the audio warning system will sound for six one-second intervals.

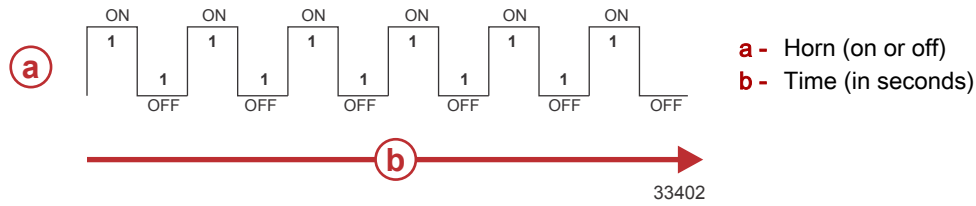


Critical

If a critical state is detected, the audio warning system sounds for six seconds and then turns off.

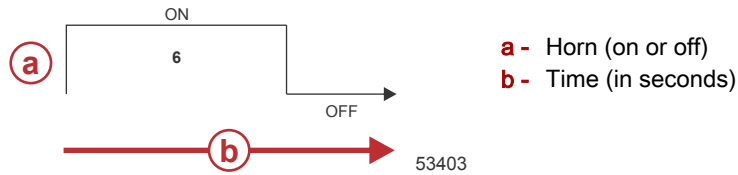

Nonconfigured Alarm

If the helm has not been properly configured using the G3 service tool, the audio warning system will sound for five one-second intervals.

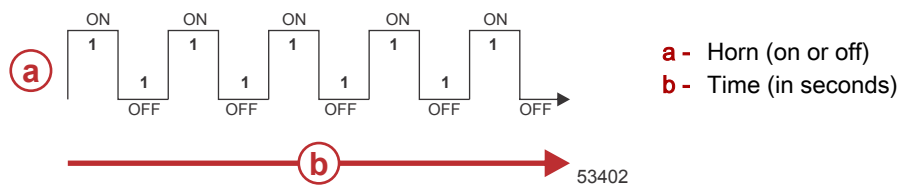

Testing the Audio Warning System

1. Turn the key switch to the on position without cranking the engine.
2. Listen for the audio alarm. The alarm will sound if the system is functioning correctly.

IMPORTANT: Horn strategy is dependent upon software and calibration levels.

Electrical


Section 2A - Ignition

Table of Contents


**2
A**

Electrical Component Replacement Procedures.....	2A-2	Removal.....	2A-10
Engine Harness and Sensors.....	2A-4	Installation.....	2A-11
Ignition Components - V8.....	2A-6	Main Power Relay (MPR).....	2A-11
Flywheel.....	2A-8	Sensor Replacement Procedures.....	2A-11
Flywheel Removal.....	2A-8	Camshaft Position Sensor.....	2A-11
Flywheel Installation.....	2A-8	Crankshaft Position Sensor (CPS).....	2A-12
Propulsion Control Module (PCM).....	2A-9	Manifold Absolute Pressure (MAP) Sensor	2A-13
PCM Removal.....	2A-9	Manifold Air Temperature (MAT) Sensor	2A-14
PCM Installation.....	2A-10	Oxygen (O2) Sensor.....	2A-15
Ignition Coil Removal and Installation.....	2A-10	Fuses.....	2A-15

Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
	Extreme Grease	Camshaft position sensor O-ring	8M0071842

Special Tools

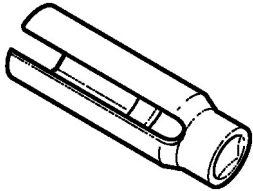Kent-Moore Oxygen Sensor Socket	J-38756
 <p style="text-align: center;">32314</p>	<p>Kent-Moore socket (or equivalent 7/8 in. automotive oxygen sensor socket) Aids in the removal and installation of oxygen sensors on products equipped with Emissions Control.</p>

Electrical Component Replacement Procedures



This section covers replacement procedures for the components related to the ignition system. To troubleshoot any part of the electrical system, refer to the **Diagnostics Manual**.

To replace other electrical components, refer to the appropriate section of this manual, as identified in the following chart:

To replace this component...	Refer to this section...
Advanced sound control motor	5A - Pedestal/Mount Cradle and Driveshaft Housing
Alternator and belt	2B - Charging and Starting System
Block water pressure sensor	4D - Cooling
Electrical accessories	2C - Accessories
Electronic throttle body	3B - Service Procedures
Engine coolant temperature sensor	4D - Cooling
Engine harness	4A - Cylinder Block/Crankcase
Exhaust gas temperature (EGT) sensor	4D - Cooling
Fuel injectors	3B - Service Procedures
Fuel pump relay	3B - Service Procedures
Fuel supply module (FSM)	5A - Pedestal/Mount Cradle and Driveshaft Housing
Oil pressure sensor	4C - Lubrication
Oil temperature sensor	4C - Lubrication
Shift actuator	2D - Electronic Shift
Spark plugs	1B - Maintenance
Start relay	2B - Charging and Starting System
Starter motor	2B - Charging and Starting System
Trim relays	5B - Advanced Midsection (AMS) Power Trim
Water-in-fuel sensor	3B - Service Procedures

Notes:


Engine Harness and Sensors

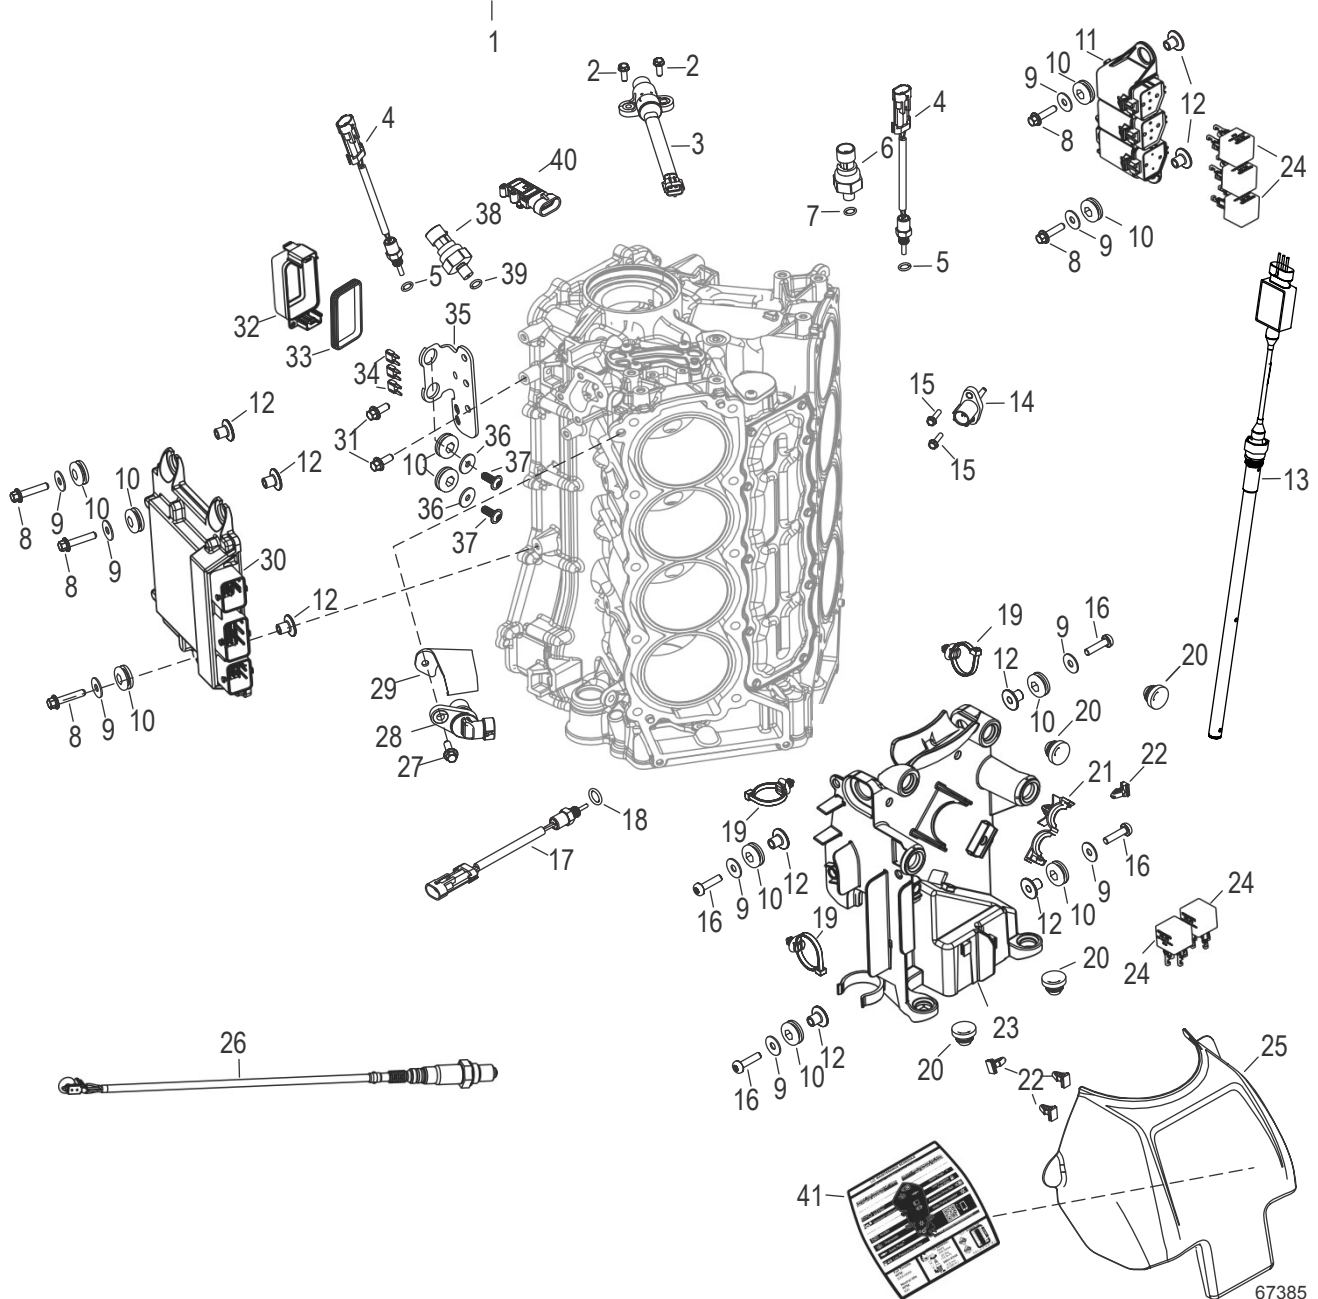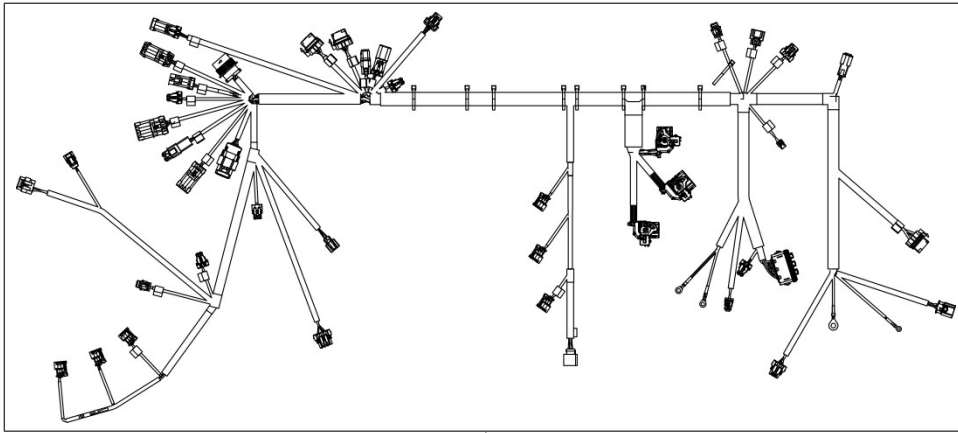

Engine Harness and Sensors

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Engine harness			
2	2	M5 x 13 hex washer head screw	5	44.3	–
3	1	Crankshaft position sensor			
4	2	Engine coolant temperature sensor	15	132.8	–
5	2	O-ring			
6	1	Block water pressure sensor	15	132.8	–
7	1	O-ring			
8	5	M6 x 25 hex flange head screw	10	88.5	–
9	9	Washer			
10	11	Grommet			
11	1	Relay housing			
12	9	Bushing			
13	1	Oil level sensor assembly			
14	1	Manifold air temperature sensor			
15	2	M4 x 16 screw	1.7	15	–
16	4	M6 x 25 Torx® pan head screw	10	88.5	–
17	1	Exhaust gas temperature sensor	15	132.8	–
18	1	O-ring			
19	3	Cable tie and anchor			
20	4	Grommet			
21	1	Clip			
22	4	Clip			
23	1	Electrical plate			
24	5	Relay			
25	1	Electrical plate cover			
26	1	Wideband O2 sensor	18	159.3	–
27	1	M6 x 20 hex flange head screw	10	88.5	–
28	1	Camshaft position sensor			
29	1	Camshaft position sensor bracket			
30	1	Propulsion control module (PCM)			
31	2	M6 x 16 hex flange head screw	10	88.5	–
32	1	Fuse box cover			
33	1	Fuse box seal			
34	3	Spare fuse			
35	1	Fuse box bracket			
36	2	Washer			
37	2	Self-tapping screw	5	44.3	–
38	1	Oil pressure sensor	15	132.8	–
39	1	O-ring			
40	1	Manifold absolute pressure (MAP) sensor			
41	1	Maintenance decal			

Ignition Components - V8

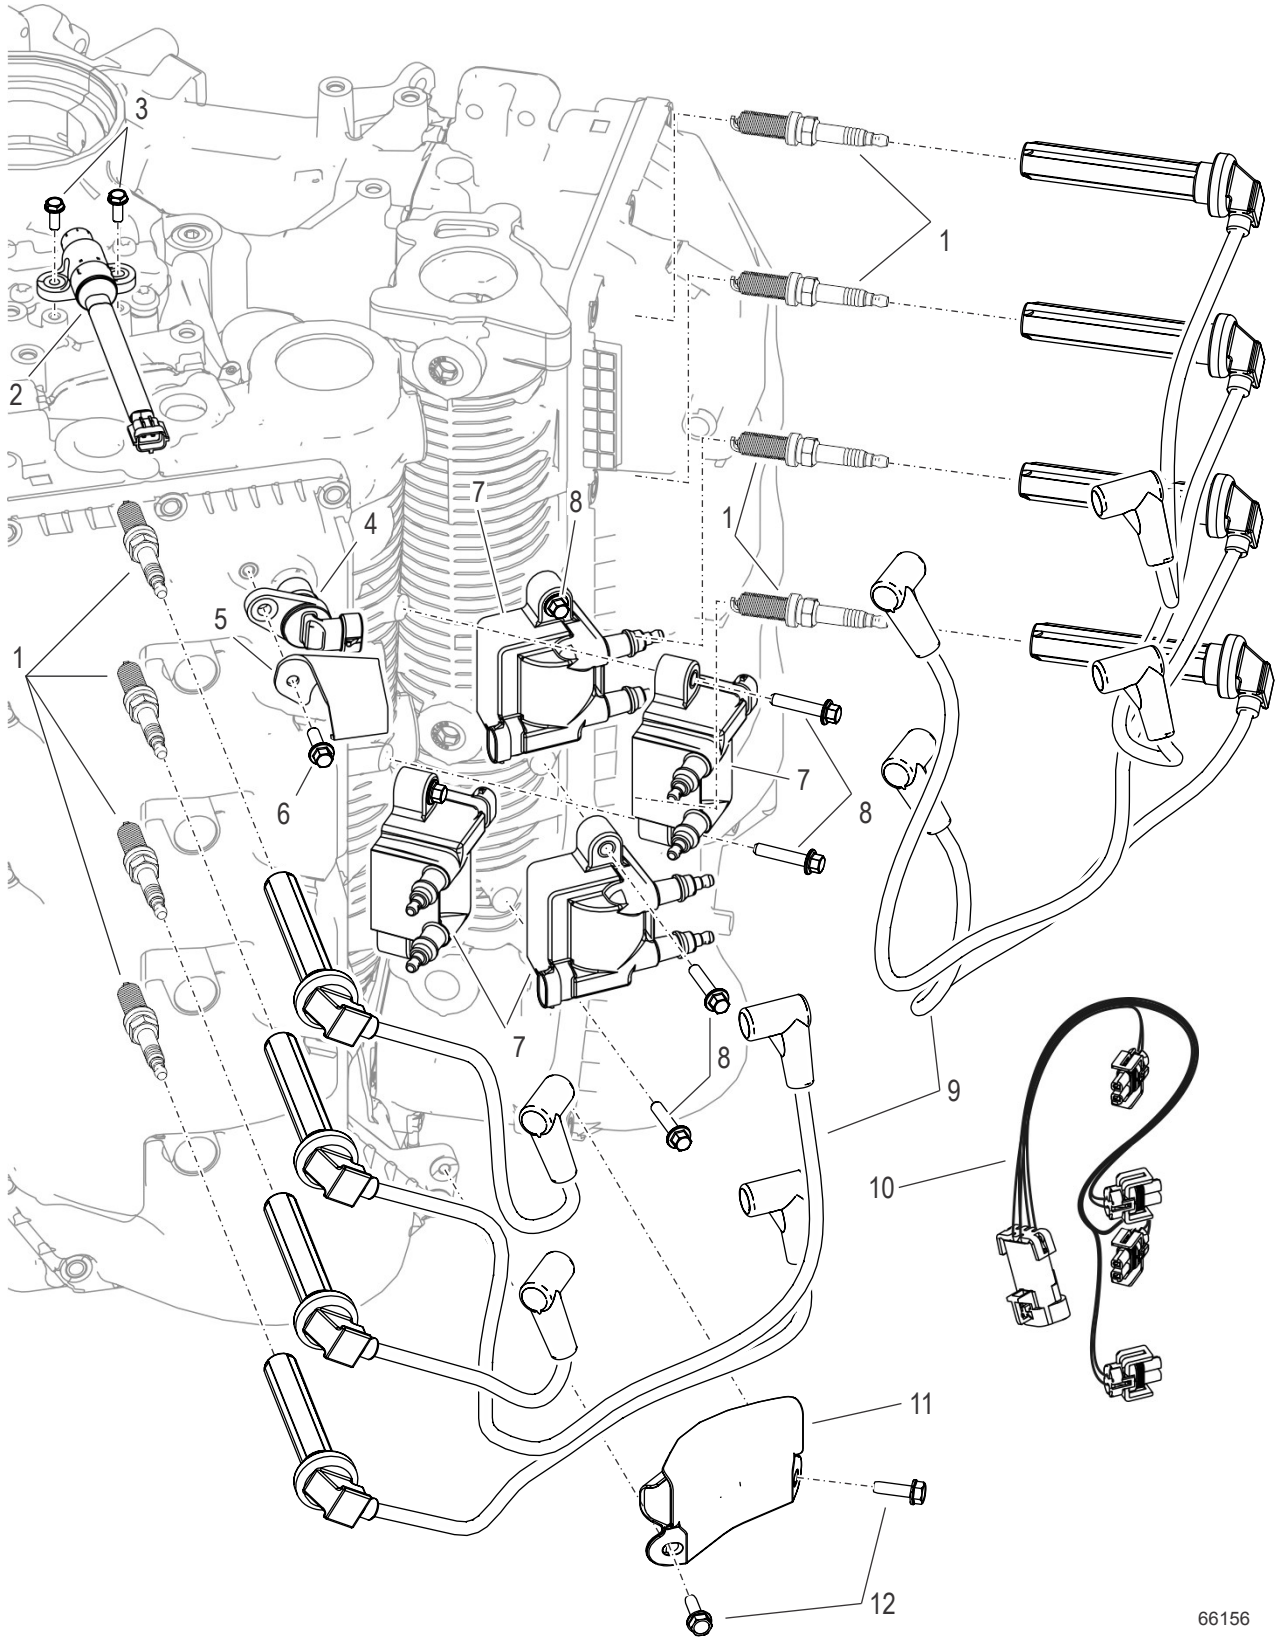

66156

Ignition Components - V8

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	8	Spark plug	20.0	177	–
2	1	Crankshaft position sensor (CPS)			
3	2	M5 x 13 hex washer head screw	5.0	44.3	–
4	1	Camshaft position sensor			
5	1	Camshaft position sensor bracket			
6	1	M6 x 20 hex flange head screw	8.0	70.8	–
7	4	2-post ignition coil			
8	8	M6 x 30 hex flange head screw (2 per coil)	10.17	90	–
9	1	Set of 8 spark plug (high tension) wires			
10	1	V8 ignition coil harness			
11	1	High-tension lead tray			
12	2	M6 x 20 screw	7.0	62	–

Flywheel

The flywheel is weighted and balanced to improve engine running characteristics. The flywheel is secured to the crankshaft by ten M8 x 1 x 42 mm hex flange head screws. The flywheel has two ring gears. The top ring gear is used with the starter motor to start the engine. The lower ring gear has 58 teeth, with a single gap (two missing teeth) to indicate position. As the lower ring gear passes the crankshaft position sensor, an electrical pulse is generated and sent to the propulsion control module (PCM). The frequency of these pulses provides crankshaft location information to the PCM. The PCM uses this information to regulate ignition and fuel injector timing.


Flywheel Removal

1. Remove the cold air intake assembly. Refer to **Section 3A - Induction System**.
 - a. Remove the oil level dipstick.
 - b. Loosen the hose clamp at the top of the throttle body assembly.
 - c. Lift the assembly up to disengage the two pins from the grommets on the oil fill bracket.
 - d. Swing the assembly out of the way.
2. Remove the oil fill bracket, alternator, and alternator belt. Refer to **Section 2B - Alternator Removal**.
3. Remove the ten flywheel screws, and remove the flywheel from the crankshaft.




Flywheel Installation

1. Align the crankshaft dowel pin with the dowel pin hole on the bottom of the flywheel. Install the flywheel onto the crankshaft.

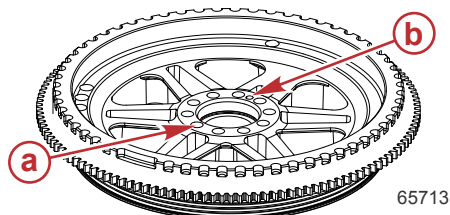

- a - Flywheel mounting holes
- b - Dowel pin location

2. Start the flywheel screws by hand to prevent cross-threading.
3. Starting with the screw closest to the dowel pin (furthest from the gap in the ring gear), tighten the screws to the specified torque in the sequence shown.

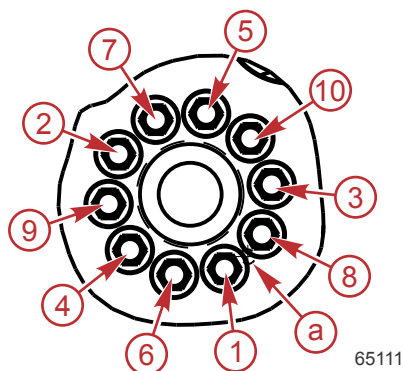

Flywheel screw torque sequence

- a - Dowel pin location (underside of flywheel, 180° opposite of gap in ring gear)

Description	Nm	lb-in.	lb-ft
Flywheel mounting screw (M8 x 1 x 42 mm)	40	–	29.5

4. Install the alternator, alternator belt, and oil fill bracket. Refer to **Section 2B - Alternator Installation**.
5. Install the cold air intake assembly. Refer to **Section 3A - Induction System**.
 - Ensure that the reference hose is secured to the assembly with a cable tie.
 - Ensure that the hose clamp is securely tightened.
 - Ensure that the oil level dipstick is properly inserted into the dipstick tube.

Propulsion Control Module (PCM)


IMPORTANT: Refer to the Diagnostic Manual.

The propulsion control module requires 9.5 VDC minimum to operate. If the PCM should fail, the engine will stop running. The PCM controls the following functions and components:

- Electronic shift control
- Electronic throttle control
- Main power relay
- Fuel injectors
- Ignition coils
- Power steering
- Trim up
- Trim down
- Start relay
- Fuel pump
- Diagnostics
- Engine Guardian
- Tachometer link (analog tachometer output or link gauge driver)
- Advanced sound control
- CAN communications with helm controller
- Moving propeller (MP) alert (optional)

PCM Removal

1. Disconnect the battery.
2. Remove the port intake manifold runner assembly. Refer to **Section 3A - Intake Runners**.
3. Disconnect the three engine harness connectors:
 - a. Push in the tab on the side of PCM connector A and rotate the locking lever 90°, or until it clicks. Remove the connector from the PCM.

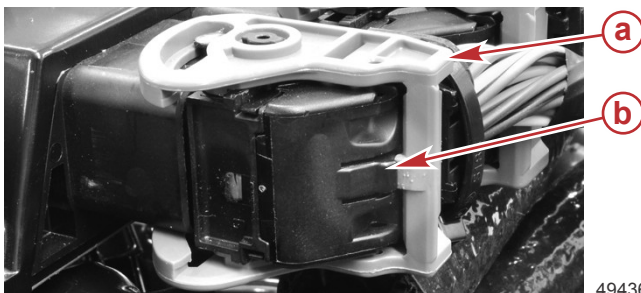


a - PCM connector locking lever
b - Locking lever tab

NOTE: When reinstalling the connectors, you will hear two clicks: once as you engage the locking mechanism on the harness connector to the pin on the PCM connector, and a second time as you rotate the lock to a full 90° to secure the connector.

- b. Remove connector B in the same manner.
- c. Remove connector C in the same manner.

NOTE: When installing the PCM, attach the connectors in the reverse order: connector C first, followed by connector B, and finally, connector A.

- Remove the three M6 x 25 hex flange head screws that secure the PCM to the engine, and remove the PCM.

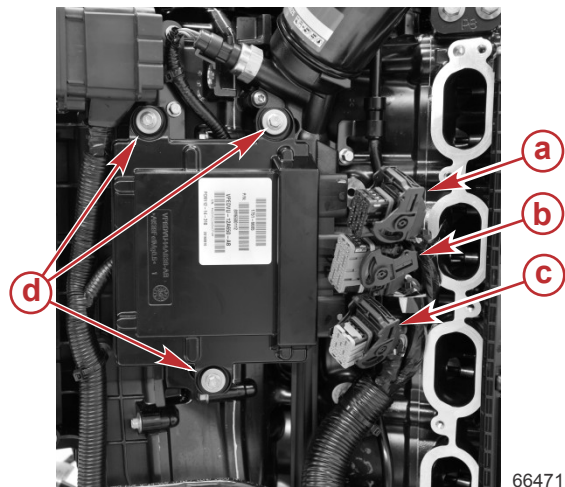

- a - Connector A
- b - Connector B
- c - Connector C
- d - M6 x 25 hex flange head screws (3)

66471

PCM Installation

NOTE: Refer to the illustrations in **PCM Removal**, as required.

- Ensure that the bushings and grommets are in place on the PCM.
- Install the PCM onto the engine with three screws and washers. Tighten the screws to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 x 25 hex flange head screw	5	44.3	–


- Connect and lock the electrical connectors to the PCM. Do not touch the connector pins.
- Install the port intake manifold runner assembly. Refer to **Section 3A - Intake Runners**.

Ignition Coil Removal and Installation

IMPORTANT: The ignition coils can be removed and installed without removing any other components. A ratcheting wrench simplifies removal and installation.

Removal

- Disconnect the spark plug leads from the coil. Be certain to mark the cylinder numbers on the ignition coils or another suitable location, to aid in reinstallation.
- Completely loosen the two M6 x 30 hex flange head screws that secure the coil, and carefully slide the coil from its position on the engine.

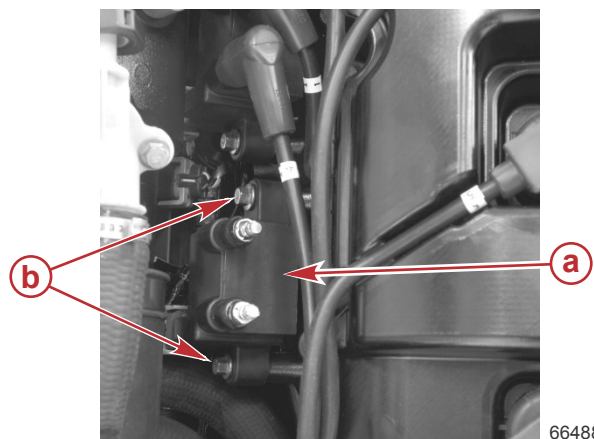


Typical

- a - Ignition coil with spark plug leads removed
- b - M6 x 30 hex flange head screws (2)

66488

3. Disconnect the coil from the coil harness.

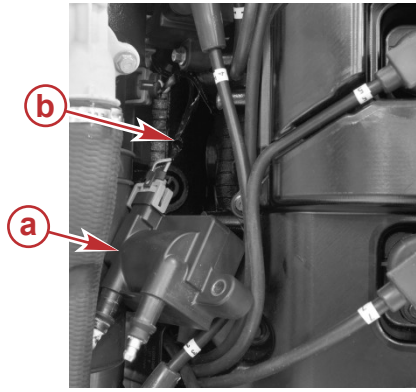

66560

- Typical**
a - Ignition coil
b - Coil harness

Installation



1. Connect the coil to the coil harness.
2. Slide the coil into position.
3. Insert the two M6 x 30 hex flange head screws into the slots in the coil. It may be necessary to move the coil slightly out of position to allow enough access for the screws.
4. Start the two screws by hand, and then tighten them to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 x 30 hex flange head screw	10.17	90	-

5. Connect the coil to the corresponding spark plugs, using the appropriate spark plug leads.

Main Power Relay (MPR)

The main power relay (MPR) is located behind the starboard intake runner. To remove and install the starboard intake runner, refer to **Section 3A - Intake Runners**.

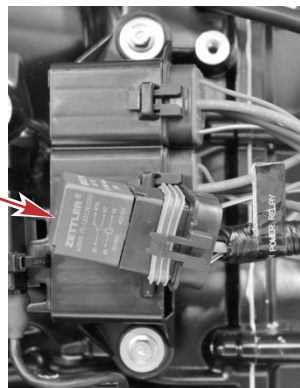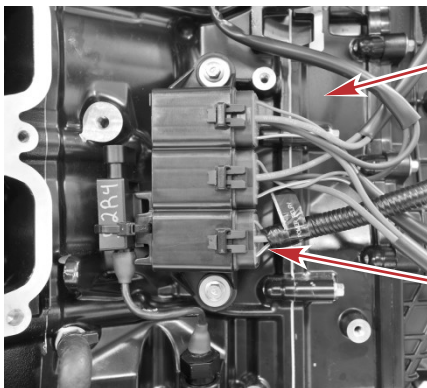

67396

- a -** Starboard side of powerhead, intake runner removed
b - MPR socket on the engine harness
c - MPR

Sensor Replacement Procedures


Camshaft Position Sensor

The camshaft position sensor is located at the top of the port valve cover.

Camshaft Position Sensor Removal

1. Disconnect the sensor from the engine harness.


2. Remove the M6 x 20 screw securing the camshaft position sensor, and remove the sensor and sensor bracket.

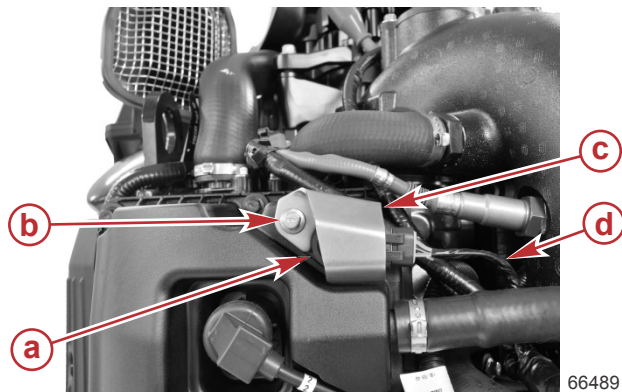

- a - Camshaft position sensor
- b - M6 x 20 screw
- c - Sensor bracket
- d - Engine harness

Camshaft Position Sensor Installation

1. Apply Extreme Grease to the sensor O-ring.

Tube Ref No.	Description	Where Used	Part No.
	Extreme Grease	Camshaft position sensor O-ring	8M0071842

2. Install the sensor into the valve cover.
3. Place the bracket over the sensor, and secure both items with an M6 x 20 screw.
4. Tighten the screw to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 x 20 screw	8	70.8	-

5. Connect the engine harness to the sensor.


Crankshaft Position Sensor (CPS)

The crankshaft position sensor (CPS) is located at the top of the cylinder block next to the flywheel. If the crankshaft position sensor fails, the engine will run rough or stop running.

Crankshaft Position Sensor Removal

1. Remove the cold air intake assembly. Refer to **Section 3A - Induction System**.
 - a. Remove the oil level dipstick.
 - b. Loosen the hose clamp at the top of the throttle body assembly.
 - c. Lift the assembly up to disengage the two pins from the grommets on the oil fill bracket.
 - d. Swing the assembly out of the way.
2. Remove the oil fill bracket, alternator, and alternator belt. Refer to **Section 2B - Alternator Removal**.
3. Disconnect the sensor from the engine harness.

- Remove the two M5 x 13 hex washer head screws securing the sensor, and remove the sensor.

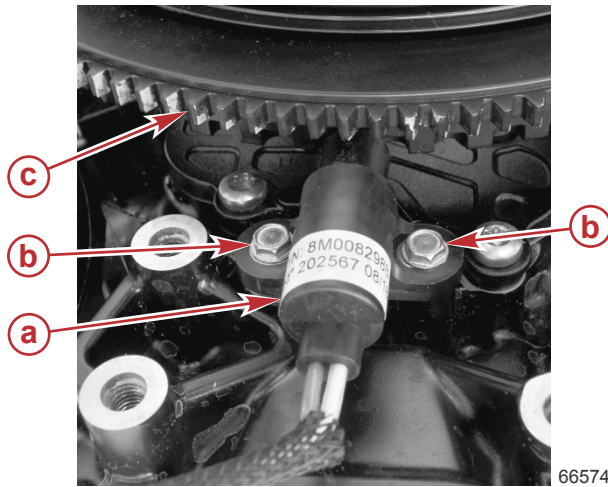

- a - Crankshaft position sensor
- b - M5 x 13 hex washer head screws (2)
- c - Flywheel

66574

Crankshaft Position Sensor Installation

- Position the sensor on the engine, and secure the sensor with two M5 x 13 hex washer head screws. Tighten the screws to the specified torque.

Description	Nm	lb-in.	lb-ft
M5 x 13 hex washer head screw	5	44.3	-


- Connect the sensor to the engine harness.
- Install the alternator, alternator belt, and oil fill bracket. Refer to **Section 2B - Alternator Installation**.
- Install the cold air intake assembly. Refer to **Section 3A - Induction System**.
 - Ensure that the reference hose is secured to the assembly with a cable tie.
 - Ensure that the hose clamp is securely tightened.
 - Ensure that the oil level dipstick is properly inserted into the dipstick tube.

Manifold Absolute Pressure (MAP) Sensor

The MAP sensor is located at the top of the intake manifold.

Manifold Absolute Pressure (MAP) Sensor Removal

- Cut the cable tie, and disconnect the engine harness connector.
- Disconnect the hose from the sensor.
- Remove the sensor from the bracket.

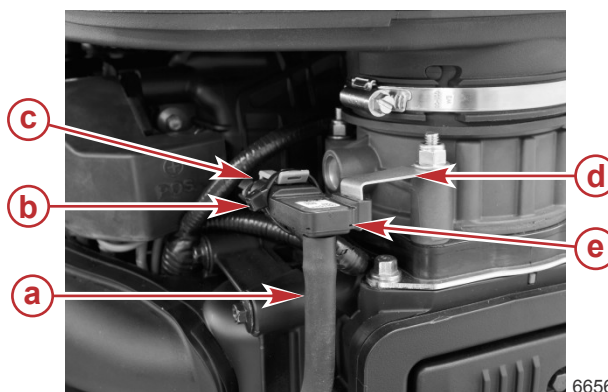

- a - Sensor hose
- b - Cable tie
- c - Engine harness connector
- d - Sensor bracket
- e - MAP sensor

66568

Manifold Absolute Pressure (MAP) Sensor Installation


- Install the sensor onto the bracket.
- Connect the hose to the sensor.
- Connect the engine harness connector to the sensor.
- Secure the harness connection with a cable tie.

Manifold Air Temperature (MAT) Sensor

The MAT sensor is located in the middle of the starboard intake manifold close to the fuel rail.

Manifold Air Temperature (MAT) Sensor Removal

1. Remove the starboard air intake runner. Refer to **Section 3A - Intake Runners**.
2. Disconnect the engine harness from the MAT sensor.
3. Remove two M4 x 16 screws securing the sensor and remove the sensor.

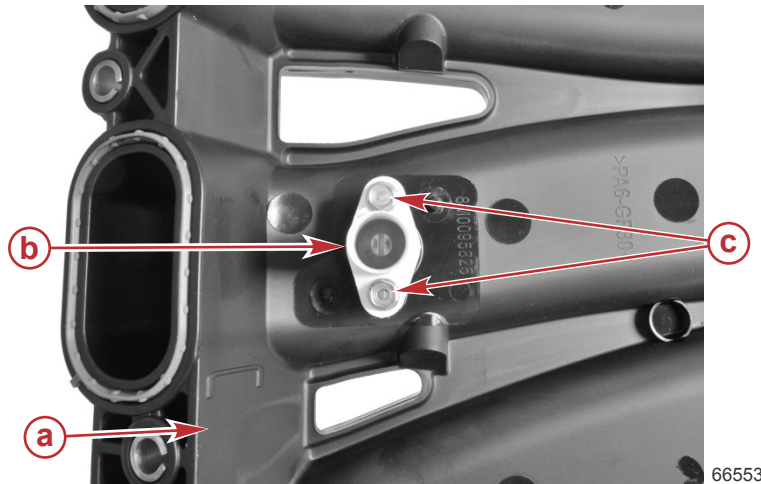


- a - Starboard air intake runner
- b - MAT sensor
- c - M4 x 16 screws (2)

66553

Manifold Air Temperature (MAT) Sensor Installation

1. Install a new O-ring onto the MAT sensor.

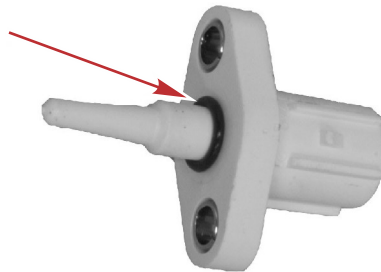

13378


2. Install the sensor into the starboard intake runner. Tighten the M4 x 16 screws to the specified torque.

Description	Nm	lb-in.	lb-ft
M4 x 16 screw	1.7	15	-

3. Connect the engine harness to the sensor.
4. Install the starboard air intake runner. Refer to **Section 3A - Intake Runners**.

Oxygen (O2) Sensor

The oxygen (O2) sensor is located at the top of the engine, in the port side of the exhaust tube.

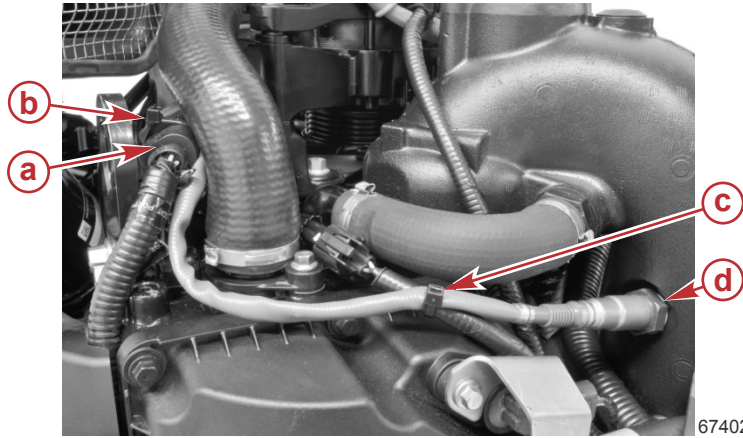

- a** - O2 sensor connector on the engine harness
- b** - Cable tie securing the O2 sensor harness to the connector
- c** - Cable tie securing the O2 sensor harness to the crankshaft position sensor leg of the engine harness
- d** - O2 sensor

Sensor Removal

1. Cut the cable tie that secures the O2 sensor harness to the harness connector.
2. Cut the cable tie that secures the O2 sensor harness to the crankshaft position sensor (CPS) leg of the engine harness.
3. Disconnect the O2 sensor harness from the engine harness.
4. Remove the O2 sensor from the exhaust tube.

Kent-Moore Oxygen Sensor Socket	J-38756
---------------------------------	---------

Sensor Installation

1. Ensure that the O2 sensor O-ring is installed on the sensor and is in good condition.
2. Carefully thread the O2 sensor into the exhaust tube, and tighten to the specified torque.

Kent-Moore Oxygen Sensor Socket	J-38756
---------------------------------	---------


Description	Nm	lb-in.	lb-ft
O2 sensor	18	159.3	–

3. Connect the O2 sensor harness to the engine harness. Route the harness as shown in the preceding illustration.
4. Secure the O2 sensor harness to the connector with a cable tie.
5. Secure the O2 sensor harness to the CPS leg of the engine harness with a cable tie.

Fuses

Fuses protect the electrical circuits on the outboard from overload. If a fuse is open, try to locate and correct the cause of the overload. If the cause is not found, the fuse may open again.




1. Remove the top cowl. Locate the fuse holder on the port side of the engine.

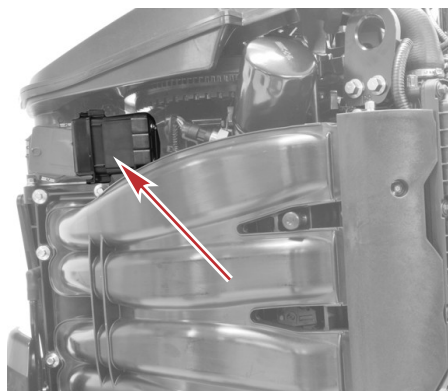

2. Remove the plastic cover from the fuse holder.
3. Remove the suspected open fuse to determine if the metal band is broken.

Ignition

4. If necessary, replace the fuse with a new fuse of the same amperage rating.

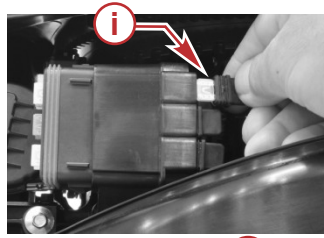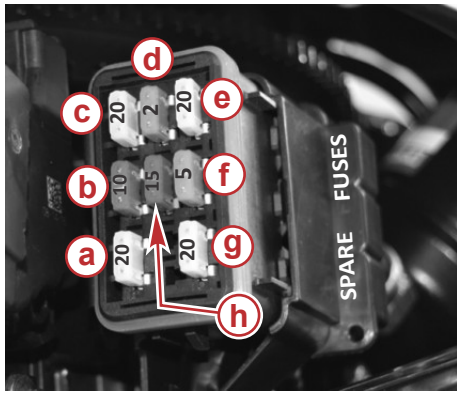

64390

- a** - Ignition coils—20 amp
- b** - Oxygen sensor—10 amp
- c** - Fuel pump—20 amp
- d** - Diagnostics—2 amp
- e** - Fuel injectors—20 amp
- f** - Advanced sound control—5 amp (not used on all models)
- g** - Driver power—20 amp (start relay, fuel pump relay, PCM drivers)
- h** - TVM power—15 amp (not used on all models)
- i** - Spare fuses (3)
- j** - Good fuse
- k** - Open fuse

Electrical

Section 2B - Charging and Starting System

Table of Contents

**2
B**

Battery Specifications.....	2B-2	Charging System Inspection.....	2B-9
Alternator, Belt, and Mounting Components - V8.....	2B-4	Alternator Removal.....	2B-10
Starter Motor and Hot Stud Components.....	2B-6	Alternator Installation.....	2B-13
Battery.....	2B-8	Starting System.....	2B-15
Replacement Parts.....	2B-8	Starting System Visual Checks.....	2B-15
Battery Precautions.....	2B-8	Starter Removal.....	2B-16
Charging a Discharged Battery.....	2B-8	Starter Installation.....	2B-17
Charging System.....	2B-9	Start Relay.....	2B-18
Charging System Precautions.....	2B-9		



Battery Specifications

Required Starting Battery



Description		Specification
Battery type		12-volt absorbed glass mat (AGM) battery
Rating	USA and Canada (SAE)	800 minimum marine cranking amps (MCA) with a minimum reserve capacity of 135 RC25 rating
	International (EN)	975 minimum cold cranking amps (CCA) with a minimum of 65 ampere hour (Ah)

For additional details, refer to **Section 1D - Battery Requirements**.

Lubricants, Sealants, Adhesives


Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Alternator output connection Starter electrical connections	92- 25711 3
 66	Loctite 242 Threadlocker	Alternator mounting screws M8 x 45 hex flange head screws M6 x 16 hex flange head screws M8 x 80 hex flange head screws M8 x 45 hex flange head screw M8 x 1.25 screw M6 x 13 hex washer head screw	92-809821

Special Tools

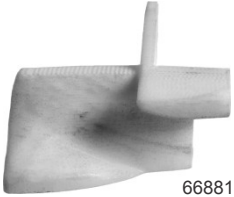Alternator Belt Shoe	8M0146862
 66881	Aids in the installation and removal of the alternator belt on V6/V8 fourstroke outboards. Tool ID number 8M0140323.
Flywheel Socket	8M0146861
 66882	Aids in the manual rotation of the flywheel, especially for alternator belt removal and installation. Tool ID number 8M0144583

Notes:

Alternator, Belt, and Mounting Components - V8

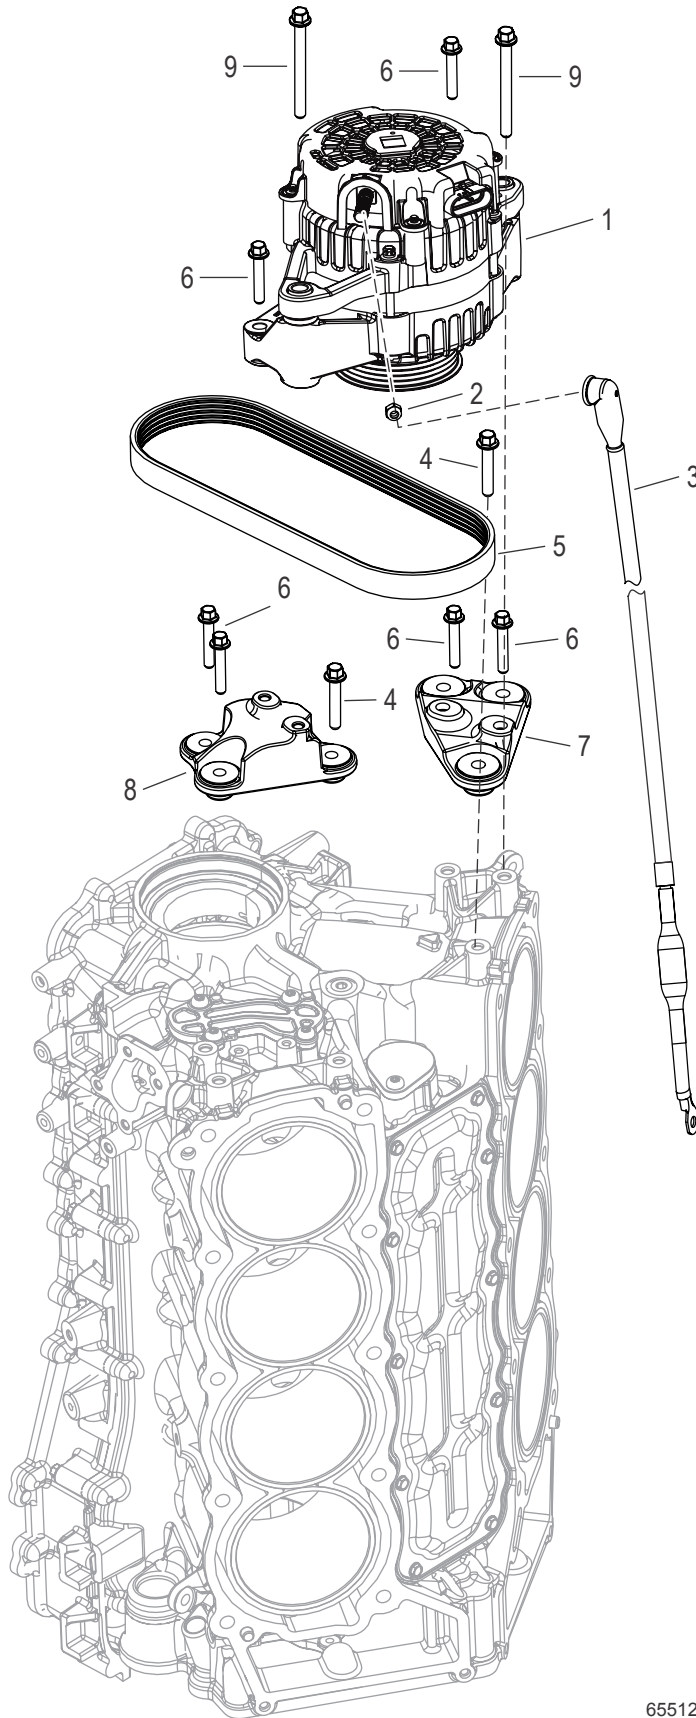


65512

Alternator, Belt, and Mounting Components - V8

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Alternator			
2	1	M8 locknut			
3	1	Cable with 150 A fusible link			
4	2	M8 hex flange head screw	30	–	22.1
5	1	Belt			
6	6	M8 x 45 hex flange head screw	30	–	22.1
7	1	Starboard alternator bracket			
8	1	Port alternator bracket			
9	2	M8 x 85 hex flange head screw	30	–	22.1

Starter Motor and Hot Stud Components

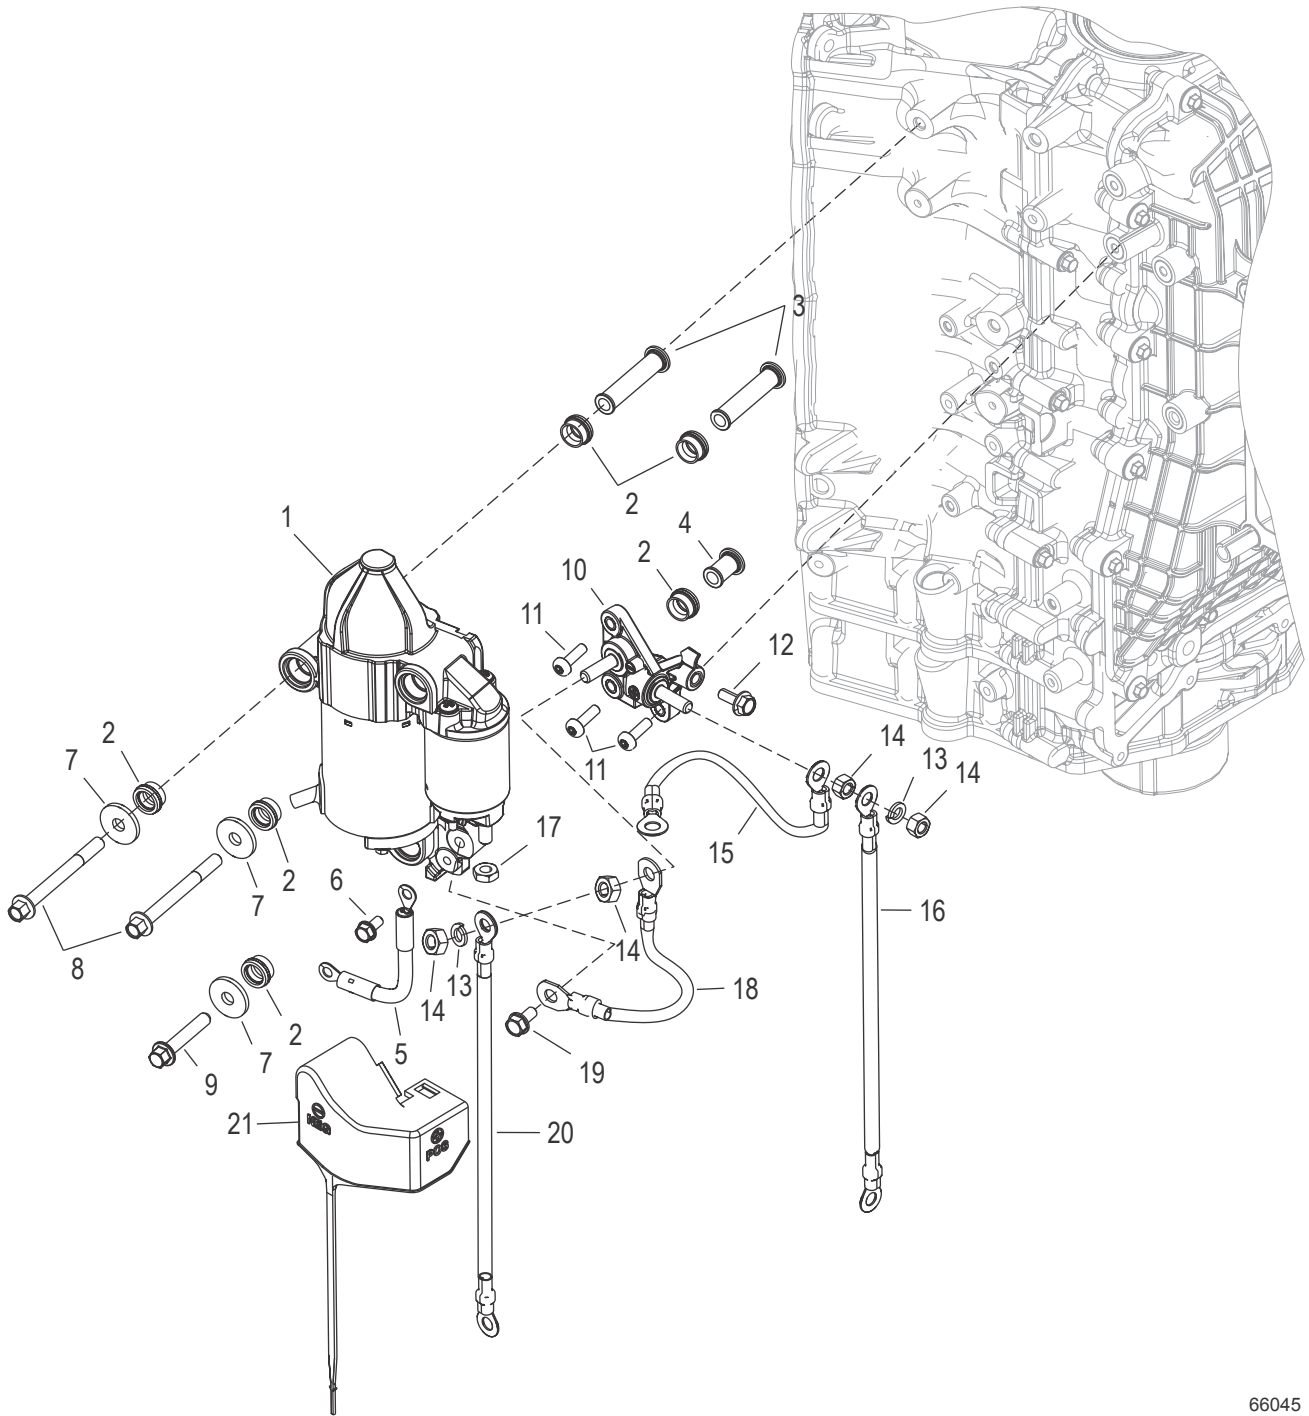

66045

Starter Motor and Hot Stud Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Isolation mount starter motor			
2	6	8 mm tubular mount			
3	2	Long spacer			
4	1	Short spacer			
5	1	Starter ground jumper cable			
6	1	M6 x 13 hex washer head stainless steel screw	11.3	100	–
7	3	Washer			
8	2	M8 x 80 hex flange head screw	24	–	17.7
9	1	M8 x 45 hex flange head screw	24	–	17.7
10	1	Battery cable stud bracket			
11	3	M6 x 20 Torx® pan head screw	10	88.5	–
12	1	8 mm screw	17	150.5	–
13	2	Lockwasher			
14	4	M8 x 1.25 hex nut	17	150.5	–
15	1	Starter positive lead			
16	1	Positive battery cable			
17	1	M8 x 1.25 hex nut	17	150.5	–
18	1	Starter ground (negative) lead			
19	1	M8 x 1.25 screw	17	150.5	–
20	1	Negative battery cable			
21	1	Hot stud cover			

Battery

For battery requirements, refer to **Section 1D - Battery Requirements**. The following topics are covered therein:

- Battery Cables
- Battery Switches
- Battery Isolation
- Engine Battery Specifications

Replacement Parts

WARNING

Avoid fire or explosion hazard. Electrical, ignition, and fuel system components on Mercury Marine products comply with federal and international standards to minimize risk of fire or explosion. Do not use replacement electrical or fuel system components that do not comply with these standards. When servicing the electrical and fuel systems, properly install and tighten all components.

IMPORTANT: Deep-cycle batteries are not suitable for use as engine starting batteries or for use as accessory batteries that are connected to high output engine charging systems. Deep-cycle battery life may be shortened by high output engine charging systems. Refer to individual battery manufacturer instructions for specific battery charging procedures and applications.

Battery Precautions

WARNING

An operating or charging battery produces gas that can ignite and explode, spraying out sulfuric acid, which can cause severe burns. Ventilate the area around the battery and wear protective equipment when handling or servicing batteries.

When charging batteries, an explosive gas mixture forms in each cell. Part of this gas escapes through holes in the vent plugs and may form an explosive atmosphere around the battery if ventilation is poor. This explosive gas may remain in or around the battery for several hours after it has been charged. Sparks or flames can ignite this gas and cause an internal explosion, which may shatter the battery.

The following precautions should be observed to prevent an explosion:

1. Do not smoke near batteries being charged or which have been charged very recently.
2. Do not break live circuits at terminals of batteries, because a spark usually occurs at the point where a live circuit is broken. Always be careful when connecting or disconnecting cable clamps on chargers. Poor connections are a common cause of electrical arcs which cause explosions.
3. Do not reverse polarity of battery terminal to cable connections.

Charging a Discharged Battery

WARNING

An operating or charging battery produces gas that can ignite and explode, spraying out sulfuric acid, which can cause severe burns. Ventilate the area around the battery and wear protective equipment when handling or servicing batteries.

The following basic rules apply to any battery charging situation:

1. Any battery may be charged at any rate (in amperes), or as long as spewing of electrolyte (from violent gassing) does not occur, and for as long as electrolyte temperature does not exceed 52 °C (125 °F). If spewing of electrolyte occurs, or if electrolyte temperature exceeds 52 °C (125 °F), charging rate (in amperes) must be reduced or temporarily halted to avoid damage to the battery.
2. Battery is fully charged when, over a 2 hour period at a low charging rate (in amperes), all cells are gassing freely (not spewing liquid electrolyte), and no change in specific gravity occurs. Full charge specific gravity is 1.260–1.275, corrected for electrolyte temperature with electrolyte level at 4.8 mm (3/16 in.) over plate, unless electrolyte loss has occurred (from age or overfilling), in which case, specific gravity reading will be lower. For most satisfactory charging, lower charging rates in amperes are recommended.
3. If, after prolonged charging, specific gravity of at least 1.230 on all cells cannot be reached, battery is not in optimum condition and will not provide optimum performance; however, it may continue to provide additional service, if it has performed satisfactorily in the past.

- To check the battery voltage while cranking the engine with an electric starting motor at ambient air temperature of 23.8 °C (75 °F), place the red (+) lead of the tester on the positive (+) battery terminal and the black (-) lead of the tester on the negative (-) battery terminal. If the voltage drops below 10-1/2 volts while cranking, the battery is weak and should be recharged or replaced.

Charging System

Charging System Precautions


Observe the following precautions when working on the charging system. Failure to observe these precautions may result in serious damage to the charging system.

- Do not attempt to polarize the alternator.
- Do not short across or ground any of the terminals on the alternator, except as specifically instructed.
- Never disconnect the alternator output lead, engine harness, or battery cables when the alternator is being driven by the engine.
- Always remove the negative (-) battery cable from the battery before working on the charging system.
- When installing the battery, be sure to connect the negative (-) battery cable to the negative (-) battery terminal and the positive (+) battery cable to the positive (+) battery terminal. Connecting the battery cables to the battery in reverse will melt the 150-amp fusible link in the output lead of the alternator. The alternator will not be able to charge the battery, and the battery will be quickly discharged if the engine is run.
- When using a charger or booster battery, connect it in parallel with the existing battery (positive to positive; negative to negative).

Charging System Inspection

- If the problem is an undercharged battery, verify the condition has not been caused by excessive accessory current draw or by accessories that have been left on.
- Check the physical condition and state of charge of the battery. The battery must be at least 75% (1.230 specific gravity) charged to obtain valid results in the following tests. If not, charge the battery before testing the system.
- Inspect the entire charging system wiring for defects. Check all connections for tightness and cleanliness, particularly the battery cable clamps and battery terminals.

IMPORTANT: The alternator output lead (black with red sleeve) connection must be tight. A darkened red sleeve indicates the lead was loose and became hot. Verify the output lead attaching nut is tightened to the specified torque.

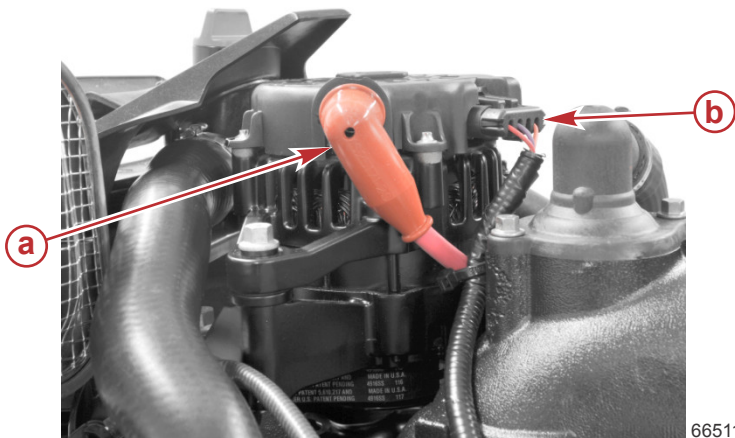


- a - Alternator output lead/fusible link, to hot stud
- b - Alternator connection to engine harness (excitation and sense leads)

Description	Nm	lb-in.	lb-ft
Nut	7	62	-

Charging and Starting System

4. Check the alternator drive belt for excessive wear, cracks, glazed surfaces, and fraying. Replace if necessary.

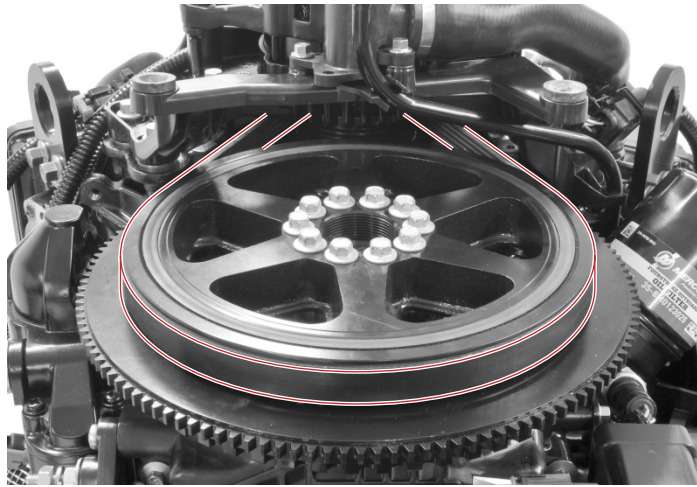


66510

Alternator Removal

⚠ WARNING

Performing service or maintenance without first disconnecting the battery can cause product damage, personal injury, or death due to fire, explosion, electrical shock, or unexpected engine starting. Always disconnect the battery cables from the battery before maintaining, servicing, installing, or removing engine or drive components.

1. Disconnect the battery leads from the battery.
2. Remove the cold air intake assembly. Refer to **Section 3A - Induction System**.
 - a. Remove the oil level dipstick.
 - b. Loosen the hose clamp at the top of the throttle body assembly.
 - c. Lift the assembly up to disengage the two pins from the grommets on the oil fill bracket.
 - d. Swing the assembly out of the way.
3. If the alternator belt is to be replaced, use a pair of tin snips (or equivalent) to cut the belt free of the alternator and flywheel.

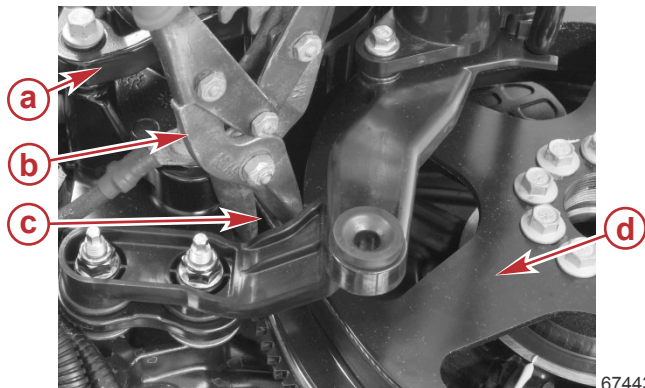


- a - Alternator bracket
- b - Tin snips (or equivalent)
- c - Alternator belt
- d - Flywheel

67443

4. If the alternator belt is to be reused, use the alternator belt shoe to remove it, as follows:


- a. Position the alternator belt shoe between the flywheel and the alternator belt, as shown.

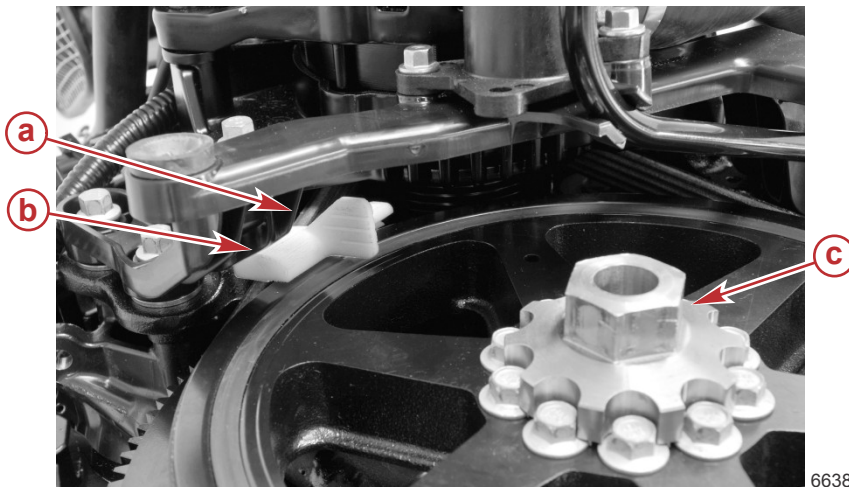

- a** - Alternator belt
- b** - Alternator belt shoe
- c** - Flywheel socket

Alternator Belt Shoe	8M0146862
----------------------	-----------


- b. Use a breaker bar, 1-1/8 in. socket, and the flywheel socket to turn the flywheel counterclockwise until the belt comes free of the flywheel.

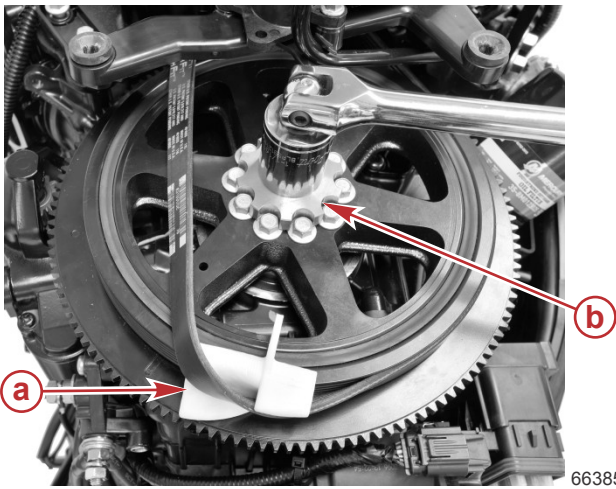

- a** - Alternator belt shoe
- b** - Flywheel socket

Flywheel Socket	8M0146861
-----------------	-----------

5. Unclip the oil dipstick tube and swivel it out of the way.
6. Remove three screws to remove the oil fill hose.

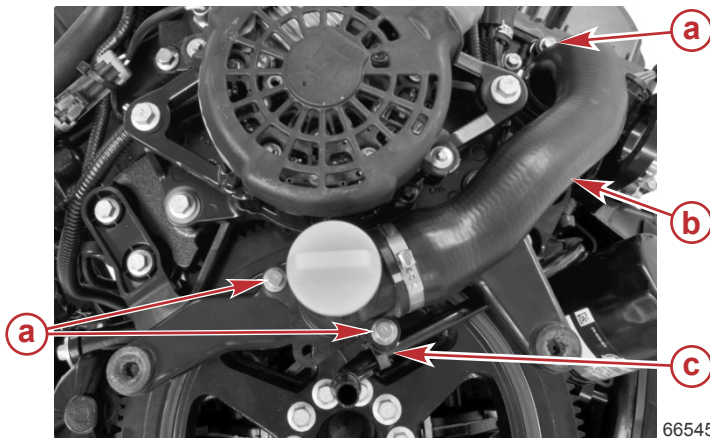

- a** - M6 x 16 hex flange head screws (3)
- b** - Oil fill hose
- c** - Oil dipstick tube clip

Charging and Starting System


- Remove four screws and remove the oil fill bracket.



- a** - M8 x 45 hex flange head screws (4)
- b** - Oil fill bracket

66546


- Disconnect the alternator output lead from the alternator.
- Disconnect the engine harness connector from the alternator.

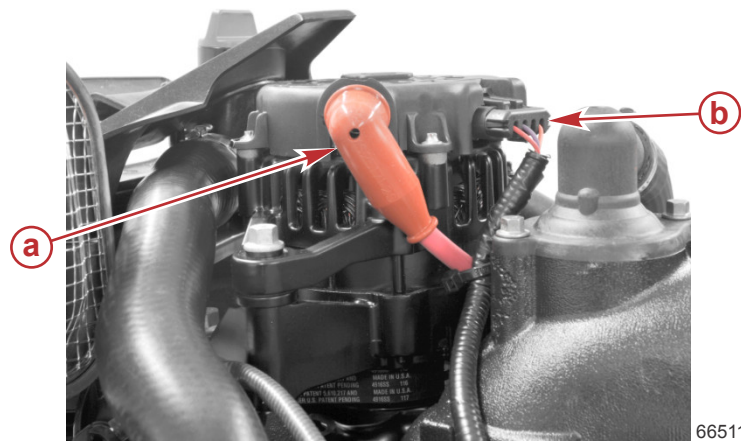

- a** - Alternator output
- b** - Engine harness connector

66511

- Remove the four screws (two M8 x 45 and two M8 x 85) securing the alternator to two brackets, and remove the alternator and alternator belt from the engine.

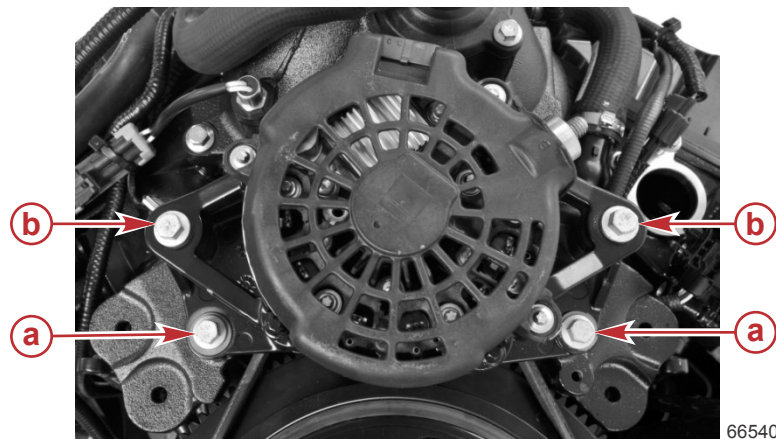


- a** - M8 x 45 screw (2)
- b** - M8 x 85 screw (2)

66540

Alternator Installation

- Place the alternator in position, and slip the alternator belt around the alternator pulley. Ensure that the text on the belt is right-side up, as shown.

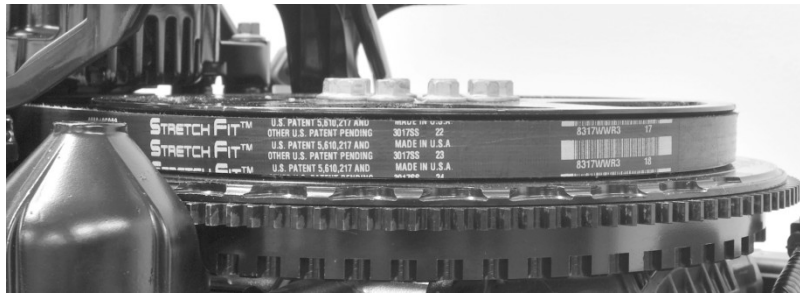


67458

Belt installed with text right-side up

IMPORTANT: There is insufficient room to install the alternator belt with the alternator fully installed. Ensure that the belt is in the proper position around the alternator pulley prior to attaching the alternator to the two brackets.

- Apply Loctite® 242 Threadlocker to two M8 x 45 and two M8 x 85 alternator mounting screws, and attach the alternator to the two brackets.

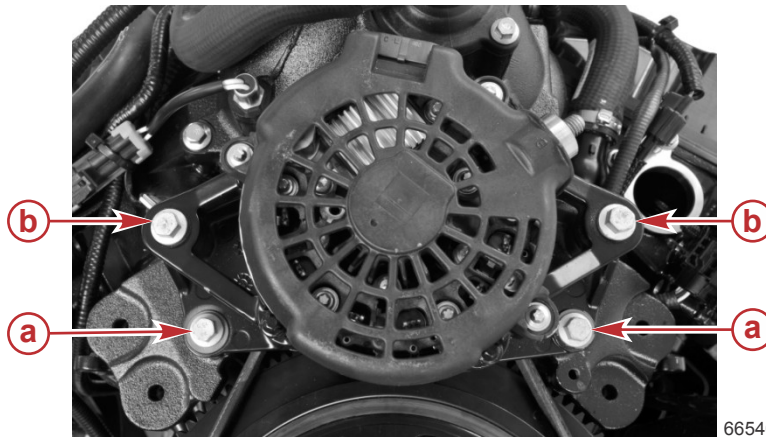

- a - M8 x 45 hex flange head screws (2)
- b - M8 x 85 hex flange head screws (2)

66540

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	Alternator mounting screws	92-809821


- Tighten all four alternator mounting screws to the specified torque.

Description	Nm	lb-in.	lb-ft
Alternator mounting screws	30	–	22.1

- Connect the engine harness to the alternator.


Charging and Starting System

- Secure the alternator output lead to the alternator with a nut. Tighten the nut to the specified torque, coat the connection with Liquid Neoprene, and cover the connection with the rubber boot.

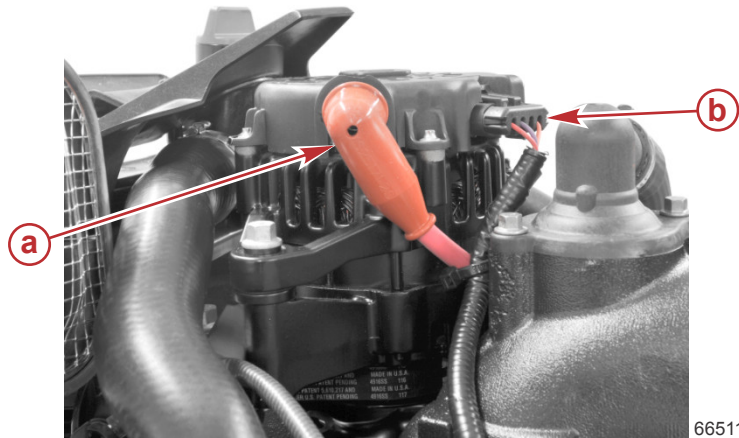

- a** - Rubber boot covering the alternator output lead and nut
- b** - Engine harness connection

66511

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Alternator output connection	92- 25711 3


Description	Nm	lb-in.	lb-ft
Output lead nut	7	62	–

- Apply Loctite 242 Threadlocker to four M8 x 45 hex flange head screws, and install the oil fill bracket. Tighten the screws to the specified torque.




- a** - M8 x 45 hex flange head screws (4)
- b** - Oil fill bracket

66546

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M8 x 45 hex flange head screws	92-809821

Description	Nm	lb-in.	lb-ft
M8 x 45 hex flange head screw	30	–	22.1


- Inspect the O-ring on the oil fill hose. Replace, if necessary.

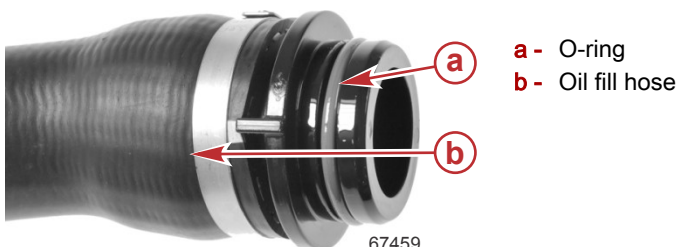

- a** - O-ring
- b** - Oil fill hose


67459

- Apply Loctite 242 Threadlocker to three M6 x 16 hex flange head screws, and install the oil fill hose. Tighten the screws to the specified torque.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 16 hex flange head screws	92-809821

Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange head screw	10	88.5	-


9. Ensure that the oil dipstick tube is still seated in its extension, and rotate the tube until it clicks into position in the clip on the oil fill bracket.

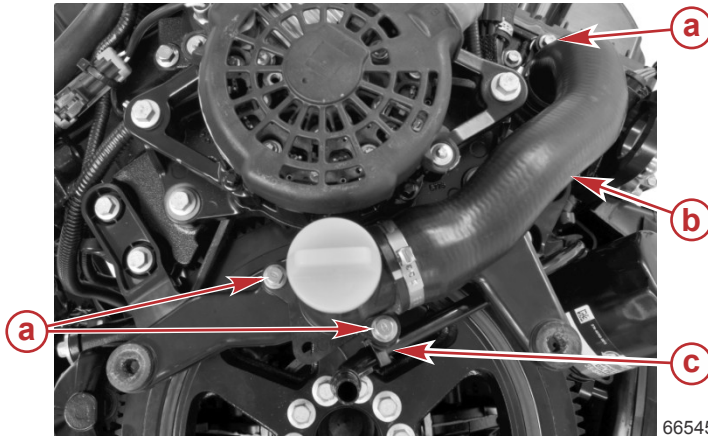

- a - M6 x 16 hex flange head screws (3)
- b - Oil fill hose
- c - Oil dipstick tube in position in the clip on the oil fill bracket

10. Install the alternator belt onto the flywheel:

- a. Place the alternator belt partially around the flywheel, ensuring that it remains seated on the alternator pulley.
- b. Position the alternator belt shoe between the flywheel and the belt.
- c. Using a breaker bar, 1-1/8 in. socket, and the flywheel socket, turn the flywheel clockwise until the belt is fully installed.

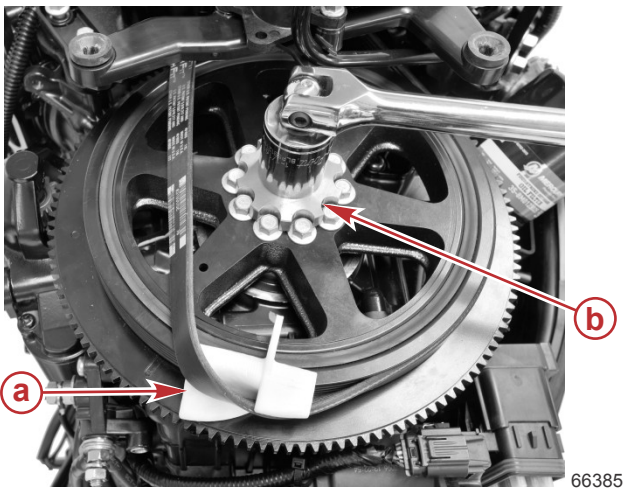

- a - Alternator belt shoe
- b - Flywheel socket

Alternator Belt Shoe	8M0146862
Flywheel Socket	8M0146861

11. Install the cold air intake assembly. Refer to **Section 3A - Induction System**.
 - Ensure that the reference hose is secured to the assembly with a cable tie.
 - Ensure that the hose clamp is securely tightened.
 - Ensure that the oil level dipstick is properly inserted into the dipstick tube.




Starting System

Starting System Visual Checks

The following are quick visual checks of some starting system components. For additional procedures, refer to the **Diagnostic Manual**.

Charging and Starting System

1. Inspect the 20-amp driver power fuse.

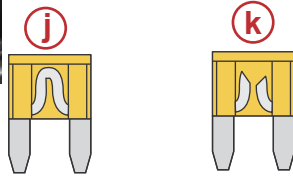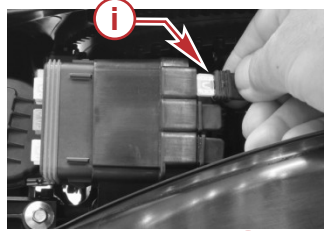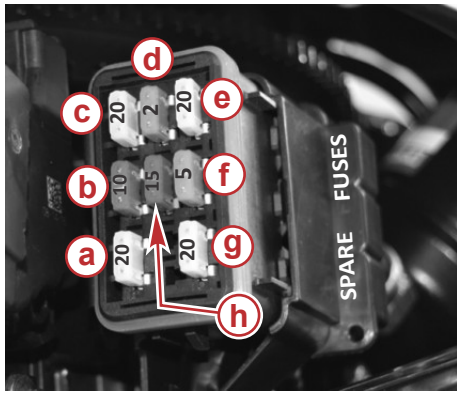

64390

- a - Ignition coils - 20 amp
- b - Oxygen sensor - 10 amp
- c - Fuel pump - 20 amp
- d - Diagnostics - 2 amp
- e - Fuel injectors - 20 amp
- f - Advanced sound control - 5 amp (not used on all models)
- g - Driver power - 20 amp (start relay, fuel pump relay, PCM drivers)
- h - TVM power - 15 amp (not used on all models)
- i - Spare fuses (3)
- j - Good fuse
- k - Open fuse


2. Inspect the 5-amp clean power fuse located near the engine starting battery.
3. Inspect all power and ground connections at the battery, start relay, starter solenoid, starter motor, and the engine wiring harness connector for tightness and corrosion. Clean or repair as necessary.

Starter Removal

⚠ WARNING

Performing service or maintenance without first disconnecting the battery can cause product damage, personal injury, or death due to fire, explosion, electrical shock, or unexpected engine starting. Always disconnect the battery cables from the battery before maintaining, servicing, installing, or removing engine or drive components.

1. Disconnect the battery cables from the battery.
2. Remove the cold air intake assembly.
 - a. Remove the oil level dipstick.
 - b. Loosen the hose clamp at the top of the throttle body assembly.
 - c. Lift the assembly up to disengage the two pins from the grommets on the oil fill bracket.
 - d. Swing the assembly out of the way.
3. Remove the starboard intake manifold runner assembly. Refer to **Section 3A - Intake Runners**.
4. Remove the positive (+) lead from the starter solenoid.
5. Remove the yellow/red lead from the starter solenoid.
6. Remove two screws to remove the starter ground (-) jumper cable and the starter ground (-) lead from the starter.
7. Remove the three screws (two M8 x 80 and one M8 x 45) and washers securing the starter motor assembly to the engine.

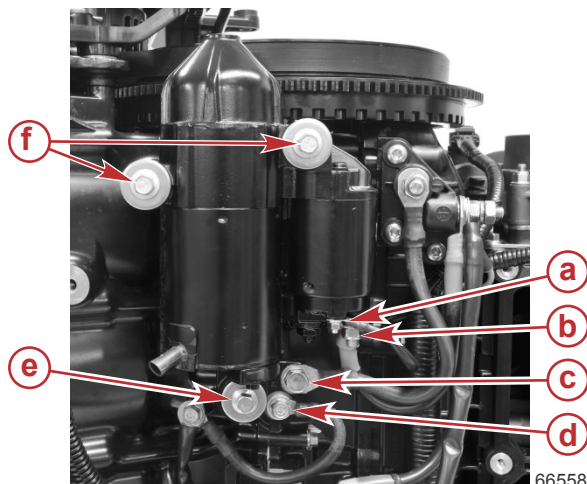



- a - Yellow/red lead
- b - Positive (+) lead
- c - Starter ground (-) lead
- d - Starter ground (-) jumper cable
- e - M8 x 45 hex flange head screw and washer
- f - M8 x 80 hex flange head screws (2) and washers (2)

66558



Starter Installation

- Apply Loctite 242 Threadlocker to two M8 x 80 hex flange head screws and one M8 x 45 hex flange head screw. Install the starter motor assembly onto the engine, using the three screws and three washers. Tighten the screws to the specified torque.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M8 x 80 hex flange head screws	92-809821
 66	Loctite 242 Threadlocker	M8 x 45 hex flange head screw	92-809821

Description	Nm	lb-in.	lb-ft
M8 x 80 hex flange head screws	17	150.5	–
M8 x 45 hex flange head screw	17	150.5	–


- Apply Loctite 242 Threadlocker to one M8 x 1.25 screw and one M6 x 13 hex washer head screw.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M8 x 1.25 screw	92-809821
 66	Loctite 242 Threadlocker	M6 x 13 hex washer head screw	92-809821

- Install the starter ground (–) lead onto the starter motor assembly using the M8 x 1.25 screw. Tighten the screw to the specified torque.
- Install the starter ground (–) jumper cable onto the starter motor assembly, using the M6 x 13 hex washer head screw. Tighten the screw to the specified torque.

Description	Nm	lb-in.	lb-ft
M8 x 1.25 screw	17	150.5	–
M6 x 13 hex washer head screw	11.3	100	–


- Install the yellow/red lead onto the starter solenoid, and secure it with a nut. Tighten the nut to the specified torque.
- Install the positive (+) lead onto the starter solenoid, and secure it with a nut. Tighten the nut to the specified torque.

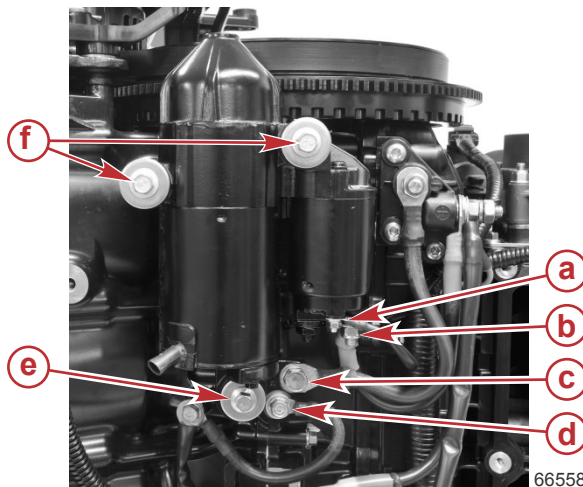

- a - Yellow/red lead connection
- b - Positive (+) lead connection
- c - Starter ground (–) lead connection
- d - Starter ground (–) jumper cable connection
- e - M8 x 45 hex flange head screw and washer
- f - M8 x 80 hex flange head screws (2) and washers (2)

Description	Nm	lb-in.	lb-ft
Yellow/red lead nut	4.5	39.8	–
Positive (+) lead nut	17	150.5	–

- Coat all starter electrical connections with Liquid Neoprene.

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Starter electrical connections	92- 25711 3



- Install the starboard intake manifold runner assembly. Refer to **Section 3A - Intake Runners**.
- Install the cold air intake assembly. Refer to **Section 3A - Induction System**.

Charging and Starting System

- Ensure that the reference hose is secured to the assembly with a cable tie.
- Ensure that the hose clamp is securely tightened.
- Ensure that the oil level dipstick is properly inserted into the dipstick tube.

Start Relay

The start relay is located in the bottom of the electrical panel, at the rear of the engine.

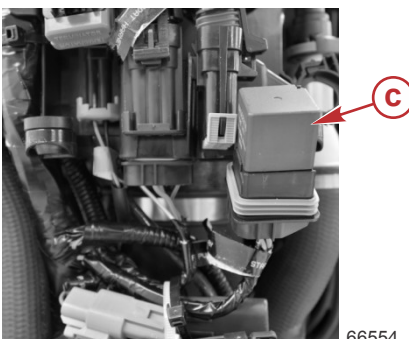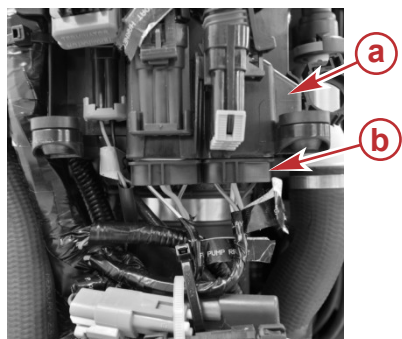

- a** - Electrical panel
- b** - Start relay socket on the engine harness
- c** - Start relay

66554

Electrical


Section 2C - Accessories

Table of Contents

**2
C**

Advanced Sound Control Module.....	2C-2	Operational Check.....	2C-6
Module Installation.....	2C-2	Oil Level Sensor.....	2C-7
Notes on Operation.....	2C-2	Oil Level Sensor Removal.....	2C-7
Analog Block Water Pressure Adapter Installation.....	2C-3	Oil Level Sensor Installation.....	2C-7
Analog Gauges (DTS Models).....	2C-4	Pitot Pressure Sensor Removal and Installation.....	2C-8
Moving Propeller (MP) Alert.....	2C-5	Removal.....	2C-8
Note on Removal.....	2C-5	Installation.....	2C-8
Installation.....	2C-5	Repower Extension Harnesses.....	2C-9
Bezel.....	2C-6	Rigging Grommet (Open Option) Installation.....	2C-10


Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
	Marine sealant	Three holes drilled in the rear cowl	Obtain Locally

Advanced Sound Control Module

Module Installation

1. Remove the shrink tubing from the loose ends of the advanced sound control module harness.
2. Connect an appropriate momentary, center rocker switch with indicator light (for example, Carling Technologies™ Contura XI V8D2AX01-6LZ00-000 or equivalent) to the wires:
 - Purple/yellow wire to the designated OFF switch terminal
 - Purple/black wire to the designated ON switch terminal
 - Purple wire (12 VDC) to the switch common terminal, with a jumper to the indicator light power terminal
 - White/black wire to the indicator light sense terminal
3. Connect the advanced sound control module to an available port on a SmartCraft junction box.
4. Use the supplied cable ties to secure the module and attached harness to a suitable item, such as another harness.

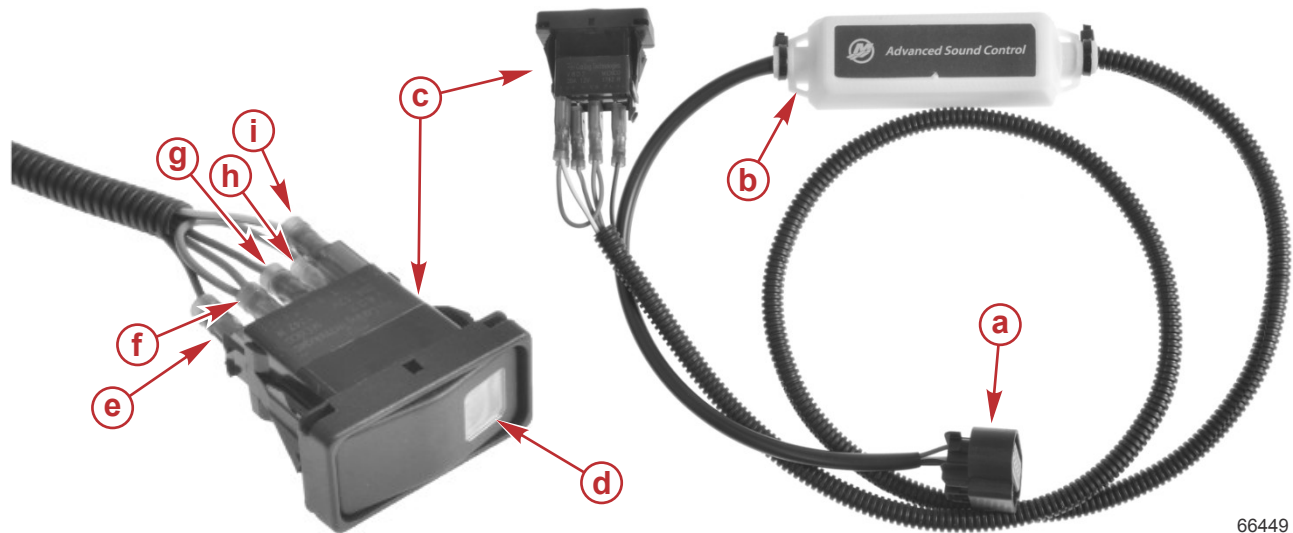

66449

- a** - Connect to SmartCraft junction box
- b** - Slots (4) in advanced sound control module for cable ties
- c** - Momentary center rocker switch (typical, not supplied with kit)
- d** - Indicator light
- e** - Purple/black wire: ON
- f** - Purple wire: 12 VDC
- g** - Purple/yellow wire: OFF
- h** - Purple jumper wire (not supplied): indicator light power
- i** - White/black: indicator light sense

A properly wired indicator light has three states:

- Off: The advanced sound control feature is in stealth mode (quiet operation), or the module is not powered
- Two blinks: The advanced sound control module is powered, but the engine is not on
- On: The advanced sound control feature is in sport mode (enhanced sound operation)

Notes on Operation


Advanced sound control (ASC) can be operated either by the module included in this kit or by a Mercury-approved multifunctional display (MFD), such as VesselView. Feature operation is similar, regardless of the controlling device or number of engines. Operation via the module and rocker switch will always place ASC in the same state on all engines. Refer to your MFD documentation for details on operation via MFD.

Analog Block Water Pressure Adapter Installation


1. Thread the water pressure adapter fitting into the cylinder head. Tighten the fitting to the specified torque.

Description	Nm	lb-in.	lb-ft
Fitting assembly	15	132.8	–

2. Insert the water pressure hose into the adapter fitting.

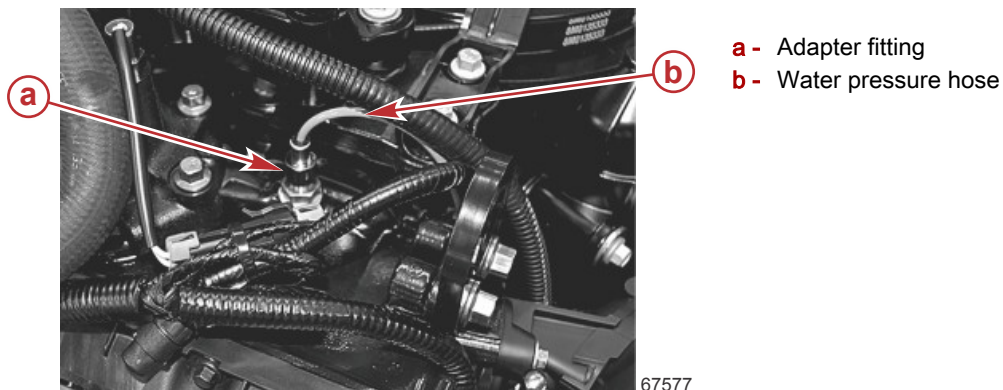


3. Ensure that the water pressure hose is routed behind the intake manifold runner and down toward the back side of the rigging grommet, as shown.

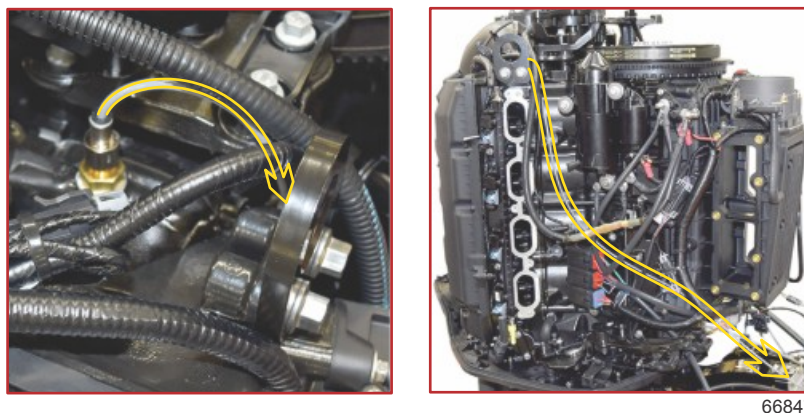

Water pressure hose routing—intake manifold runner removed for clarity


4. If the water pressure hose was removed:
 - a. Route the water pressure hose through the ACCY area of the rigging grommet.
 - b. Connect the water pressure hose to the dash-mounted water pressure gauge legris hose that is routed through the boat and rigging tube (if equipped).

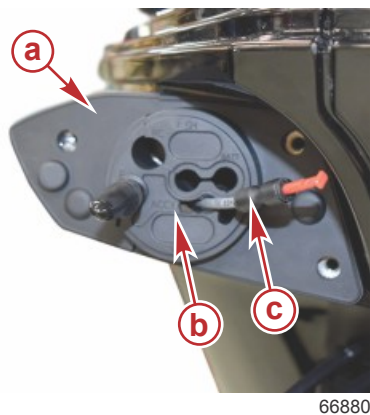

CMS DTS model shown—rigging harnesses and cables removed for clarity

- a** - Rigging grommet
b - ACCY area
c - Water pressure hose


c. Slide the rigging adapter and rigging tube (if used) into place over the grommet.

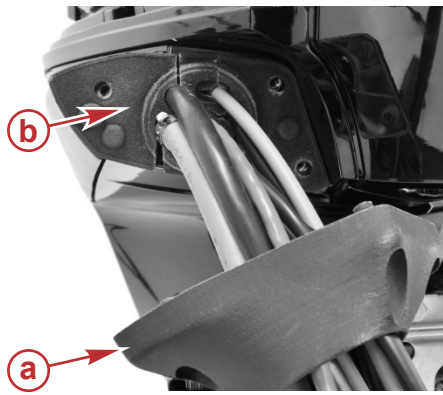

- a - Rigging adapter
- b - Rigging grommet

66883

d. Fasten the rigging grommet and rigging adapter with three screws. Tighten the screws to the specified torque.

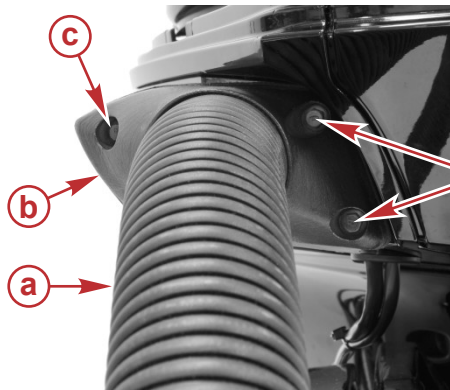

- a - Rigging tube (optional)
- b - Rigging adapter
- c - Screws (3)

63575


Description	Nm	lb-in.	lb-ft
Screws for attaching the rigging adapter	6	53.1	-

Analog Gauges (DTS Models)

On DTS models, the propulsion control module has outputs to drive four analog gauges at the helm:

- Engine coolant temperature
- Oil pressure
- Tachometer
- Trim position

A 4-pin Deutsch connector is located at the top of the electrical panel. An analog gauge harness (purchased as an option) completes the connections to the corresponding analog gauges at the helm.

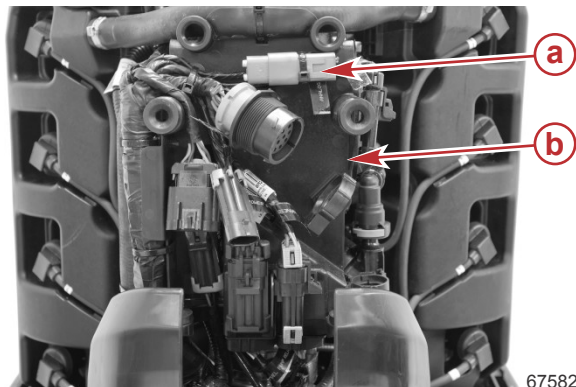

- a - Analog gauges connector
- b - Electrical panel

67582

Moving Propeller (MP) Alert


Note on Removal

IMPORTANT: The MP alert harness connector will not fit through the hole in the rear cowl. To completely remove the MP alert from the cowl, the harness must be depinned.

Installation

IMPORTANT: To complete the wiring connections, the lower cowls must be removed on V6 models.


1. Remove the electrical panel cover at the rear of the outboard.
2. Route the light assembly harness through the center hole in the rear cowl.
3. Apply Marine sealant (obtain locally) to seal the three holes in the rear cowl.

Tube Ref No.	Description	Where Used	Part No.
	Marine sealant	Three holes drilled in the rear cowl	Obtain Locally


NOTICE

Do not overtighten the screws. Overtightening the screws may crack the lens, allowing water to enter the light assembly.


4. Fasten the system light assembly with two screws and nylon wing nuts.

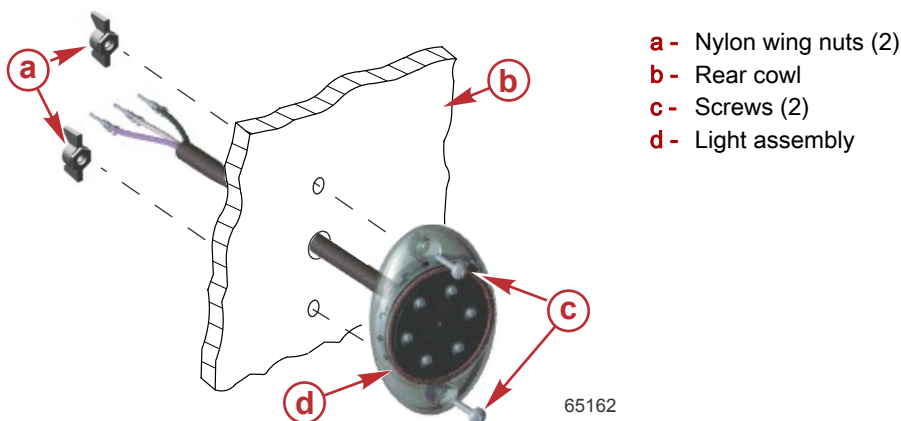

5. Install the 3-pin connector onto the MP alert harness as follows:
 - a. Insert the wire terminals through the seal and into the connector. Push the wire terminals in until they snap into place.

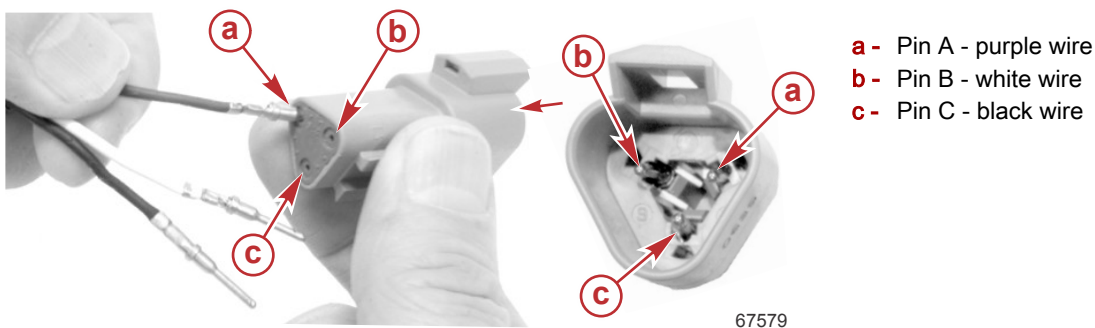


- b. Insert the secondary lock into the connector.

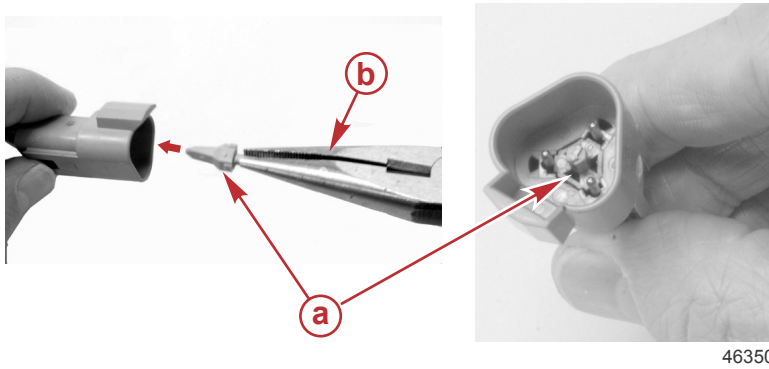

- a - Secondary lock
- b - Needle-nose pliers

46350

- 6. Connect the MP alert harness connector to the MP alert connector on the engine harness.

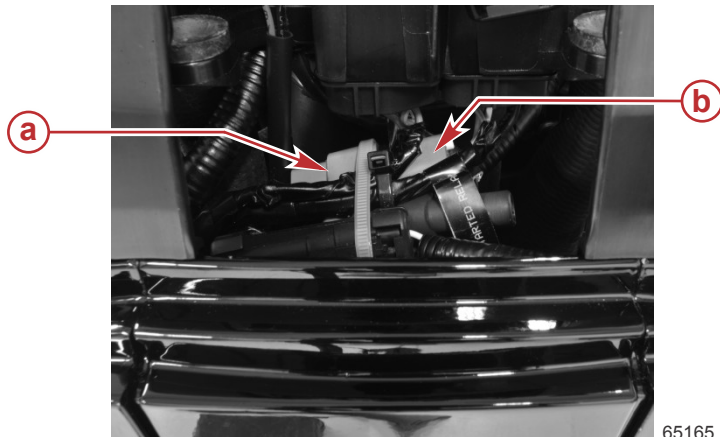


- Some wiring not shown for clarity
- a - MP alert connector on the engine harness
 - b - MP alert harness connector

65165

- 7. **V6 models**—install the lower cowls.
- 8. Install the electrical panel cover at the rear of the outboard.

Bezel

To install the bezel, snap it onto the light assembly.

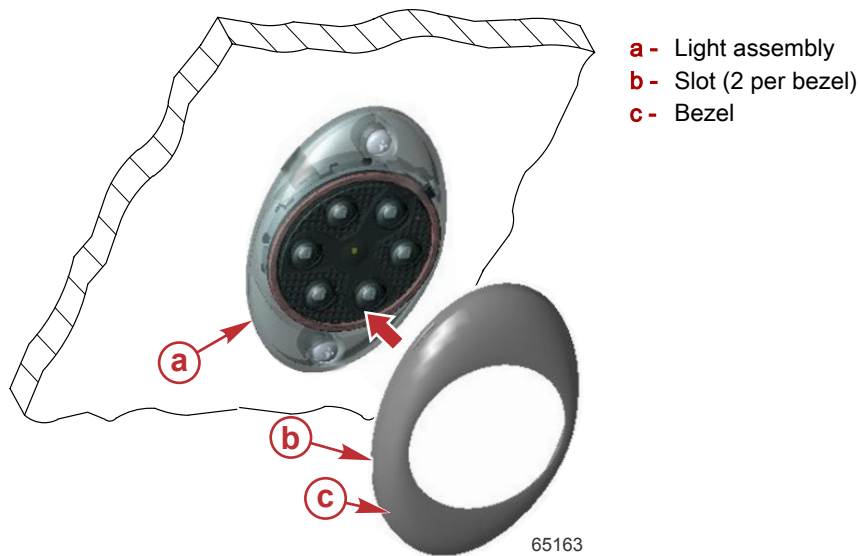

- a - Light assembly
- b - Slot (2 per bezel)
- c - Bezel

65163

To remove the bezel, insert a small flat-blade screwdriver into the slots in the bezel, and twist.


Operational Check

- When the engine is being started, the lights should flash for approximately five seconds.
- The lights should remain lit whenever the engine is running in neutral.

- When the engine is shifted into forward or reverse gear, the lights should rotate clockwise to indicate propeller rotation.
IMPORTANT: The lights rotate clockwise regardless of the direction of propeller rotation.
- Shutting off the engine will shut off the lights.

Oil Level Sensor


The oil level sensor, if equipped, is located on the starboard side of the powerhead, at the base of the cylinder block. The starboard air intake runner must be removed to access the oil level sensor.

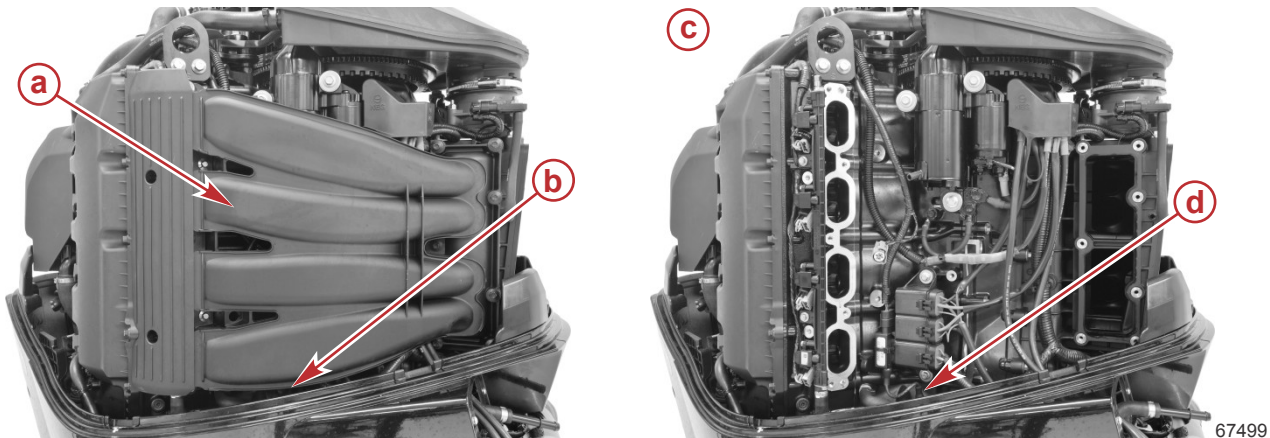

- a - Starboard air intake runner
- b - Location of the oil level sensor
- c - Starboard view of engine with intake runner removed
- d - Top of the oil level sensor

Oil Level Sensor Removal

1. Remove the starboard air intake runner. Refer to **Section 3A - Intake Runners**.
2. Cut the cable tie that secures the oil level sensor module to the relay bracket.
3. Remove two screws and remove the relay bracket from the engine.
4. Disconnect the oil level sensor harness from the engine harness.
5. Remove the oil level sensor from the engine.

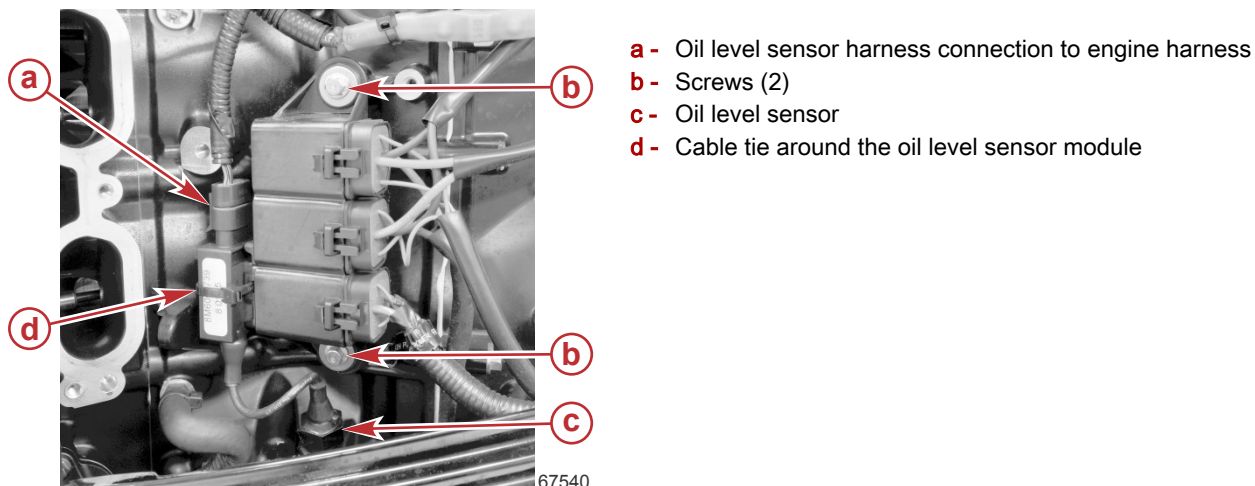

- a - Oil level sensor harness connection to engine harness
- b - Screws (2)
- c - Oil level sensor
- d - Cable tie around the oil level sensor module

Oil Level Sensor Installation

1. Insert the oil level sensor into the engine, and tighten it to the specified torque.

Description	Nm	lb-in.	lb-ft
Oil level sensor	20	177	–

2. Use two screws to attach the relay bracket to the engine. Tighten the screws to the specified torque.

Description	Nm	lb-in.	lb-ft
Screws	10	88.5	-


3. Use a cable tie to secure the oil level sensor module to the relay bracket.
4. Connect the oil level sensor harness to the engine harness.
5. Install the starboard air intake runner. Refer to **Section 3A - Intake Runners**.

Pitot Pressure Sensor Removal and Installation

The pitot pressure sensor is located on the port side of the engine, near the flush hose and behind the intake runner.

Removal

1. Remove the port intake runner. Refer to **Section 3A - Intake Runners**.
2. Disconnect the pitot tube from the sensor adapter.
3. Disconnect the engine harness from the sensor connector.
4. Cut the cable tie to remove the sensor and adapter from the engine.
5. Remove the sensor adapter from the pitot pressure sensor.

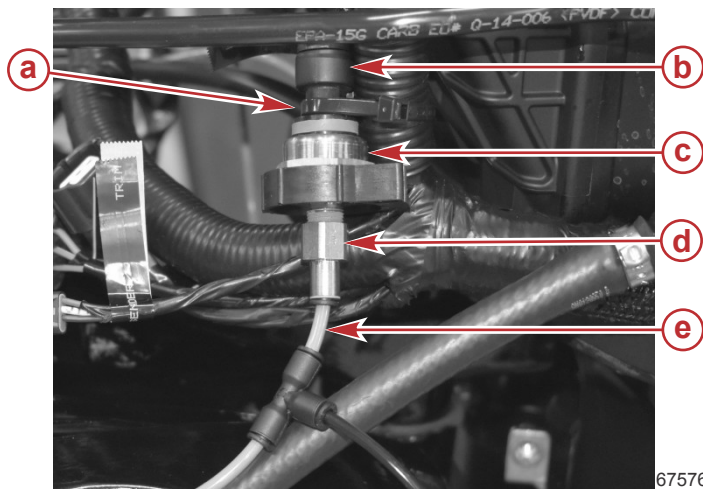


Items removed for clarity

- a - Cable tie
- b - Sensor connector
- c - Pitot pressure sensor
- d - Sensor adapter
- e - Pitot tube

67576

Installation

1. Install the sensor adapter onto the pitot pressure sensor.
2. Tighten the sensor adapter to ensure the adapter will not leak.

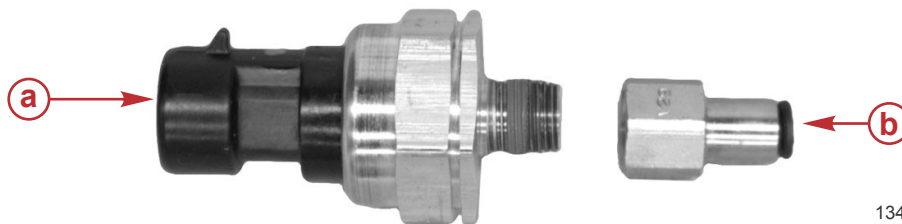


- a - Pitot pressure sensor
- b - Sensor adapter

13401

3. Connect the engine harness to the sensor connector.
4. Install the pitot tube into the sensor adapter.
5. Use a cable tie to secure the sensor and adapter to the engine harness.
6. Install the port intake runner. Refer to **Section 3A - Intake Runners**.

Repower Extension Harnesses

When an engine is installed as a repower, some existing harnesses may not reach the correct location on the engine. The repower harness kit includes extension harnesses to rectify that situation. The following extension harnesses may be used:

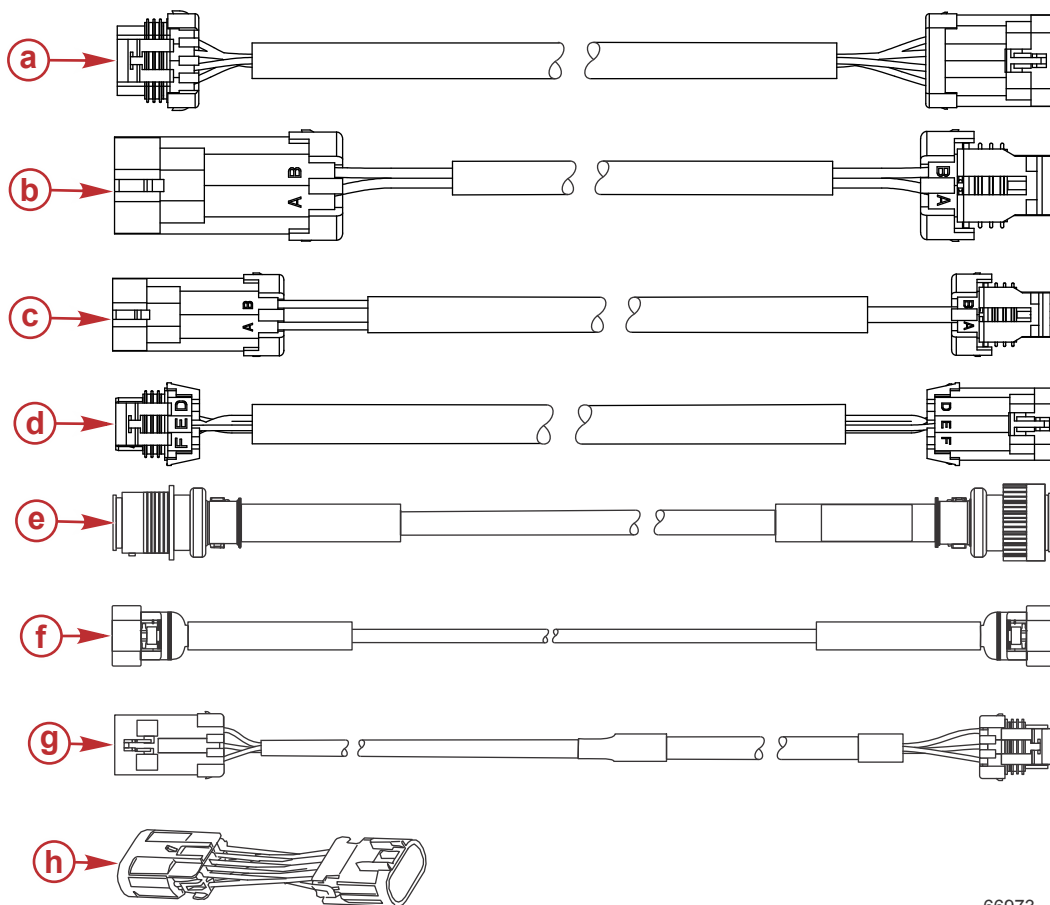

66973

- a - 4-pin depth extension harness
- b - 2-pin clean power extension harness
- c - 2-pin water-in-fuel extension harness
- d - 6-pin fuel/paddle wheel extension harness
- e - 14-pin data cable extension harness
- f - 10-pin SmartCraft extension harness
- g - 3-pin power steering extension harness
- h - 10-pin male-to-male gender adapter


When extension harnesses are used, adhere to the following:

- Existing harnesses requiring the use of the extension harness must be pulled inside the vessel transom and secured with cable ties or D-rings in a dry location within 8 inches of the connector.
IMPORTANT: Extension connections are not allowed in the rigging tube or inside the cowl.
- Connections between the extension harnesses and the existing harnesses must be made inside of the vessel.
- The extension harnesses must be secured to the vessel or other harnesses with cable ties or D-rings within 8 inches of the connector.

Rigging Grommet (Open Option) Installation

IMPORTANT: Refer to Section 1D - Outboard Installation for complete disassembly and assembly procedures.

A rigging tube is required when using the open rigging grommet.

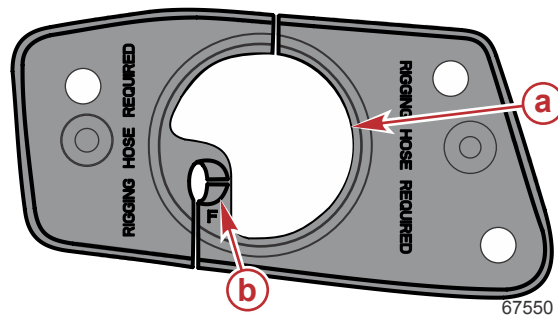


Ref	Marking	Opening used for
a.	None	Remaining rigging
b.	F	Fuel line <i>NOTE: Fuel hose must be secured through the designated opening. Insert the fuel line fitting into the grommet with the hose and hose clamp on the outside of the grommet.</i>

1. Arrange the harnesses and fuel hose in the approximate positions they will occupy in the rigging grommet.
2. Work the grommet around the harnesses and fuel hose. Start with the inboard and innermost items, and work outward.
3. Press the rigging grommet into the opening.

NOTICE


Inspect the position of the hose clamp located on the fuel hose to ensure that it will not chafe or cut into the adjacent wiring harnesses.

4. Slide the rigging adapter and rigging tube into place over the grommet.

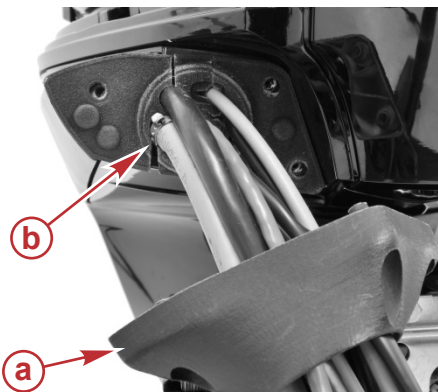

- a - Rigging adapter
- b - Clamp on fuel line, outside of rigging grommet

5. Fasten the rigging grommet and rigging adapter with three screws. Tighten the screws to the specified torque.

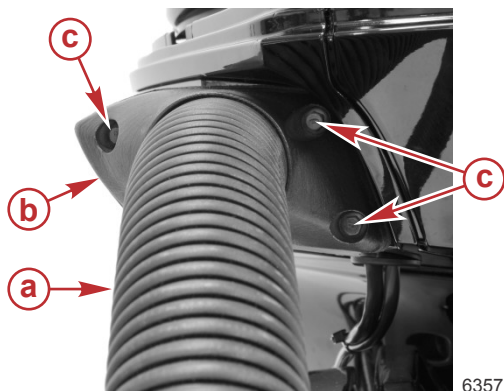

- a - Rigging tube
- b - Rigging adapter
- c - Screws (3)

Description	Nm	lb-in.	lb-ft
Screws for attaching the rigging adapter	6	53.1	-

Notes:

Electrical


Section 2D - Electronic Shift

Table of Contents

**2
D**


Shift Actuator Components.....	2D-4	Shift Actuator Removal.....	2D-6
Shift Actuator.....	2D-6	Shift Actuator Installation.....	2D-6

Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 20 Torx® socket head screws	92-809821

Notes:

Shift Actuator Components

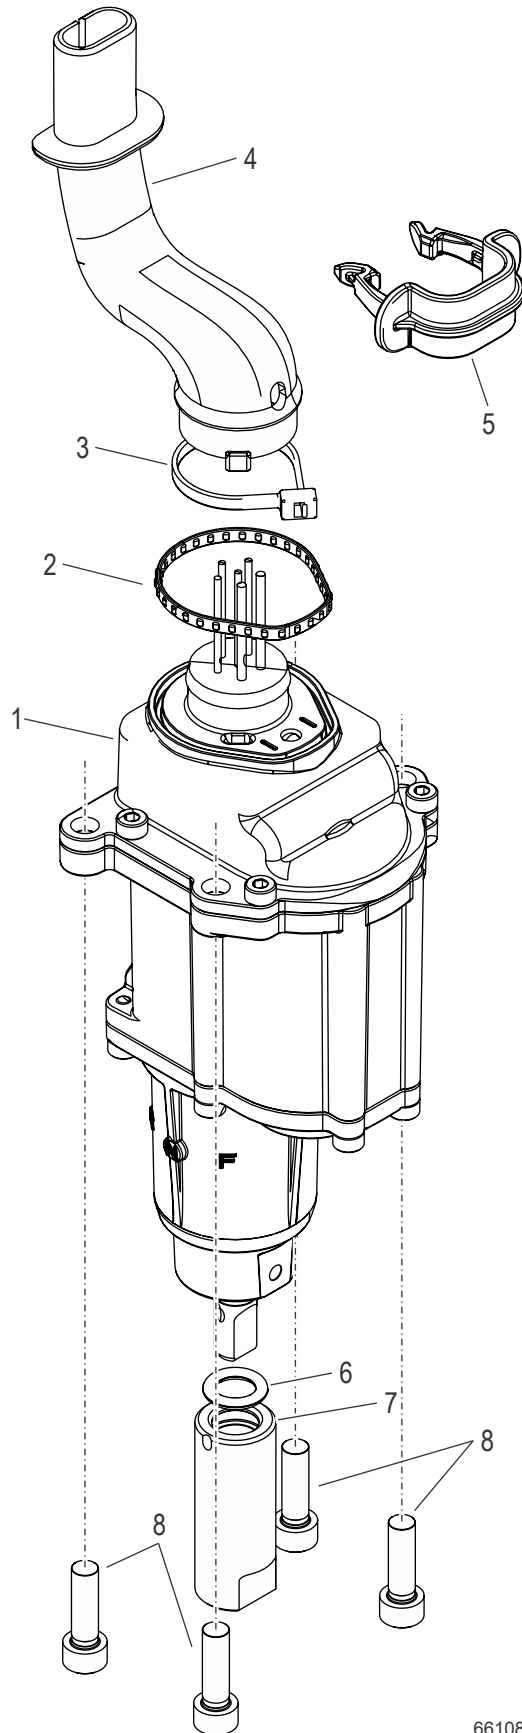

66108


Shift Actuator Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Shift actuator			
2	1	Seal			
3	1	Cable tie			
4	1	Boot			
5	1	C-clip			
6	1	O-ring			
7	1	Shift shaft coupling			
8	4	M6 x 20 Torx® socket head screw	11	97.4	–

Shift Actuator


Shift Actuator Removal

1. Remove all cowling. Refer to **Section 5C - Upper and Lower Cowls**.
2. Remove the gearcase. Refer to **Section 6 - Gear Housing**.
3. Disconnect the shift actuator harness from the engine harness.
4. Remove the shift actuator harness grommet from the chap plate, releasing the speedometer water pickup tube and the shift actuator harness.

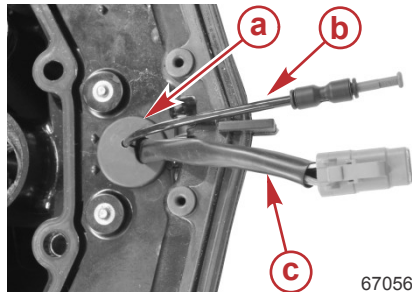

- a** - Shift actuator harness grommet in chap plate
- b** - Speedometer water pickup tube
- c** - Shift actuator harness


5. Feed the shift actuator harness down through the opening in the chap plate, and disengage it from the shift actuator harness bracket.
6. Remove the shift actuator harness retention clip. Use a flat blade screwdriver to pry the clip from the driveshaft housing.

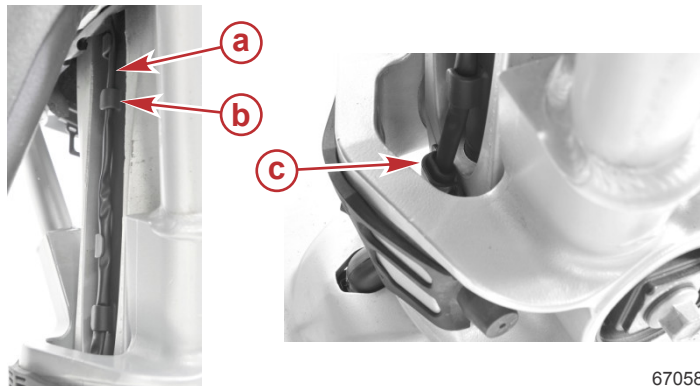

- a** - Shift actuator harness
- b** - Shift actuator harness bracket
- c** - Retention clip

7. Remove the four M6 x 20 T30 Torx® socket head screws from the underside of the driveshaft housing to free the shift actuator. Do not remove the shift shaft coupler.

NOTE: It may be helpful to tilt the midsection. Be certain to engage the tilt lock.

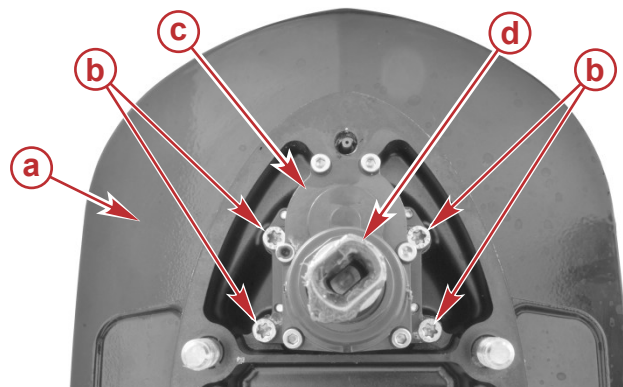


- a** - Underside of driveshaft housing
- b** - M6 x 20 T30 Torx® socket head screws (4)
- c** - Shift actuator
- d** - Shift shaft coupler

8. Remove the harness and actuator assembly from the driveshaft housing.


Shift Actuator Installation

NOTE: It may be helpful to tilt the midsection. Be certain to engage the tilt lock.

1. Inspect the seal on the top of the shift actuator. Replace, if necessary.
2. Ensure that the boot is in place on the shift actuator, around the harness.
3. Apply Loctite® 242 Threadlocker to four M6 x 20 Torx® socket head screws.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 20 Torx® socket head screws	92-809821


4. Feed the shift actuator harness and boot through the opening in the top of the antivibration plate, and position the shift actuator on the underside of the driveshaft housing.
5. Install the shift actuator with the four M6 x 20 T30 Torx® socket head screws. Tighten the four screws to the specified torque.

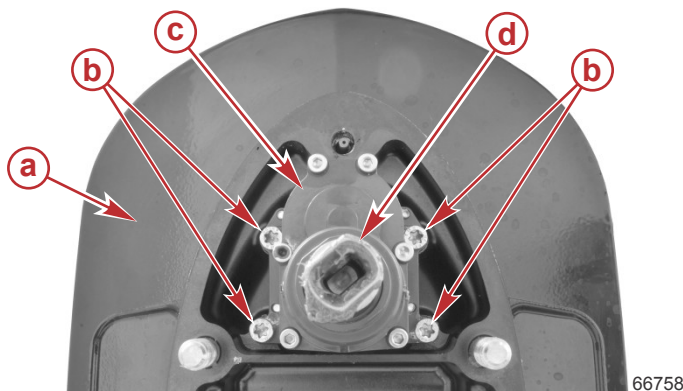

- a - Underside of driveshaft housing
- b - M6 x 20 T30 Torx® socket head screws (4)
- c - Shift actuator
- d - Shift shaft coupler


Description	Nm	lb-in.	lb-ft
M6 x 20 Torx socket head screw	11	97.4	–

6. Route the shift actuator harness and speedometer water pickup tube (if removed) through the driveshaft housing.
 - a. Feed the shift actuator harness and speedometer water pickup tube upward, between the driveshaft housing (by the shift actuator harness bracket) and the sound block, and up through the hole in the chap plate.

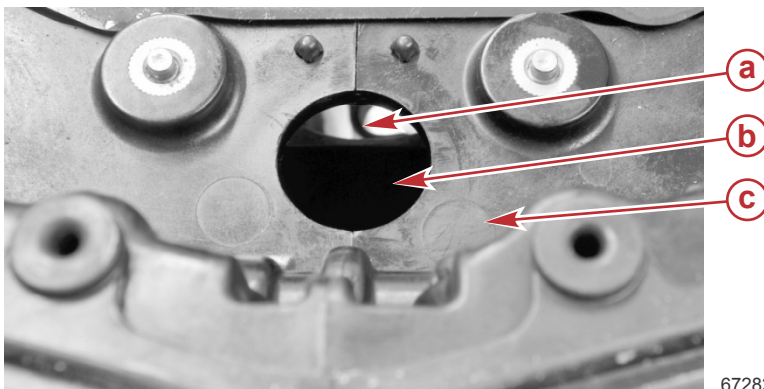

- Hole in the chap plate**
- a - Tab on shift actuator harness bracket, installed in the driveshaft housing
 - b - Sound block
 - c - Front end of chap plate


- b. Secure the shift actuator harness and speedometer water pickup tube with the tabs on the shift actuator harness bracket.
 - c. Slide the retention clip around the boot on the harness, and press it into place in the driveshaft housing.

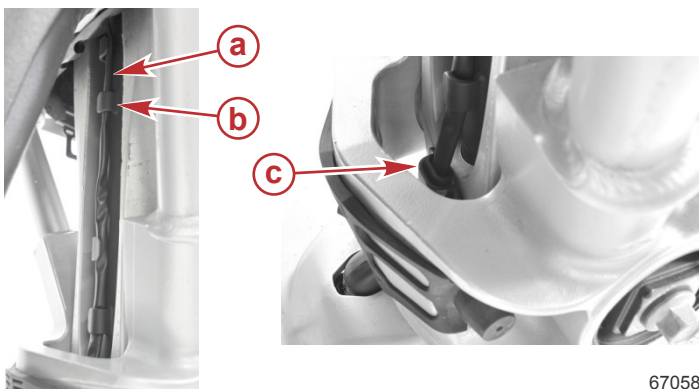

- a - Shift actuator harness and speedometer water pickup tube
- b - Shift actuator harness bracket
- c - Retention clip

Electronic Shift


7. Ensure that the speedometer water pickup tube is connected to the Legris fitting in the antiventilation plate.

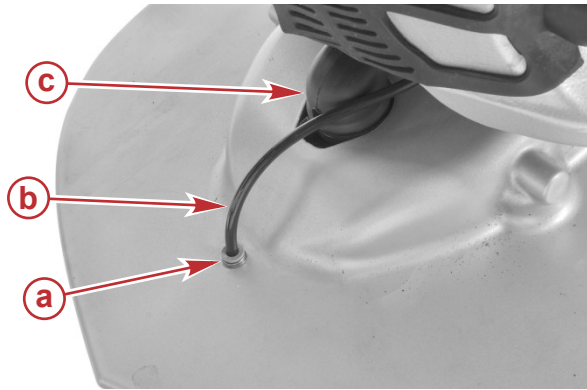

- a - Legris fitting in antiventilation plate
- b - Speedometer water pickup tube
- c - Shift actuator harness boot

67377

8. Using soapy water as a lubricant, install the grommet into the top of the chap plate, around the shift actuator harness and speedometer water pickup tube.

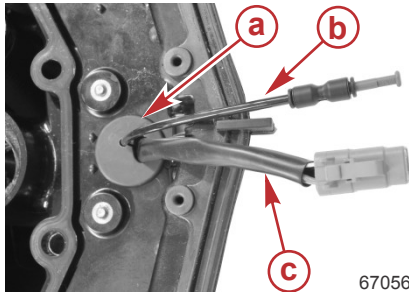

- a - Grommet in chap plate
- b - Speedometer water pickup tube
- c - Shift actuator harness

67056

9. Connect the shift actuator harness to the engine harness.
10. Connect the speedometer water pickup tube, if required.
11. Install the gearcase. Refer to **Section 6 - Gear Housing**.
12. Install all engine cowling. Refer to **Section 5C - Upper and Lower Cowl**.

Fuel System



Section 3A - Induction System

Table of Contents

V8 Intake System.....	3A-4	Throttle Body.....	3A-18
Induction Components.....	3A-6	Throttle Body Components.....	3A-18
Cold Air Intake.....	3A-6	Throttle Body Assembly Removal.....	3A-20
Intake Runners.....	3A-7	Throttle Body Assembly Installation.....	3A-20
Intake Plenum.....	3A-11		


3
A

Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Battery cable connections	92- 25711 3
 66	Loctite 242 Threadlocker	Intake plenum screws	92-809821
		M6 x 16 hex flange screws	

Notes:

V8 Intake System

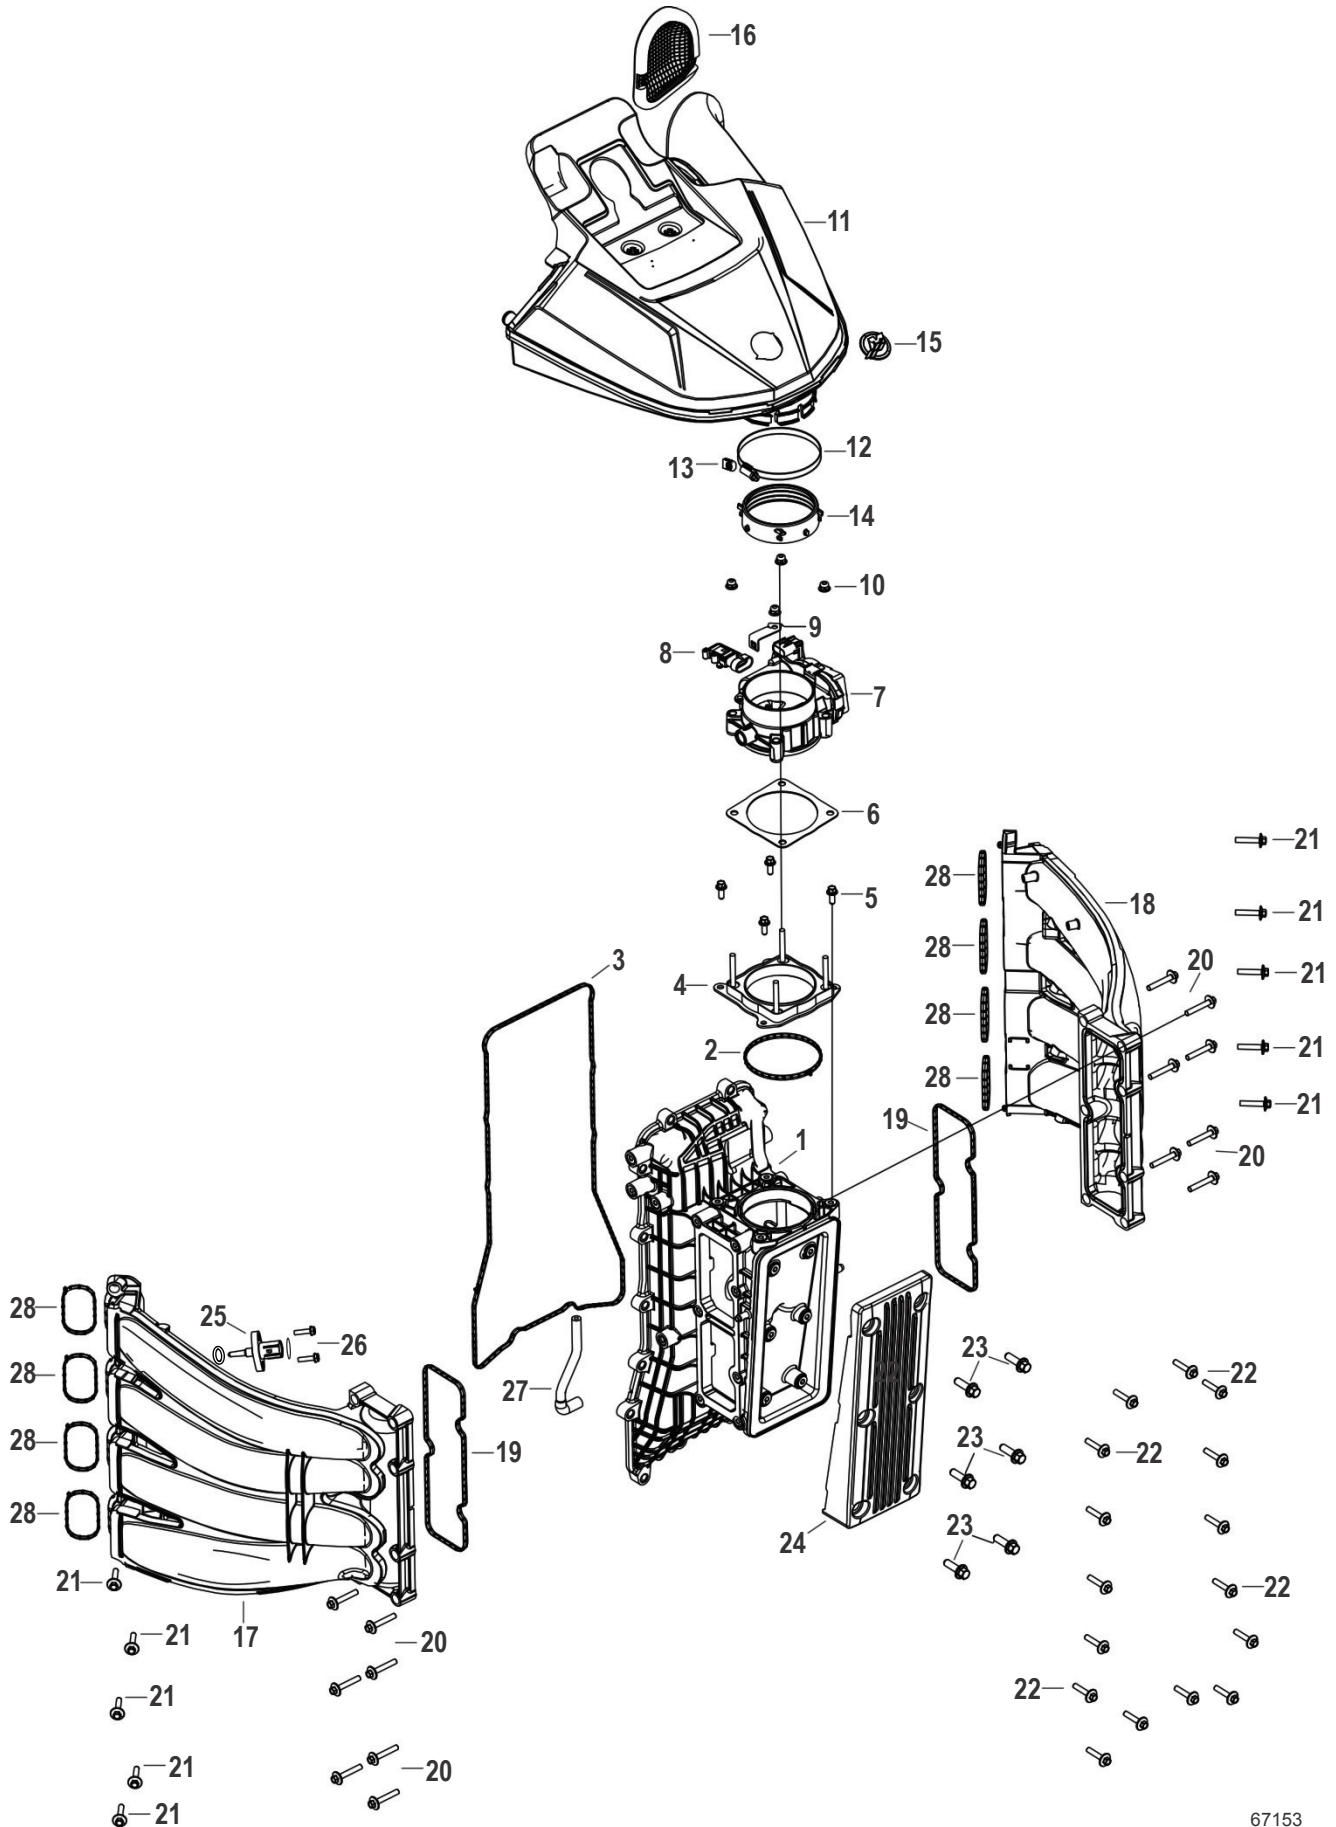

V8 Intake System



Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Plenum			
2	1	Throttle body gasket			
3	1	Crankcase cover gasket			
4	1	Isolator assembly			
5	4	Screw (M6 x 16 hex flange)	10	88.5	–
6	1	Throttle body gasket (top)			
7	1	Throttle body assembly			
8	1	MAP sensor			
9	1	MAP sensor bracket			
10	4	M6 nylock nut	7	62	–
11	1	Cold air intake			
12	1	Hose clamp	3	26.6	–
13	1	Hose clamp cover			
14	1	Throttle body seal			
15	1	Decal			
16	1	Intake screen			
17	1	Starboard intake runner			
18	1	Port intake runner			
19	2	Gasket			
20	14	Screw (M6 x 1 x 37 hex flange)	10	88.5	–
21	10	Screw (M6 x 1 x 30 hex flange)	10	88.5	–
22	16	Screw (M6 x 1 x 30 hex flange)	10	88.5	–
23	6	Screw (M6 x 1 x 20 hex flange)	7	62	–
24	1	Plenum cover			
25	1	Air temperature sensor			
26	2	Screw (M4 1.75 x 16 hex washer)	2	17.7	–
27	1	MAP sensor hose			
28	8	Intake port gasket			

Induction Components

Cold Air Intake

Removal

1. Remove the cable tie from the breather hose and remove the breather hose from the cold air intake.
2. Remove the dipstick from the dipstick tube.
3. Loosen the throttle body hose clamp.
4. Lift the cold air intake alignment fasteners out of the two grommets and off of the engine.

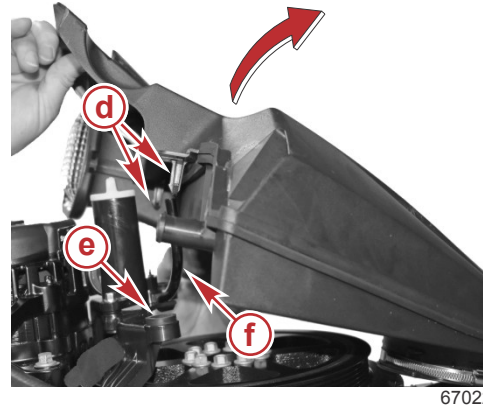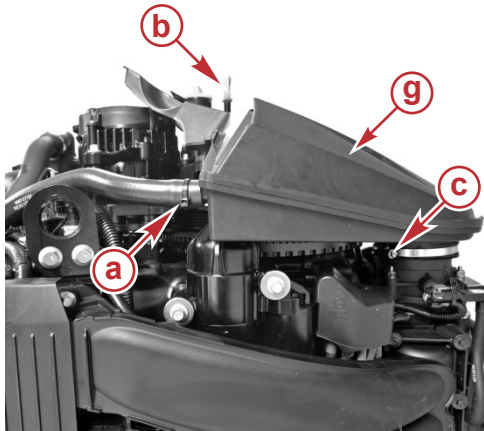


67022

- a - Cable tie
- b - Dipstick
- c - Throttle body hose clamp
- d - Alignment fasteners (2)
- e - Grommet (2)
- f - Dipstick tube
- g - Cold air intake

Installation

1. Align the large throttle body hose at the front of the cold air intake with the throttle body and lower the cold air intake into position. Ensure that the dipstick tube is aligned with the oil fill grommet on top of the cold air intake and that the two alignment fasteners are aligned with the two grommets on either side of the powerhead.

- Firmly press the cold air intake into position.

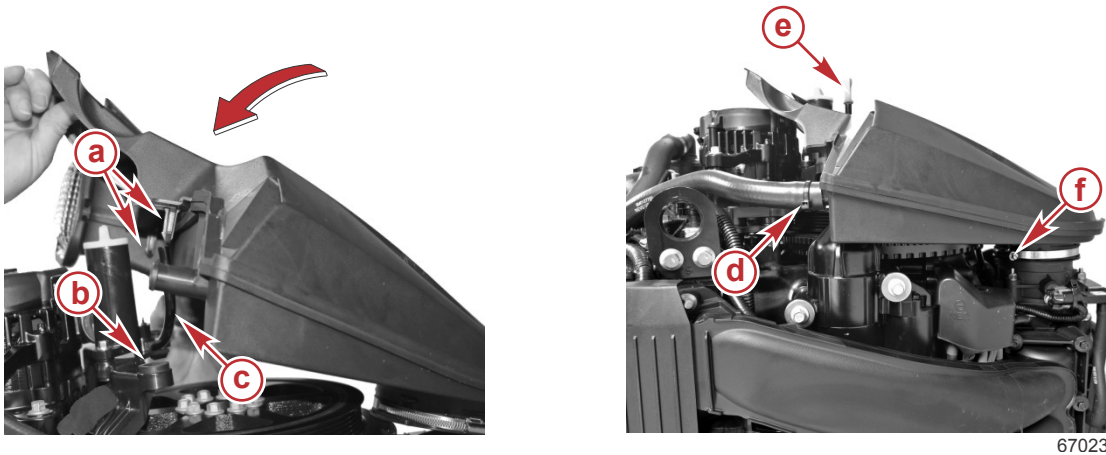

67023

- a** - Alignment fasteners (2)
- b** - Grommet (2)
- c** - Dipstick tube
- d** - Cable tie
- e** - Dipstick
- f** - Throttle body hose clamp

- Slide the breather hose onto the cold air intake hose bib and secure it with a cable tie.
- Ensure that the large throttle body hose is completely seated over the throttle body and tighten the hose clamp to the specified torque.

Description	Nm	lb-in.	lb-ft
Hose clamp	3.0	26.6	–



- Install the dipstick.

Intake Runners

Removal

IMPORTANT: Intake runner screws are different lengths. Do not intermix the hardware.

- Remove the manifold reference hose from the port side of the plenum, and remove the MAP sensor reference hose from the starboard side of the plenum.

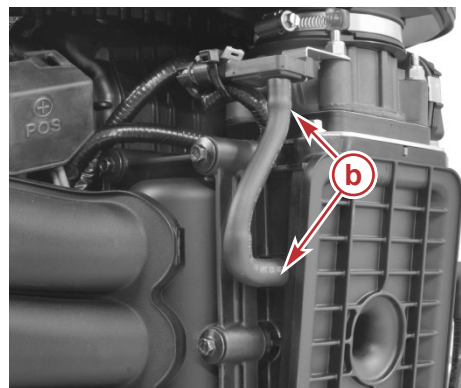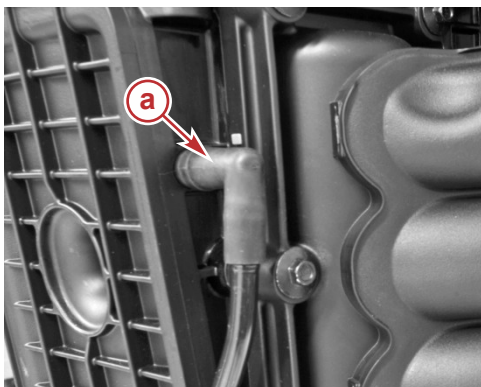


67236

Port side

- a** - Manifold reference hose
- b** - MAP sensor reference hose

Starboard side


2. Remove the flush hose from the hose clip on the bottom of the port intake runner.

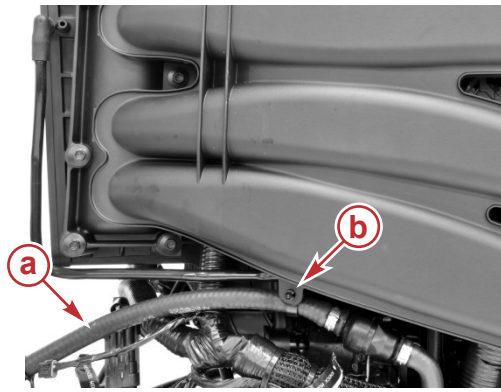

- a** - Flush hose
- b** - Hose clip

67297


3. Remove the screws securing the intake runners to each side of the powerhead. Remove the intake runner.

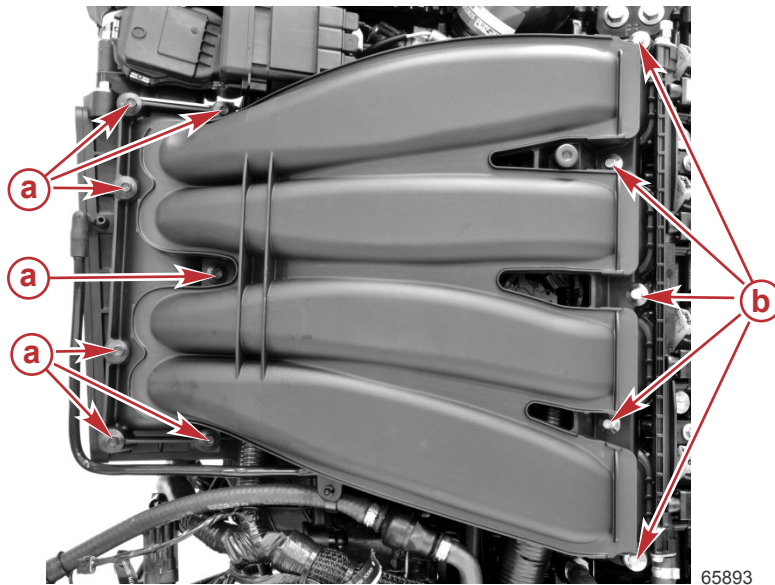

- a** - M6 x 37 screws (7)
- b** - M6 x 30 screws (5)

65893

4. Disconnect the manifold air temperature sensor connector from behind the starboard intake runner.

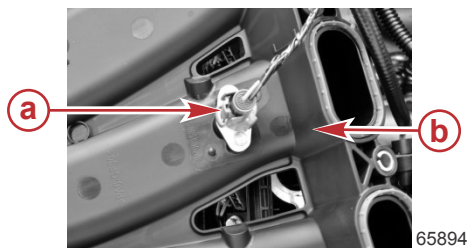


- a** - Manifold air temperature sensor connector
- b** - Starboard intake runners

65894

V8 Intake Runner Gaskets


IMPORTANT: Inspect the intake runner and plenum gaskets before installing the intake runner. Ensure that each gasket is in place and that the gaskets are not damaged.

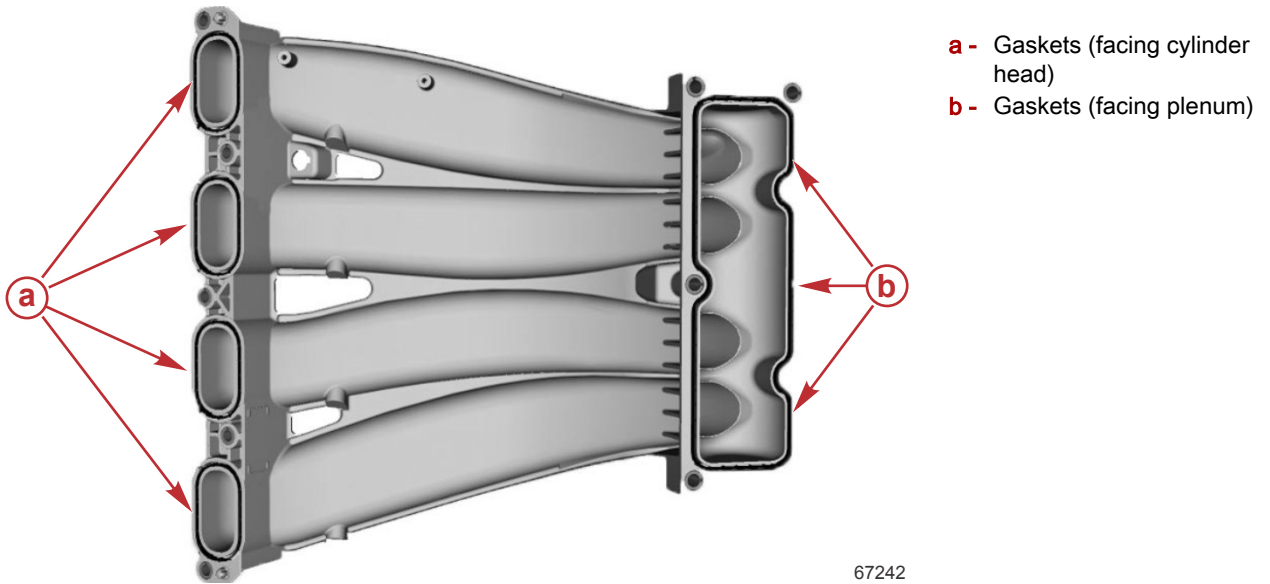

67242


Installation

1. Plug in the manifold air temperature (MAT) sensor connector. The MAT sensor is located behind the starboard intake runner.

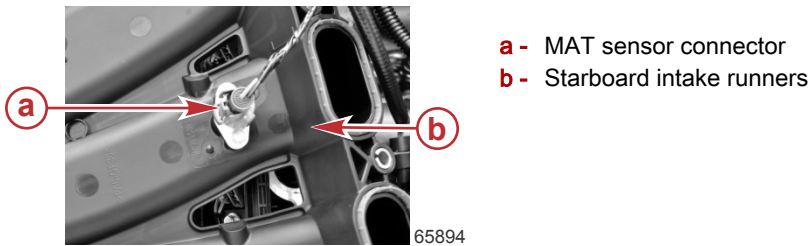

65894

2. Install the starboard intake runner. Tighten the screws to the specified torque in the sequence shown. **IMPORTANT: Intake runner screws are different lengths. Do not intermix the hardware.**

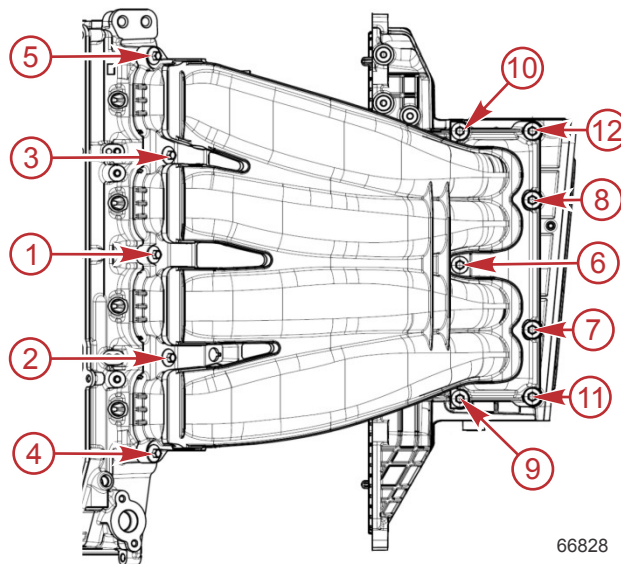


66828

V8 starboard intake runner

Induction System

Description	Nm	lb-in.	lb-ft
M6 x 30 screws (1–5)	10	88.5	–
M6 x 37 screws (6–12)	10	88.5	–



3. Install the port intake runner. Tighten the screws to the specified torque in the sequence shown.
IMPORTANT: Intake runner screws are different lengths. Do not intermix the hardware.

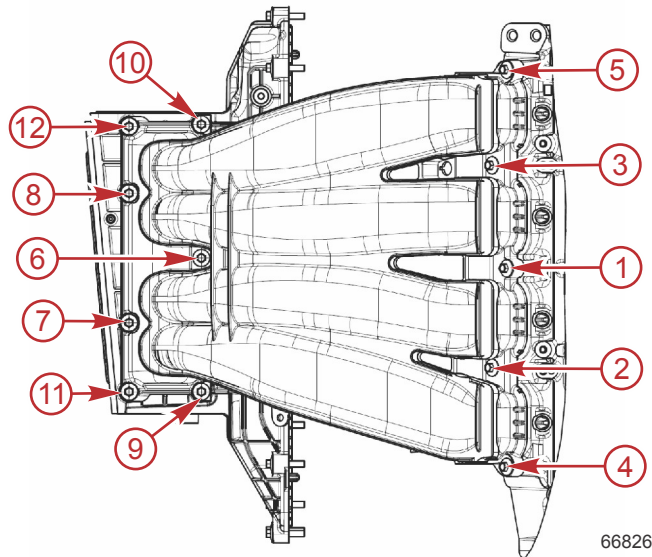

V8 port intake runner

Description	Nm	lb-in.	lb-ft
M6 x 30 screws (1–5)	10	88.5	–
M6 x 37 screws (6–12)	10	88.5	–

4. Connect the manifold reference hose to the port side of the plenum. Connect the MAP sensor reference hose to the bottom of the MAP sensor and to the starboard side of the plenum.

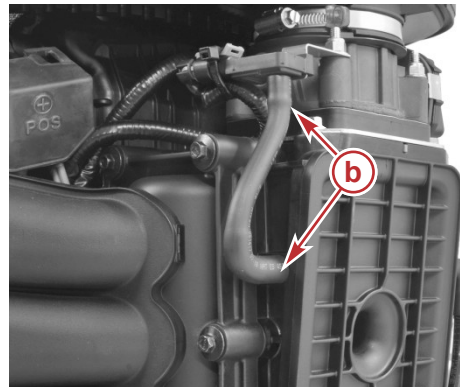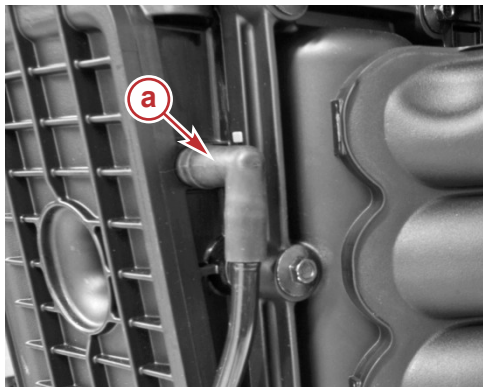


67236

Port side

- a - Manifold reference hose
- b - MAP sensor reference hose

Starboard side

- Secure the flush hose to the hose clip on the bottom of the port intake runner.

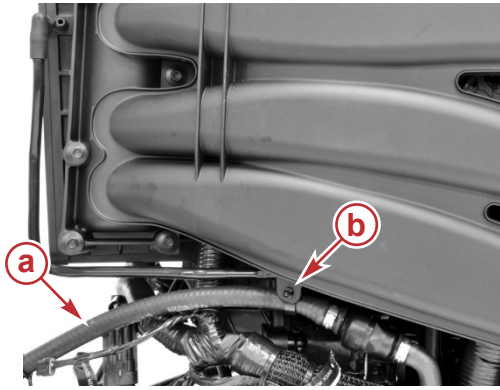

67297

- a - Flush hose
- b - Hose clip



Intake Plenum

Removal

⚠ WARNING

Performing service or maintenance without first disconnecting the battery can cause product damage, personal injury, or death due to fire, explosion, electrical shock, or unexpected motor starting. Always disconnect the battery cables from the battery before maintaining, servicing, installing, or removing motor components.

- Remove the lower engine cowl. Refer to **Section 5C - Upper and Lower Cowls**.
- Remove the intake runners. Refer to **Intake Runners**.
- Remove the flywheel. Refer to **Section 2A - Ignition**.
- Disconnect the MAP sensor connector, and disconnect the ETC connector.

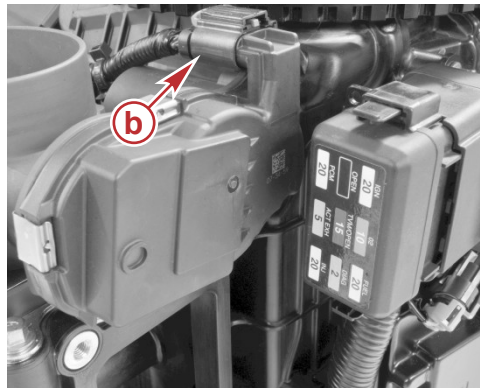
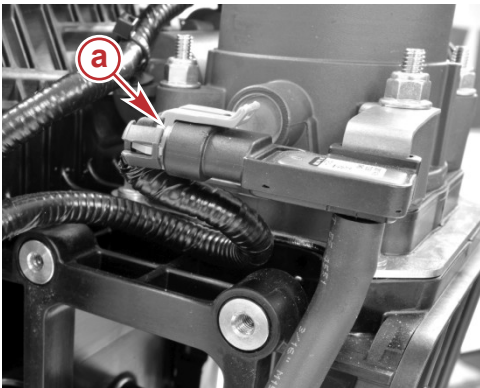


67177

- a - MAP sensor connector
- b - ETC connector

Induction System



5. Cut the wiring harness cable tie on the starboard side of the plenum, and cut the wiring harness cable tie on the port side of the plenum.

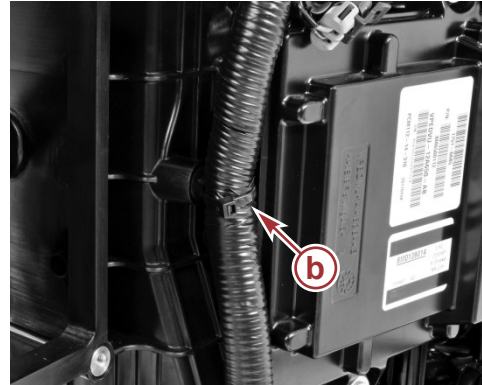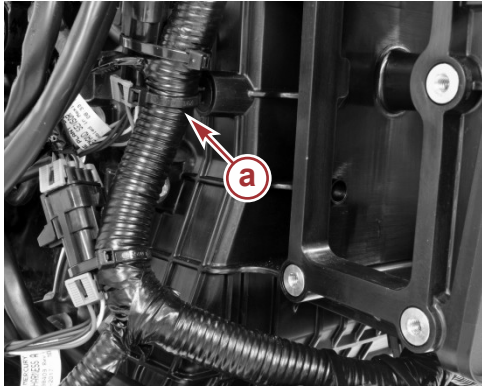

67173

- a** - Cable tie—starboard side
- b** - Cable tie—port side



6. Cut the cable tie securing the wiring harness to the bottom of the intake plenum.
7. Remove the battery cable connection bracket cover.

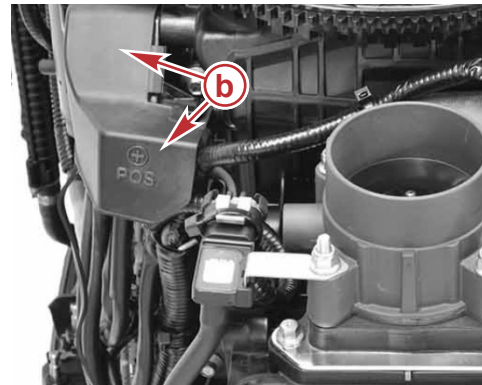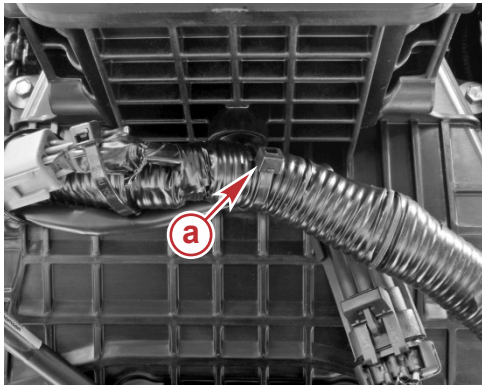

- a** - Cable tie
- b** - Battery cable connection bracket cover

8. Remove the positive and negative battery cables from their terminals, or loosen the terminal nuts sufficiently to access the three stud bracket T30 Torx® retaining screws.

9. Remove the battery cable stud bracket from the plenum.

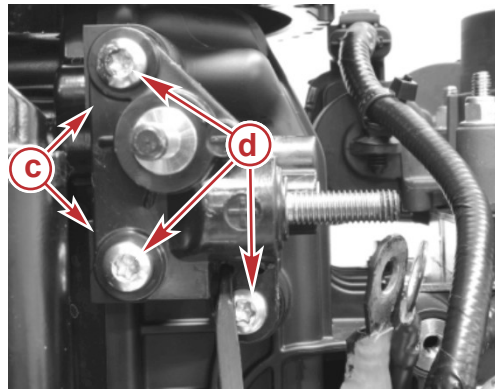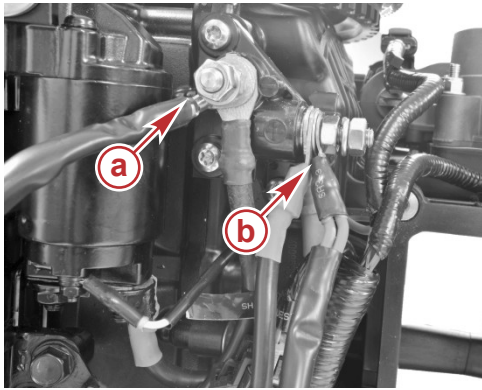


67183

- a - Negative battery terminal
- b - Positive battery terminal
- c - Battery cable stud bracket
- d - T30 Torx® retaining screws (3)

NOTE: The intake plenum and throttle body can be removed as an assembly.

10. Remove the intake plenum screws and remove the intake plenum.

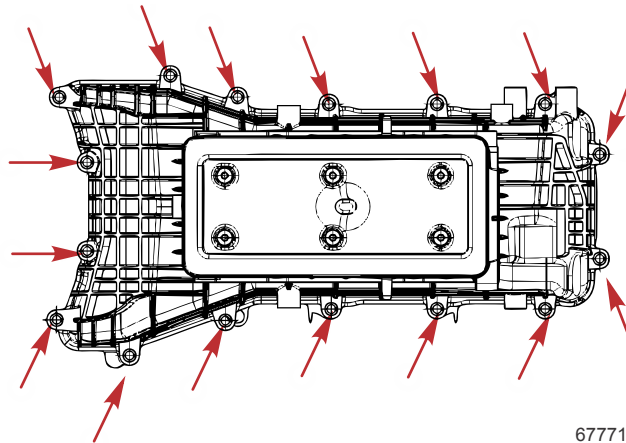


67771


Intake plenum screws

Plenum Installation

1. Inspect the intake plenum gasket. Replace the gasket if damage is found.

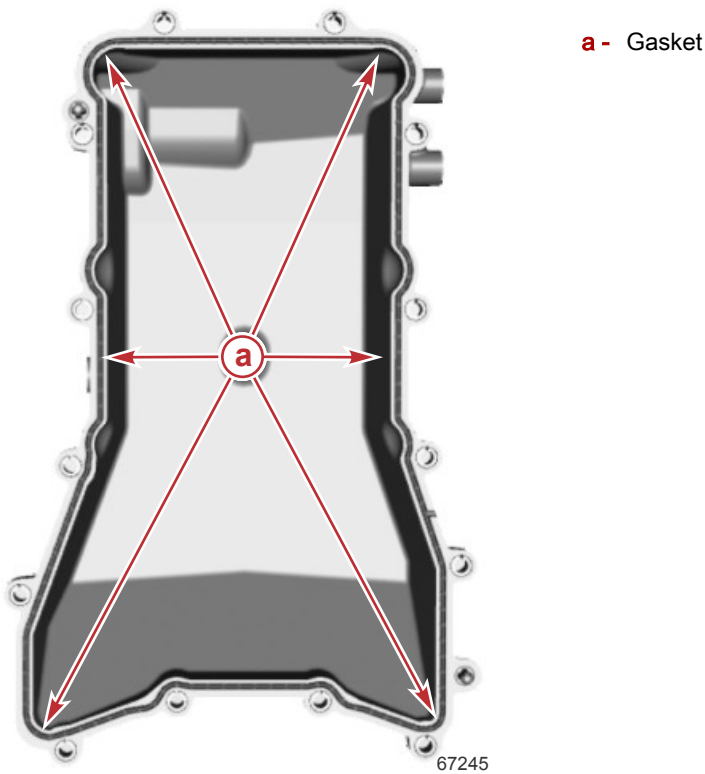


2. Place the intake plenum onto the cylinder block, and apply Loctite 242 Threadlocker to the intake plenum screws. Tighten the screws to the specified torque in the sequence shown.


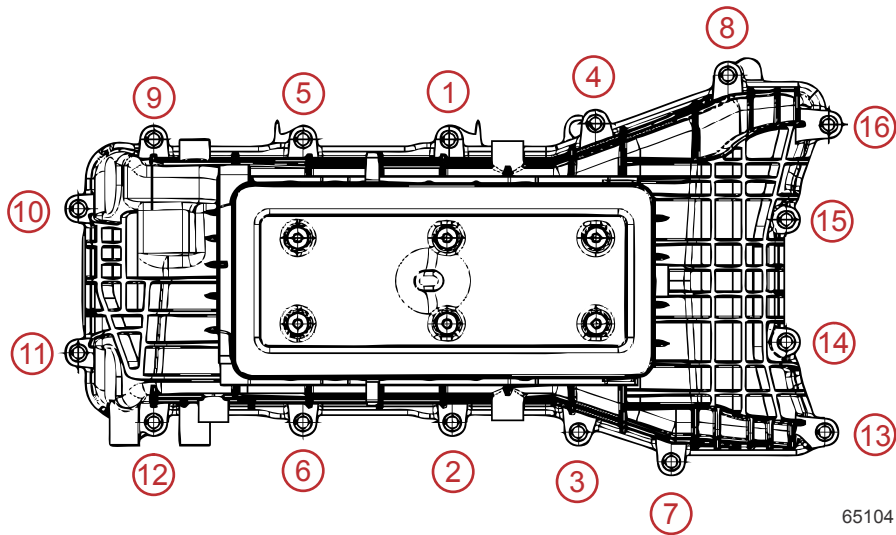


V8 intake plenum torque sequence

Description	Nm	lb-in.	lb-ft
Intake plenum screws (M6 x 1 x 30)	10	88.5	-

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	Intake plenum screws	92-809821



3. Connect the MAP sensor connector and ETC connector.

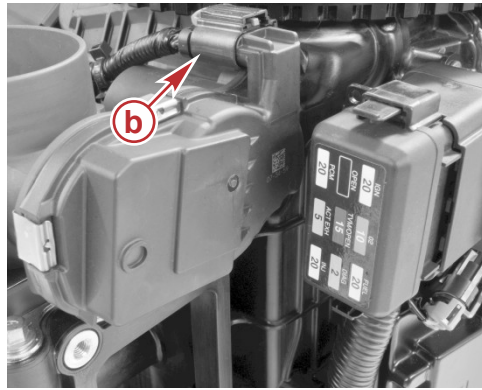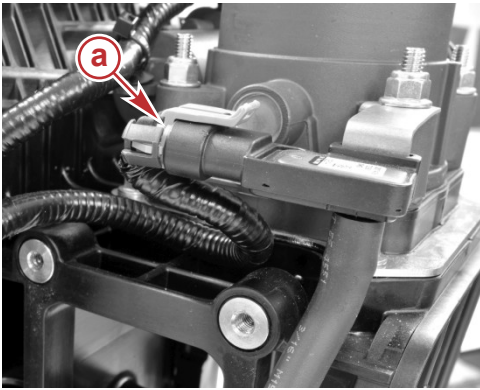

67177

- a** - MAP sensor connector
- b** - ETC connector

4. Secure the wiring harness to the plenum with cable ties on the port and starboard sides of the plenum.

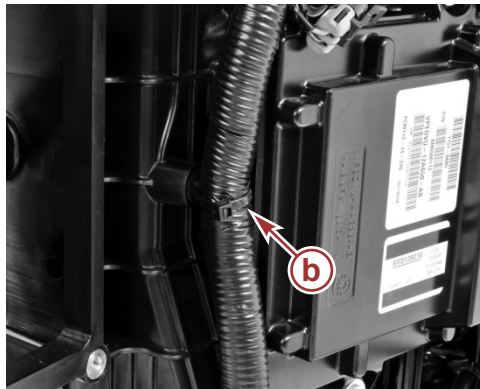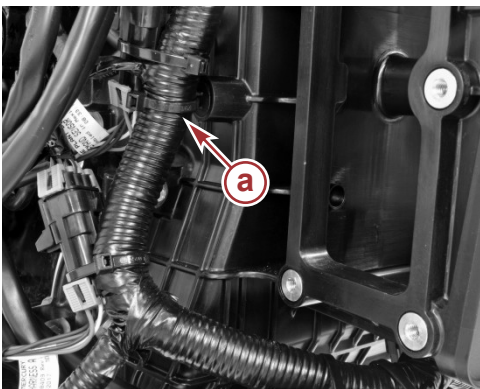



67173

- a** - Cable tie—starboard side
- b** - Cable tie—port side

5. Install the battery cable stud bracket to the plenum, and tighten the three T30 Torx® retaining screws to the specified torque.

Description	Nm	lb-in.	lb-ft
T30 Torx retaining screws	10	88.5	–

6. If removed, install the battery cables onto the terminals according to the following table. Tighten the nuts to the specified torque. Cover the connections with Liquid Neoprene.

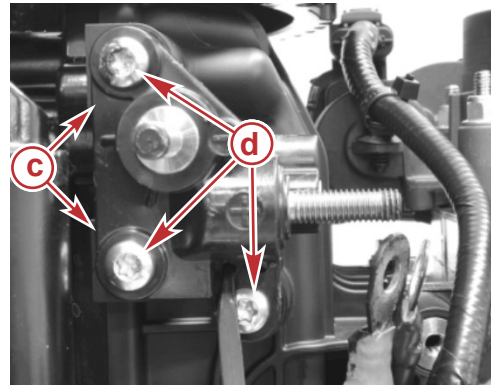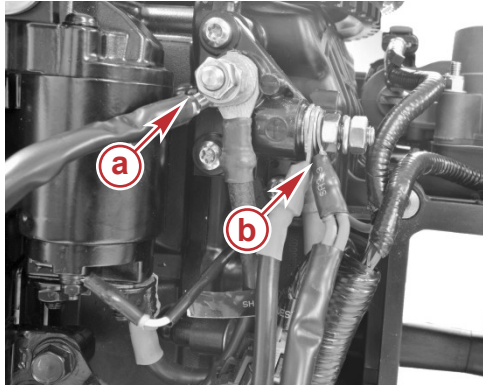


67183



- a - Negative battery terminal
- b - Positive battery terminal
- c - Battery cable stud bracket
- d - T30 Torx® retaining screws (3)

Installation Order	Positive (+) Battery Terminal Connections	Negative (-) Battery Terminal Connections
1st	Starter positive (+) cable	Starter ground (-)
2nd	Alternator fusible link	Relay ground (-)
3rd	Positive (+) ring terminal to relays	Negative (-) battery cable
4th	Postive (+) battery cable	-

Description	Nm	lb-in.	lb-ft
Battery cable nuts	17	150.5	-

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Battery cable connections	92- 25711 3

7. Place the battery cable connection bracket cover over the terminal connections, and secure the wiring harness to the bottom of the plenum with a cable tie.

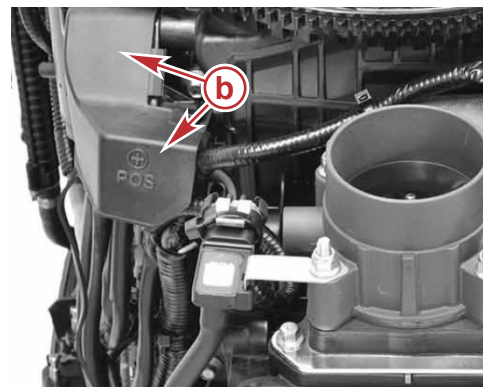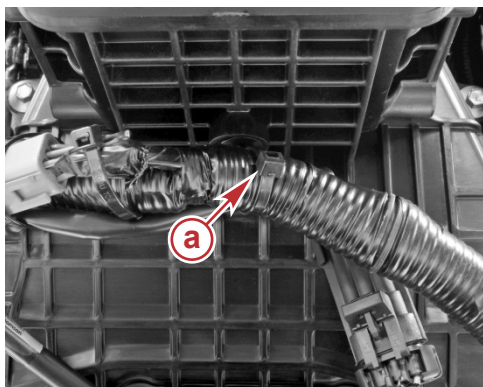


- a - Cable tie
- b - Battery cable connection bracket cover

8. Install the intake runners. Refer to **Intake Runners**.
9. Install the lower engine cowl. Refer to **Section 5C - Upper and Lower Cowls**.
10. Install the flywheel. Refer to **Section 2A - Ignition**.

Notes:

Throttle Body

Throttle Body Components

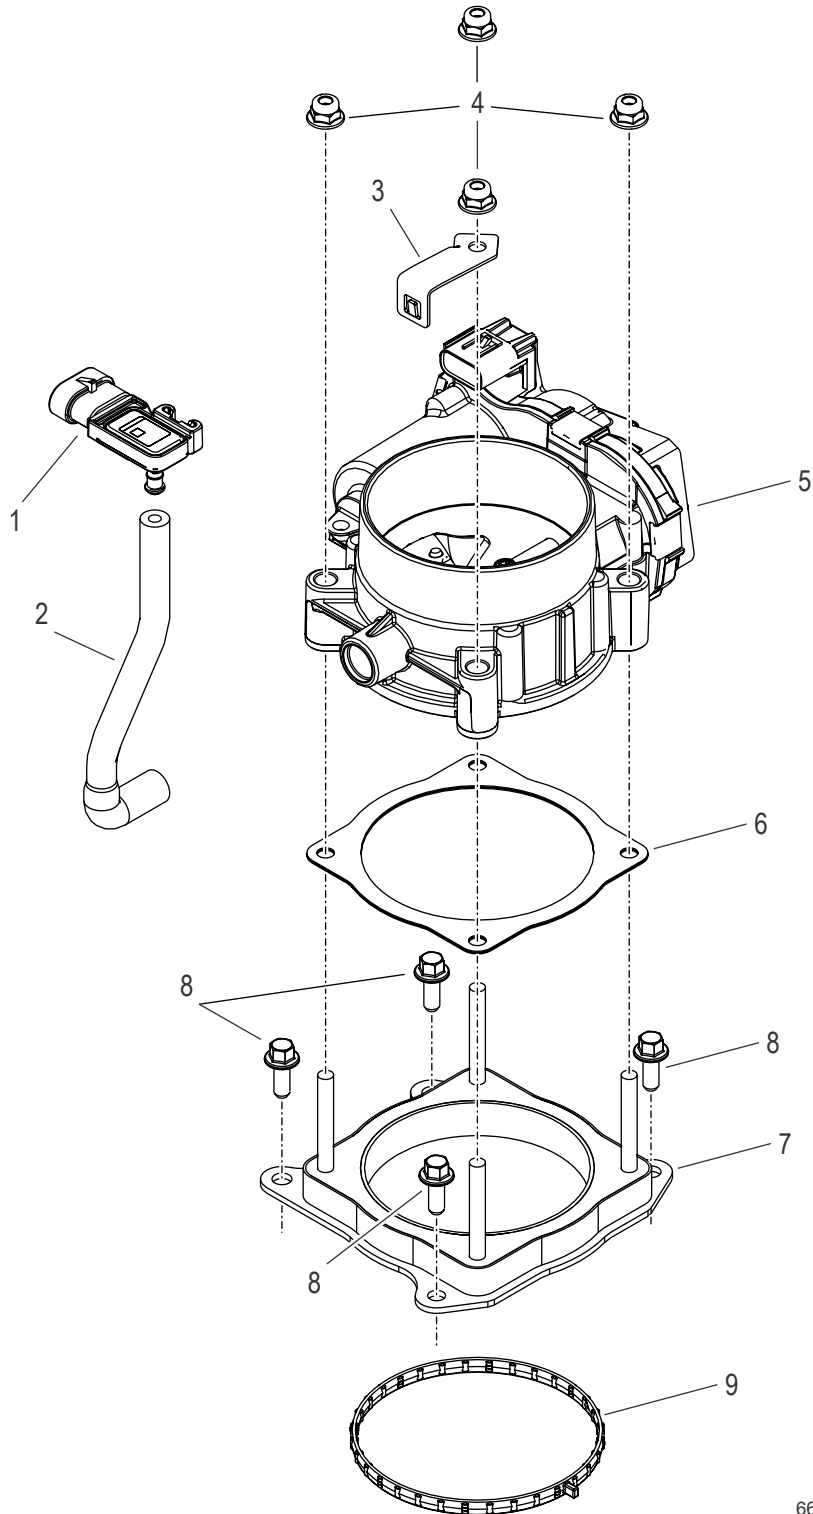


66452

Throttle Body Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Manifold absolute pressure (MAP) sensor			
2	1	MAP sensor hose			
3	1	MAP sensor bracket			
4	4	M6 flange head locknut	7	62	–
5	1	Throttle body assembly			
6	1	Throttle body gasket			
7	1	Isolator assembly			
8	4	M6 x 16 hex flange head screw	10	88.5	–
9	1	Gasket			

Throttle Body Assembly Removal

1. Remove the cold air intake assembly. Refer to **Induction Components**.
2. Remove the flywheel. Refer to **Section 2A - Ignition**.
3. Disconnect the electronic throttle control (ETC) connector from the ETC by sliding the locking tab to release the connector.
4. Cut the cable tie that secures the engine harness to the throttle body assembly and move the harness connector out of the way.
5. Remove the four M6 flange head locknuts that secure the throttle body assembly to the isolator assembly.


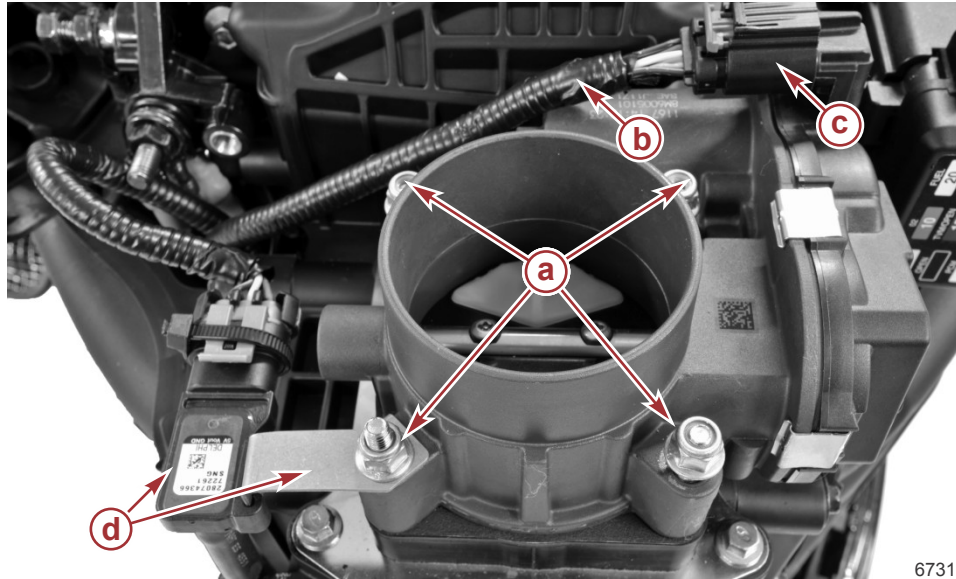


Throttle body and ETC assembly

- a** - M6 flange head locknuts
- b** - Cable tie
- c** - ETC connector
- d** - MAP sensor and bracket

67317

6. Remove the manifold absolute pressure (MAP) sensor bracket and MAP sensor from the throttle body assembly.
7. Lift the throttle body and ETC assembly off of the isolator studs.
8. Remove the four M6 x 16 isolator hex flange screws and the throttle body gasket.

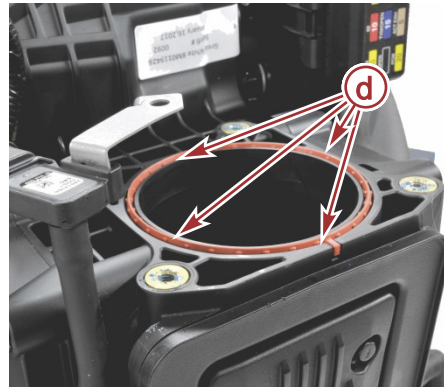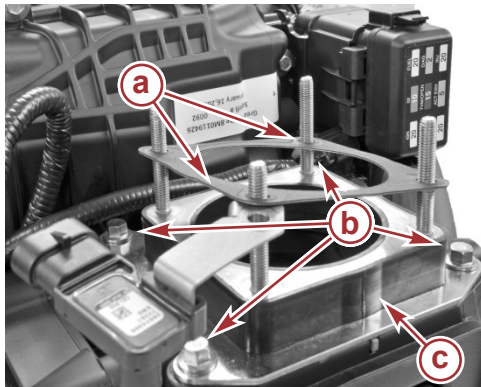


67320

- a** - Throttle body gasket
- b** - M6 x 16 isolator hex flange screws (4)
- c** - Isolator
- d** - Isolator base gasket

9. Discard the throttle body gasket.
10. Lift the isolator base off of the plenum.
11. Inspect the isolator base gasket for damage. Discard the isolator base gasket if it is damaged.



Throttle Body Assembly Installation

1. Ensure that the isolator base gasket is seated in the plenum groove in the correct orientation and lower the isolator onto the plenum.
2. Apply Loctite 242 Threadlocker to four M6 x 16 hex flange screws.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 16 hex flange screws	92-809821

- Secure the isolator with four M6 x 16 hex flange screws, and tighten the screws to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange screw	10	88.5	–

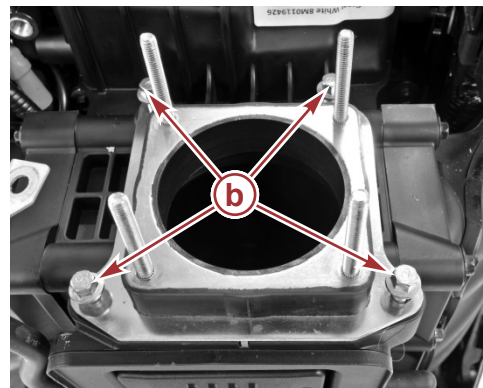
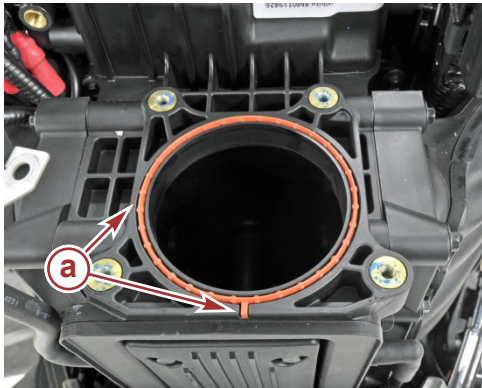


67324

Isolator and base gasket

- a** - Isolator base gasket
- b** - M6 x 16 hex flange screw (4)

- Place a new throttle body gasket over the studs of the isolator.
- Lower the throttle body onto the isolator assembly.

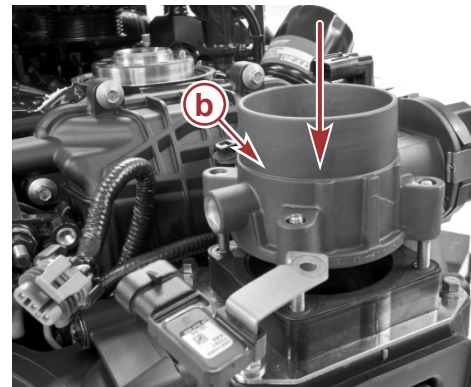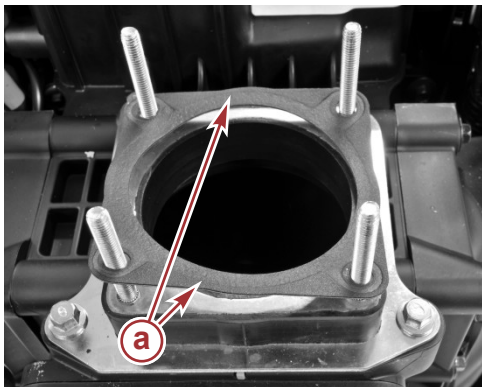

67325

- a** - Throttle body gasket
- b** - Throttle body



- Place the MAP sensor bracket (with MAP sensor attached) over the forward starboard stud.
- Secure the throttle body assembly and MAP sensor bracket with four M6 flange head locknuts. Tighten the locknuts to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 flange head locknut	7	62	–

- Connect the ETC to the engine harness.
- Use a cable tie to secure the engine harness to the cable tie anchor on the throttle body assembly.

Induction System

10. Ensure that the MAP sensor is properly mounted on its bracket, that it is connected to the engine harness and secured with a cable tie, and that the MAP sensor hose is in place.

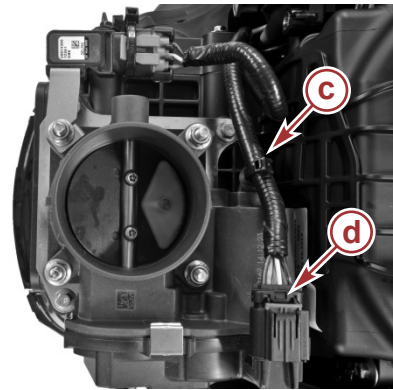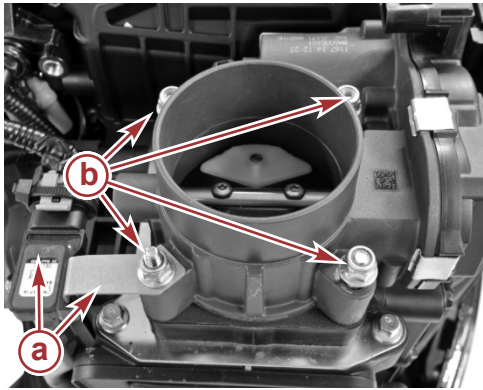

67327

- a** - MAP sensor and bracket
- b** - M6 flange head locknut (4)
- c** - Cable tie
- d** - ETC connector

11. Install the flywheel. Refer to **Section 2A - Ignition**.
12. Install the cold air intake assembly. Refer to **Induction Components**.

Fuel System

Section 3B - Service Procedures



Table of Contents

Fuel System Specifications.....	3B-2	FSM Disassembly.....	3B-14
Fuel System—V8 Exploded View.....	3B-4	FSM Assembly.....	3B-19
Fuel Line Inspection.....	3B-6	Fuel Supply Module Priming Procedure.....	3B-27
Water-Separating Fuel Filter.....	3B-6	Fuel Rail Removal and Installation.....	3B-28
Removal.....	3B-6	Fuel Rail Removal	3B-28
Installation.....	3B-7	Fuel Rail Disassembly.....	3B-30
Water-in-Fuel (WIF) Sensor.....	3B-7	Injector, Schrader Valve, and Fuel Inlet Tube	
Vessel Mounted Water-Separating Fuel Filter.....	3B-7	Installation.....	3B-31
Maintenance.....	3B-7	Fuel Rail Installation.....	3B-33
Filling the Fuel System.....	3B-11	Fuel Pump Relay.....	3B-35
Fuel Supply Module (FSM).....	3B-12	V8 Fuel Flow Diagram.....	3B-36
Fuel Supply Module (FSM) Components	3B-12		


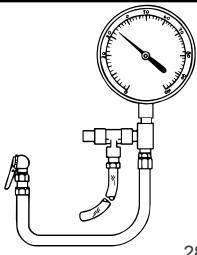
Fuel System Specifications

Fuel System Specifications	
Recommended fuel octane rating	87 (R+M)/2, 91 RON
Approximate fuel pressure at idle	290–340 kPa (42.1–43.9 psi)
Approximate fuel pressure engine not running	340–370 kPa (49.3–53.7 psi)
Fuel filtration	
Inlet filter, engine mounted	10 microns
Inlet filter, remote boat mounted	10 microns
High-pressure, at fuel rail inlet	46 microns
Fuel pump current draw	12 A ± 2 A (at 14.4 V)
Maximum fuel system inlet vacuum	10.16 kPa (3.0 in. Hg), (1.47 psi)

Lubricants, Sealants, Adhesives


Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Fuel filter grommet	92-802859A 1
		O-rings	
		Seal grommet	
		Both seal grommets	
		Fuel pressure regulator O-rings	
		O-rings and seal grommets	
 136	Lubriplate SPO 255	Fuel injector O-rings	Obtain Locally
		Schrader valve and fuel inlet tube O-rings	
		Cylinder head fuel injector bores	

Special Tools

Clamp Tool	91-803146T
 39648	Used to clamp high pressure (Oetiker ®) hose clamps. Part of Clamp Tool Kit (91-803146A4).
Fuel Pressure Gauge Kit	91-881833A03
 2807	Tests the fuel pump pressure; can be used to relieve fuel pressure.

Notes:

Fuel System—V8 Exploded View

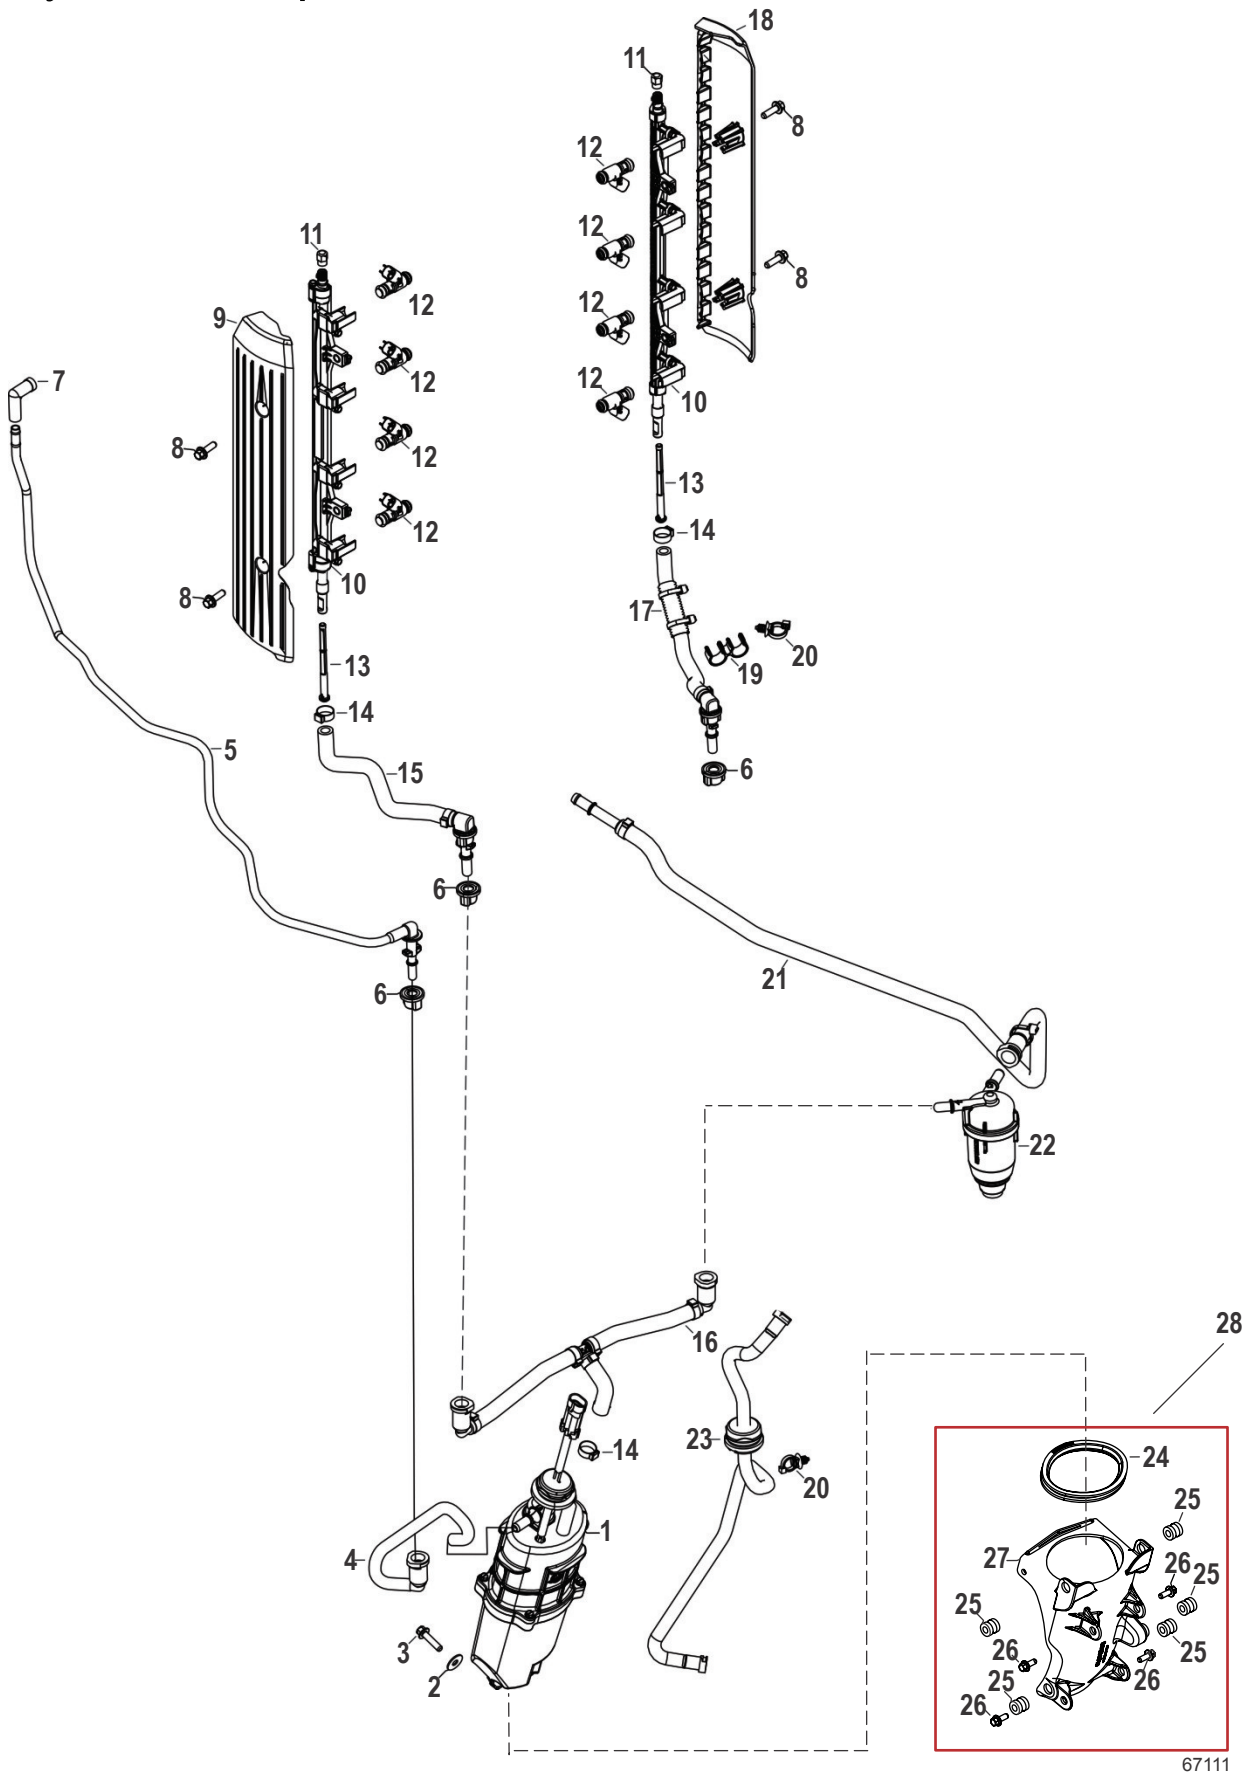

67111

Fuel System—V8 Exploded View

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Fuel supply module			
2	1	Special fastener with grommet			
3	1	Screw (M6 x 25)	10	88.5	–
4	1	Reference hose			
5	1	Reference hose—upper			
6	3	Grommet			
7	1	Elbow			
8	4	Screw, hex flange—special	10	88.5	–
9	1	Cover, fuel rail—port			
10	2	Fuel inlet tube			
11	2	Schrader® valve cap			
12	8	Injector			
13	2	Filter			
14	3	Clamp			
15	1	Hose—port fuel rail			
16	2	Hose—FSM T			
17	1	Hose—starboard fuel rail with conduit			
18	1	Cover, fuel rail—starboard			
19	1	Clip			
20	2	Cable tie/retainer			
21	1	Hose—fuel inlet			
22	1	Water-separating fuel filter			
23	1	Grommet			
24	1	Grommet FSM retaining			
25	5	Grommet			
26	4	Retention pin			
27	1	FSM bracket			
28	1	FSM bracket assembly			

Fuel Line Inspection

Visually inspect the fuel line for cracks, swelling, leaks, hardness, or other signs of deterioration or damage. If any of these conditions are found, the fuel line must be replaced.

Water-Separating Fuel Filter

The water-separating fuel filter can be serviced as a general maintenance item when the water-in-fuel alarm is activated.

⚠ WARNING


Fuel is flammable and explosive. Ensure that the key switch is off and the lanyard is positioned so that the engine cannot start. Do not smoke or allow sources of spark or open flame in the area while servicing. Keep the work area well ventilated and avoid prolonged exposure to vapors. Always check for leaks before attempting to start the engine, and wipe up any spilled fuel immediately.

Removal

IMPORTANT: Use an approved container to collect and store fuel. Wipe up spilled fuel immediately. Material used to contain spilled fuel must be disposed of in an approved container.


1. Verify the ignition key switch is in the OFF position and that the lanyard switch is positioned so the engine cannot start.
2. Remove the top cowl.
3. Locate the fuel filter on the starboard aft side of the engine, near the bottom spark plug.
4. Push in on the fuel hose release tabs, and disconnect the fuel hoses from the fuel filter.
5. Disconnect the water-in-fuel sensor harness.

NOTE: If there is a boat mounted water-separating fuel filter with a water-in-fuel sensor installed, the sensor harness should be connected to the boat mounted filter.

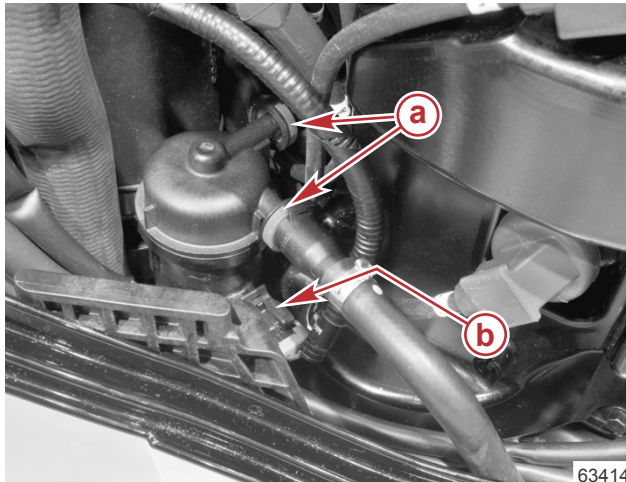

- a - Fuel hose release tabs
- b - Water-in-fuel sensor harness

6. Rotate the filter clockwise approximately 1/4 of a turn, and lift the filter out.

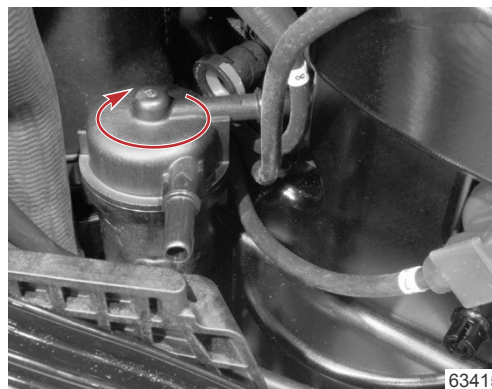

Filter rotated 1/4 turn


7. Empty the fuel filter contents into an approved container, and dispose according to local regulations.

- Wipe up any spilled fuel.

Installation

- Apply a small amount of 2-4-C with PTFE to the fuel filter grommet.




Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Fuel filter grommet	92-802859A 1

- Install the fuel filter, and rotate counterclockwise 1/4 turn to retain the filter.
- Connect the water-in-fuel sensor harness.
NOTE: If there is a boat mounted water-separating fuel filter with a water-in-fuel sensor installed, the sensor harness should be connected to the boat mounted filter.
- Connect the fuel hoses to the fuel filter securely with the locking hose connections.
- Turn the key to the RUN position, and inspect the installation for fuel leaks. Repair any fuel leaks, if necessary.
- Install the top cowl.

Water-in-Fuel (WIF) Sensor

The water-separating fuel filter has a WIF sensor in it.

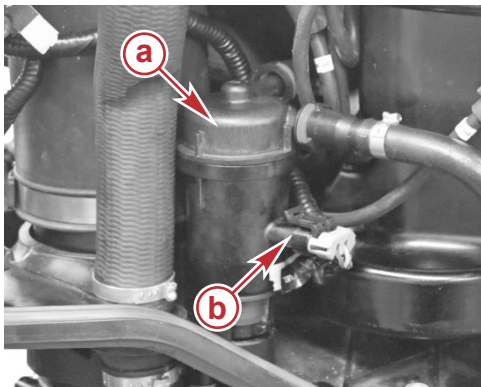

- a** - Water-separating fuel filter
- b** - WIF sensor connector (engine)
- c** - WIF sensor connector (vessel mounted water-separating fuel filter)

65106

IMPORTANT: The engine mounted water-separating fuel filter WIF sensor is not replaceable as an individual component. It must be replaced as part of the fuel filter assembly. SeaPro models are equipped with a vessel mounted water-separating fuel filter that has a WIF sensor located on the filter drain knob. The engine mounted WIF sensor on SeaPro models is disconnected and is not used. Refer to Water-Separating Fuel Filter and Vessel Mounted Water-Separating Fuel Filter for filter assembly replacement procedures.

Vessel Mounted Water-Separating Fuel Filter

Maintenance

⚠ WARNING

Fuel leakage is a fire or explosion hazard, which can cause serious injury or death. Periodically inspect all fuel system components for leaks, softening, hardening, swelling, or corrosion, particularly after storage. Any sign of leakage or deterioration requires replacement before further engine operation.

Service Procedures

Always check for fuel leakage after replacing the filter assembly.

Frequency of water draining or filter assembly replacement is determined by contamination level in the fuel. Inspect or service the collection bowl for water daily. Replace the filter assembly at least once a year or if a loss of power is noticed.

To Drain Water

IMPORTANT: Draining the filter assembly may result in some fuel spillage. Use an approved container to collect fuel. Wipe up any fuel spillage immediately. Material used to contain spillage must be disposed of in an approved container.

1. Place a drain pan under the fuel filter to catch any spilled fuel.
2. Attach a 1/4 in. I.D. drain hose to the fitting on the water drain knob.
3. Open the water drain knob three turns counterclockwise to drain the collection bowl of water.
4. Close the water drain knob.
5. Run the engine to purge any air from the fuel system. Refer to **Filling the Fuel System**. Check that there are no fuel leaks.




To Replace the Fuel Filter Assembly

IMPORTANT: Removing the filter assembly may result in some fuel spillage. Use an approved container to collect fuel. Wipe up any fuel spillage immediately. Material used to contain spillage must be disposed of in an approved container.


1. Disconnect the water-in-fuel sensor connector from the old fuel filter assembly.
2. Place a drain pan under the fuel filter to catch any spilled fuel.
3. Attach a 1/4 in. I.D. drain hose to the fitting on the water drain knob.
4. Open the water drain knob three turns counterclockwise to drain the fuel filter contents.
5. Close the water drain knob.
6. Remove the drain hose from the water drain knob.




7. Disconnect the fuel hoses from the filter assembly by pressing on the fuel hose release tabs.

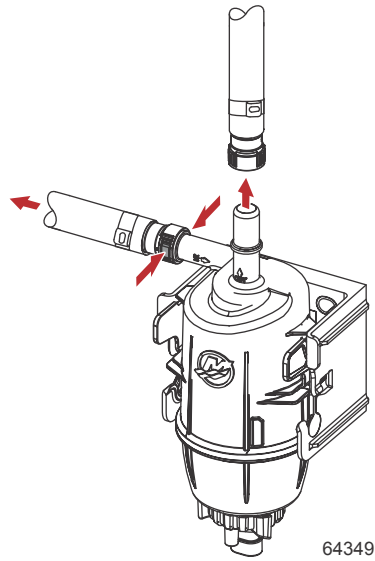

8. Remove the old filter assembly from the mounting bracket by pressing the fuel filter release tabs inward, tipping the filter assembly outward, and pulling the assembly out.

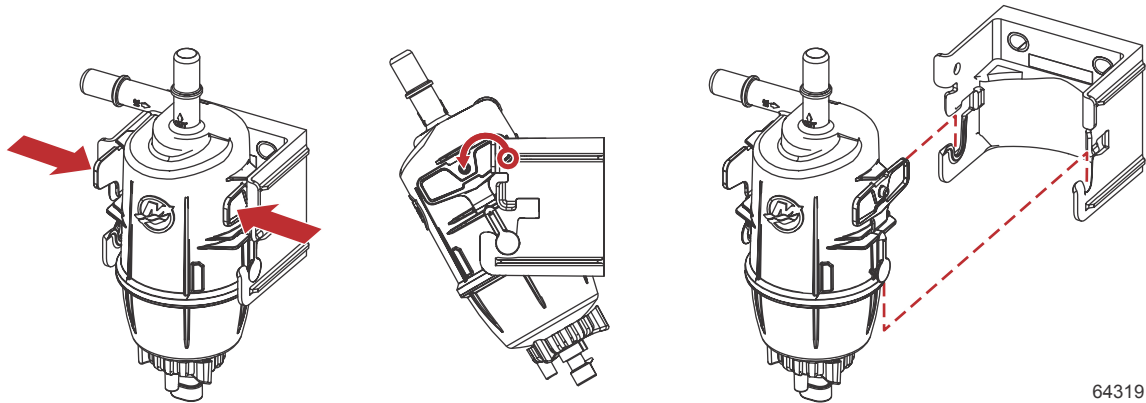


9. Remove the water drain knob from the filter assembly by turning counterclockwise. Retain the knob for reassembly on the new filter.

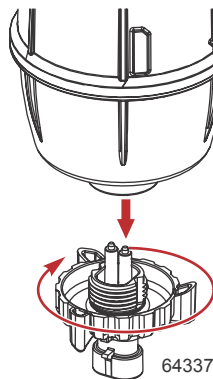

10. Inspect the water drain knob and O-ring for damage. Replace as needed.

IMPORTANT: The water drain knob is reusable. Retain the undamaged water drain knob for reassembly on the new filter.

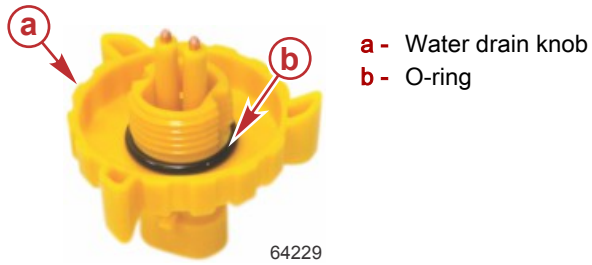


11. Empty any remaining fuel filter contents into an approved container and dispose according to local regulations.
12. Wipe up any spilled fuel.
13. Remove and discard the three plastic shipping plugs from the new fuel filter assembly.




Remove shipping plugs


14. Install the water drain knob by turning clockwise until hand-tight.

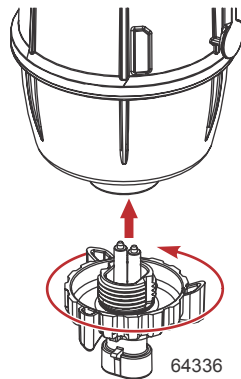


15. Install the new fuel filter assembly into the mounting bracket.

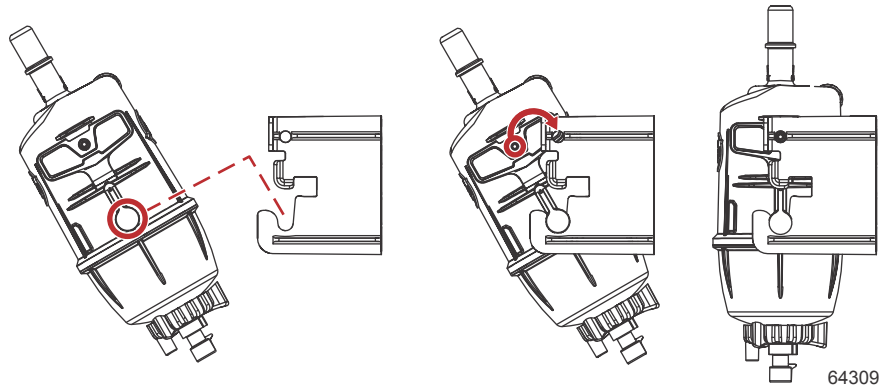

16. Connect the fuel hoses at the top of the filter assembly. Push the inlet and outlet quick-connect fittings onto the filter until they click.

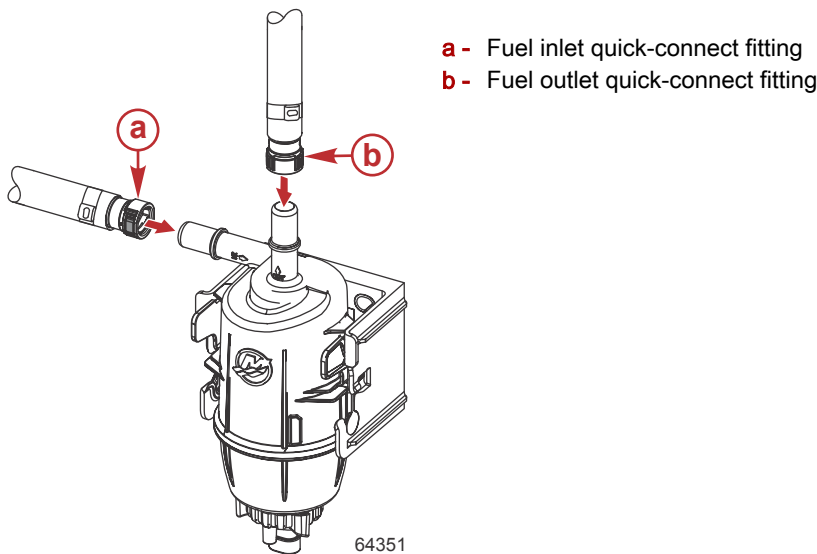

17. Install the water-in-fuel sensor connector.

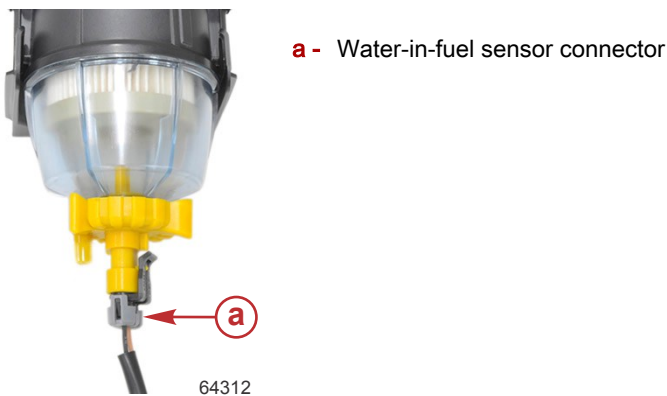


18. Run the engine to purge any air from the fuel system. Refer to **Filling the Fuel System**. Check that there are no leaks.

Filling the Fuel System

Turn the ignition key switch to the RUN position for approximately five seconds to operate the fuel pumps. Start and operate the engine to purge any remaining air from the fuel system. The engine may run rough while the air is purging through the fuel injectors. Purging air may take longer if the vessel mounted fuel filter is installed further away from the engine. Increasing the throttle during engine operation will purge air from the fuel system more quickly.

Fuel Supply Module (FSM)

Fuel Supply Module (FSM) Components

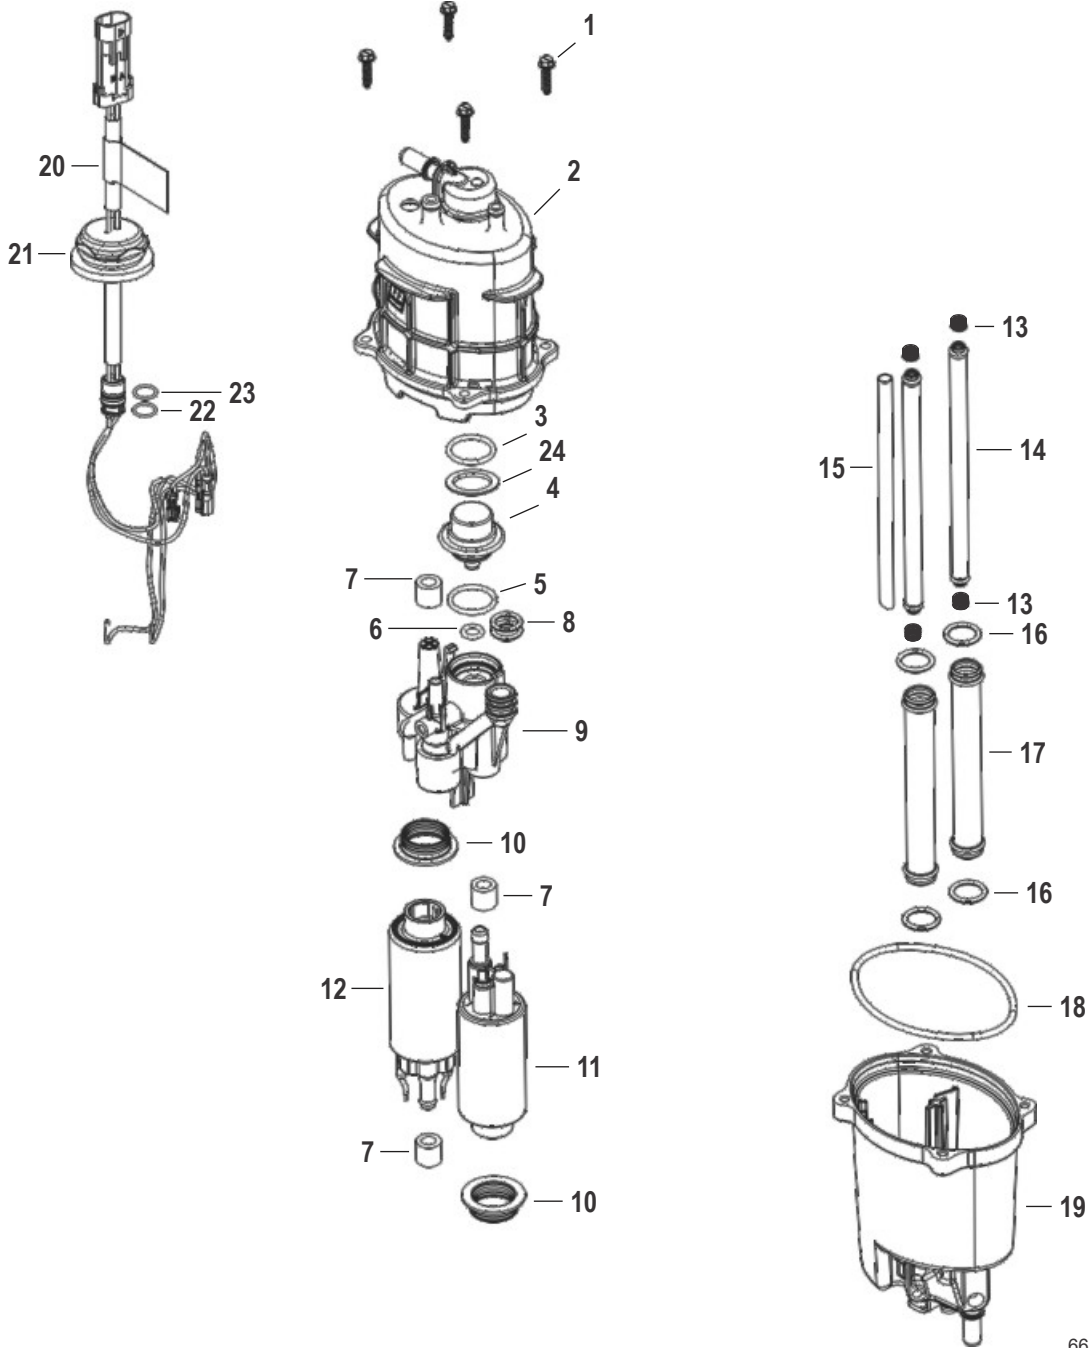

66107

Fuel Supply Module (FSM) Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	4	Screw	10	88.5	–
2	1	FSM top housing			
3	1	O-ring			
4	1	Regulator assembly			
5	1	O-ring			
6	1	O-ring			
7	3	Seal			
8	2	O-ring			
9	1	FSM cap			
10	2	Seal			
11	1	Low-pressure pump assembly			
12	1	High-pressure pump assembly			
13	4	Seal			
14	2	Fuel tube			
15	1	Suction tube			
16	4	O-ring			
17	2	Water tube			
18	1	Seal			
19	1	FSM bottom housing			
20	1	Electrical harness assembly			
21	1	Grommet			
22	1	O-ring			
23	1	O-ring			
24	1	Spacer			


FSM Removal and Installation

Refer to **Section 5 - Midsection** for FSM removal and installation procedures.


FSM Disassembly

NOTE: The FSM cannot be completely drained of fuel prior to disassembly. Use appropriate containers to capture fuel during the disassembly process. Wipe up fuel spills immediately and dispose of in an appropriate container.

1. Place the FSM in an appropriate container to capture any fuel that will spill.
2. Remove the metal hose clamp securing the high-pressure hose to the FSM upper housing and remove the hose.

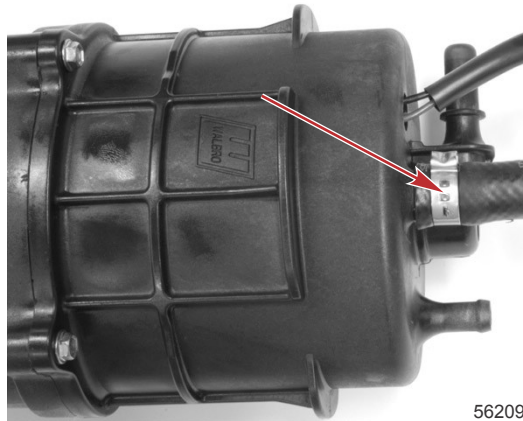

3. Remove the four 1/4 in. hex head screws securing the upper housing to the lower housing.

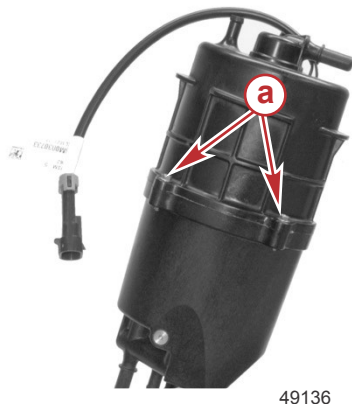


a - Screws (4) 1/4 in. hex head

NOTE: Use caution when separating the housing. The lower housing may be completely filled with fuel.


4. Grasp the lower housing and the upper housing and pull the upper housing slightly to partially separate the upper housing from the lower housing. The O-ring seal is extremely tight, a putty knife or similar tool may be needed to start the separation process.

- When a gap between the upper and lower housing is achieved insert two pry tools on opposite sides of the unit, between the upper and lower housing, and carefully separate the housing.

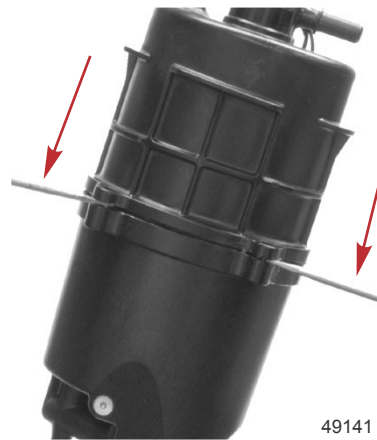

49141


- Carefully lift the upper housing to access the power wire connections.
- Disconnect the upper housing power wires from the fuel pump connectors and remove the O-ring.

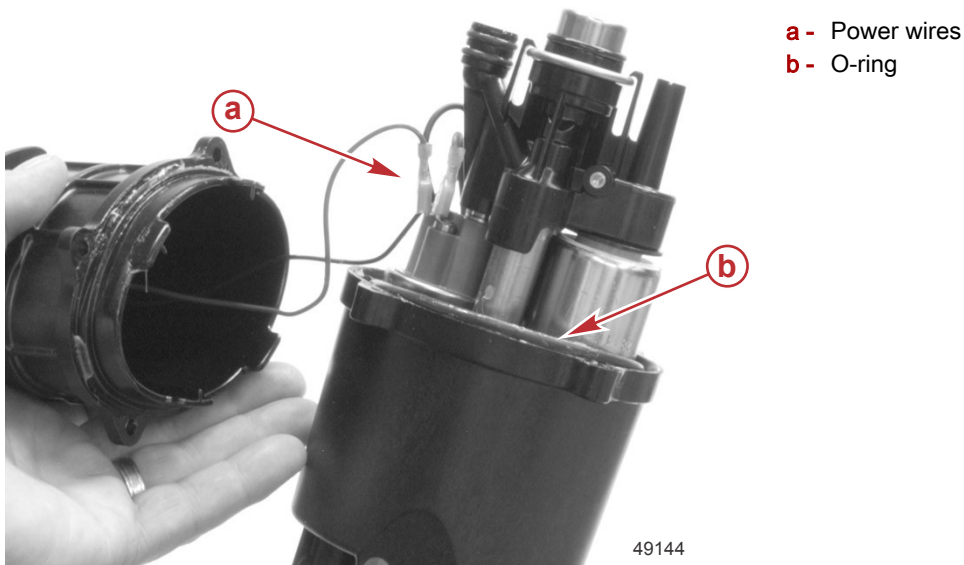

- a - Power wires
- b - O-ring

49144


NOTE: Some of the internal components may be adhering to the upper housing when separated. Remove the fuel pumps with an appropriate tool. Use caution not to twist the fuel pumps when removing them. Use a vice grip tool to clamp onto the manifold webbing and pull the manifold out of the upper housing.

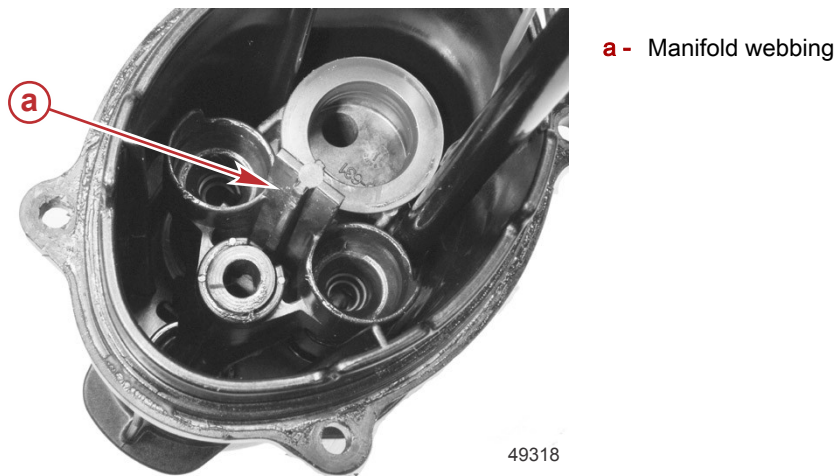

- a - Manifold webbing

49318


8. Remove the manifold from the tubes and fuel pumps.

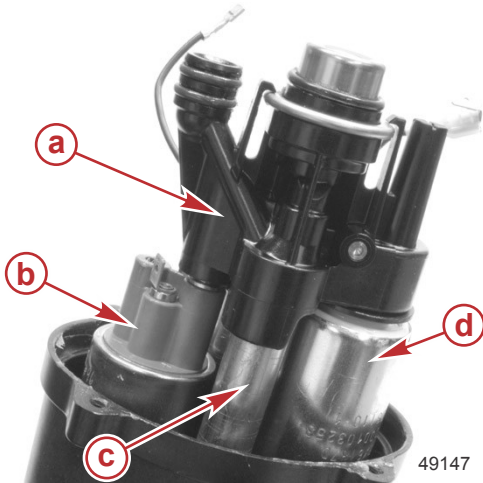

- a - Manifold
- b - Fuel lift pump
- c - Tubes (4)
- d - High-pressure fuel pump


9. Remove the tubes and fuel pumps from the lower housing.

IMPORTANT: If the fuel pumps are difficult to remove, use an appropriate tool to extract them. Use caution not to twist the fuel pumps when removing.

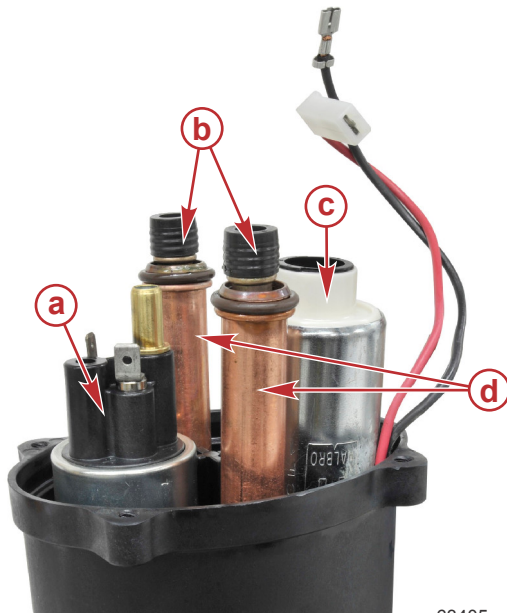


- a - Fuel lift pump
- b - Fuel tubes
- c - High-pressure fuel pump
- d - Water tubes

10. Remove the seal grommets from the manifold.

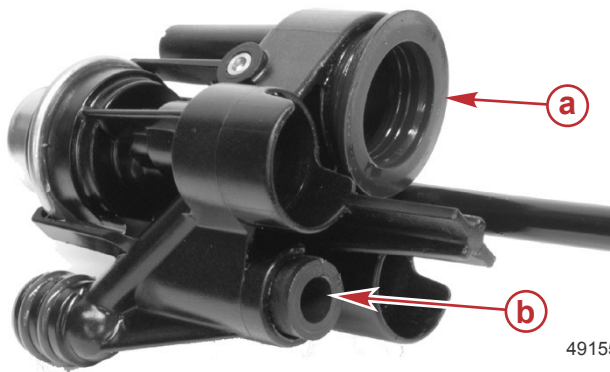

- a - High-pressure fuel pump seal grommet
- b - Fuel lift pump seal grommet


11. Remove three O-rings and a spacer from the manifold.

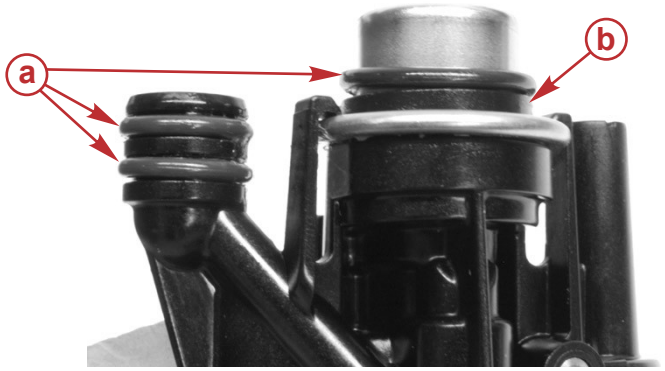

- a - O-rings
- b - Spacer on fuel pressure regulator

49156


12. Carefully spread the retainers and remove the fuel pressure regulator.
IMPORTANT: Use extreme care not to spread the retainers excessively. Spreading the retainers excessively will cause the retainer to break off the manifold.
13. Remove the O-ring and spacer from the fuel pressure regulator.

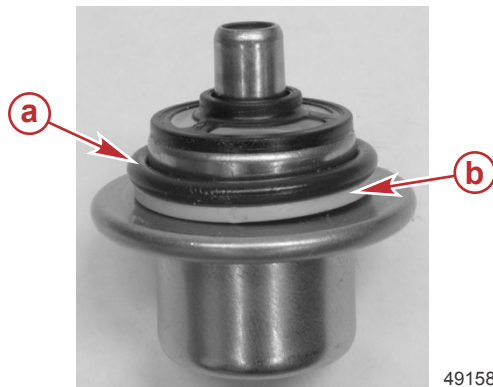

- a - O-ring
- b - Spacer

49158

14. Inspect the inside of the upper and lower housings for seal grommets, O-rings, or seals and remove them.

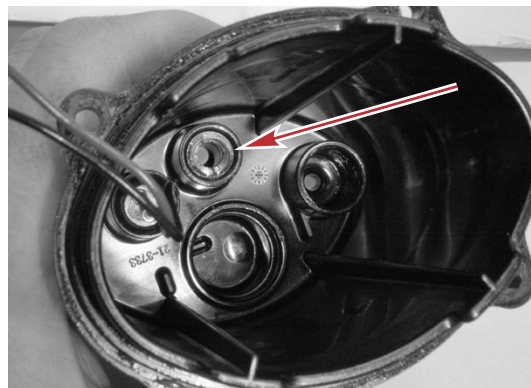

49162

15. Remove the fuel pump wire harness seal grommet from the upper housing by pushing on the seal grommet from the outside of the upper housing with a blunt tool.

Service Procedures


16. Guide the wiring through the housing.




17. Remove any grommets or wire retainers from the harness.




18. Remove the wire retainer from the rear of the connector.

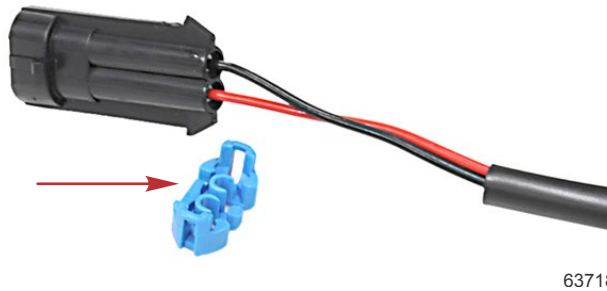

19. Using a micro screwdriver or similar tool, pry the wire pin off of the holding tab of the connector and push the wire pin free of the holding tab. Repeat for the second wire.

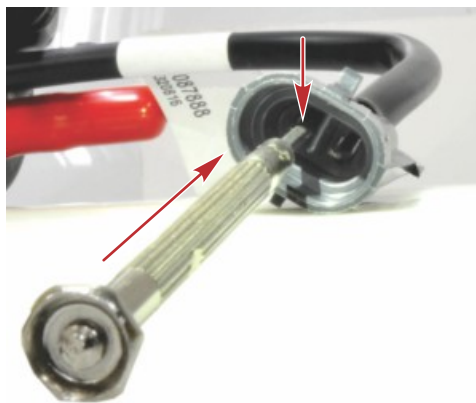


- Carefully remove the wires from the connector and remove the harness from the fuel module housing. Make a note as to the proper position of the wire colors in respect to the connector.

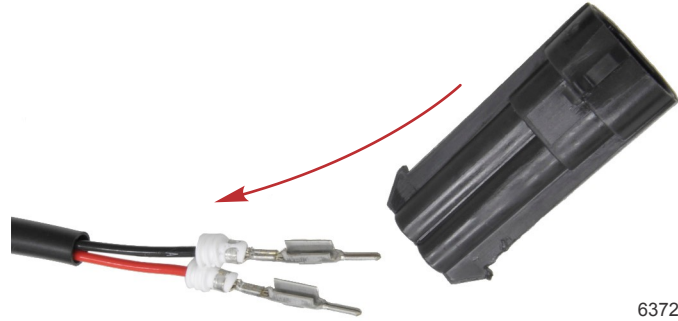

63720

FSM Assembly

- Install the O-rings and seals onto the water tubes and fuel tubes.
- Lubricate the O-rings and seals on the tubes with 2-4-C with PTFE.

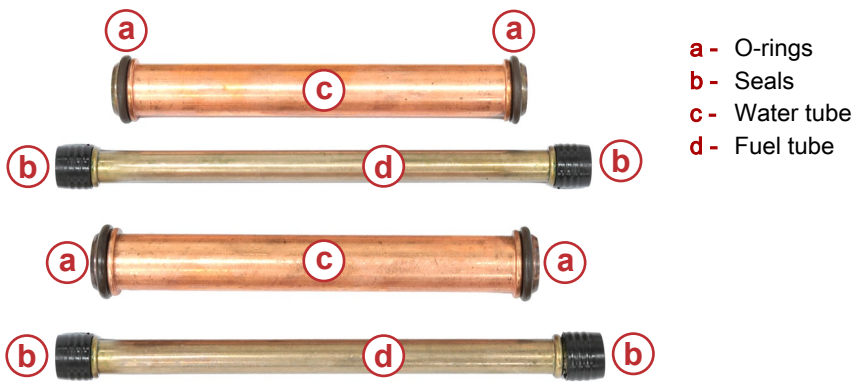


63404

- Install the fuel tubes into the lower housing.




63410

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	O-rings	92-802859A 1

Service Procedures

4. Install the water tubes.

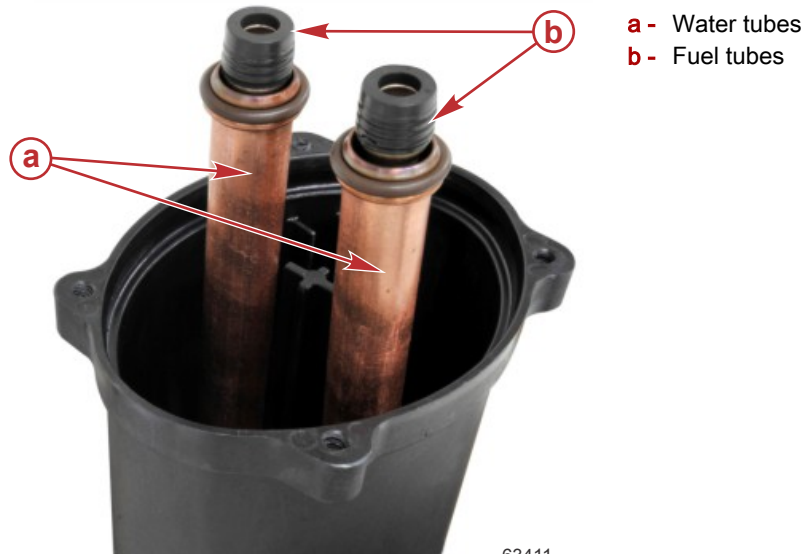

63411

5. Install the seal grommet halfway onto the high-pressure fuel pump outlet. Install the bottom seal grommet on the high-pressure fuel pump.



49206


- Lubricate the seal grommet with 2-4-C with PTFE and install the high-pressure fuel pump into the lower housing so the wires are between the fuel pump and the housing.



63822




63823

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Seal grommet	92-802859A 1


- Install the bottom seal grommet and the outlet seal grommet halfway onto the fuel lift pump and lubricate with 2-4-C with PTFE.



63826

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Seal grommet	92-802859A 1


8. Install the fuel lift pump into the lower housing so the outlet port of the pump faces towards the center of the FSM.

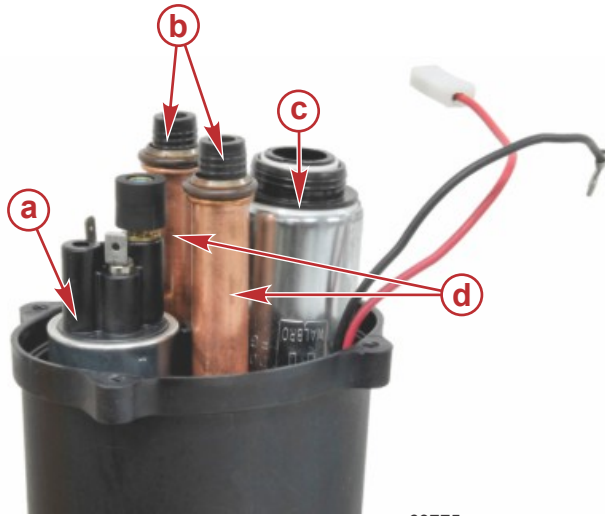

- a - Fuel lift pump
- b - Fuel tubes
- c - High-pressure pump
- d - Water tubes

63775


9. Lubricate both seal grommets with 2-4-C with PTFE.

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Both seal grommets	92-802859A 1

10. Install two O-rings onto the manifold.

11. Verify that the hole in the manifold is open and that no debris partially blocks the hole.


IMPORTANT: Use only appropriate solvents and compressed air to remove debris which may be blocking the hole. Do not use wire or any ridged material that may damage the hole.

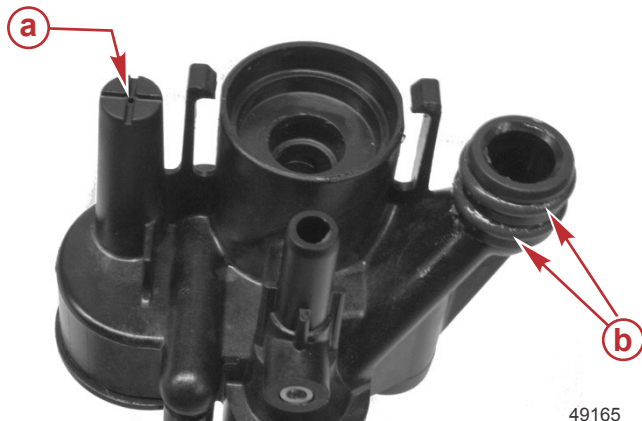

- a - Hole in manifold
- b - O-rings

49165

- Carefully install the manifold while aligning the fuel pumps and tubes. Verify that the manifold is seated on the fuel pumps. Ensure that the fuel pump wires are not binding between the water tube and the fuel pump.

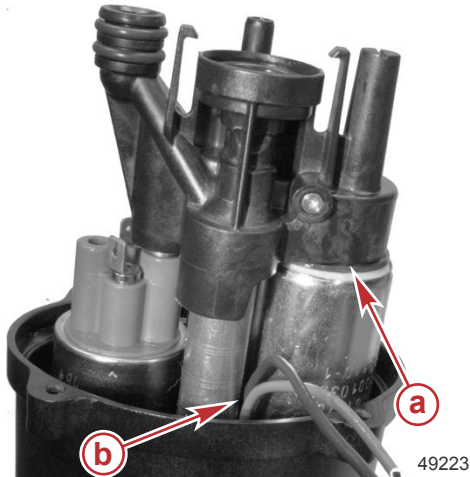


- a - Manifold seated on fuel pump
- b - Wires are not binding

- Verify that the spacer is installed onto the fuel pressure regulator.
- Verify that the fuel pressure regulator filter is clear of debris.

NOTE: The fuel pressure regulator filter is not a serviceable part, but can be cleared of debris with a mild solvent and low-pressure compressed air.


- Install the O-rings onto the fuel pressure regulator and lubricate them with 2-4-C with PTFE.

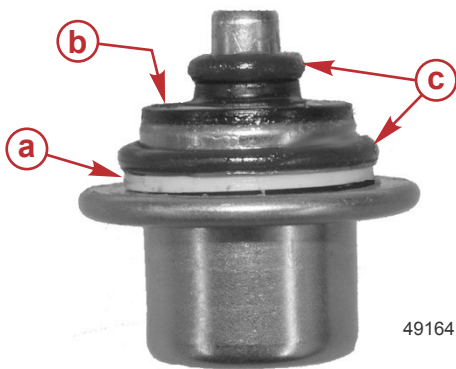

- a - Spacer
- b - Filter
- c - O-rings

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Fuel pressure regulator O-rings	92-802859A 1

- Install the fuel pressure regulator onto the manifold.
- Install the spacer and O-ring onto the fuel pressure regulator.

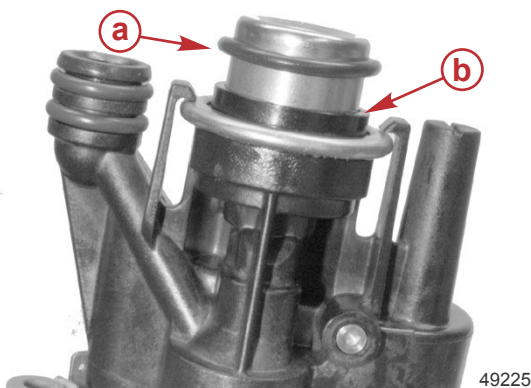


- a - O-ring
- b - Spacer


- Install the seal grommet halfway onto the manifold.


Service Procedures

19. Insert the red wire harness connector onto the fuel lift pump positive terminal.

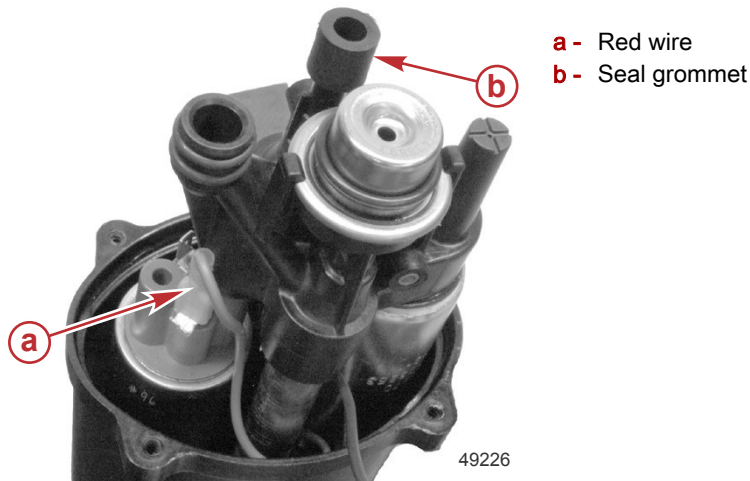


20. Install the O-ring onto the upper housing.
21. Install new O-rings onto the fuel pump wire harness seal grommet. Verify that the blue O-ring is installed on the upper groove of the seal grommet. Lubricate the O-rings with 2-4-C with PTFE.
22. Pull on the wire harness to seat the seal grommet into the upper housing. A gentle push on the seal grommet on the inside of the housing with a blunt tool will ensure it is properly seated.

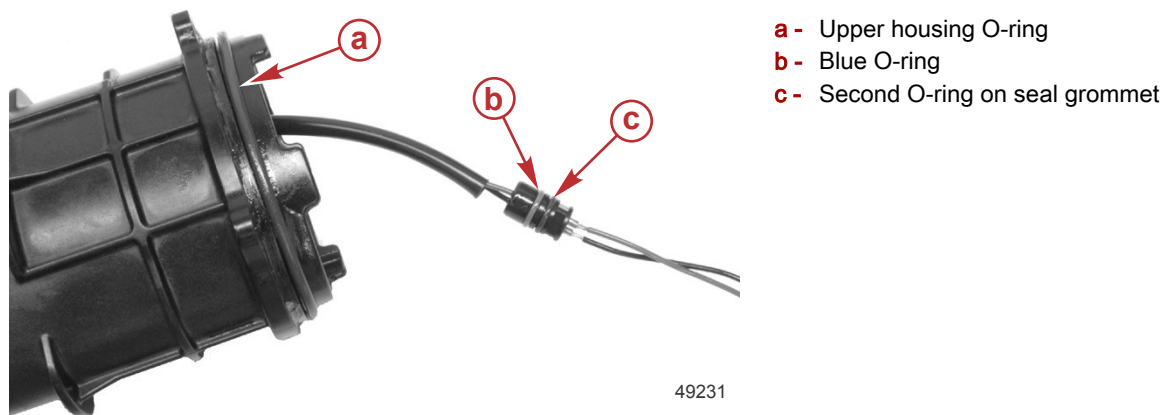


Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	O-rings	92-802859A 1

23. Align the wire pins with the mounting tabs in the connector and insert the wire pins into the connector. Snap the wire retainer onto the end of the connector.

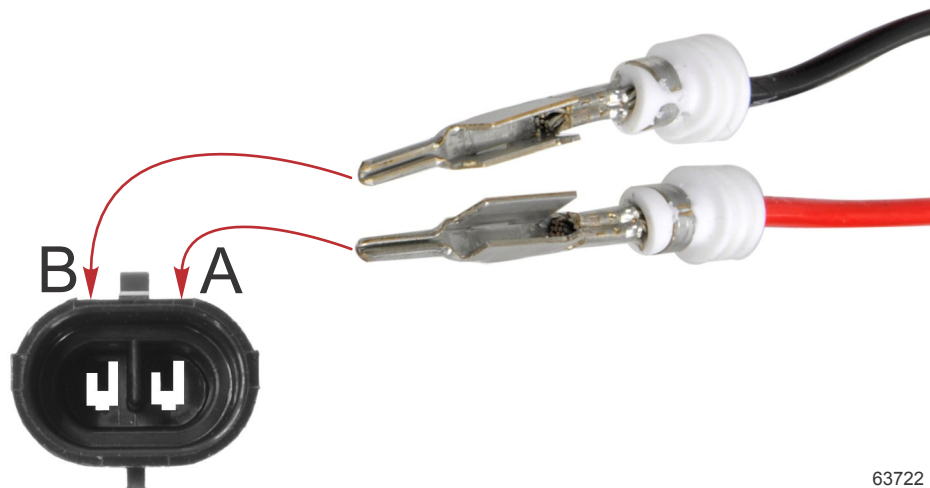


63722

24. Connect the red wire from the upper housing to the positive terminal on the fuel lift pump.
25. Connect the black wire from the upper housing to the negative terminal on the fuel lift pump.
26. Connect the high-pressure fuel pump black wire to the terminal on the fuel lift pump.
27. Lubricate all the visible O-rings and seal grommets with 2-4-C with PTFE.

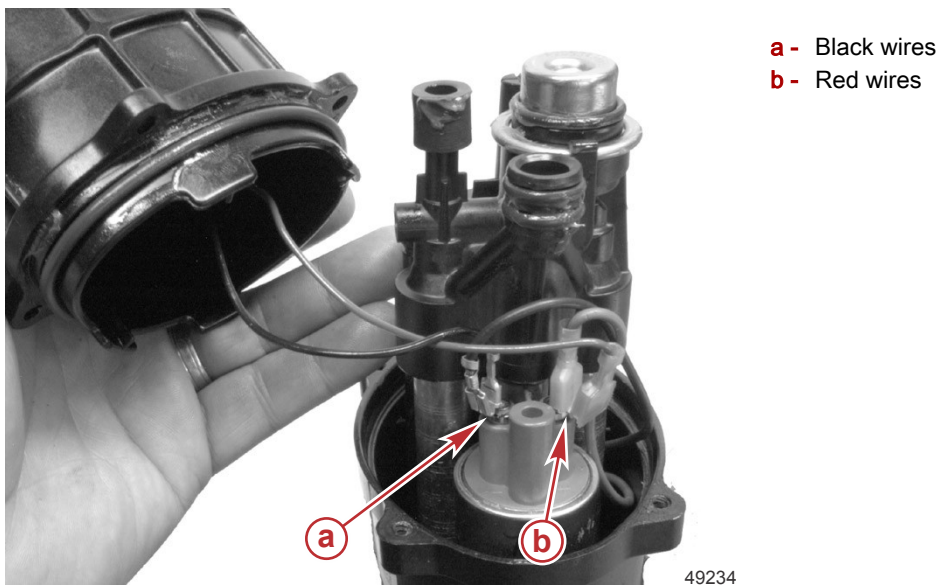

49234

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	O-rings and seal grommets	92-802859A 1

28. Verify that the wires will not become pinched and install the upper housing.




49237

29. Carefully push the upper housing into the lower housing until there is no gap between the upper and lower housing. A soft jawed bench vice and a channel lock pliers may be needed to completely squeeze the unit together.

IMPORTANT: Do not use the screws to close the unit. This can result in stripping of the plastic bosses and cause the unit to separate.

IMPORTANT: If the gap between the upper and lower housing cannot be closed, the wires may be pinched or a seal grommet is not properly aligned.

30. Install the screws and tighten the screws to the specified torque.

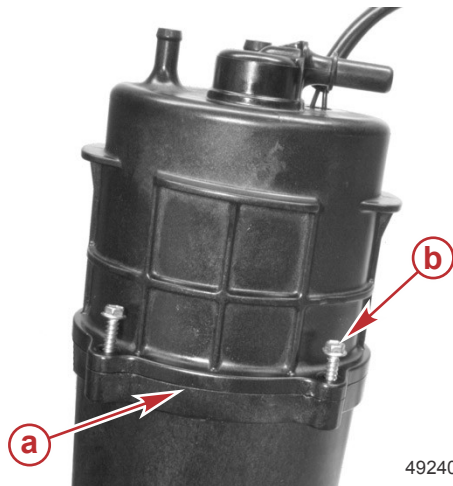


- a - No gap
- b - Screw (4)

49240

Description	Nm	lb-in.	lb-ft
Screw	10	88.5	-

31. Install a 16.2 mm (0.75 in.) metal hose clamp onto the high-pressure hose and install the hose onto the FSM upper housing. Use the hose clamp tool to secure the hose to the FSM.

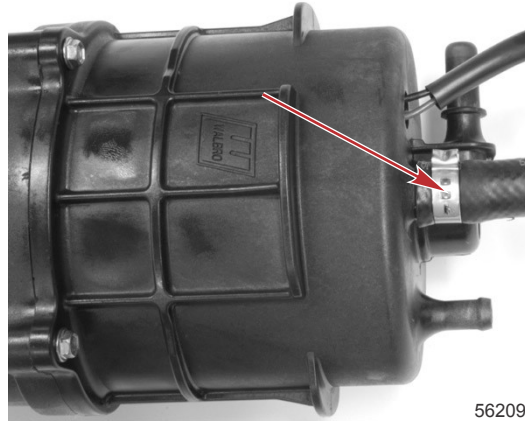

Clamp Tool	91-803146T
------------	------------

Fuel Supply Module Priming Procedure

The fuel supply module (FSM) is not vented to the ambient air. The air trapped in the FSM, fuel lines, and fuel rail, will be slightly compressed during the initial ignition key "ON" with a dry or drained fuel system. Additional key "ON" events under these conditions, will not compress the air further to finish the priming of the FSM. Excessive number of key "ON" events may eventually damage the fuel pumps. The volume of air trapped in the FSM must be purged to prime the fuel system. This can be achieved by connecting a tool to the fuel rail Schrader valve fitting to quickly purge the system into an approved container, or by cranking the engine.

Priming the FSM with a Purge Tool

The use of a purge tool for priming the FSM is the preferred method, but is not always practical. The objective is to purge the air entrained in the fuel system through a purge tool connected to the fuel rail Schrader valve test port. During the key "ON," opening the dump valve will allow the air to be purged from the FSM and fuel rail. This method should be used on vessels where the fuel inlet system to the outboard is restrictive; anti-siphon valve or holds a relatively large volume of fuel because of a long fuel supply line or water separating fuel filter. If a primer bulb is installed, it can be used during the priming event to shorten the amount of time required to start the engine.

1. Verify the engine is in a level vertical position.
2. Verify the vessel fuel supply line is connected to the outboard fuel system inlet fitting.
3. Connect a fuel pressure gauge to the fuel rail Schrader valve.
4. Secure the fuel pressure gauge purge hose into an appropriate fuel container to collect excess fuel.
5. Open the fuel pressure gauge purge valve and turn the ignition key "ON." The fuel pumps will run for approximately five seconds.
6. Turn the ignition key "OFF" and then back "ON." The fuel pumps will run for approximately five seconds. Continue this ignition key cycle until the purged fuel is relatively clear of air bubbles.

NOTE: If the outboard fuel system does not prime within 15 key "ON" events, check for leaks in the fuel supply line to the outboard. Repair as needed. If no leak is found, the fuel supply system to the outboard may be too restrictive. Correct the condition and try again.

7. Remove the fuel pressure gauge.
8. Turn the ignition key "ON." When the fuel pumps stop running, start the engine. The engine may not start on the first attempt. The engine will run rough at idle for up to two minutes while the residual air is purged from the fuel system.

Priming the FSM (Ran out of Fuel Condition)

The use of a purge tool for priming the FSM is the preferred method, but is not always practical. When the vessel fuel system is void of fuel volume, it can be primed without the use of a purge tool. The objective is to purge the air entrained in the fuel system through the fuel injectors during engine cranking to allow fuel to enter the fuel module. This method can be used on vessels where the fuel inlet system to the outboard is less restrictive and holds a relatively small volume of fuel; a short fuel supply line, no water separating fuel filter, or water separating fuel filter is already primed. If a primer bulb is installed, it can be used during the priming event to shorten the amount of time required to start the engine.

1. Verify the engine is in a level vertical position.
2. Verify the vessel fuel supply line is connected to the outboard fuel system inlet fitting.

3. Turn the ignition key "ON." The fuel pumps will run for approximately five seconds.
4. Turn the ignition key to the "START" position and release the key. The ECM controls the activation of the starter. The starter may continue cranking for up to eight seconds.
NOTE: When priming a drained fuel system, residual fuel may cause the engine to flare and stall which shortens the engine cranking event.
5. Continue with the ignition key "ON" and "START" sequence until the engine continues to run.
IMPORTANT: Allow the starter motor to cool for 20 to 30 seconds between full eight second crank events. Limit the number of events to a maximum of 10 full eight second cranking events.
6. Once the engine starts, it may run rough at idle for up to two minutes while the residual air is purged from the fuel system.
7. If the fuel system will not prime within 10 full eight second cranking events, use the previous procedure **Priming the FSM with a Purge Tool** to prime the fuel system.

Fuel Rail Removal and Installation


Fuel Rail Removal

⚠ CAUTION

Failure to release pressure from the fuel system will result in fuel spraying out, which can cause a fire or explosion. Allow the engine to cool completely and release all fuel pressure before servicing any part of the fuel system. Always protect eyes and skin from pressurized fuel and vapors.

IMPORTANT: Alternately loosen each fastener until both fasteners spin freely in the cover recess. Note that both fasteners are retained by features in the cover. Pay close attention to the fuel injector harness routing and wire retention to avoid damage during fuel rail cover installation.

1. Loosen the two fasteners that secure the fuel rail cover to the cylinder head, and remove the cover.

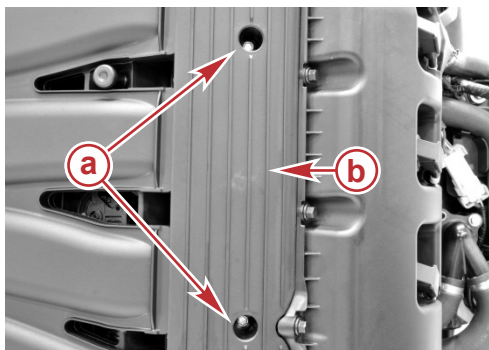

66187



- a - Fuel rail cover fasteners (2)
- b - Fuel rail cover

2. Remove the Schrader valve cap at the top of either fuel rail, and attach a fuel pressure gauge to the Schrader valve. Relieve the pressurized fuel into an approved container, and dispose of the fuel according to local regulations.

Fuel Pressure Gauge Kit	91-881833A03
-------------------------	--------------

3. Remove the fuel pressure gauge, and install the Schrader valve cap.


4. Slide the injector clips out and press/squeeze the end of each injector clip in until it clicks, to remove the harness connectors from the injectors.

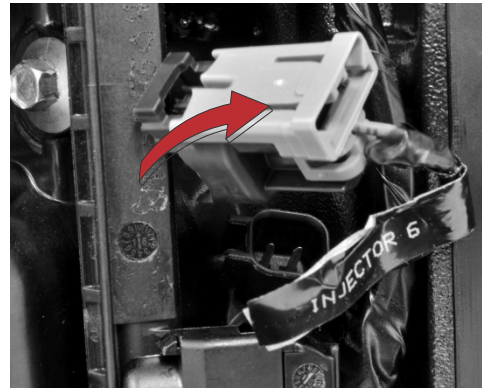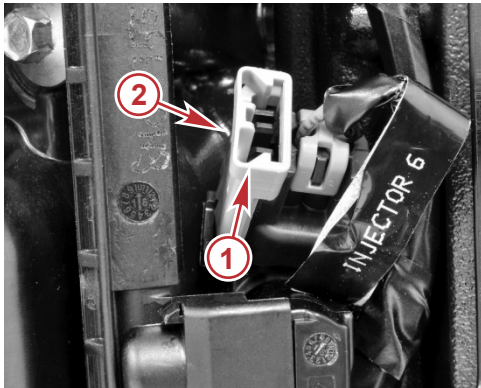

66189


- 1 - Slide
- 2 - Press/squeeze

5. Cut the metal hose clamp that secures the high-pressure hose to the bottom of the fuel rail.
6. Place a rag or shop towel under the high-pressure fuel hose, and remove the high-pressure fuel hose and filter screen (if equipped).

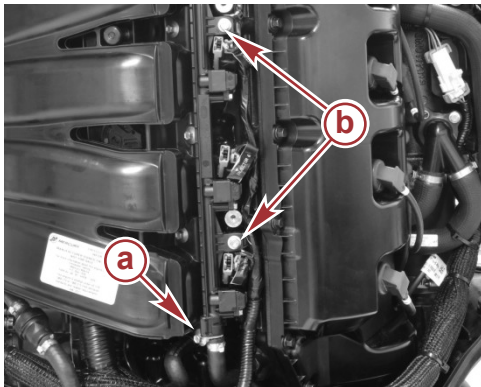

66182

- a - Metal hose clamp
- b - Fuel rail fasteners (2)

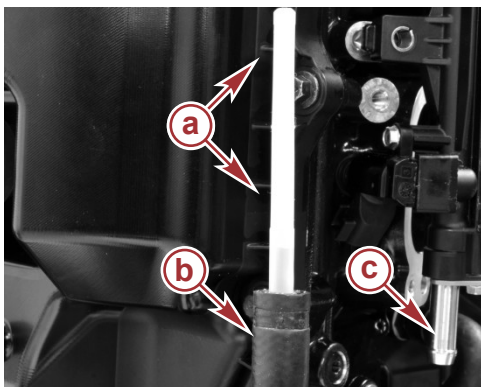


66323

- a - Fuel rail filter screen
- b - High-pressure fuel hose
- c - Bottom of the fuel rail

Service Procedures



7. Inspect the fuel rail filter screen (if equipped). Discard the filter, if particles or debris are present.

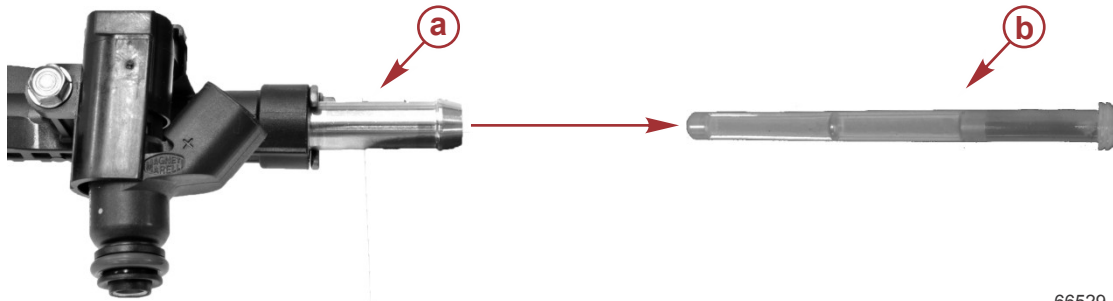

66529

- a - Fuel inlet tube
- b - Fuel rail filter screen

8. Dispose of the fuel soaked rag/shop towel into an approved container.
9. Remove the two fasteners that secure the fuel rail to the cylinder head.
10. Pull the entire fuel rail and injector assemblies out of the cylinder head with uniform force while supporting the top, center, and bottom of the fuel rail assembly.

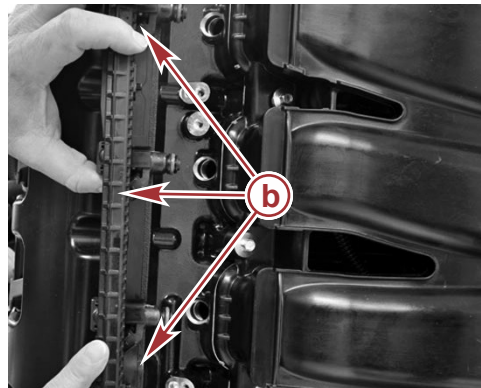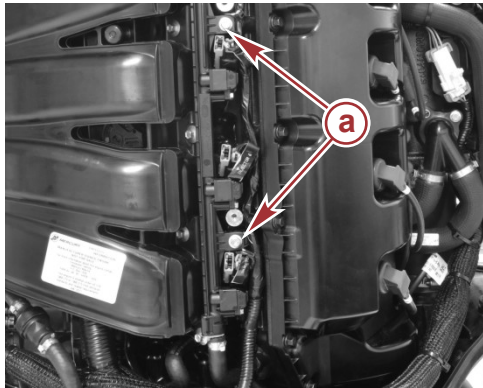


66355

Fuel rail removal

- a - Fuel rail fasteners (2)
- b - Fuel rail

Fuel Rail Disassembly

1. Remove each retaining bracket and screw from both ends of the fuel rail.
2. Remove the Schrader valve and fuel inlet tube. Inspect the O-rings. Replace the O-rings if they are damaged.

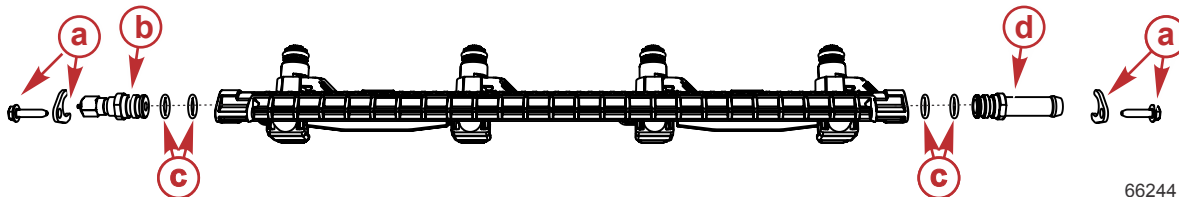


66244

- a - Retaining bracket (2) and screw (2)
- b - Schrader valve
- c - O-ring (4)
- d - Fuel inlet tube

NOTE: It is not necessary to remove the injector cups from the fuel rail assembly. Individual injectors can be removed from the fuel rail as necessary by pulling them directly out of the corresponding injector cup.


- Remove the injectors from the fuel rail injector cups.

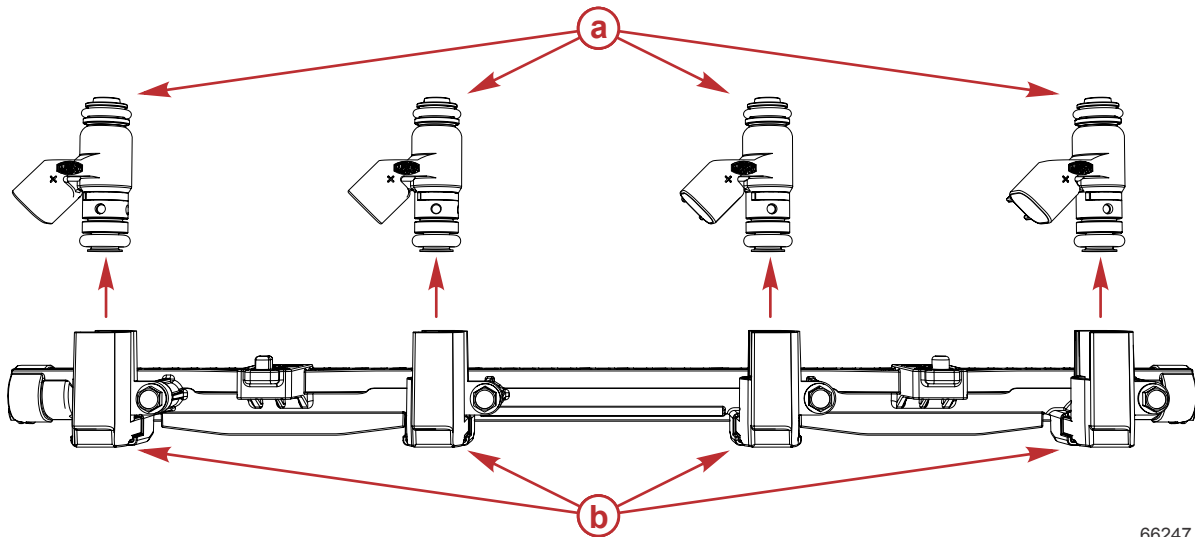

66247

- a** - Injectors
- b** - Injector cups

- Inspect the O-rings on the fuel injectors. Replace the O-rings if they are damaged.

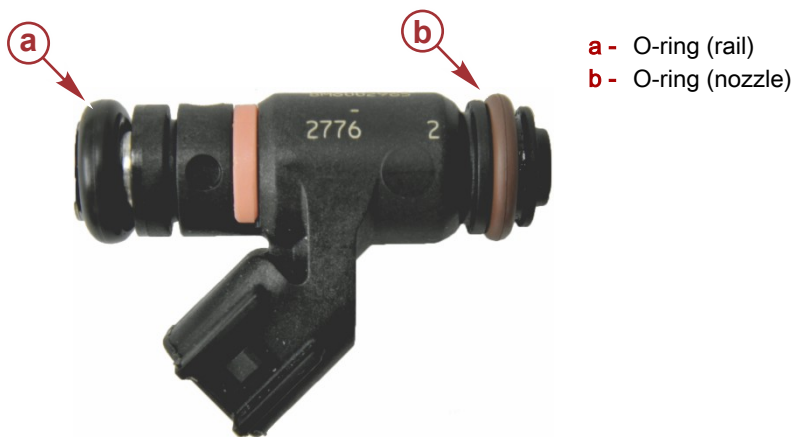

66255

- a** - O-ring (rail)
- b** - O-ring (nozzle)


Injector, Schrader Valve, and Fuel Inlet Tube Installation

- Use a solvent and compressed air to remove any debris from the inside of the fuel rail.
- Lubricate the fuel injector O-rings with Lubriplate SPO 255.

Tube Ref No.	Description	Where Used	Part No.
 136	Lubriplate SPO 255	Fuel injector O-rings	Obtain Locally

- Push the fuel injectors into the injector cups.

NOTE: Shown with injector cup removed from the fuel rail assembly for clarity.

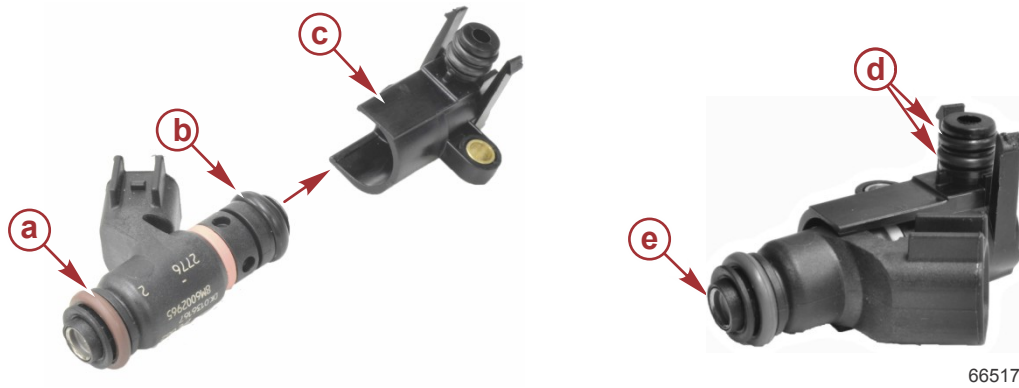


- a - O-ring (nozzle)
- b - O-ring (rail)
- c - Injector cup
- d - Injector cup O-rings
- e - Injector nozzle

4. Lubricate the Schrader valve and fuel inlet tube O-rings with Lubriplate SPO 255.

Tube Ref No.	Description	Where Used	Part No.
136	Lubriplate SPO 255	Schrader valve and fuel inlet tube O-rings	Obtain Locally

IMPORTANT: Observe the orientation of the fuel inlet tube and Schrader valve during installation. Ensure that the flat edge of each component is aligned with the keyway in the fuel rail bore.

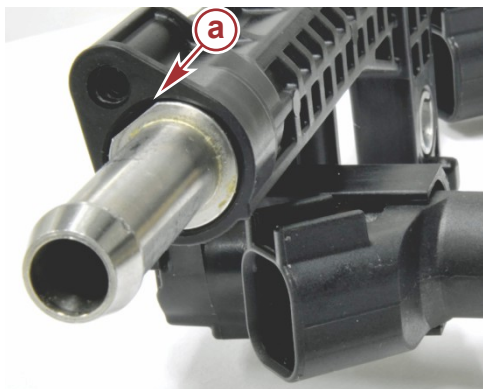

66521

Fuel inlet tube

Schrader valve


- a - Flat side of fuel inlet tube aligned with keyway
- b - Flat side of Schrader valve aligned with keyway

5. Push the fuel inlet tube into the bottom of the fuel rail until it is seated.
6. Install the fuel inlet tube retaining bracket. Tighten the retaining bracket hex screw to the specified torque.

Description	Nm	lb-in.	lb-ft
Retaining bracket hex screw	1.7	15	–

7. Push the Schrader valve into the top of the fuel rail until it is seated.

- Install the Schrader valve retaining bracket. Tighten the retaining bracket hex screw to the specified torque.

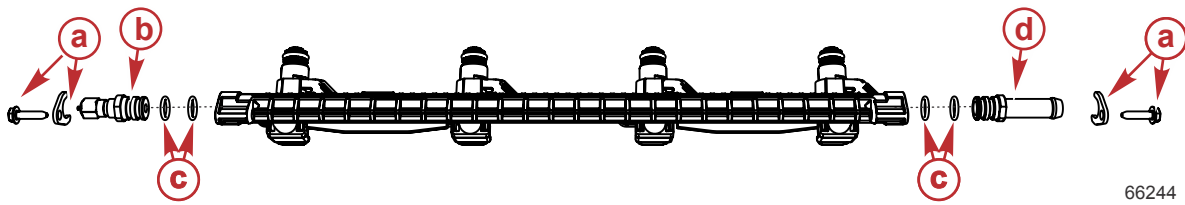


66244

- a** - Retaining bracket (2) and screw (2)
- b** - Schrader valve
- c** - O-ring (4)
- d** - Fuel inlet tube

Description	Nm	lb-in.	lb-ft
Retaining bracket hex screw	1.7	15	–

Fuel Rail Installation

- Install the fuel rail filter screen (if equipped).

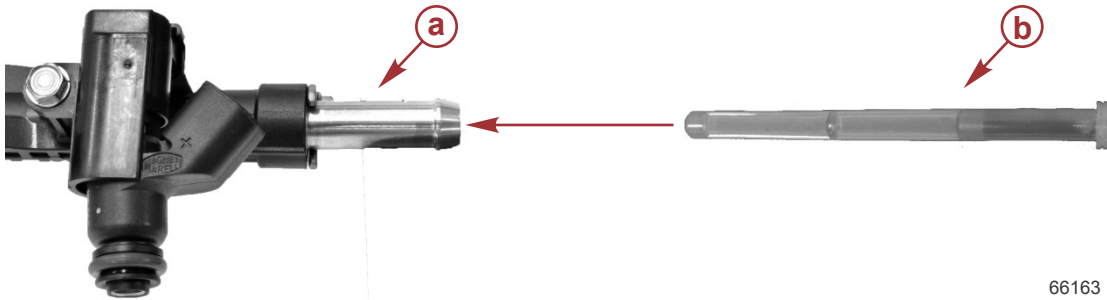

66163

- a** - Fuel inlet tube
- b** - Fuel rail filter screen

- Lubricate the cylinder head fuel injector bores with Lubriplate SPO 255.



Tube Ref No.	Description	Where Used	Part No.
136	Lubriplate SPO 255	Cylinder head fuel injector bores	Obtain Locally

- Push the entire fuel rail and injector assemblies into the cylinder head with uniform force while supporting the top, center, and bottom of the fuel rail assembly.
- Tighten the fuel rail fasteners to the specified torque.

Description	Nm	lb-in.	lb-ft
Fuel rail fasteners	10	88.5	–

Service Procedures

5. Connect the fuel line to the fuel inlet tube and secure it with a 16.2 mm Oetiker® clamp.

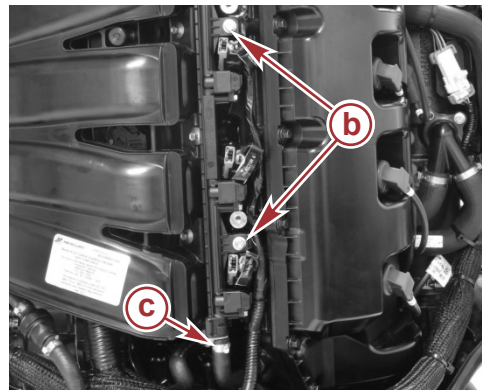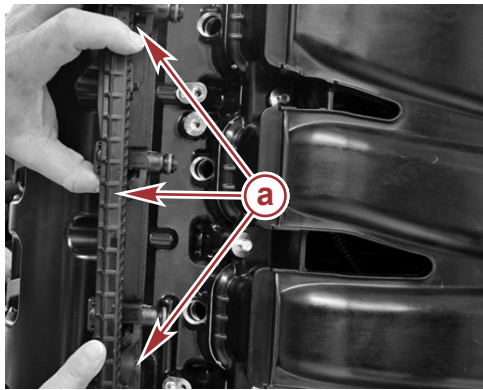


67196

- a - Fuel rail
- b - Fuel rail fasteners (2)
- c - Oetiker clamp (16.2 mm)

Clamp Tool	91-803146T
------------	------------

NOTE: Listen for an audible click when the connector engages, pull slightly on the lead to ensure a secure connection, push the locking tab into place. Pay close attention to fuel injector wire routing to prevent damage during fuel rail cover installation.

6. Connect the injector harness connectors to the injectors and slide the injector locking clips down.

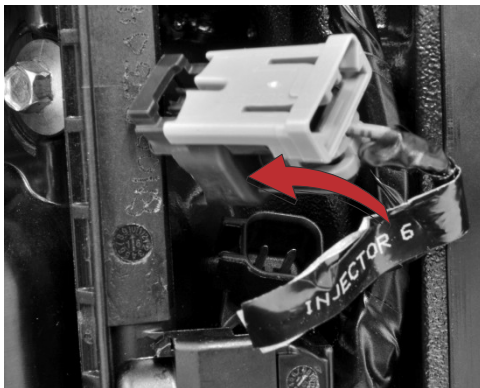


66322

⚠ WARNING

Damaged wires can cause electrical problems, resulting in system failure. In some cases, this can affect boat operation, leading to personal injury. Use conduit, hose clamps, grommets, or other appropriate measures to protect all electrical wires. Do not overtighten clamps and keep harnesses away from heat sources during installation.

7. Tuck the injector harness between the cylinder head cover and the fuel rail as pictured following. Carefully observe the harness routing to ensure that it will not be damaged when the fuel rail cover is installed. Secure the harness with one cable tie.

8. Install the fuel rail cover and tighten the two fasteners to the specified torque.

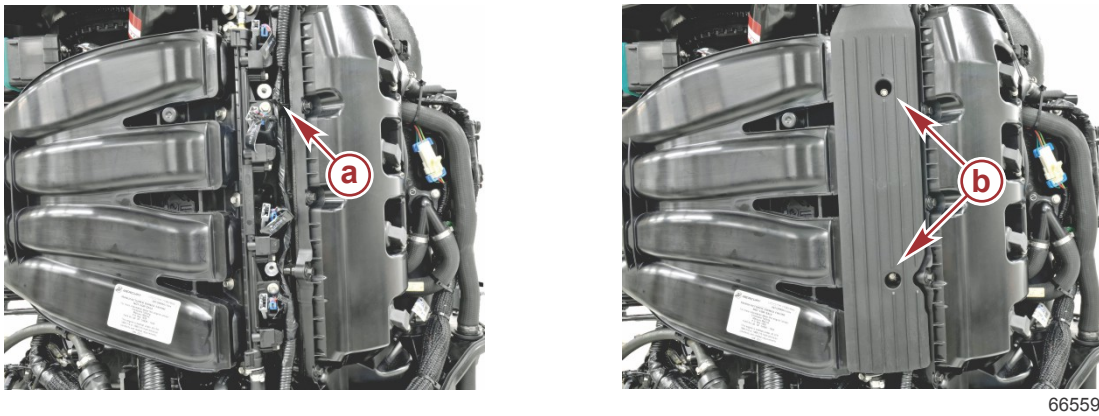


- a - Cable tie
- b - Fasteners (2)

Description	Nm	lb-in.	lb-ft
Fuel rail cover fasteners	10	88.5	–


Fuel Pump Relay

The fuel pump relay is located in the bottom of the electrical panel, at the rear of the engine.

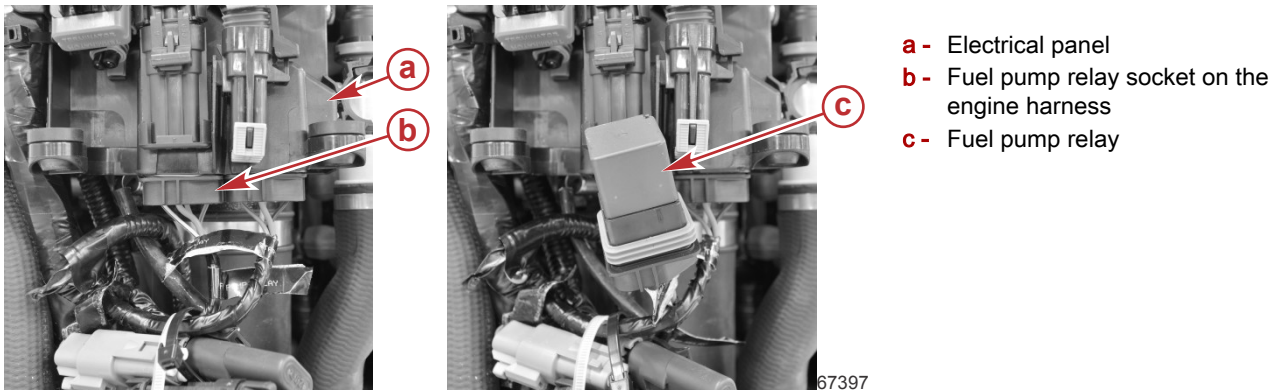

- a - Electrical panel
- b - Fuel pump relay socket on the engine harness
- c - Fuel pump relay

V8 Fuel Flow Diagram

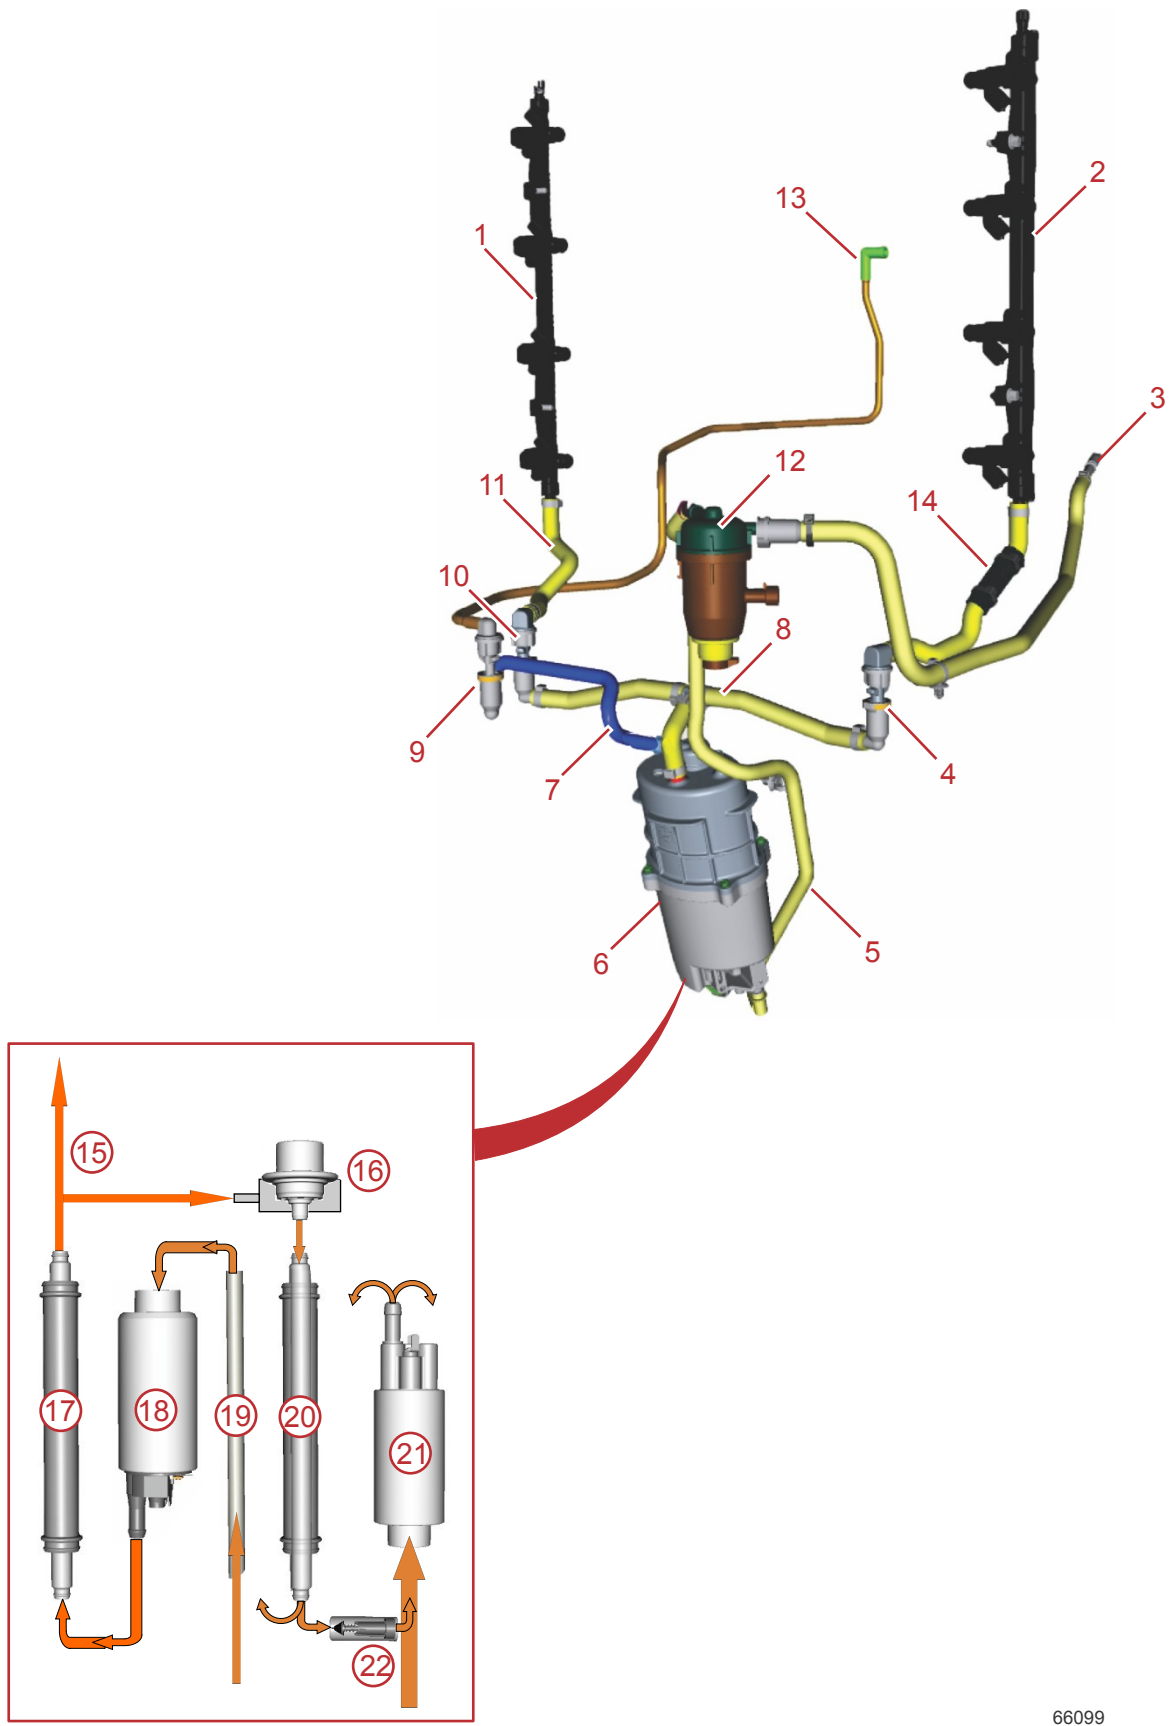

66099

- 1 - Port fuel rail
- 2 - Starboard rail and injectors
- 3 - Fuel inlet from vessel
- 4 - Starboard rail hose quick-connect
- 5 - Filter to fuel supply module (FSM) hose
- 6 - FSM
- 7 - Manifold reference base hose
- 8 - FSM T-fitting
- 9 - Manifold reference quick-connect
- 10 - Port rail hose quick-connect
- 11 - Port rail hose
- 12 - Water-separating fuel filter
- 13 - Manifold reference
- 14 - Starboard rail hose
- 15 - High-pressure to fuel rails
- 16 - Fuel pressure regulator
- 17 - Fuel cooler
- 18 - High-pressure fuel pump
- 19 - Siphon tube
- 20 - Fuel cooler
- 21 - Fuel lift pump
- 22 - Recirculation check valve

Notes:

Fuel System

Section 3C - Emissions

Table of Contents

Exhaust Emission Standards.....	3C-2	Manufacturer's Responsibility.....	3C-2
What Are Emissions?.....	3C-2	Dealer Responsibility.....	3C-2
Hydrocarbons – HC.....	3C-2	Owner Responsibility.....	3C-3
Carbon Monoxide – CO.....	3C-2	EPA Emission Regulations.....	3C-3
Oxides of Nitrogen – NOx.....	3C-2	Manufacturer's Certification Label.....	3C-3
Controlling Emissions.....	3C-2	Service Replacement EPA Decal.....	3C-4
Stoichiometric Ratio (14.7:1) Air/Fuel Ratio.....	3C-2	Removal.....	3C-4
Emissions Information.....	3C-2	Installation.....	3C-4

**3
C**

Exhaust Emission Standards

Through the U.S. Environmental Protection Agency (EPA), the federal government has established exhaust emissions standards for all new marine engines sold in the U.S.

What Are Emissions?

Emissions are what come out of the exhaust system when the engine is running. They are formed during the chemical process of combustion from the elements that are present in the combustion chamber. Some emissions are harmless, while others can be harmful to people or the environment. The U.S. EPA regulates potentially harmful emissions.

Engines manufactured by Mercury Marine reduce the emissions of certain pollutants, and potentially harmful gases in the exhaust to conform with levels legislated by the U.S. EPA. Standards are set primarily with regard to three types of emissions: hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx).

Hydrocarbons – HC

Gasoline is a hydrocarbon fuel. Two elements of hydrogen and carbon are combined with oxygen and burned during the combustion cycle. Some residual elements pass through the combustion chamber and exit the exhaust system as unburned gases known as hydrocarbons.

Carbon Monoxide – CO

Carbon is one of the elements that make up the fuel burned in the engine along with oxygen during the combustion process. If the carbon in the gasoline could combine with enough oxygen (one carbon atom with two oxygen atoms), it would come out of the engine in the form of carbon dioxide (CO₂). CO₂ is a harmless gas. Carbon often combines with insufficient oxygen (one carbon atom with one oxygen atom), forming carbon monoxide (CO). Carbon monoxide is the product of incomplete combustion and is a dangerous, potentially lethal gas.

Oxides of Nitrogen – NOx

NOx is a slightly different by-product of combustion. Nitrogen is one of the elements that makes up the air going into the engine. Under extremely high temperatures it combines with oxygen to form oxides of nitrogen (NOx). This happens in the engine's combustion chambers when temperatures are too high. NOx itself is not harmful, but when exposed to sunlight it combines with unburned hydrocarbons to create the visible air pollutant known as smog. Smog is a serious problem in California as well as many other heavily populated areas of the United States.

Controlling Emissions

There are two principle methods of reducing emissions from a four-stroke marine engine. The first method is to control the air/fuel ratio that goes into the combustion chamber. The second is to control the time when this air/fuel mixture enters the combustion chamber. Timing is important, to prevent any unburned mixture from escaping through the exhaust.

Stoichiometric Ratio (14.7:1) Air/Fuel Ratio

Engineers have discovered that pollutants and exhaust emissions can be reduced if a gasoline engine operates at an air/fuel ratio of 14.7:1. The technical term for this ratio is stoichiometry, or stoichiometric ratio. An air/fuel ratio of 14.7:1 provides the best control of all three elements in the exhaust under almost all conditions. The HC and CO content of the exhaust gas is influenced significantly by the air/fuel ratio. At an air/fuel ratio leaner than 14.7:1, HC and CO levels are low, but with a ratio richer than 14.7:1, they rise rapidly. It would seem that controlling HC and CO by themselves might not be such a difficult task; the air/fuel ratio only needs to be kept leaner than 14.7:1. However, there is also NOx to consider.

As the air/fuel ratio becomes leaner, combustion temperatures increase. Higher combustion temperatures raise the NOx content of the exhaust. Enrichment of the air/fuel ratio to decrease combustion temperatures and reduce NOx emissions will increase HC and CO emissions and adversely effect fuel economy. The solution to controlling NOx, HC, and CO - is to keep the air/fuel ratio as close to 14.7:1 as possible.

Emissions Information

Manufacturer's Responsibility

Beginning with 1998 model year engines, manufacturers of all marine propulsion engines must determine the exhaust emission levels for each engine horsepower family and certify these engines with the United States Environmental Protection Agency (EPA). A certification decal/emissions control information label, showing emission levels and engine specifications directly related to emissions, must be placed on each engine at the time of manufacture.

Dealer Responsibility

When performing service on all 1998 and newer outboards that carry a certification, attention must be given to any adjustments that are made that affect emission levels.

Adjustments must be kept within published factory specifications.

Replacement or repair of any emission related component must be executed in a manner that maintains emission levels within the prescribed certification standards.

Dealers are not to modify the engine in any manner that would alter the horsepower or allow emission levels to exceed their predetermined factory specifications.

Exceptions include manufacturer's prescribed changes, such as that for altitude adjustments. Additional exceptions include factory authorized:

- Installation of performance style gear housings by Mercury Marine.
- Service replacement parts modified, changed, or superseded by Mercury Marine.

Owner Responsibility

The owner/operator is required to have engine maintenance performed to maintain emission levels within prescribed certification standards.

The owner/operator is not to modify the engine in any manner that would alter the horsepower or allow emission levels to exceed their predetermined factory specifications.

Single engine exceptions may be allowed with permission from the EPA for racing and testing.

EPA Emission Regulations


All 1998 and newer outboards manufactured by Mercury Marine are certified to the United States Environmental Protection Agency as conforming to the requirements of the regulations for the control of air pollution from new outboard motors. This certification is contingent on certain adjustments being set to factory standards. For this reason, the factory procedure for servicing the product must be strictly followed and, whenever practicable, returned to the original intent of the design.

The responsibilities listed above are general and in no way a complete listing of the rules and regulations pertaining to the EPA laws on exhaust emissions for marine products. For more detailed information on this subject, you may contact the following location:

EPA INTERNET WEB SITE: EPA.gov

Manufacturer's Certification Label

The certification label must be placed on each engine at the time of manufacture and must be replaced in the same location if damaged or removed. Shown below is a typical certification label and is not representative of any one model. Label shown below is not to scale.

		EMISSION CONTROL INFORMATION	
THIS ENGINE CONFORMS TO <input type="checkbox"/> CALIFORNIA AND U.S. EPA EMISSION REGULATIONS FOR SPARK IGNITION MARINE ENGINES			
REFER TO OWNERS MANUAL FOR REQUIRED MAINTENANCE, SPECIFICATIONS, AND ADJUSTMENTS			
IDLE SPEED (in gear): <input type="text"/>		FAMILY: <input type="text"/>	
<input type="text"/> hp	<input type="text"/> L	HC+NOx:FEL: <input type="text"/> g/kWh	
<input type="text"/> kw		CO FEL: <input type="text"/> g/kWh	
<input type="text"/>	SPARK PLUG: <input type="text"/>		
	GAP: <input type="text"/>		
LOW PERM/HIGH PERM: <input type="text"/>			

67805

Emissions information provided on label:

- Year (California and U.S. EPA emission regulations)
- Idle speed
- Engine horsepower
- Piston displacement
- Engine power in kilowatts
- Date of manufacture
- US EPA engine family name
- HC+NOx family emissions level

Emissions

- CO family emissions level
- Recommended spark plug and gap
- Percent of fuel line permeation

Service Replacement EPA Decal

IMPORTANT: By federal law, it is required that all 1998 and newer Mercury Marine outboards have a visible and legible emission certification decal. If this decal is missing or damaged, contact Mercury Marine Service for a replacement.

Removal

Remove all remaining pieces of the damaged or illegible decal. Do not install the new decal over a damaged old decal. Use a suitable solvent to remove any traces of the old decal adhesive from the display location.

***NOTE:** If the original decal surface is in good condition, it is acceptable to clean the surface and apply the new decal over the original.*

Installation

Apply the decal on a clean surface in the original factory location.

Powerhead

Section 4A - Cylinder Block/Crankcase


Table of Contents

V8 Cylinder Block/Crankcase Specifications.....	4A-2	Installing Oil Gallery Plugs.....	4A-45
Removing Powerhead Components and Powerhead		Balance Shaft and Oil Filter Adapter Installation.....	4A-46
Removal.....	4A-4	Crankshaft Installation.....	4A-50
Removing Powerhead Components Individually.....	4A-4	Piston/Connecting Rod Assembly.....	4A-56
Removing Powerhead Components as an Assembly		Piston Ring Installation.....	4A-56
.....	4A-5	Piston Assembly Installation.....	4A-57
Electrical Harness and Component Removal.....	4A-5	Intake Plenum, Throttle Body, and Flywheel	
Exhaust Tube Removal.....	4A-17	Installation.....	4A-60
Component Removal.....	4A-19	Cylinder Head Installation.....	4A-62
Powerhead Removal from Advanced Midsection		FourStroke V8 DOHC—Camshaft Identification.....	4A-62
(AMS).....	4A-20	Timing Chain Installation.....	4A-71
Powerhead Disassembly.....	4A-26	Installing Powerhead Components and Powerhead	
Cylinder Head Removal	4A-26	Installation.....	4A-78
Crankcase and Crankshaft Disassembly/Removal..	4A-33	Component Installation Prior to Powerhead	
Cleaning, Inspection, and Repair.....	4A-39	Installation.....	4A-78
Measuring Cylinder Bore.....	4A-39	Oil Pump Installation.....	4A-82
Measuring Piston.....	4A-39	Powerhead Installation Onto Advanced Midsection	
Measuring the Connecting Rods	4A-42	(AMS).....	4A-83
Measuring Crankshaft.....	4A-42	Dipstick Tube and Exhaust Tube Installation.....	4A-86
Selecting New Crankshaft and Connecting Rod		Electrical Harness and Component Installation.....	4A-91
Bearings.....	4A-43	Engine Break-in Procedure.....	4A-105
Powerhead Assembly.....	4A-45		
Powerhead Preassembly Cleaning			
Recommendations.....	4A-45		

V8 Cylinder Block/Crankcase Specifications


V8 Cylinder Block/Crankcase Specifications	
Number of cylinders	8
V-angle	64°
Displacement	4576 cc/4.6 L (279.2 cid)
Compression ratio	10:1
Standard bore	92.00 mm (3.6220 in.)
Standard bore service limit	92.015 mm (3.6226 in.)
Stroke	86.00 mm (3.386 in.)
Cylinder bore maximum taper	0.02 mm (0.0007 in.)
Cylinder bore maximum out of round	0.015 mm (0.0006 in.)
Cylinder block main bearing bore	64.988–65.012 mm (2.5586–2.5595 in.)
Crankshaft main bearing journal	59.984–60.000 mm (2.3616–2.3622 in.)
Connecting rod bearing journal	53.984–54.000 mm (2.1254–2.1259 in.)
Crankshaft end play	0.00–0.432 mm (0.000–0.017 in.)
Crankshaft runout	0.05 mm (0.002 in.)
Crankshaft main bearing oil clearance—measured at 20 °C (68 °F), 90° from the split line	0.036–0.070 mm (0.0015–0.0027 in.)
Connecting rod bearing oil clearance—measured at 20 °C (68 °F), 90° from the split line	0.046–0.074 mm (0.0019–0.0029 in.)
Crankshaft thrust bearing surface width	25.95–26.05 mm (1.0217–1.0255 in.)
Connecting rod wrist pin bore diameter	20.014–20.022 mm (0.7880–0.7882 in.)
Connecting rod bore diameter (without bearing inserts)	57.000–57.016 mm (2.2441–2.2447 in.)
Piston skirt standard diameter	91.927–91.937 mm (3.6192–3.6195 in.)
Piston wrist pin bore diameter	20.005–20.010 mm (0.7876–0.7878 in.)
Wrist pin diameter	19.996–20.001 mm (0.7873–0.7874 in.)
Top ring groove width	1.22–1.25 mm (0.0480–0.0492 in.)
Second ring groove width	1.01–1.03 mm (0.0398–0.0405 in.)
Third ring groove width	2.01–2.03 mm (0.0791–0.0799 in.)
Top ring thickness—maximum	1.20 mm (0.0472 in.)
Second ring thickness—maximum	1.00 mm (0.0393 in.)
Top ring side clearance	0.02–0.05 mm (0.0008–0.0019 in.)
Second ring side clearance	0.01–0.03 mm (0.0004–0.0011 in.)
Top ring end gap	0.20–0.215 mm (0.008–0.0084 in.)
Second ring end gap	0.40–0.425 mm (0.016–0.0167 in.)
Oil ring end gap (top and bottom) (expander not applicable)	0.40–0.425 mm (0.016–0.0167 in.)

Lubricants, Sealants, Adhesives





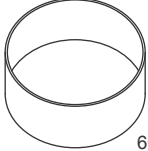


Tube Ref No.	Description	Where Used	Part No.
	Torco MPZ® Engine Assembly Lube HP	Outer thrust bearing surfaces	Obtain Locally

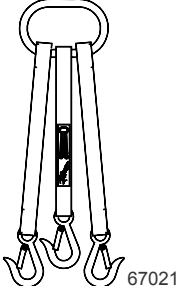Tube Ref No.	Description	Where Used	Part No.
25	Liquid Neoprene	Ground wire connections	92-25711 3
		Starter motor electrical connections	
		Ground wire connection	
		Alternator output connection	
		Battery connections at the engine	
66	Loctite 242 Threadlocker	Ground cable connection	92-809821
		Balance shaft retainer screw threads	
		Sprocket screw threads	
		Threads of bedplate perimeter bolts	
81	Anti-Seize Compound	Threads of the intake runner screws	92-898101389
		Spark plug threads	
91	Engine Coupler Spline Grease	Inside lip of the crankshaft seal	8M0071842
		Oil pump seals and O-rings	
		Driveshaft splines	
95	2-4-C with PTFE	Inner thrust bearing surfaces	92-802859A 1
99	Isopropyl Alcohol	Mating surfaces of the cylinder block and bedplate	Obtain Locally
110	10W-30 4-Stroke Marine Engine Oil	O-rings	92-8M0078625
		Double O-ring balance shaft top cover	
		Oil tube O-rings	
		Cylinder bores	
		Threads of the special left-hand thread screw	
		Oil fill hose fitting O-ring	
		Oil pump	
		Dipstick grommet	
135	Three Bond 1217F	Upper dipstick O-ring	92-858005K02
		Mating surface of balance shaft cover	
136	Lubriplate SPO 255	Bedplate sealing surface	Obtain Locally
		Balance shaft upper bearing and bottom bore	
		Threads and under the heads of all main bearing bolts	
		Main bearing halves	
		Bolt holes, threads, and mating area around holes	
		Piston pin	
		Inside diameter of the connecting rod bearing halves	
		Piston skirts and rings	
139	Synthetic Blend 4-Stroke Outboard Oil 25W-40	Rod cap mating surfaces, bearing halves, rod bolt threads, and under the connecting rod bolt heads	92-8M0078629
		Camshaft bearing surfaces, lifter buckets, camshaft bearing journals, and camshaft thrust surfaces	
		Piston ring grooves and piston rings	

Special Tools

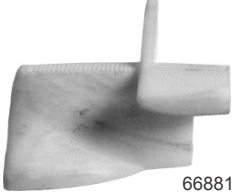Lifting strap	883705T01
 <p>67021</p>	Use with an overhead hoist to lift an engine.

Cylinder Block/Crankcase

Alternator Belt Shoe	8M0146862
 <p>66881</p>	<p>Aids in the installation and removal of the alternator belt on V6/V8 fourstroke outboards. Tool ID number 8M0140323.</p>
Flywheel Socket	8M0146861
 <p>66882</p>	<p>Aids in the manual rotation of the flywheel, especially for alternator belt removal and installation. Tool ID number 8M0144583</p>
Rod Guide Dowels	8M0148866
 <p>67517</p>	<p>Protects the cylinder bore and crankshaft from damage while removing or installing the connecting rods.</p>
Angle Gauge	Obtain Locally
 <p>66470</p>	<p>Aids in locating a specific degree when incorporating a torque and turn process into the assembly process.</p>
ARP Piston Ring Compressor	ARP 901-9200
 <p>60579</p>	<p>Compresses piston ring into ring grooves during installation of piston into cylinder bore. 92 mm (3.622 in.)</p>
Flywheel Holding Tool	91- 52344
 <p>4738</p>	<p>Holds and/or turns the flywheel while making engine repairs, also used to torque the flywheel or the engine coupler.</p>
Timing Chain Holding Tool	8M0148867
 <p>67513</p>	<p>Holds the timing chain on the crankshaft sprocket during timing chain installation.</p>

Removing Powerhead Components and Powerhead Removal

Removing Powerhead Components Individually

This section explains where to look for information about removing and installing engine components individually.

If removing engine components for purposes of powerhead repair such as internal engine service, refer to **Removing Powerhead Components as an Assembly**.

To remove this component individually...	Refer to ...
Alternator	2B
Alternator belt	1B
Camshaft position sensor	2A
Crankshaft position sensor (CPS)	2A
Flywheel	2A
Fuel filter	1B
Fuel injectors	3B
Fuel rail	3B
Fuel supply module (FSM)	3B
Ignition coils	2A
Intake runners	3A
Main power relay	2A
Manifold absolute pressure (MAP) sensor	2A
Manifold air temperature (MAT) sensor	2A
Spark plugs	1B
Starter motor	2B
Start relay	2B
Thermostat	4D
Throttle body	3A
Trim relays	Diagnostic Manual
Oil level sensor	2C
Oil pump	4C
Oil pressure sensor	4C
Oxygen sensor	2A
Propulsion control module (PCM)	2A
Water temperature sensor	4D
Water pressure sensor	4D

Removing Powerhead Components as an Assembly

If removing engine components for purposes of powerhead repair such as internal engine service or long block replacement, refer to the following procedures to undress and remove the powerhead.

Refer to **Removing Powerhead Components Individually** to locate individual component removal procedures.

Electrical Harness and Component Removal

WARNING

Performing service or maintenance without first disconnecting the battery can cause product damage, personal injury, or death due to fire, explosion, electrical shock, or unexpected engine starting. Always disconnect the battery cables from the battery before maintaining, servicing, installing, or removing engine or drive components.


This procedure will remove the engine electrical harness, PCM, fuse box, and electrical plate as an assembly to protect it from damage and oil exposure while servicing the powerhead.

1. Remove the upper and lower cowls. Refer to **Section 5C - Upper and Lower Cowls**.
2. Drain the engine oil. Refer to **Section 1B - Changing Engine Oil and Filter**.
3. Relieve the fuel pressure. Refer to **Section 3 - Fuel System**.

CAUTION

Failure to release pressure from the fuel system will result in fuel spraying out, which can cause a fire or explosion. Allow the engine to cool completely and release all fuel pressure before servicing any part of the fuel system. Always protect eyes and skin from pressurized fuel and vapors.


4. Disconnect the fuel hose and the water-in-fuel (WIF) sensor connector from the fuel filter.

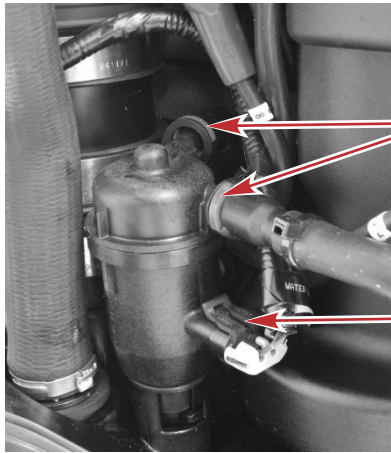

65886


- a - Fuel hose release tabs
- b - WIF sensor connector

5. Remove the fuel filter from the adapter plate by turning it one quarter turn clockwise and pulling up.

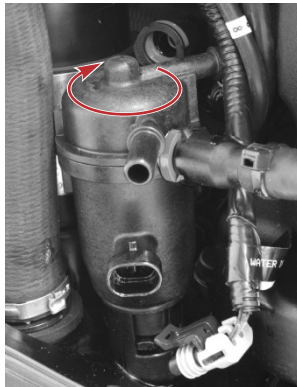

65887


6. Remove the manifold reference hose and flush hose from their retainer.

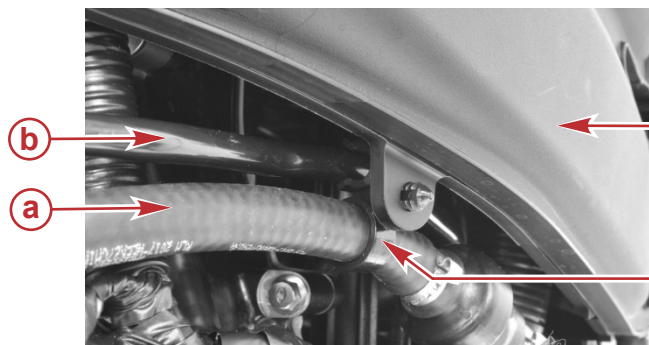

65890

- a - Flush hose
- b - Manifold reference hose
- c - Port intake runner
- d - Retainer


- Remove the manifold reference hose from the fitting near port intake runners.

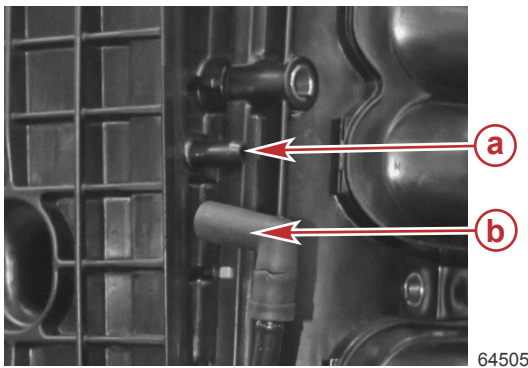

- a - Fitting
- b - Manifold reference hose

64505

- Remove the manifold reference hose from the fitting near the starboard intake runners.

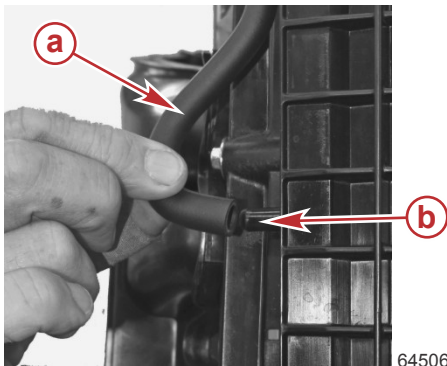


- a - Manifold reference hose
- b - Fitting

64506

- Remove the two screws securing the fuel rail covers. Remove the covers.

NOTE: The screws are captured in the fuel rail covers.

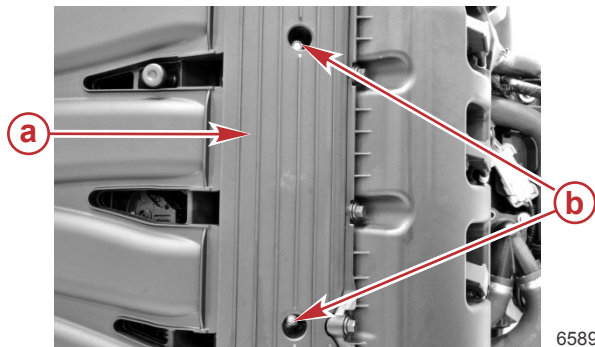


- Port side shown; starboard similar
- a - Fuel rail cover
 - b - Screws (2 per side)

65892

- Remove the screws securing the intake runners from each side of the powerhead. Remove the intake runners.


NOTE: Intake runner screws are different lengths. Do not intermix the hardware.

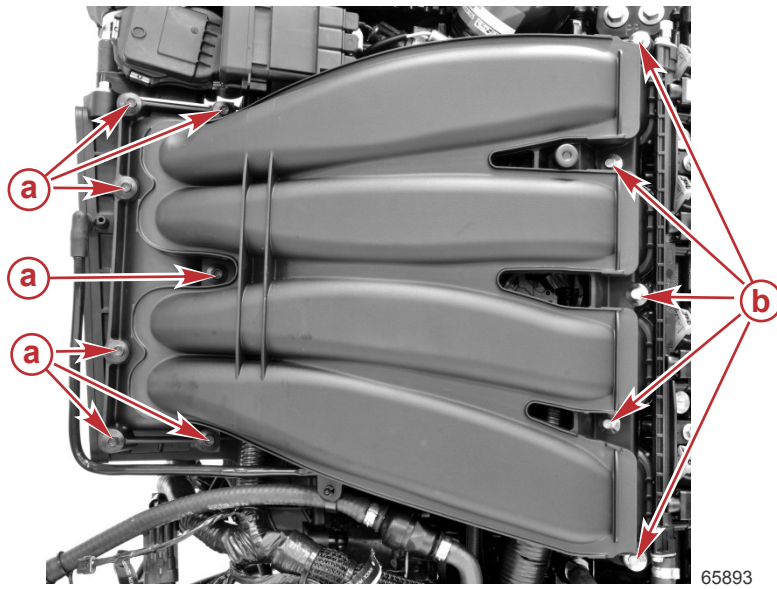

Port side shown; starboard similar


- a - M6 x 37 screws (7)
- b - M6 x 30 screws (5)

11. Disconnect the air temperature sensor connector from behind the starboard intake runners.

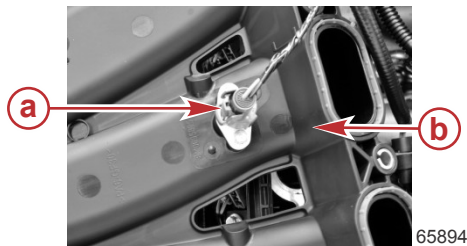

- a - Air temperature sensor connector
- b - Starboard intake runners


12. Cut the cable tie securing the fuel hose. Remove the fuel hose from its retainer.

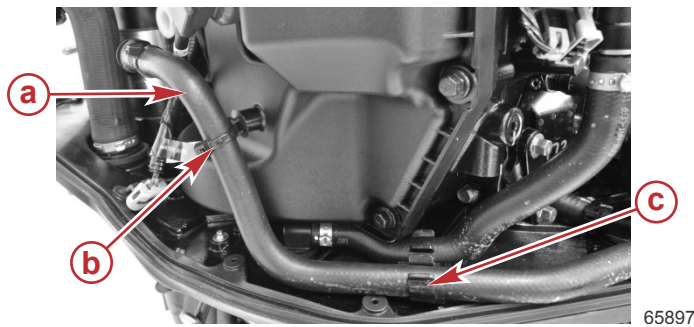

- a - Fuel hose
- b - Cable tie
- c - Retainer


13. Remove the engine oil dipstick.

14. Cut the cable tie and remove the breather hose from the flywheel cover/air box.

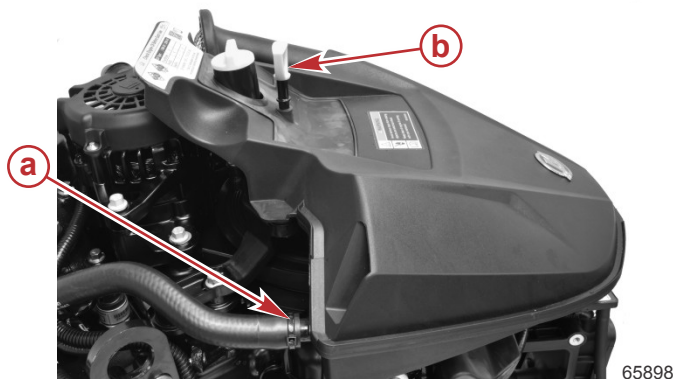

- a - Cable tie securing the breather hose
- b - Engine oil dipstick


15. Loosen the throttle body clamp and remove the flywheel cover/air box.

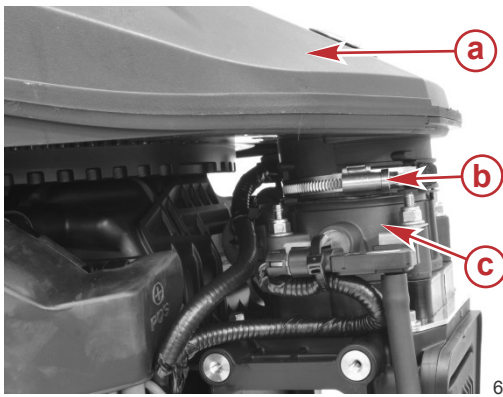

- a** - Flywheel cover/air box
- b** - Throttle body clamp
- c** - Throttle body


16. Cut the cable tie securing the wiring harness behind the fuse box.

17. Unplug the oil pressure and oil sensor connectors.

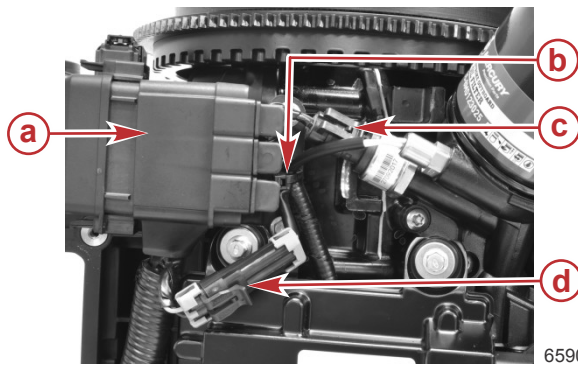

- a** - Fuse box
- b** - Cable tie
- c** - Oil pressure sensor connector
- d** - Oil temperature sensor connector


18. Cut the cable tie securing the injector harness to the port fuel rail.

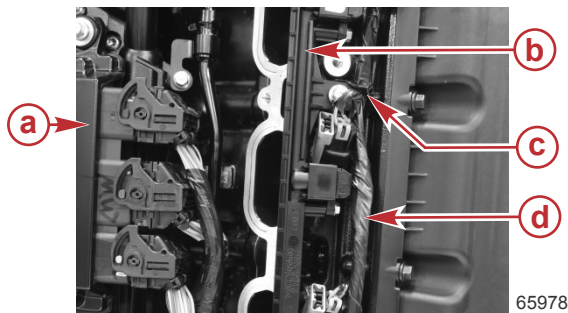

- a** - Propulsion control module (PCM)
- b** - Port fuel rail
- c** - Cable tie
- d** - Injector harness


19. Unplug the fuel injector connectors from the port fuel rail. To disconnect the fuel injector harness connectors:

- a. Slide the gray lock tab up.
- b. Press the gray lock tab and pull the connector away from the injector.

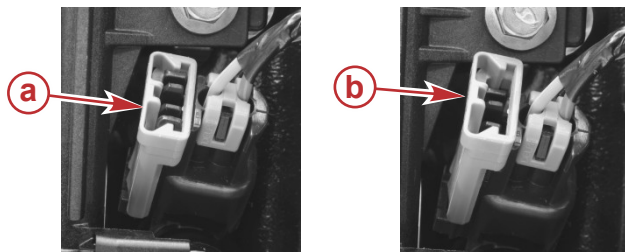

- a** - Gray lock tab (slide up)
- b** - Gray lock tab (press here)

20. Cut the cable tie and unplug the oxygen sensor connector.

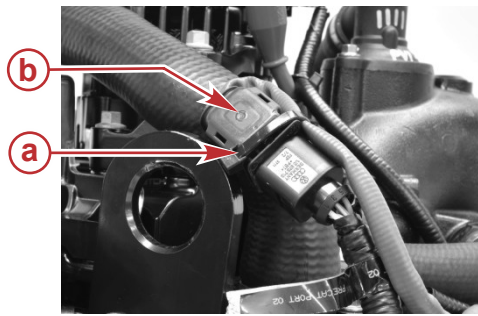


- a - Cable tie
- b - Oxygen sensor connector

65910

21. Cut the cable tie securing the harness next to the propulsion control module (PCM).
22. Remove the three screws securing the PCM to the powerhead. Remove the PCM.


NOTE: The three main PCM connectors can remain attached to the PCM.

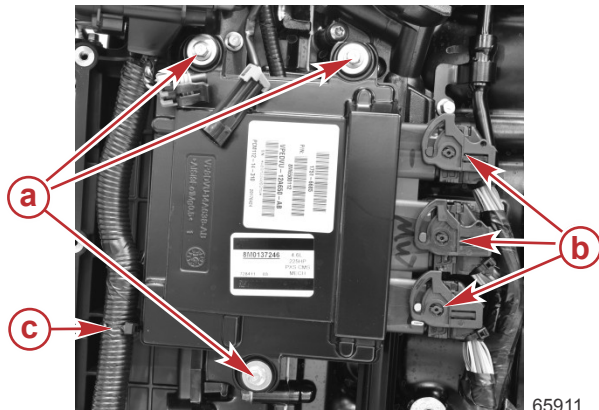

- a - Screws (3)
- b - PCM connectors (3)
- c - Cable tie

65911


23. Remove the two screws securing the fuse box to the powerhead. Remove the fuse box.
24. Remove the ground wire connections behind where the PCM was mounted.

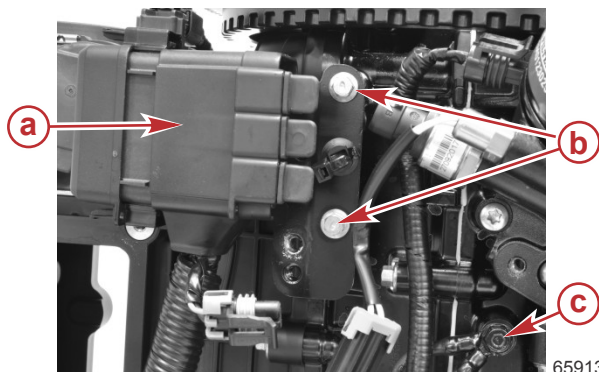

- a - Fuse box
- b - Screws (2)
- c - Ground wire connection

65913


25. Cut the cable tie securing the wiring harness under the intake plenum.

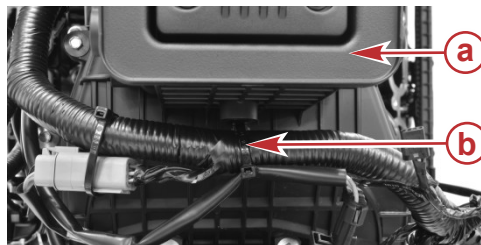

- a - Intake plenum
- b - Cable tie


65914

26. Cut the cable tie securing the wiring harness. Remove the battery terminal cover.

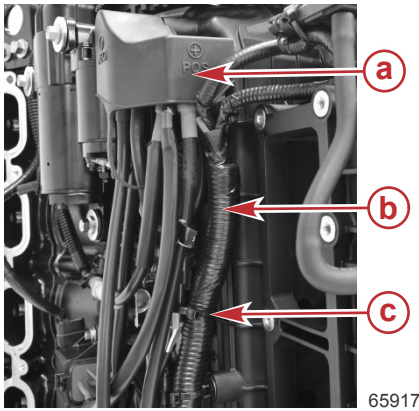


- a** - Battery terminal cover
- b** - Wiring harness
- c** - Cable tie

27. Remove the battery cables from their terminals.

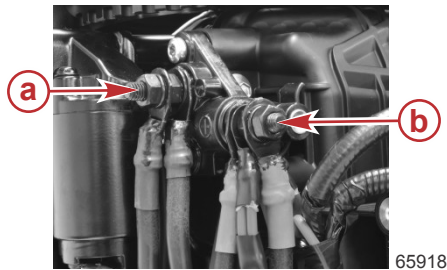


- a** - Negative (-) battery terminal
- b** - Positive (+) battery terminal

28. Remove the three T30 Torx® screws securing the battery cable terminal block to the powerhead. Remove the battery cable terminal block.

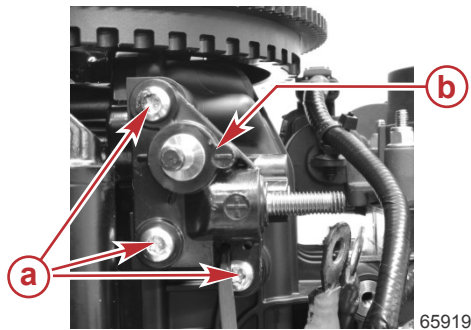

- a** - Torx screws (3)
- b** - Battery cable terminal block

29. Cut the cable tie and remove the drain hose from the fitting on the starboard side of the powerhead.

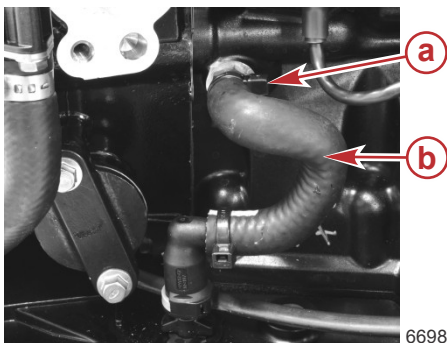


- a** - Drain hose
- b** - Cable tie

30. Cut the cable tie securing the manifold absolute pressure (MAP) sensor. Unplug the MAP sensor connector.

31. Cut the cable tie behind the electronic throttle body.

Cylinder Block/Crankcase


32. Remove the electronic throttle body connector by pulling out the red lock tab, then gently pulling on the connector.

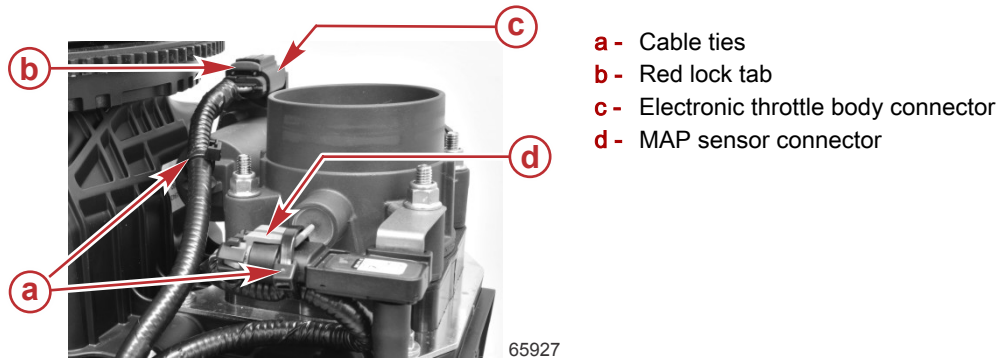

33. Cut the cable ties on the top of the starboard cylinder head.

34. Unplug the water temperature sensor connector.


35. Unplug the block water pressure sensor connector.

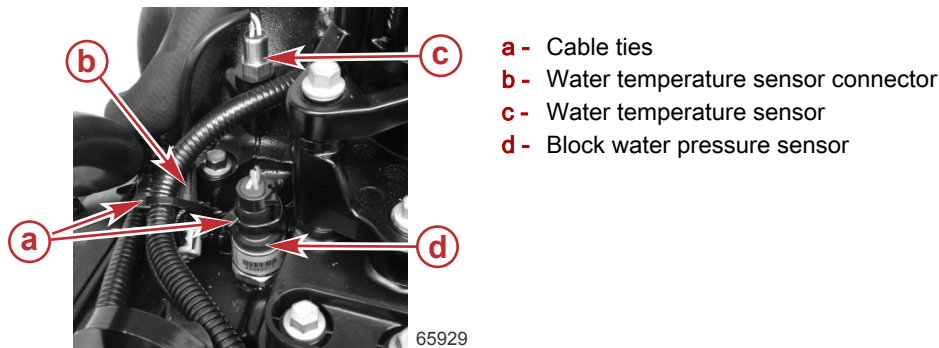

36. Cut the cable tie near the alternator.


37. Unplug the alternator wire connector.

38. Move the cable boot and remove the positive (+) lead from the alternator. Retain the spacer from behind the positive (+) lead.


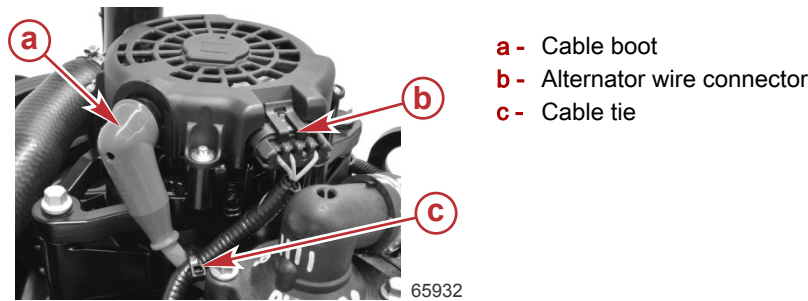


39. Cut the cable tie securing the oxygen sensor harness and crankshaft position sensor harness.

40. Unplug the crankshaft position sensor connector.

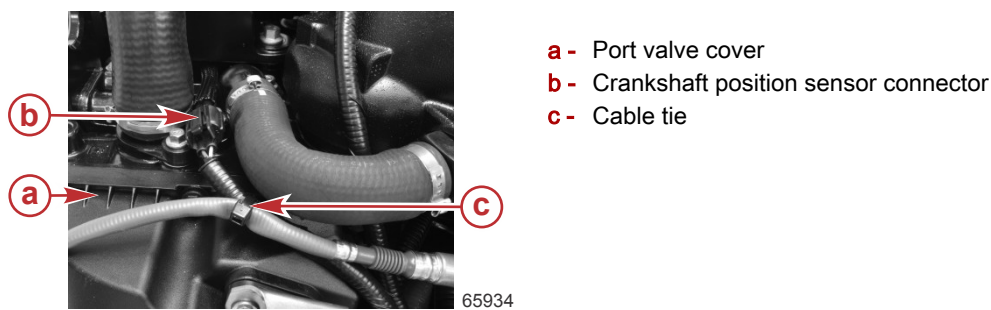


41. Remove the screw and sensor guard from the camshaft position sensor. Unplug the camshaft position sensor connector and remove the sensor.

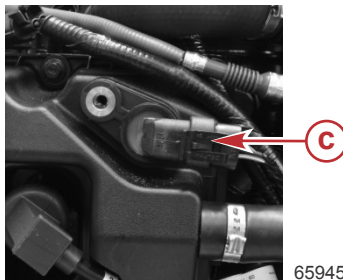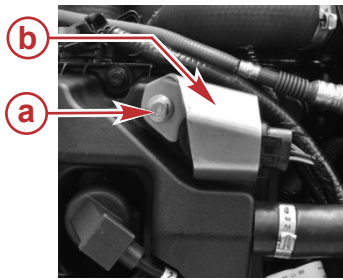

- a - Screw
- b - Sensor guard
- c - Camshaft position sensor connector

65945

42. Remove the 31.6 mm Oetiker® clamp securing the thermostat dump hose to the adapter plate. Remove the hose from the adapter plate.

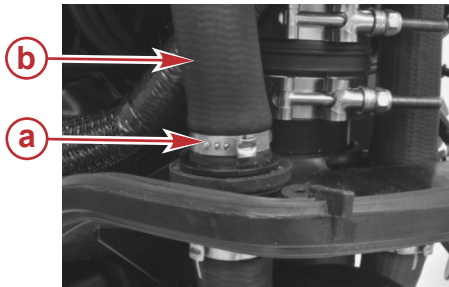


- a - 31.6 mm Oetiker clamp
- b - Thermostat dump hose

65947

43. Disconnect the active sound control module connector:
- a. Pull the red tab aft.
 - b. Press down on the red tab while pulling the connector aft.


NOTE: Move the engine harness for better access to the connector.

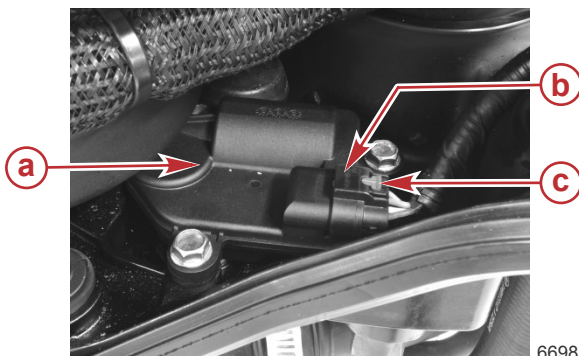

- a - Active sound control module
- b - Connector
- c - Red tab

66985

44. Unplug the ignition coil primary lead connector.

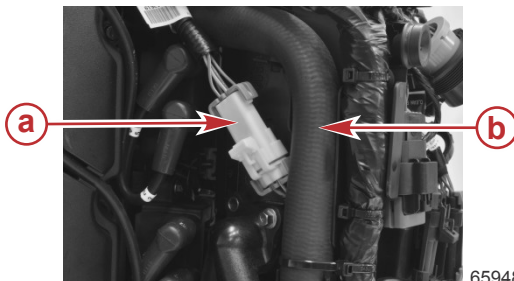


- a - Ignition coil primary lead connector
- b - Thermostat dump hose

65948


45. Remove the thermostat housing screws and remove the thermostat housing.

IMPORTANT: Do not pry on the thermostat housing to remove it. Rotate the housing back and forth while pulling upward to remove.

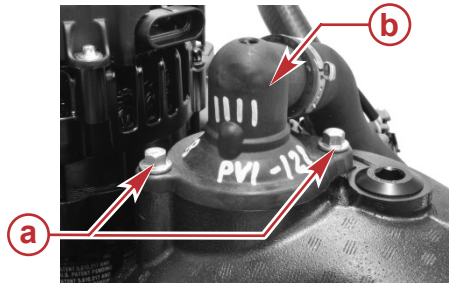


- a - Screws
- b - Thermostat housing

46. Cut the cable tie securing the digital oil level sensor module to the relay bracket.
47. Disconnect and remove the digital oil level sensor.
48. Remove the two screws securing the relay bracket. Remove the relay bracket.
49. Remove the ground wire connection near the starter motor.

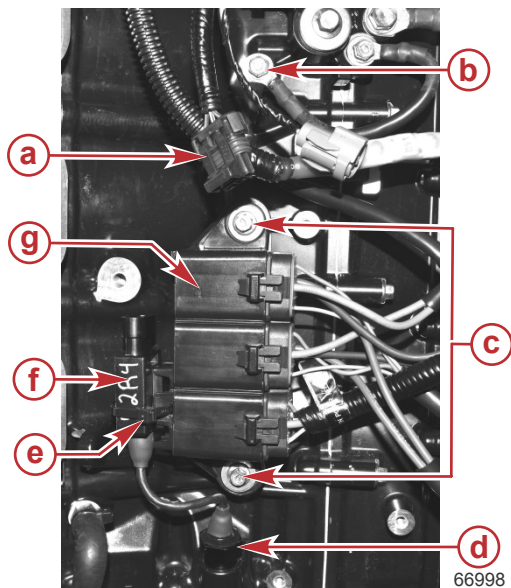


- a - Harness connector
- b - Ground wire connection
- c - Relay bracket screws
- d - Digital oil level sensor
- e - Cable tie
- f - Digital oil level sensor module
- g - Relay bracket

50. Remove the starter solenoid wire (yellow/red) and positive (+) battery cable from the starter solenoid.
51. Remove the three screws and washers securing the starter motor. Remove the starter motor.

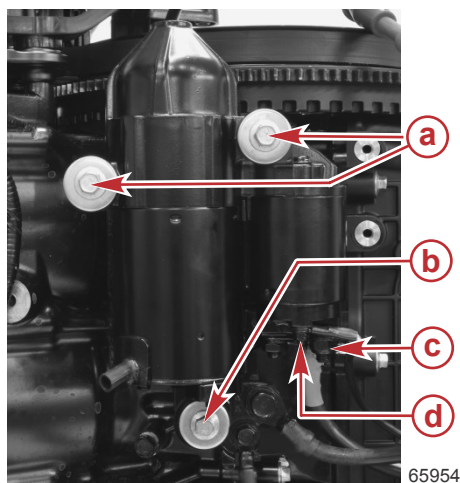


- a - M8 x 80 screws and washers
- b - M8 x 45 screw and washers
- c - Positive (+) battery cable
- d - Starter solenoid wire (yellow/red)


52. Cut the cable tie and unplug the shift actuator connector located below the intake plenum.

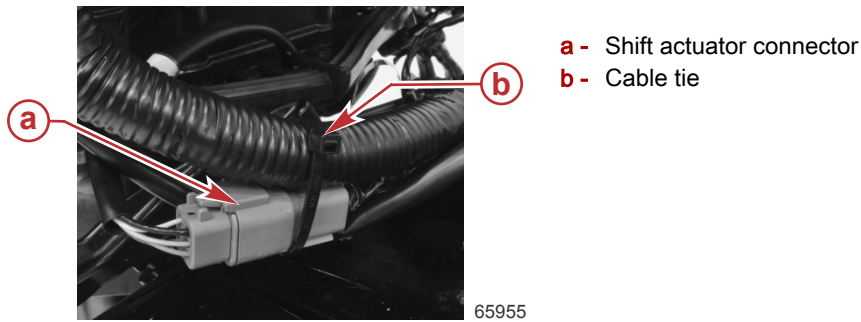

53. Remove the screw securing the ground cable on the starboard side of the powerhead.

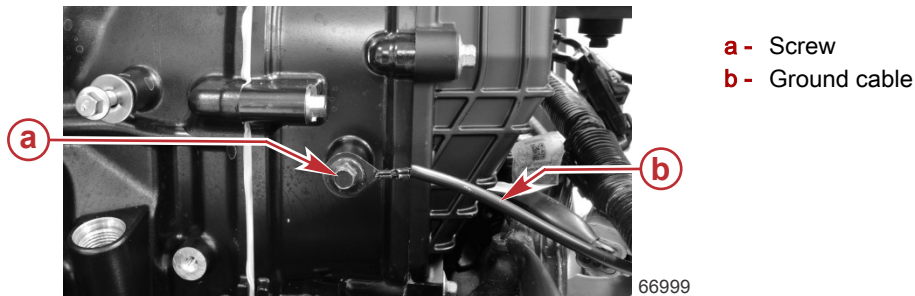

54. Cut the cable tie securing the port side drain hose. Remove the water drain hose from the powerhead.

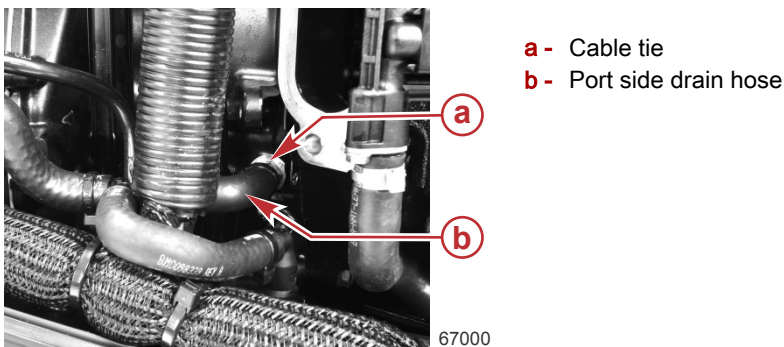

55. Ensure that the fuel pressure is relieved from the fuel system. Refer to **Section 3 - Fuel System**.


CAUTION

Failure to release pressure from the fuel system will result in fuel spraying out, which can cause a fire or explosion. Allow the engine to cool completely and release all fuel pressure before servicing any part of the fuel system. Always protect eyes and skin from pressurized fuel and vapors.


56. Remove the 16.2 mm Oetiker clamps from the fuel rails.

57. Remove the fuel hoses and fuel line filters from the fuel rails.

IMPORTANT: Fuel will be present in the fuel rails and fuel hoses. Collect as much fuel as possible and prevent fuel from contacting the harness.

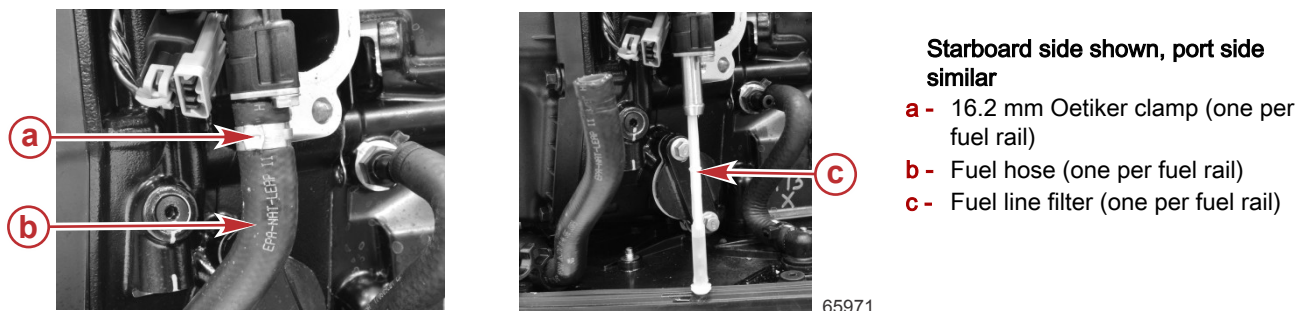


58. Cut the cable tie securing the injector harness to the starboard fuel rail.

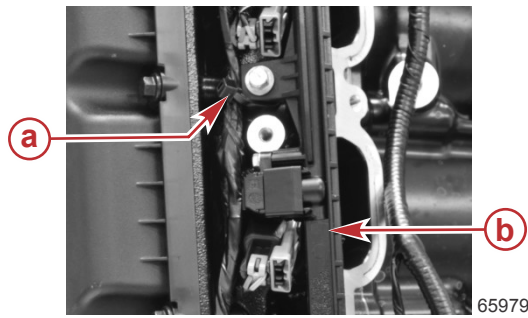


- a - Cable tie
- b - Starboard fuel rail

59. Unplug the fuel injector connectors from the starboard fuel rail. To disconnect the fuel injector harness connectors:
- a. Slide the gray lock tab up.
 - b. Press the gray lock tab and pull the connector away from the injector.

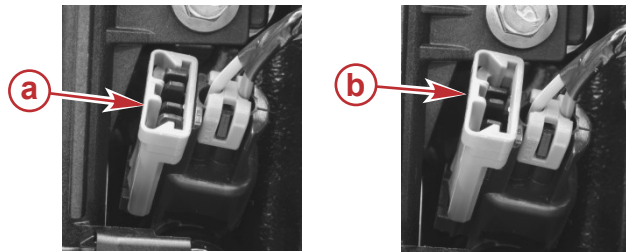

- a - Gray lock tab (slide up)
- b - Gray lock tab (press here)


60. Pull the electrical harness with the starboard side fuel injector connections behind the exhaust tube.
61. Cut the cable tie securing the aft wiring bundle together.
62. Cut the cable tie securing the thermostat dump hose to the electrical plate.
63. Cut the cable tie securing the breather hose to the electrical plate.
64. Remove the thermostat dump hose and thermostat housing by pulling the assembly upward, behind the exhaust tube.

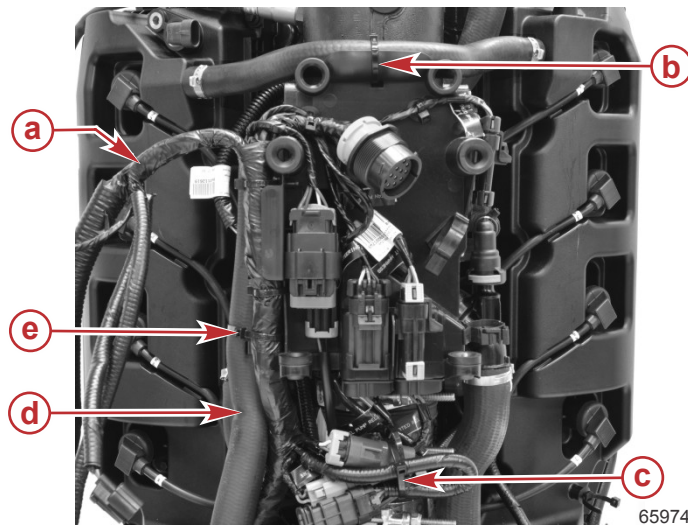

- a - Electrical harness from starboard side
- b - Cable tie securing the breather hose
- c - Cable tie securing the aft wiring bundle
- d - Thermostat dump hose
- e - Cable tie securing thermostat dump hose

65. Push the fuel pump connector upward to free the connector from the electrical plate. Unplug the fuel pump connector.


66. Unplug the exhaust gas temperature (EGT) sensor connector.

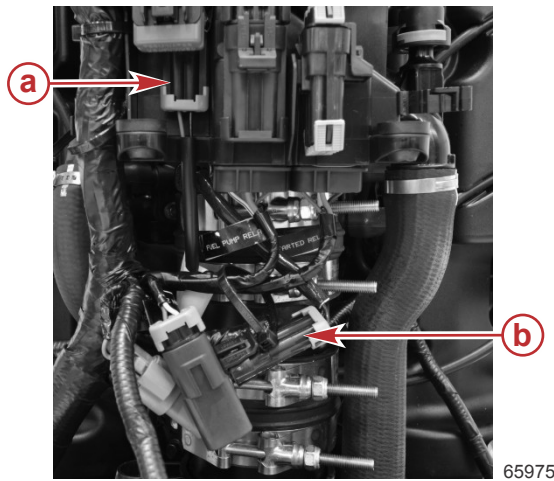

- a** - Fuel pump connector
b - EGT sensor connector

65975

67. Remove the top two T30 Torx screws and washers securing the electrical plate to the exhaust tube.
68. Push the ignition coil harness connector upward to free it from the electrical plate.

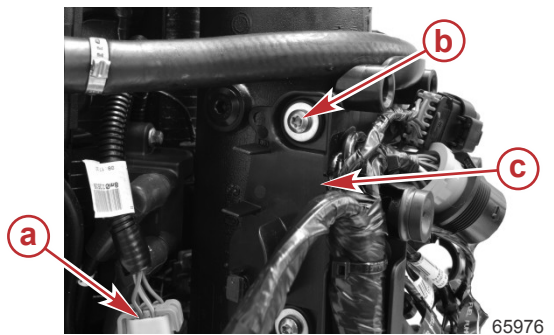


- a** - Ignition coil harness connector
b - T30 Torx screws and washers (one each per side)
c - Electrical plate

65976

69. Tilt the top of the electrical plate aft, then pull upward to remove.
70. Remove the harness, electrical plate, and PCM as an assembly.

Exhaust Tube Removal


1. Press the blue tab on the water hose connector with a screwdriver and pull the water hose connector up to disconnect. Rotate the water hose out of the way.

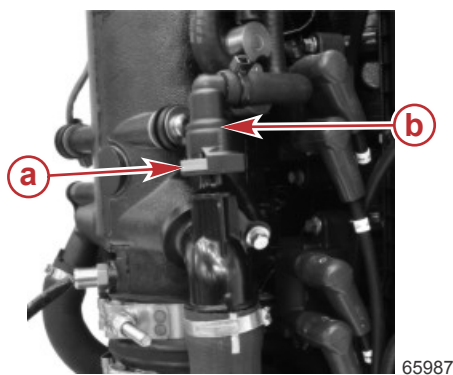

- a** - Blue tab
b - Water hose connector

65987


2. Remove the strainer by pulling it up out of the water hose fitting.

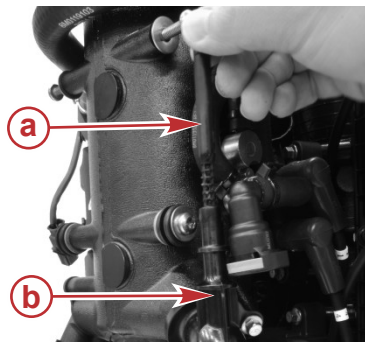

- a** - Strainer
- b** - Water hose fitting

65991


3. Remove the screw securing the water strainer fitting to the starboard side of the exhaust tube. Rotate the fitting back and forth while pulling away from the exhaust tube to remove.

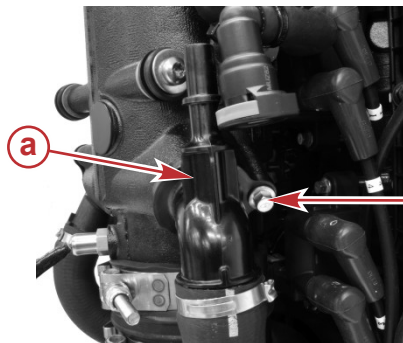

- a** - Water strainer fitting
- b** - Screw

65993


4. Remove the screw securing the water supply fitting to the port side of the exhaust tube. Rotate the fitting back and forth while pulling away from the exhaust tube to remove.

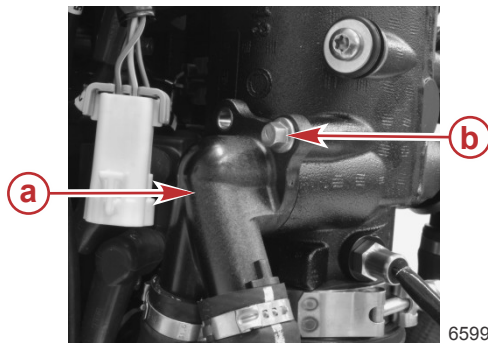

- a** - Water supply fitting
- b** - Screw

65994

5. Remove the thread protectors and loosen the bottom exhaust boot clamp until it is completely free from the exhaust boot.

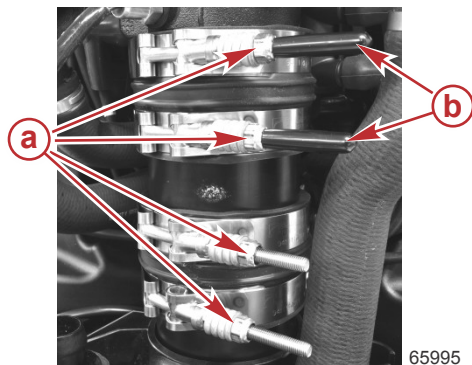


- a** - Exhaust boot clamp
- b** - Thread protectors


65995

6. Remove the 25.6 mm Oetiker clamp securing the breather hose to the port camshaft cover. Remove the breather hose from the port camshaft cover.

- Remove the 31.6 mm Oetiker clamp securing the water hose to the fitting on the exhaust tube. Remove the water hose from the fitting.

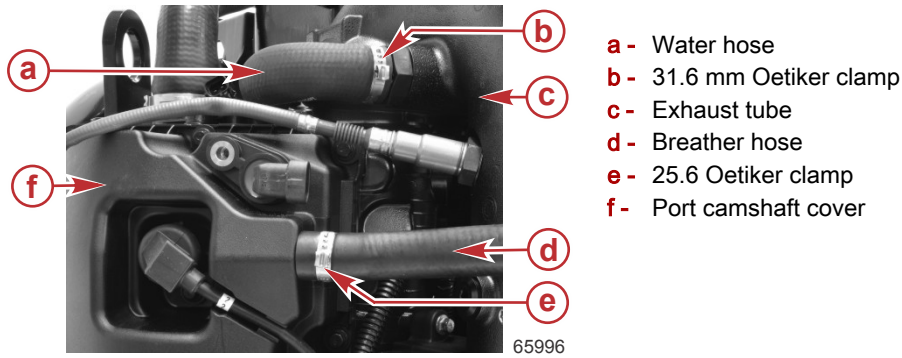

- Remove the four stainless steel screws securing the exhaust tube to the powerhead.

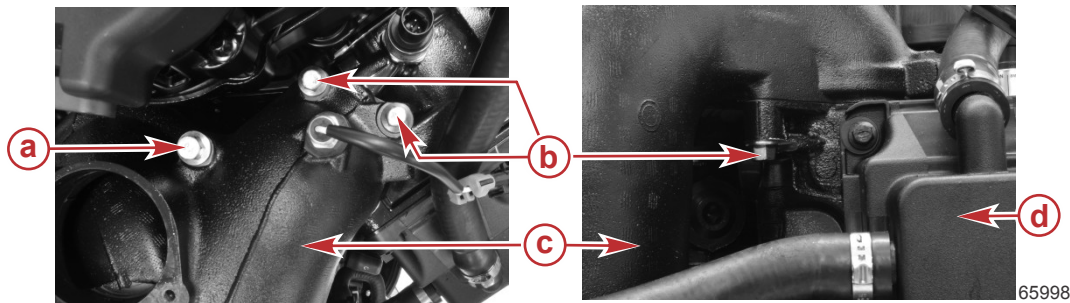


- a** - M8 x 85 screw
- b** - M8 x 45 screws (3)
- c** - Exhaust tube
- d** - Starboard camshaft cover

- Lift the exhaust tube assembly up while rotating back and forth to remove.




Component Removal

- Remove the spark plug wire retainer screws. Tilt the wire retainer out of the way.

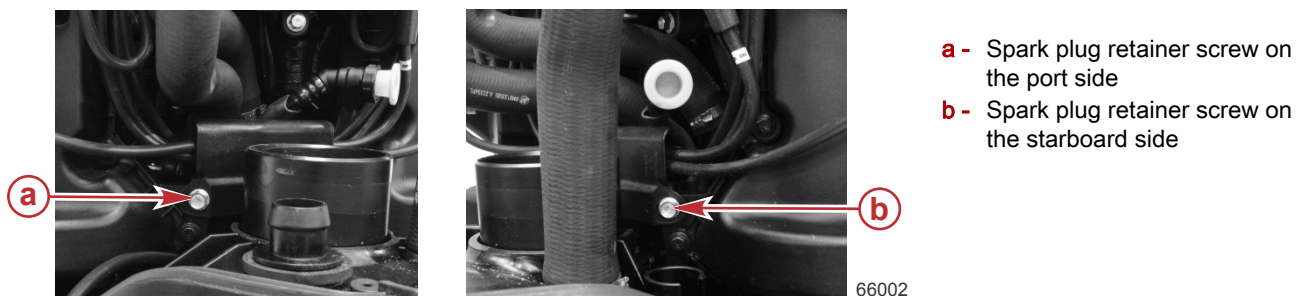

Cylinder Block/Crankcase


2. Disconnect the quick-connect fitting from the drain fitting under the chap plate.

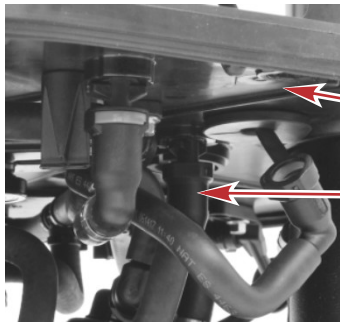

- a - Chap plate
- b - Quick-connect fitting

66915


3. Remove the upper dipstick tube from the retainer.

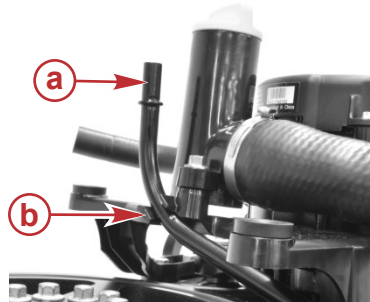

- a - Upper dipstick tube
- b - Retainer

66004

4. Remove the screw securing the dipstick tube to the powerhead.
5. Remove the dipstick tube by turning it while pulling up. Remove the O-ring.

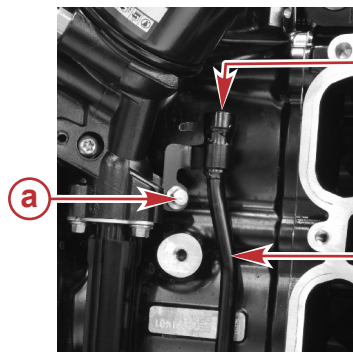

- a - Screw
- b - O-ring location
- c - Dipstick tube

66005


Powerhead Removal from Advanced Midsection (AMS)

1. Ensure that the engine oil is drained. Refer to **Section 1B - Changing Engine Oil and Filter**.

⚠ CAUTION

Improper lifting during removal or installation of the engine can cause injury or damage to engine components. Use a hoist, lifting arm, or other approved lifting device. Do not allow the lifting device to hook or compress any engine components.

- Press the lock tab and disconnect the water drain quick-connect fitting from the aft end of the powerhead under the chap plate.

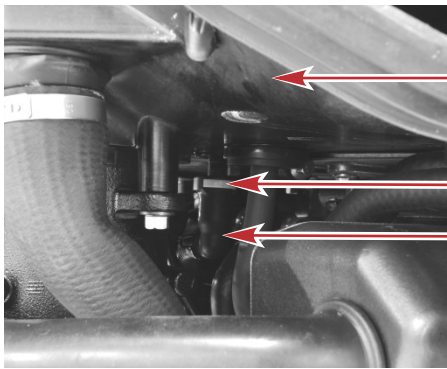


- a - Chap plate
- b - Lock tab
- c - Water drain quick-connect fitting

67020

- Attach the two equal length (longer) straps of the lifting strap to the port and starboard lifting eyes on the engine. Secure the third strap (red) out of the way, to avoid damaging engine components.

IMPORTANT: All engine lifting devices (straps, slings, chains, or hoists) must have a minimum capacity of 450 kg (1000 lb).


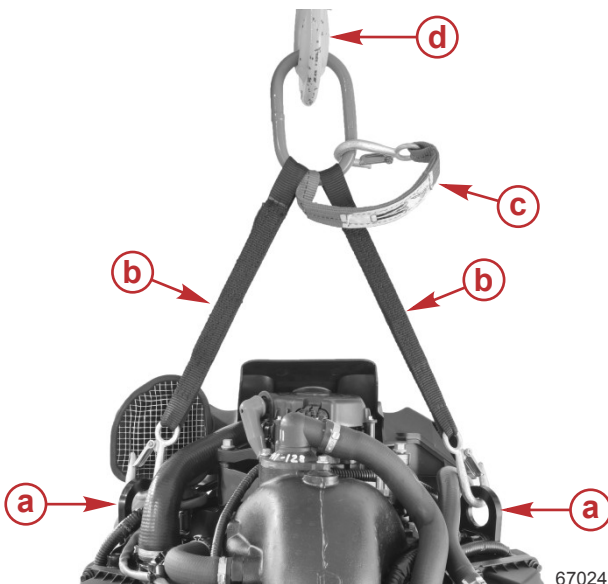


- a - Lifting eyes on the engine
- b - Equal length straps (black)
- c - Short strap (red); secure out of the way
- d - Overhead hoist

67024

Lifting strap	883705T01
---------------	-----------

- Tilt the outboard up and engage the tilt lock lever. Adjust the hoist and lifting strap to maintain tension on the lifting straps.
- Remove the two 15 mm nuts from under the mount cradle. Be careful to not damage the plastic shield while loosening the nuts.

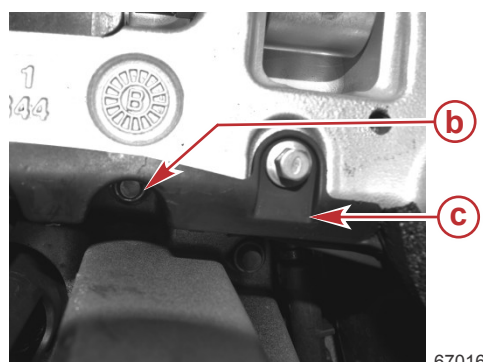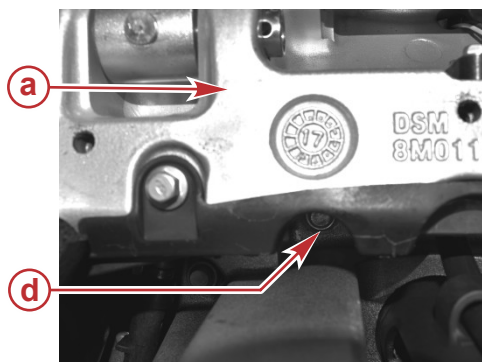


- a - Mount cradle
- b - 15 mm nut on starboard side
- c - Plastic shield
- d - 15 mm nut on port side


67016

Cylinder Block/Crankcase


6. Remove the 15 mm nut from the starboard side under the mount cradle.

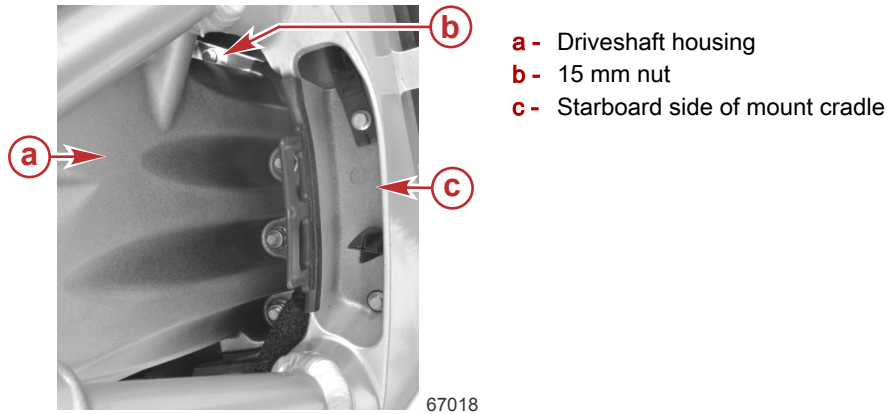

7. Remove the 15 mm nut from the aft end of the powerhead under the mount cradle.

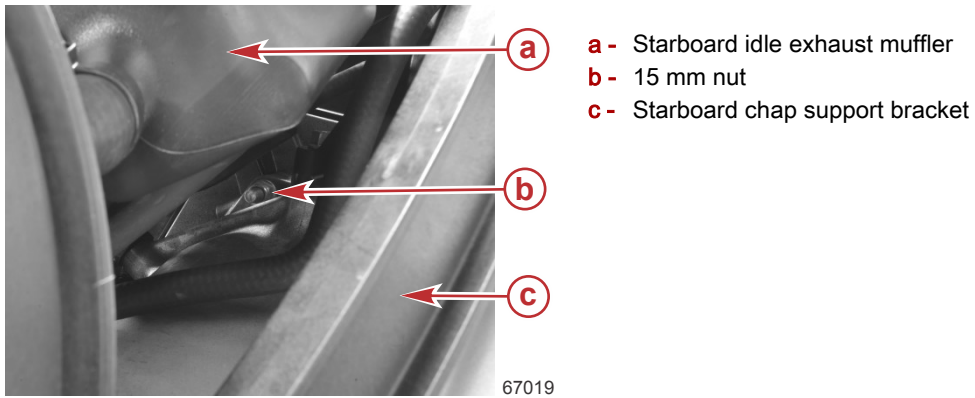


8. Remove the 15 mm nut from the port side under the mount cradle.

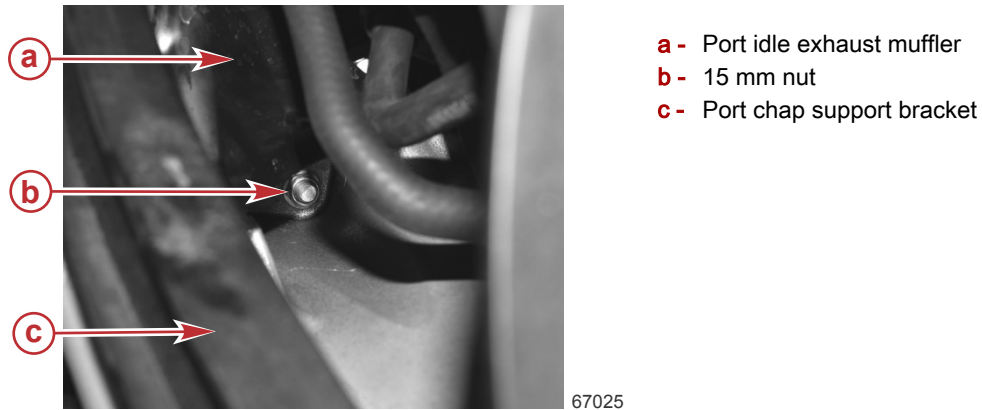

9. Remove three nuts from each side under the mount cradle. Leave one nut installed per side to stabilize the powerhead until the outboard is tilted down.

IMPORTANT: Do not remove the final nut from each side until the outboard is tilted down to a vertical position.

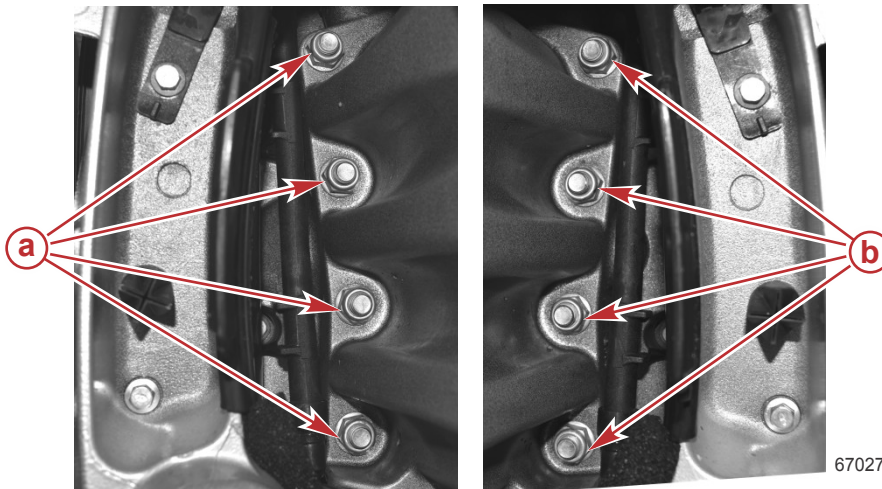


- a** - 15 mm nuts on port side under the mount cradle
- b** - 15 mm nuts on starboard side under the mount cradle

10. Disengage the tilt lock lever and tilt the outboard down to a vertical position.
11. Remove the remaining nut from each side under the mount cradle.
12. Lift the powerhead off of the midsection.


IMPORTANT: Ensure that the fuel hose from the FSM does not snag while lifting the powerhead or damage to the hose or FSM may result.

13. Remove the 39.6 mm Oetiker clamp to remove the oil pickup hose from the oil pump.

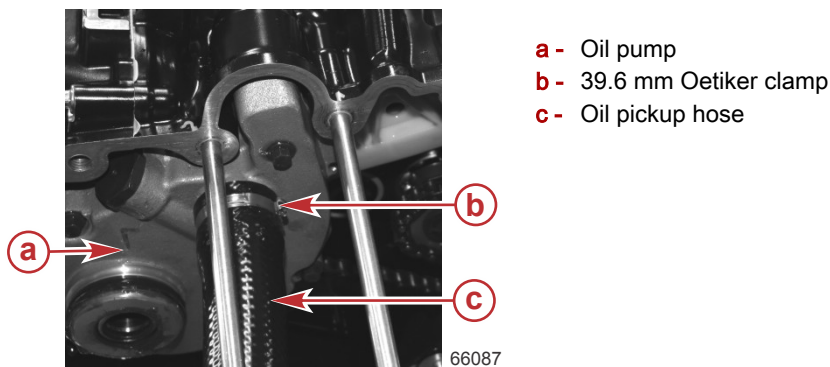

- a** - Oil pump
- b** - 39.6 mm Oetiker clamp
- c** - Oil pickup hose

14. Mount the powerhead on a suitable engine stand.
15. Remove the four screws securing the oil pump to the powerhead. Remove the oil pump.

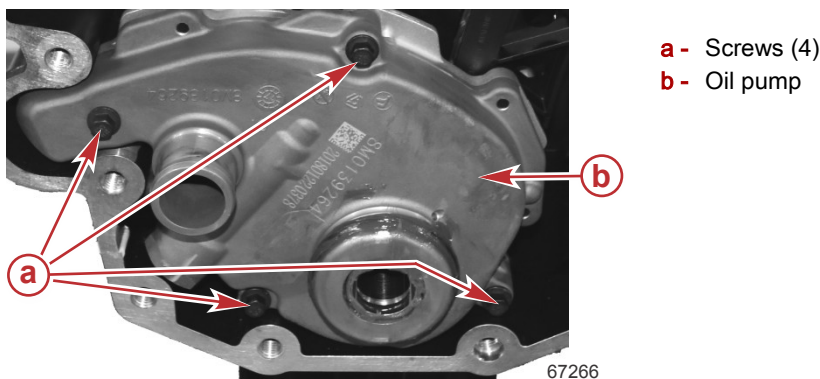


- a** - Screws (4)
- b** - Oil pump

16. Mark the ignition coils with their corresponding cylinder numbers to aid reassembly.
17. Remove the spark plug wires from the spark plugs.
18. Remove the screws securing the ignition coils to the powerhead. Remove the ignition coils with the spark plug wires and ignition coil primary harness attached.

Cylinder Block/Crankcase



NOTE: The letters on the ignition coils correspond with the tags on the ignition coil primary harness wires.

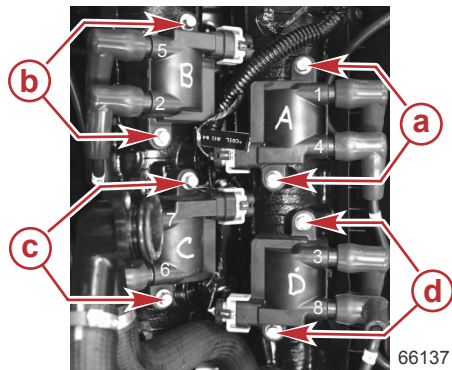

- a** - Screws securing ignition coil A
- b** - Screws securing ignition coil B
- c** - Screws securing ignition coil C
- d** - Screws securing ignition coil D

19. Remove the water supply fittings from each cylinder head.


NOTE: Remove the water supply fitting from the port cylinder head first to access the starboard water supply fitting.

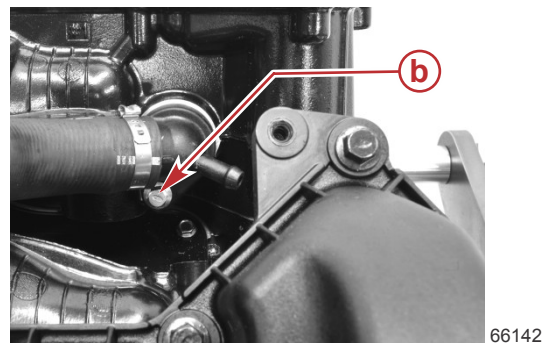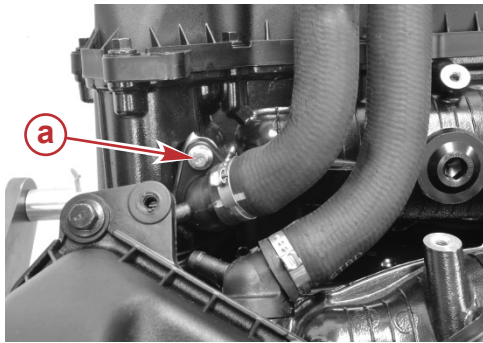

- a** - Screw securing the port water supply fitting
- b** - Screw securing the starboard water supply fitting


20. Remove the alternator belt:

- a. Position the alternator belt shoe between the flywheel and the alternator belt, as shown.

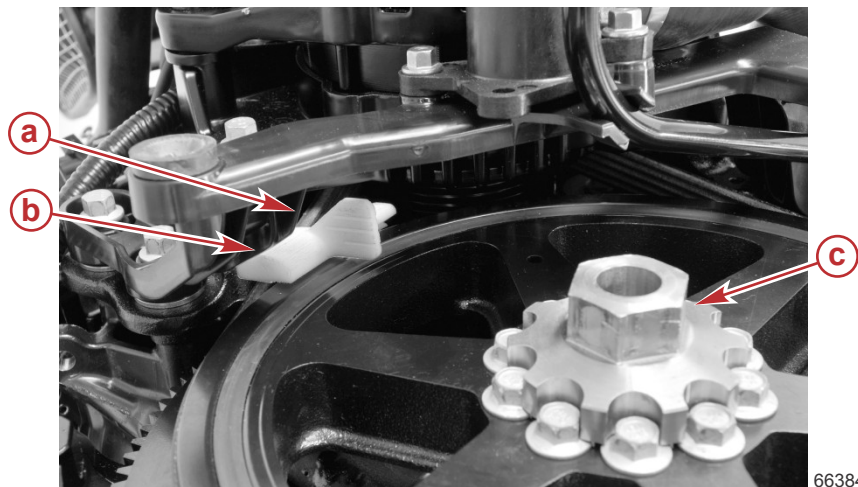

- a** - Alternator belt
- b** - Alternator belt installation tool
- c** - Flywheel socket


- b. Use the flywheel socket to turn the flywheel counterclockwise until the belt comes free of the flywheel.

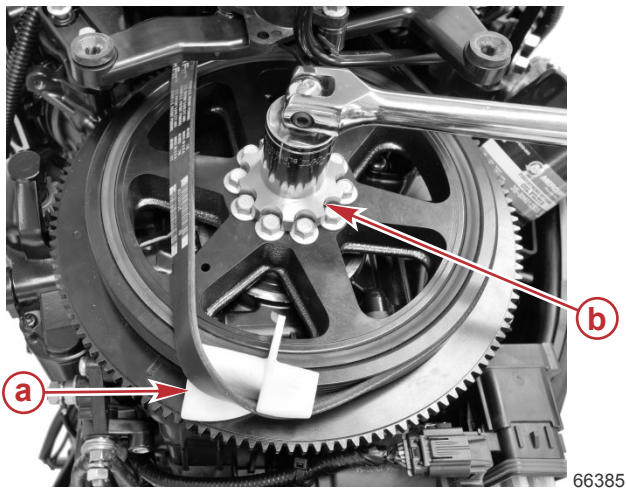

- a - Alternator belt shoe
- b - Flywheel socket


Alternator Belt Shoe	8M0146862
Flywheel Socket	8M0146861

21. Remove the four screws securing the oil fill bracket to the powerhead.

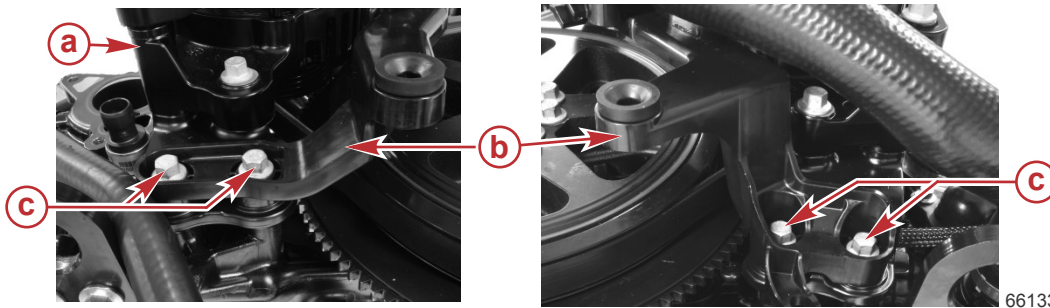

- a - Alternator
- b - Oil fill bracket
- c - Screws (4)


22. Remove the screw securing the oil fill hose fitting to the cylinder head. Remove the oil fill hose and bracket.

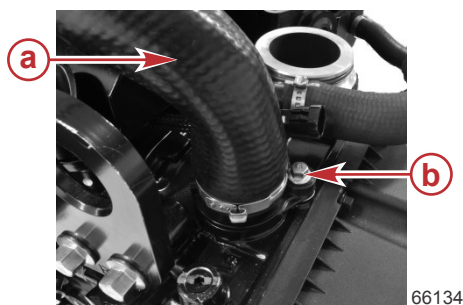

- a - Oil fill hose
- b - Screw

Cylinder Block/Crankcase

23. Remove the screws securing the alternator. Remove the alternator.

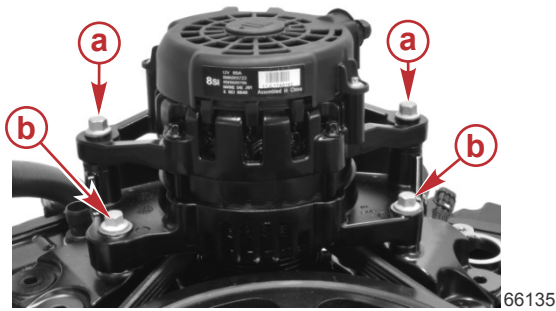

- a - M8 x 80 screws (2)
- b - M8 x 45 screws (2)

Powerhead Disassembly

Cylinder Head Removal


IMPORTANT: The removal and disassembly procedure of the cylinder head and camshafts must be strictly followed. Failure to follow the removal procedure may damage the valve train components.

IMPORTANT: Do not intermix the location of the valve train parts.

IMPORTANT: This engine is an interference valve train design. Do not rotate the crankshaft or camshafts when the timing chain is loose or removed from the camshaft gears unless advised to do so. Failure to adhere to this important information will result in valve or piston damage.


NOTE: The cylinder heads can be removed with the fuel rails attached.

1. Remove the powerhead. Refer to **Removing Powerhead Components as an Assembly**.
2. Remove the screws securing the alternator brackets. Remove the alternator brackets.

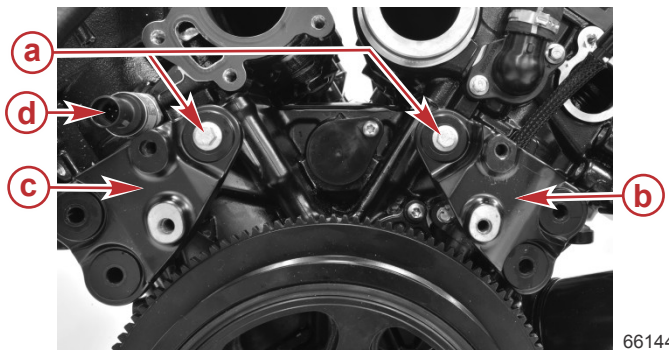


- a - Screws (2)
- b - Port alternator bracket
- c - Starboard alternator bracket
- d - Block water pressure sensor

3. Remove the spark plugs.
4. Remove the camshaft cover screws. Remove the camshaft covers.

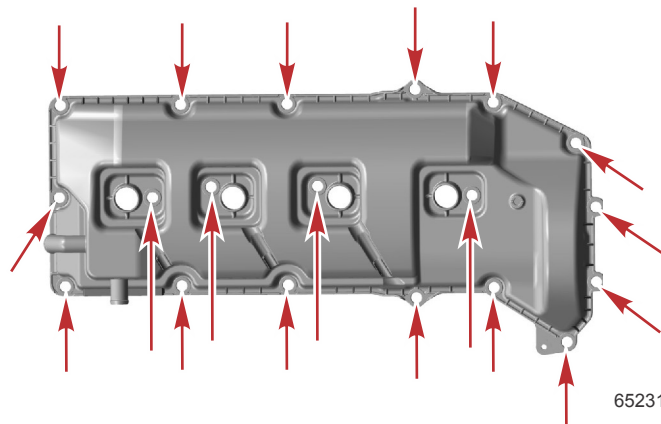

Starboard side shown—port similar

5. Remove the balance shaft plug.

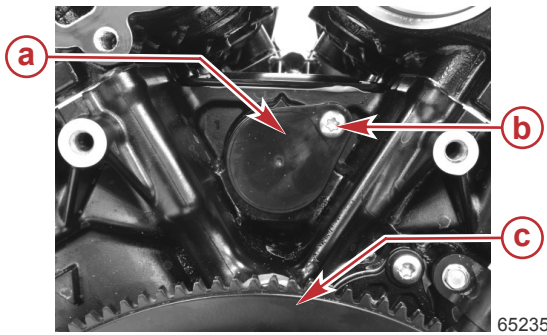


- a - Balance shaft plug
- b - Screw
- c - Flywheel

6. Rotate the flywheel/crankshaft so the cylinder #1 is at top dead center (TDC) on the compression stroke:

- a. Ensure that the green dot (punch mark) aligns with the match line of the cylinder #4 intake camshaft cap. This camshaft cap is identified with the marks SI4 with an arrow pointing to the top of the powerhead.


IMPORTANT: The camshaft caps are marked with the letters P or S (for port or starboard), the letters I or E (for intake or exhaust), the cylinder number for each bank (cylinder 1 at the top), and an arrow pointing to the top of the powerhead.

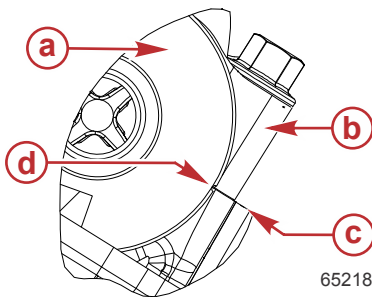

Cylinder #4 intake camshaft, starboard bank


- a - Camshaft lobe
- b - Camshaft cap
- c - Match line of the camshaft cap
- d - Green dot (punch mark) aligns with the match line of the camshaft cap

- b. Ensure that the balance shaft timing mark aligns with the timing pointer cast into the cylinder block.

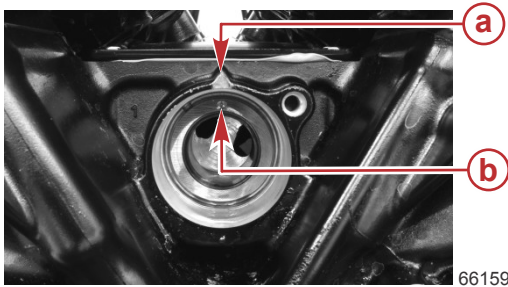

- a - Timing pointer
- b - Balance shaft timing mark

- c. Ensure that the line on the flywheel aligns with the timing pointer on the top of the cylinder block.

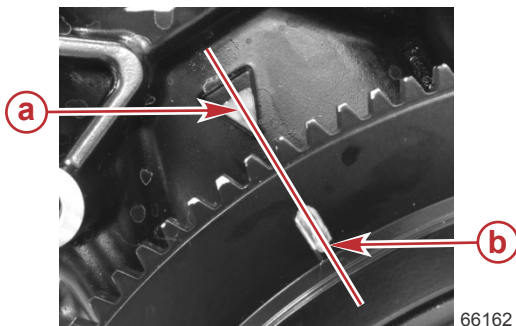


Timing marks aligned at cylinder #1 TDC

- a - Timing pointer
- b - Line on the flywheel

7. After the engine has been set with cylinder #1 in the TDC position of the compression stroke, rotate the crankshaft clockwise until the dot on the flywheel is aligned with the pointer (known as the **service position**).


IMPORTANT: Piston or valve damage can occur if the timing marks are not aligned in the service position.

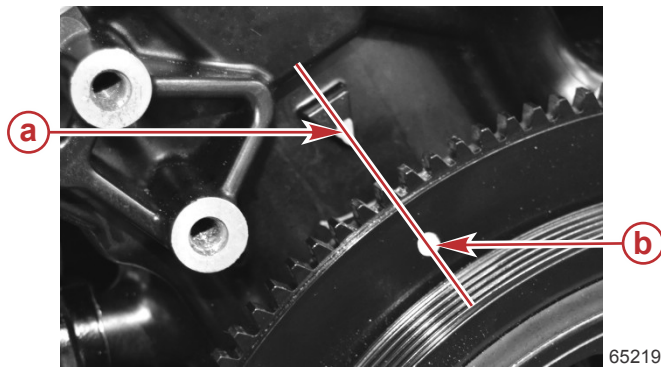

Timing marks aligned in the service position
a - Pointer on cylinder block (starboard bank)
b - Dot on flywheel (identified with yellow paint for visibility)

8. Hold the camshaft in position with a wrench on the hex located behind the camshaft sprocket.
9. Loosen the camshaft sprocket screws.


IMPORTANT: The camshaft sprocket screws are left-hand thread.

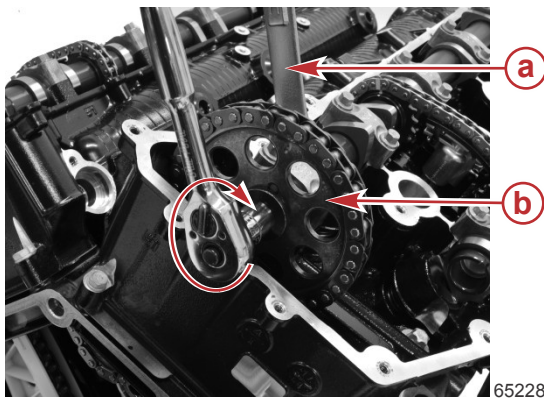

Starboard side shown
a - Wrench on the camshaft hex
b - Camshaft sprocket

10. Remove the timing chain tensioner cover.

IMPORTANT: The tensioner can fall out after the cover is removed. Place your hand over the tensioner cover during removal to catch the tensioner.

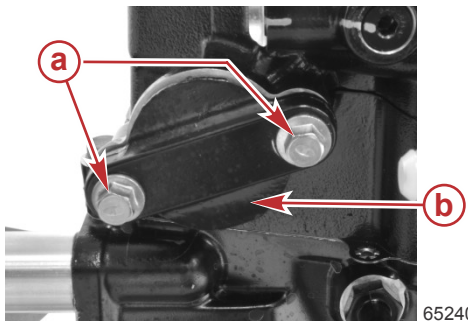

a - Screws
b - Timing chain tensioner cover


11. Remove the timing chain tensioner from the cylinder block.



Timing chain tensioner


12. Remove the movable timing chain guide first.

NOTE: The movable timing chain guide is black and located on the starboard side.

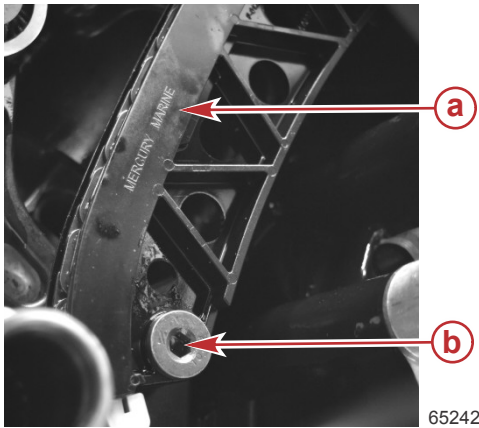

- a** - Movable timing chain guide
- b** - Special flange head screw (6 mm hex)

13. Remove the fixed timing chain guide.

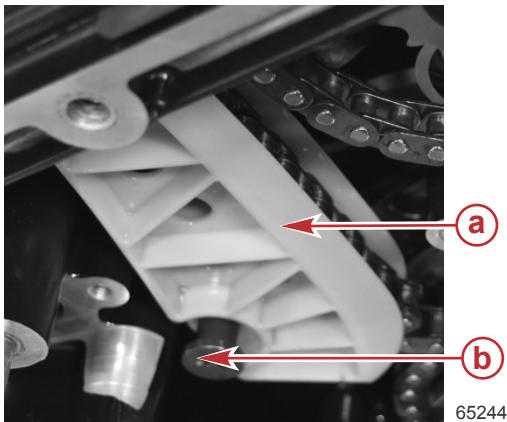

- a** - Fixed timing chain guide
- b** - Special flange head screw

14. Remove the port camshaft sprocket. The timing chain guide will fall.

IMPORTANT: The camshaft sprocket screws are left-hand thread.

15. Pull the port timing chain guide up and remove it from the cylinder block.


16. Remove the starboard camshaft sprocket. The timing chain guide will fall.

IMPORTANT: The camshaft sprocket screws are left-hand thread.

17. Remove the timing chain guides after they have fallen.


18. Pull the starboard timing chain guide up and remove it from the cylinder block.

19. Remove the timing chain from the engine.

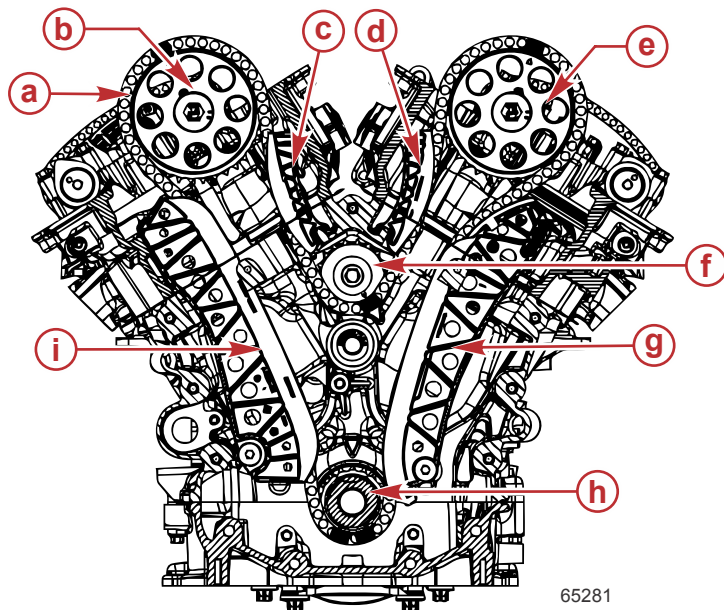


- a - Timing chain
- b - Port camshaft sprocket
- c - Port timing chain guide
- d - Starboard timing chain guide
- e - Starboard camshaft sprocket
- f - Balance shaft sprocket (V8) or idler sprocket (V6)
- g - Movable timing chain guide
- h - Crankshaft sprocket
- i - Fixed timing chain guide

20. Remove the two screws securing the camshaft-to-camshaft timing chain tensioner.

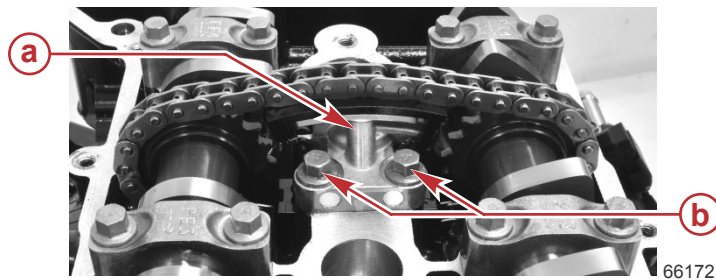

- a - Camshaft-to-camshaft timing chain tensioner
- b - Screws (2)

21. Compress the tensioner by pressing down with your hand to allow oil to escape from the tensioner. Press down several times to compress the tensioner. The timing chain will slacken.

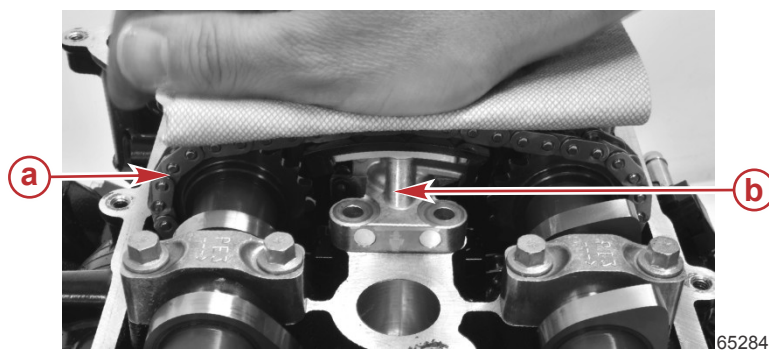


- a - Camshaft-to-camshaft timing chain
- b - Camshaft-to-camshaft timing chain tensioner

22. After compressing the tensioner, insert a pin or a small drill bit (1.2 mm [0.047 in.]) through the slots of the tensioner to keep the tensioner compressed.

NOTE: If the tensioner will not compress enough to insert the pin through the slots, the tensioner can be removed without the pin inserted.


23. Remove the camshaft-to-camshaft timing chain tensioner from each cylinder head by tilting the top of the tensioner toward the bottom of the powerhead, then lifting.

NOTE: You may need to hold the timing chain to allow for tensioner removal.

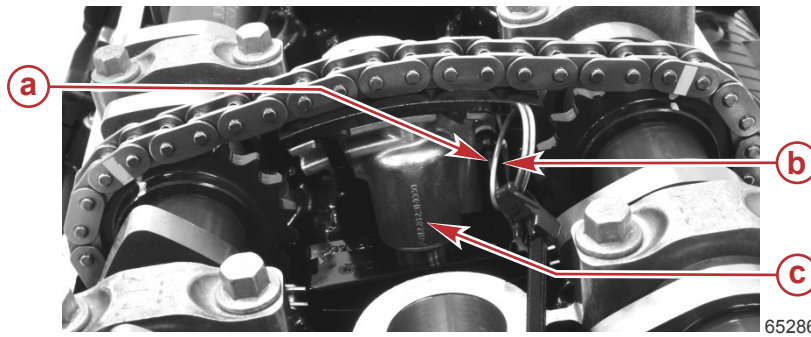

- a** - Slots of the timing chain tensioner
- b** - Pin inserted through the slots
- c** - Timing chain tensioner


24. If the tensioner was removed without the pin installed, compress the tensioner by hand and install the pin to keep the tensioner compressed.

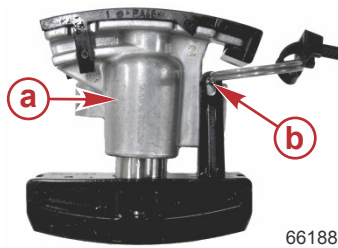

- a** - Tensioner
- b** - Pin inserted through slots

25. Identify the markings on the camshaft caps so they can be installed in the same location and orientation as removed.
IMPORTANT: Do not intermix the location of the valve train parts. Severe engine damage will result if the camshaft caps are not installed in their original position and orientation.


IMPORTANT: The camshaft caps are marked with the letters P or S (for port or starboard), the letters I or E (for intake or exhaust), the cylinder number for each bank (cylinder 1 at the top), and an arrow pointing to the top of the powerhead.

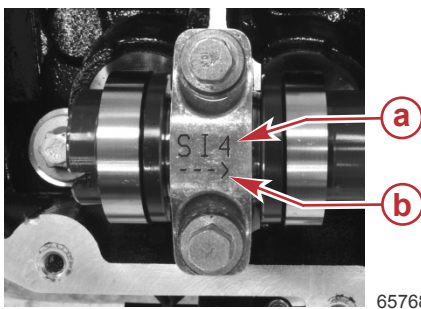

- a** - Identification mark—starboard intake, cylinder 4 of the starboard bank in this example
- b** - Directional arrow—points to top of powerhead

26. Loosen the camshaft cap screws 1/4 turn at a time until the camshafts are loose. Remove the camshaft cap screws and camshaft caps.

27. Remove the camshafts and camshaft-to-camshaft timing chain from the cylinder heads as an assembly.

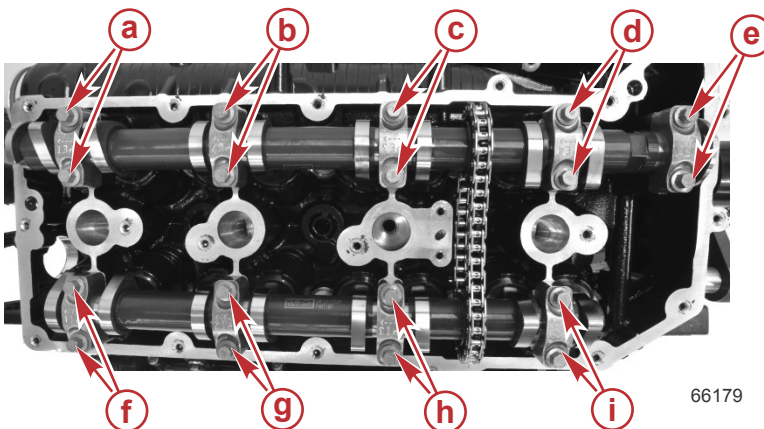


Port cylinder head shown; starboard similar

- a** - Screws securing camshaft cap PE1
- b** - Screws securing camshaft cap PE2
- c** - Screws securing camshaft cap PE3
- d** - Screws securing camshaft cap PE4
- e** - Screws securing camshaft cap PE5
- f** - Screws securing camshaft cap PI1
- g** - Screws securing camshaft cap PI2
- h** - Screws securing camshaft cap PI3
- i** - Screws securing camshaft cap PI4

28. Remove the two M6 screws from the bottom of each cylinder head.

Cylinder Block/Crankcase


29. Remove the ten E14 external Torx® screws securing each cylinder head to the cylinder block.

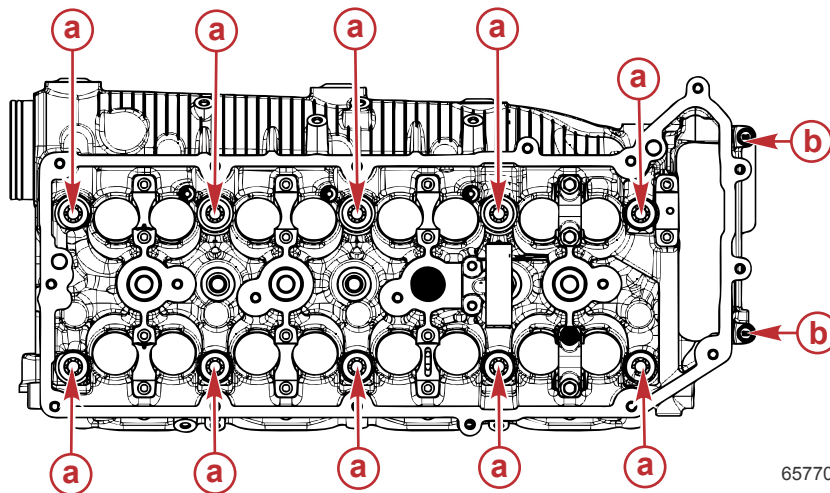

Port cylinder head shown; starboard similar

- a** - E14 external Torx screws
b - M6 screws at bottom of cylinder head

30. Install 25.4 mm (1 in.) outside diameter Tygon® tubing into the camshaft bores and secure the tubing by installing the camshaft caps in their correct location. This will keep the valve train components in place while removing the cylinder head.

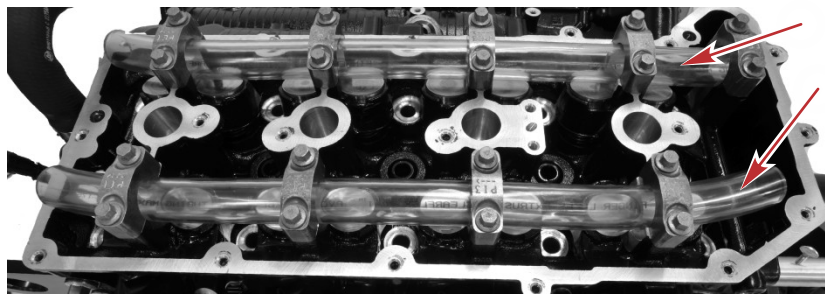

Tygon tubing installed


31. Remove the cylinder heads from the cylinder block. Refer to **Section 4B - Cylinder Head** for cylinder head rebuild procedures.
32. Remove the two dowel pins from each bank of the cylinder block.




Dowel pins (two per bank)

Crankcase and Crankshaft Disassembly/Removal

1. Mark each piston with its corresponding cylinder number and top/bottom orientation.

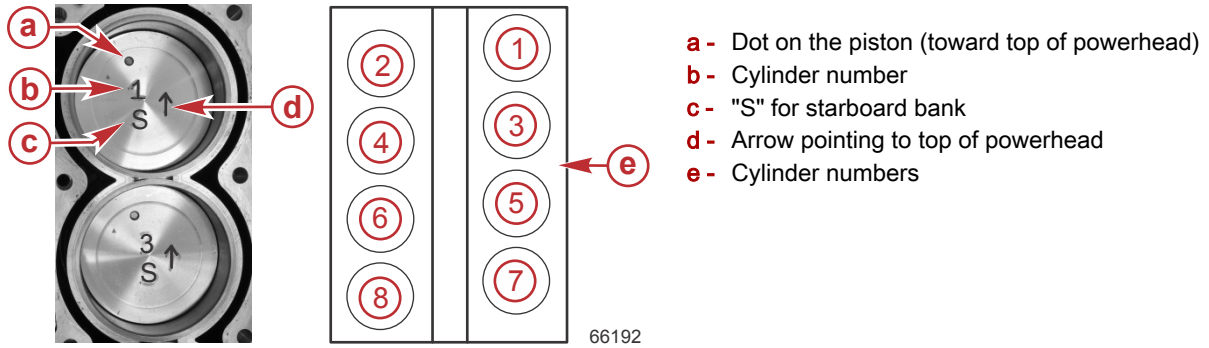


2. Remove the ten screws securing the flywheel to the crankshaft.

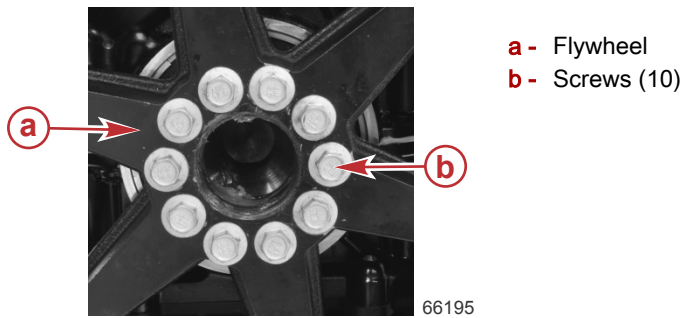


3. Remove the flywheel.

NOTE: The flywheel must be removed to remove the throttle body.

4. Remove the throttle body from the intake plenum if necessary by removing the four mounting nuts.

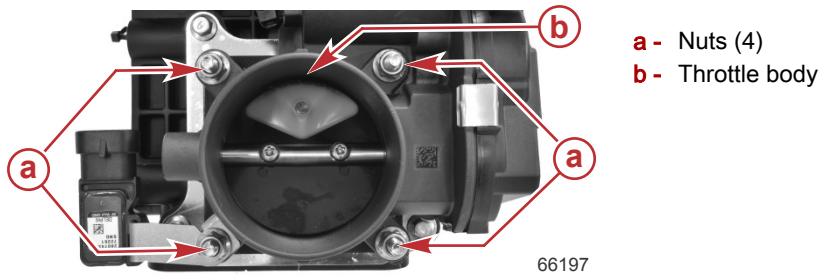


5. Remove the intake plenum screws and remove the intake plenum. Inspect the rubber plenum gasket for damage.

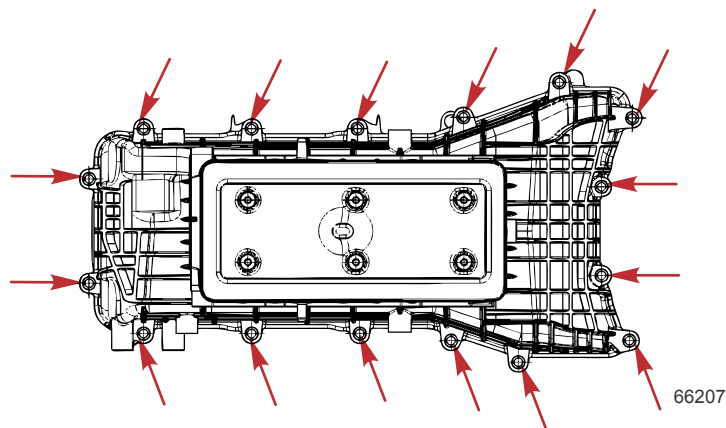

Intake plenum screws


Cylinder Block/Crankcase

6. Inspect the O-ring in the bottom of the crankshaft inside the stainless steel sleeve.

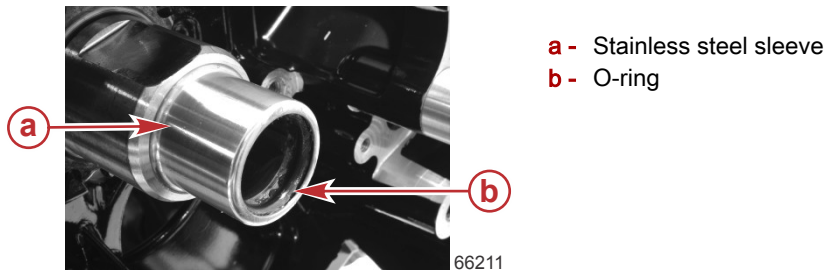


7. Mark each connecting rod cap with the corresponding cylinder number.


NOTE: Install two flywheel screws into the flywheel end of the crankshaft 180° apart and use a long screwdriver to rotate the crankshaft.

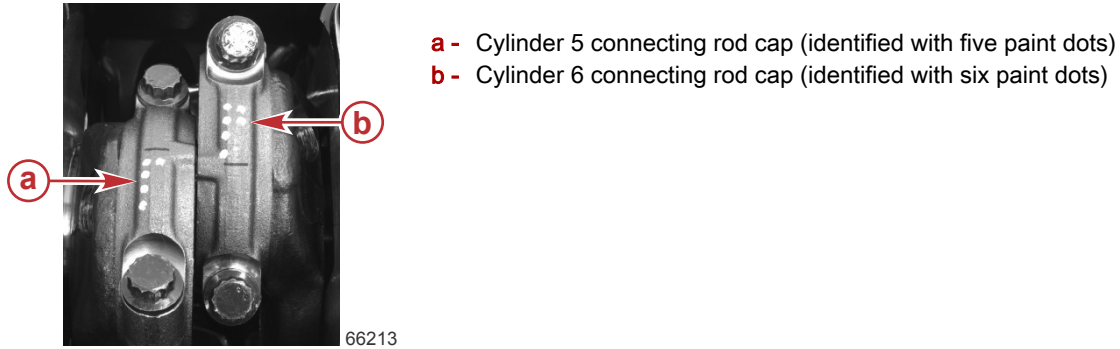


8. Perform the following steps one cylinder at a time:
- Loosen both connecting rod cap screws 1/4 turn.
 - Remove the connecting rod cap screws and remove the connecting rod cap.

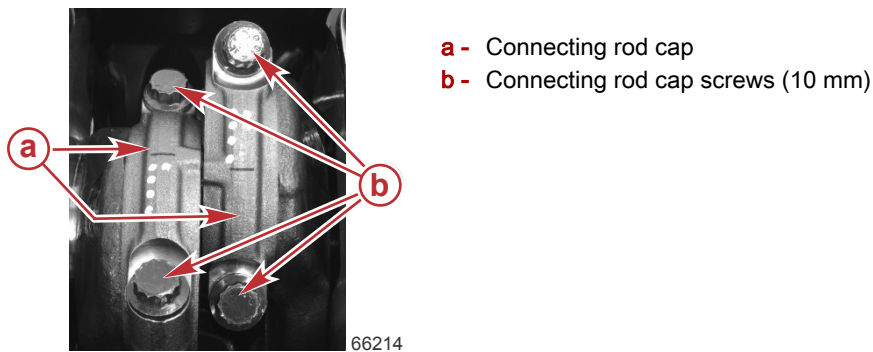

- c. Inspect the connecting rod bearing for debris.

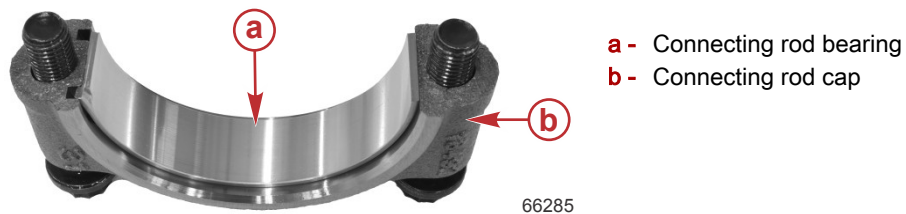

- d. Install rod guide dowels onto the connecting rod to protect the bearing journal during removal.

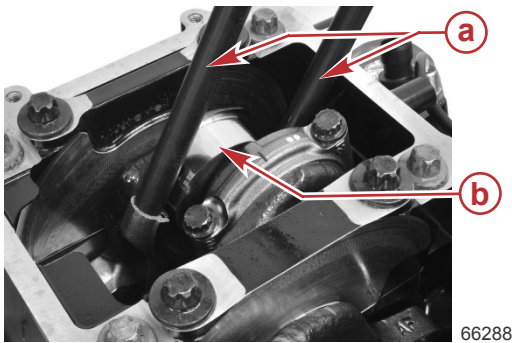

- a - Rod guide dowels
b - Bearing journal


66288

Rod Guide Dowels	8M0148866
------------------	-----------

- e. Push the connecting rod guides to remove the connecting rod and piston assembly from the cylinder block.

- f. Install the cap onto the connecting rod in the correct orientation and install the screws finger-tight.

IMPORTANT: The connecting rod parting line must match. If the parting line does not line up exactly, the connecting rod cap is not installed correctly. The part number and identification number on the connecting rod will align when installed correctly.

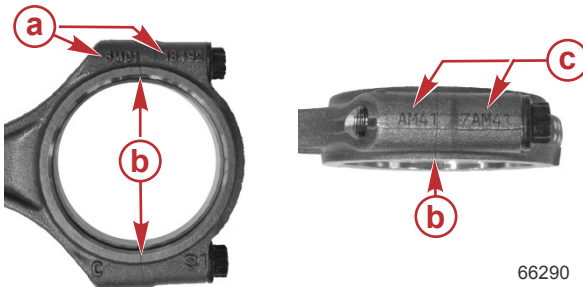


- a - Connecting rod part number
b - Parting line
c - Identification number

66290

9. Loosen the ten main bearing bedplate screws (E14 Torx®) 1/4 turn each.

IMPORTANT: Each main bearing cap has two 10 mm bolts and two 11 mm bolts. The 10 mm bolts are on the outside of the cap (furthest from the crankshaft) and have hex heads. The 11 mm bolts are nearest to the crankshaft and have 12-point heads. Do not intermix these bolts as cylinder block thread damage will result.

10. Loosen the ten bedplate perimeter screws 1/4 turn each.
11. Remove the main bearing bedplate screws.
12. Remove the ten bedplate perimeter screws.

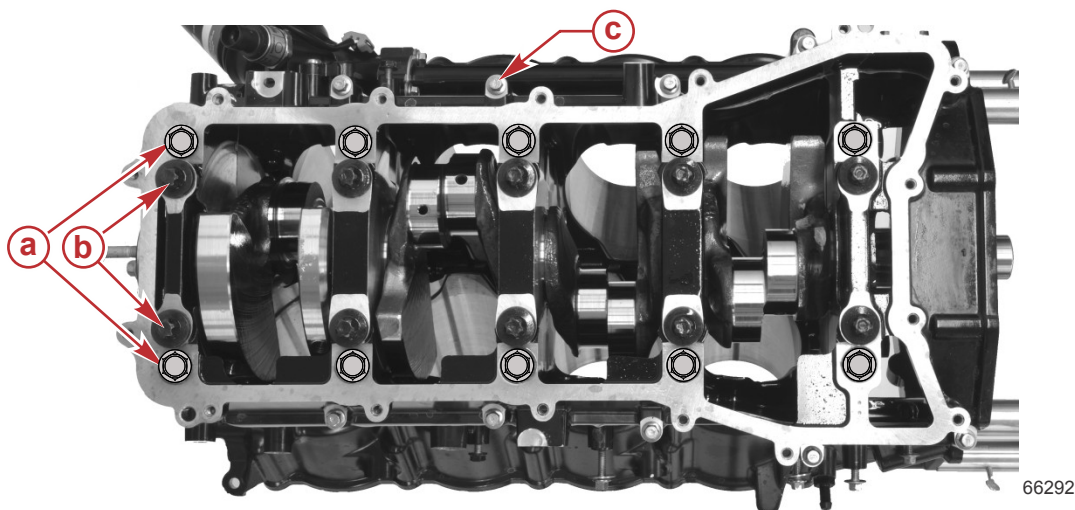


66292

- a - 10 mm hex head screws (10)
b - 11 mm 12-point head screws (10)
c - Perimeter screws (10)

Cylinder Block/Crankcase

13. Remove the bedplate from the crankcase by gently prying at the two pry points.

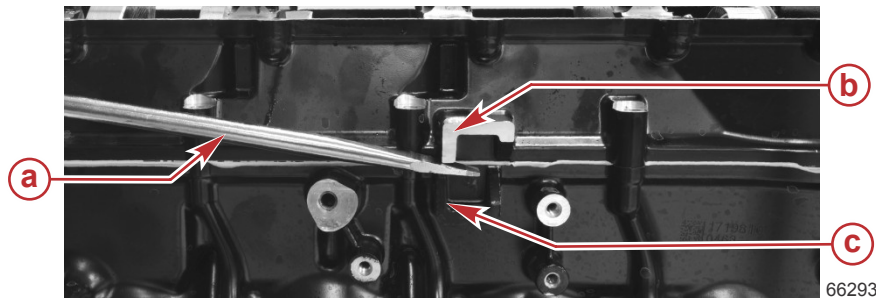


- a - Screwdriver
- b - Pry point on the bedplate
- c - Pry point on the cylinder block

14. Remove the snap ring, seal, and spacer from the top of the crankshaft.



IMPORTANT: Ensure that the oil drain for the top seal is clear of debris or sealant.

NOTE: During assembly, the seal spacer can be placed on the other side of the top seal if the crankshaft has a groove worn in it from the top seal. Moving the spacer will move the contact/sealing area away from the groove.

NOTE: Note the orientation of the two half-moon thrust bearings, care should be taken to ensure that the thrust bearing does not spin out of the cylinder block if the crankshaft is rotated after the bedplate is removed.

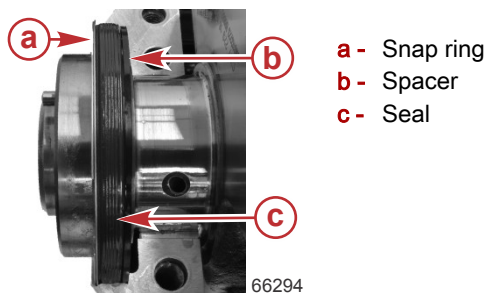

- a - Snap ring
- b - Spacer
- c - Seal

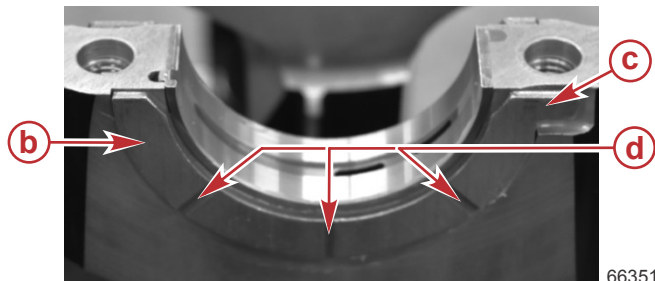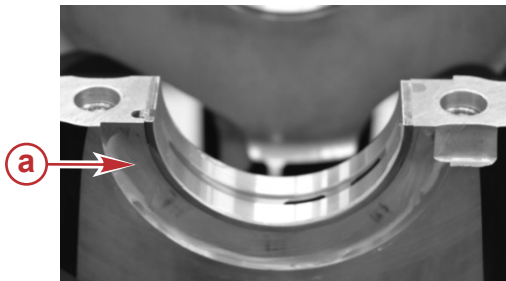


Thrust bearings shown for reference

- a - Inner thrust bearing surface
- b - Outer thrust bearing surface
- c - Bearing tab
- d - Thrust bearing grooves

15. Remove the crankshaft from the crankcase. Secure the crankshaft in a fixture so it will not be damaged.

NOTE: Check the oil passage from end to end.


16. Remove the oil filter and oil filter fitting from the oil filter adapter.

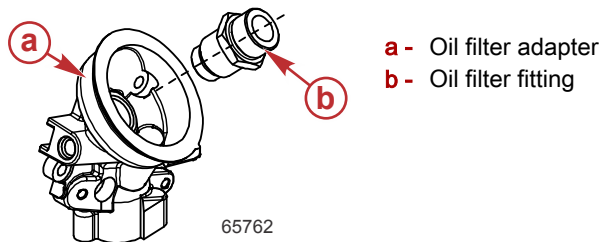

- a - Oil filter adapter
- b - Oil filter fitting

17. Remove the four T30 Torx screws securing the oil filter adapter and tube. Remove the oil filter adapter and tube. Inspect the O-ring at the bottom of the oil tube.

IMPORTANT: Use care to avoid dropping the fasteners into the oil tube. The oil tube has a metal gasket on the top and an O-ring on the bottom of the oil tube.

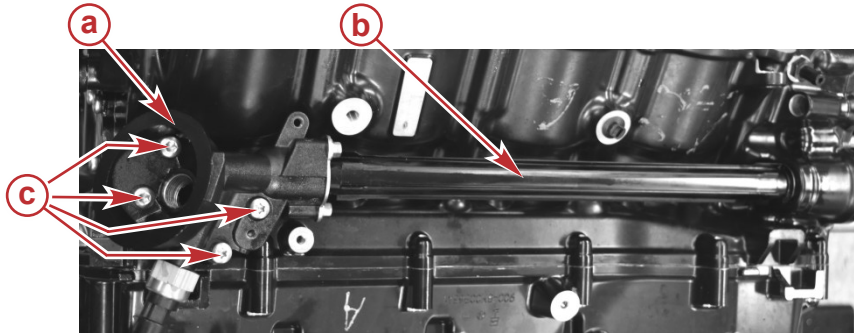


65761

- a** - Filter adapter
- b** - Oil tube
- c** - T30 Torx screws (4)

18. Remove the balance shaft cover screws.
19. Remove the balance shaft cover by gently prying the cover with a gasket scraper.


IMPORTANT: Do not bend the balance shaft cover or damage the sealing surfaces while removing the cover.

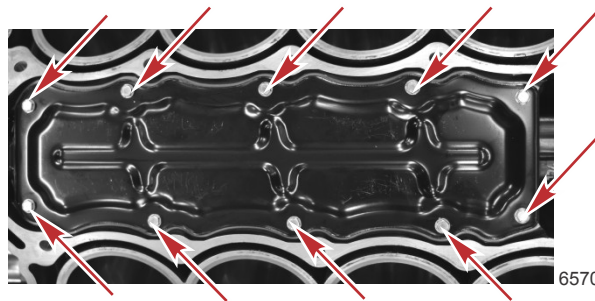

65702

Balance shaft cover screws


20. Remove the oil gallery cover screws and remove the oil gallery cover.

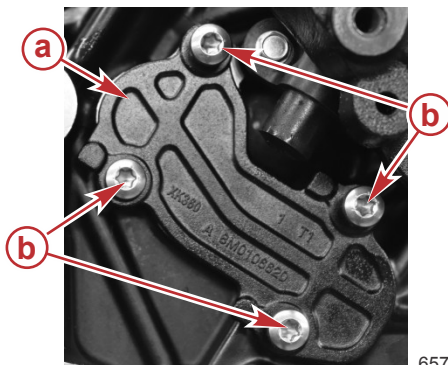

65759

- a** - Oil gallery cover
- b** - T30 Torx screws (4)

21. Insert a rubber coated tool to hold the balance shaft as shown.

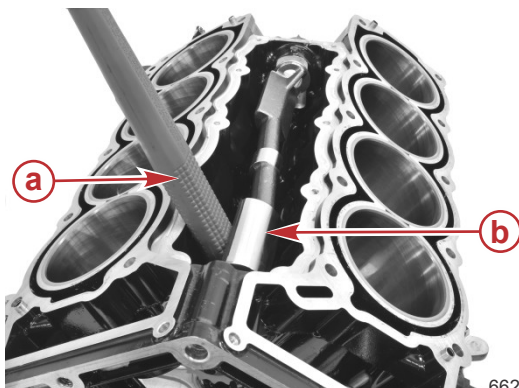


66299

- a** - Balance shaft
- b** - Rubber coated tool

Cylinder Block/Crankcase


22. Remove the balance shaft sprocket screw and washer. Remove the balance shaft sprocket.

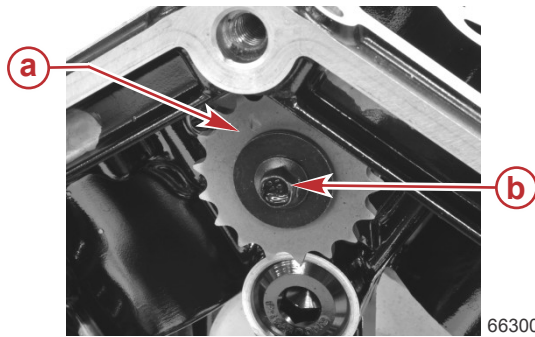

- a - Balance shaft sprocket
- b - Screw and washer


23. Remove the two screws securing the balance shaft retainer from the bottom of the balance shaft.

NOTE: The balance shaft has a plain bearing on the top and a ball bearing on the bottom.

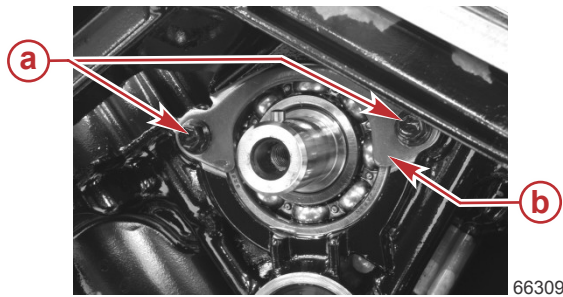

- a - Screws (2)
- b - Balance shaft retainer


24. Construct a puller plate to remove the balance shaft and lower bearing from the cylinder block.

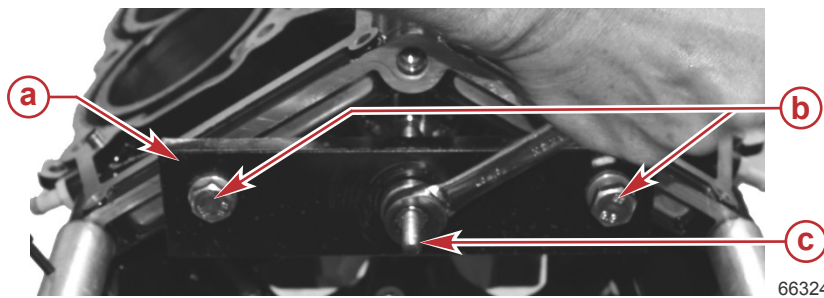

- a - Steel puller plate
- b - M10 x 1.5 screws and washers (secures puller plate to block)
- c - M8 x 1.25 stud, nut, and washer (stud threads into the balance shaft, tighten the nut to pull the shaft and bearing)


25. Remove the balance shaft and bearing from the cylinder block. Rotate the balance shaft while removing to free the shaft from the block. The balance shaft must be properly oriented to remove it from the cylinder block.
26. Inspect the upper balance shaft bearing for damage or debris. Ensure that the oil hole of the bearing is aligned with the oil gallery of the cylinder block.

IMPORTANT: If the oil hole of the bearing is not aligned with the oil gallery of the cylinder block, catastrophic engine damage can occur due to oil starvation of the upper bearing.

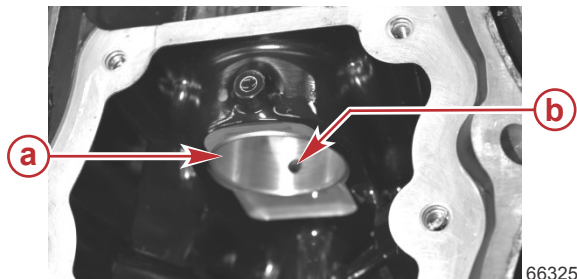

- a - Bearing
- b - Oil hole aligned with oil gallery

27. Remove the oil gallery plugs from the cylinder block.

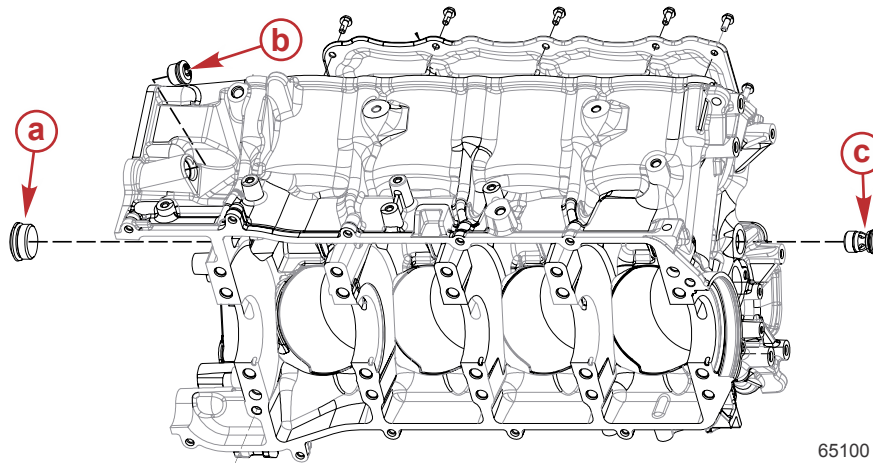

- a** - 30 mm oil gallery plug
- b** - 18 mm oil gallery plug
- c** - 18 mm special oil gallery plug


65100

Cleaning, Inspection, and Repair

Measuring Cylinder Bore

Measure the cylinder walls for taper, out of round, or excessive ridge at the top of the ring travel. This should be done with a cylinder bore dial indicator or an inside micrometer. Carefully move the gauge up and down the cylinder bore to determine taper. Turn the gauge to different points around the cylinder wall to determine the out of round condition.

The measurement for cylinder taper should be taken at three depth locations: 20 mm (0.8 in.), 60 mm (2.4 in.), and 100 mm (3.9 in.).

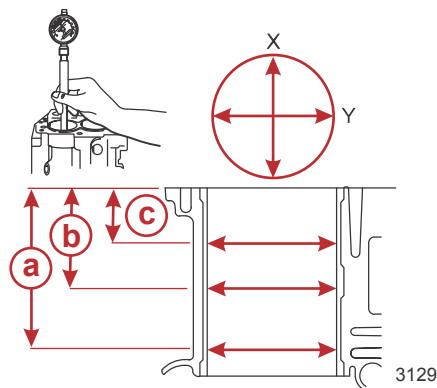

- a** - 100 mm (3.9 in.)
- b** - 60 mm (2.4 in.)
- c** - 20 mm (0.8 in.)

3129


Cylinder Bore Specification	
Standard bore finish hone	92.0 mm (3.622 in.)
Standard (service limit)	92.015 mm (3.6226 in.)
Out of round	0.015 mm (0.0006 in.)
Taper	0.02 mm (0.0007 in.)

Measuring Piston

Inspect each piston for wear or damage. Replace the piston if necessary.

Piston Diameter

1. Measure the piston at a point 9.6 mm (0.378 in.) from the bottom, 90° to the piston pin. Replace the piston if it is out of specification.

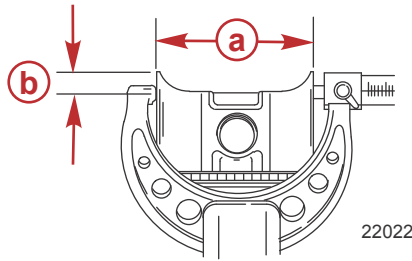

- a - Piston diameter
- b - Measure point 9.6 mm (0.378 in.) from bottom of piston

22022

Piston (V6 and V8 Models)	
Diameter (production)	91.927–91.937 mm (3.6192–3.6195 in.)
Diameter (minimum)	91.927 mm (3.6192 in.)

2. Measure piston to cylinder wall clearance. If out of specification, examine the piston and cylinder bore further to determine repair/replacement options.



The minimum piston to cylinder wall clearance is defined by the formula: **Minimum cylinder bore measurement – Maximum piston diameter measurement = Minimum Piston to Cylinder Clearance.**

The maximum piston to cylinder wall clearance is defined by the formula: **Maximum cylinder bore measurement – Minimum piston diameter measurement = Maximum Piston to Cylinder Clearance.**

Piston to Cylinder Wall Clearance (V6 and V8 Models)	
Minimum clearance	0.063 mm (0.0025 in.)
Maximum clearance	0.088 mm (0.0035 in.)

Piston Ring Groove

Measure the piston ring grooves. Replace the piston if out of specification.

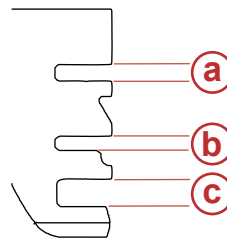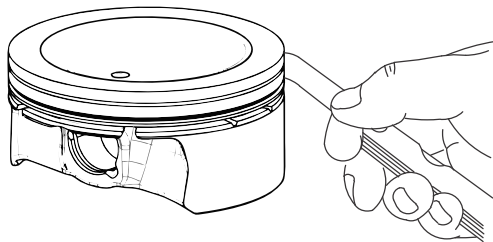



- a - Top ring groove
- b - Middle ring groove
- c - Oil ring groove

65780

Piston Ring Groove (Maximum Dimensions)	
Top "a"	1.25 mm (0.049 in.)
Middle "b"	1.03 mm (0.041 in.)
Oil "c"	2.03 mm (0.080 in.)

Piston Ring Side Clearance

Measure the first and second piston ring side clearance. The side clearance for the third ring (oil) is not a valid measurement because of ring movement during the measurement process. Replace the piston rings as a set if they are out of specification.

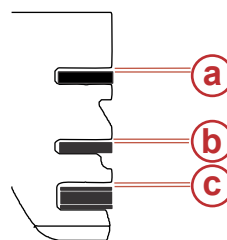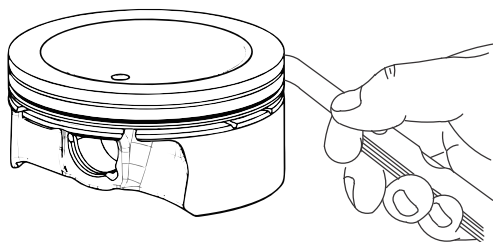

- a - Top ring
- b - Middle ring
- c - Oil ring


65789

Piston Ring Side Clearance	
Top "a"	0.02–0.05 mm (0.0008–0.0019 in.)
Middle "b"	0.01–0.03 mm (0.0004–0.0011 in.)

Piston Ring End Gap

Measure piston ring end gap clearance. Replace piston rings as a set if out of specification.


NOTE: Ring must be level for measurement. Push ring 25.4 mm (1.0 in.) into bore with crown of piston.

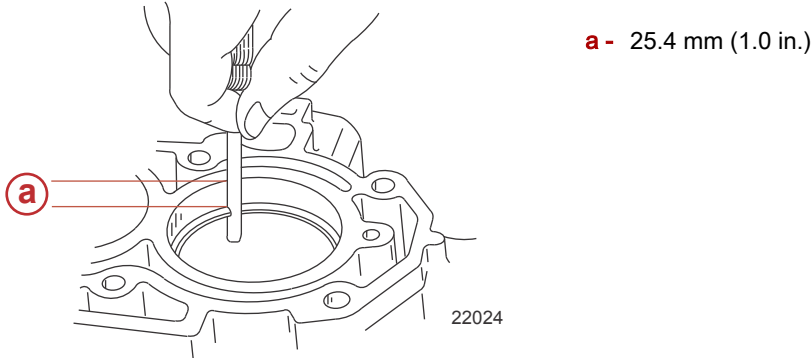

Piston Ring End Gap	
Top	0.20–0.215 mm (0.008–0.0084 in.)
Middle	0.40–0.425 mm (0.016–0.0167 in.)
Oil rings (top and bottom) (expander not applicable)	0.40–0.425 mm (0.016–0.0167 in.)

Piston Pin Bore Diameter


Measure the piston pin bore diameter. Replace the piston if out of specification.

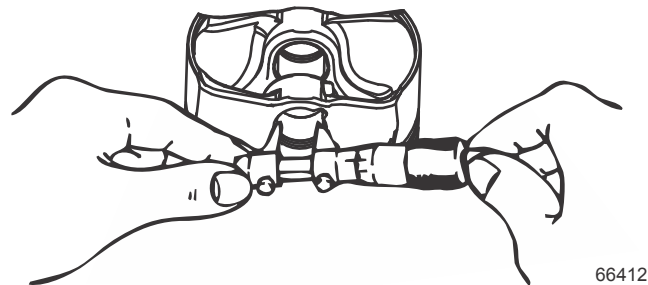

Piston Pin	
Bore diameter	20.005–20.010 mm (0.7876–0.7878 in.)

Piston Pin

Measure the piston pin diameter. Replace the piston pin if out of specification.

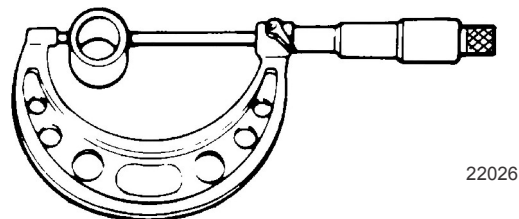


Piston Pin	
Diameter	19.996–20.001 mm (0.7873–0.7874 in.)

Measuring the Connecting Rods

1. Ensure that the rod cap fits perfectly. Tighten the connecting rod cap bolts to the specified torque.


Description	Nm	lb-in.	lb-ft
Rod cap bolts	10	88.5	-

2. Measure the small (piston pin) and large (crankshaft journal) ends of the connecting rod.

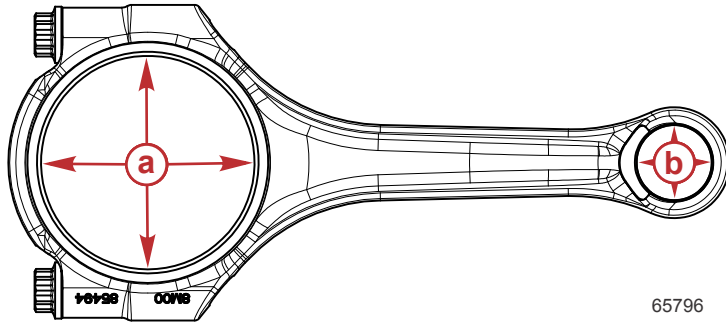

- a - Crankshaft journal end
- b - Piston pin end

3. Compare the connecting rod crankpin journal measurement with the crankpin journal grade specifications listed in the following chart. If the connecting rod crankpin journal measurement does not match the stamped connecting rod crankpin journal grade, replace the connecting rod.

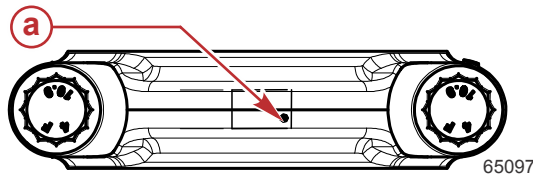

- Connecting rod cap**
a - Connecting rod bearing grade (I or 0)


Connecting Rod Bore Diameter		
	Dimension (at 20 °C (68 °F))	Mark
Connecting rod bore diameter	57.000–57.008 mm (2.2441–2.2444 in.)	I
	57.008–57.016 mm (2.2444–2.2447 in.)	0

Piston Pin Bore Diameter	
20.014–20.022 mm (0.7880–0.7882 in.)	

Measuring Crankshaft

Crankshaft Runout


1. Thoroughly clean the crankshaft and inspect the bearing surfaces. Replace the crankshaft if bearing surfaces are pitted, scored, or discolored.
2. Measure runout on all of the main bearing journals. Replace the crankshaft if it is out of specification.
3. Clean all of oil holes in crankshaft.

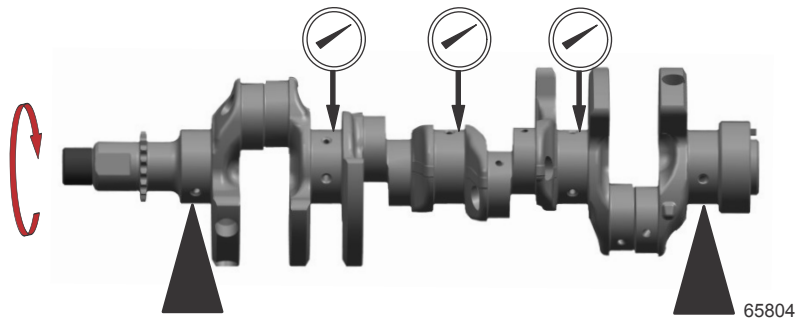

Crankshaft Runout Limit	
Runout limit	0.05 mm (0.002 in.)

Crankshaft Main Bearing and Crankpin Measurement

1. Measure the crankshaft main bearing journal diameter and crankpin journal diameter. Replace the crankshaft if it is out of specification.

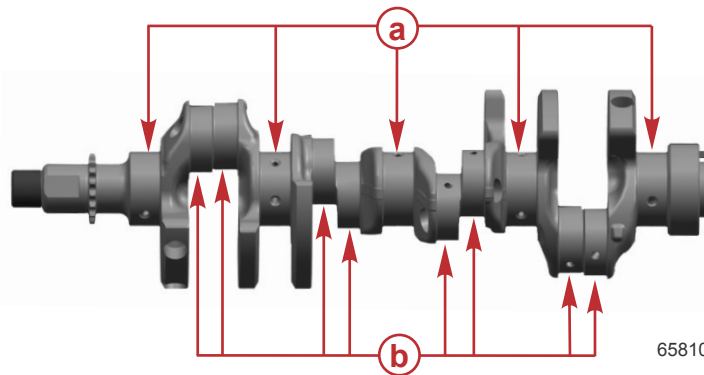

- a - Main bearing journals
- b - Crankpin journals


Crankshaft Journal Diameter Identification Marks			
	Dimension (at 20 °C (68 °F))		Mark
Main bearing journal	59.984–60.000 mm (2.3616–2.3622 in.)	59.992–60.000 mm (2.3619–2.3622 in.)	A
		59.984–59.992 mm (2.3616–2.3619 in.)	B
Rod bearing journal	53.984–54.000 mm (2.1254–2.1259 in.)	53.992–54.000 mm (2.1257–2.1259 in.)	C
		53.984–53.992 mm (2.1254–2.1257 in.)	D

2. Refer to **Selecting New Crankshaft and Connecting Rod Bearings** to determine the correct bearing grades.

Measuring Crankshaft Thrust Bearing Surface Width

1. Locate the crankshaft thrust bearing surfaces.
2. Measure the width between the crankshaft thrust bearing surfaces. Replace the crankshaft if it is out of specification.

IMPORTANT: Ensure that the measurement is taken between the machined thrust bearing surfaces, not the crankshaft counterweights.

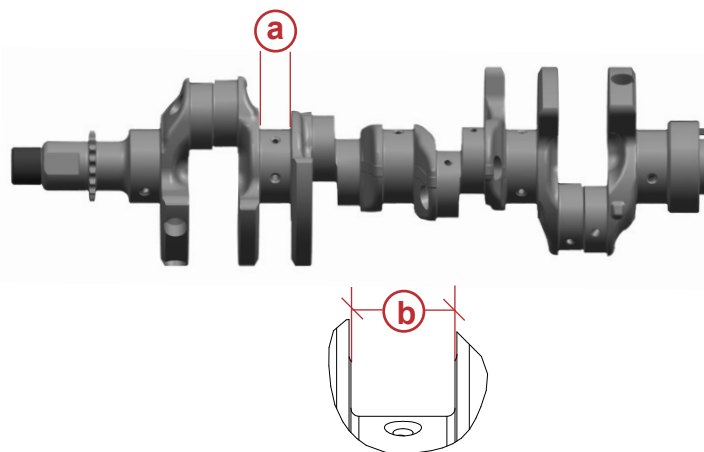

- a - Crankshaft thrust bearing surface
- b - Thrust bearing surface width—measure between the machined surfaces

Crankshaft Thrust Bearing Surface Width
25.95–26.05 mm (1.0217–1.0255 in.)

3. Verify the crankshaft end play after the crankshaft is installed into the cylinder block.

Crankshaft End Play
0.000–0.432 mm (0.000–0.017 in.)

Selecting New Crankshaft and Connecting Rod Bearings

When replacing the crankshaft main bearings and connecting rod bearings, select the suitable bearing from the bearing grade identifier located at the flywheel end of the crankshaft and on the port side of the cylinder block near the oil tube.


Cylinder Block/Crankcase

NOTE: When reading the main bearing journal grade on the crankshaft, the journal grade is in sequential order from J1 to J5 from top to bottom.

NOTE: When reading the connecting rod bearing journal grade on the crankshaft, the journal grade is in sequential order from J1 to J8 from top to bottom.

NOTE: When reading the main bearing journal grade on the cylinder block, the journal grade is in sequential order from the top main bearing to the bottom main bearing.

Crankshaft

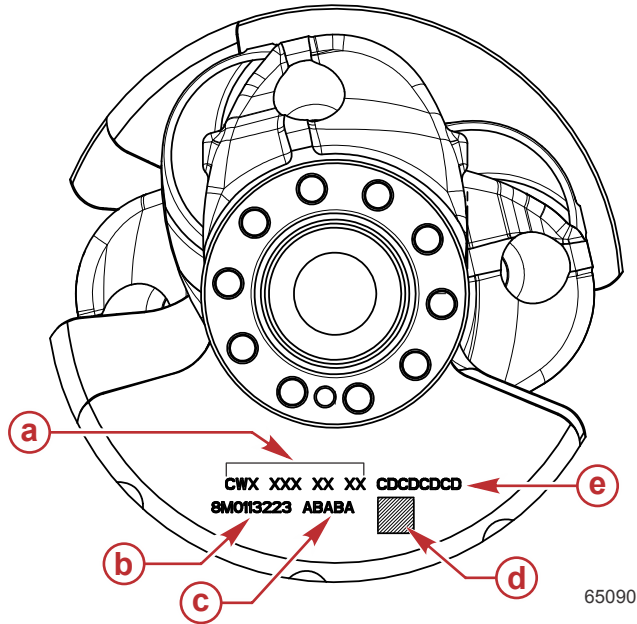


Crankshaft

- a** - Date code
- b** - Part number
- c** - Main bearing journal grade (from top to bottom; **ABABA** in this example)
- d** - Barcode
- e** - Connecting rod bearing journal grade (from top to bottom; **CDCDCDCD** in this example)

Crankshaft Journal Diameter Identification Marks			
	Dimension (at 20 °C (68 °F))		Mark
Main bearing journal	59.984–60.000 mm (2.3616–2.3622 in.)	59.992–60.000 mm (2.3619–2.3622 in.)	A
		59.984–59.992 mm (2.3616–2.3619 in.)	B
Rod bearing journal	53.984–54.000 mm (2.1254–2.1259 in.)	53.992–54.000 mm (2.1257–2.1259 in.)	C
		53.984–53.992 mm (2.1254–2.1257 in.)	D

Cylinder Blocks

Cylinder block main bearing codes are located on a machined surface on the port side of the cylinder block near the oil tube.

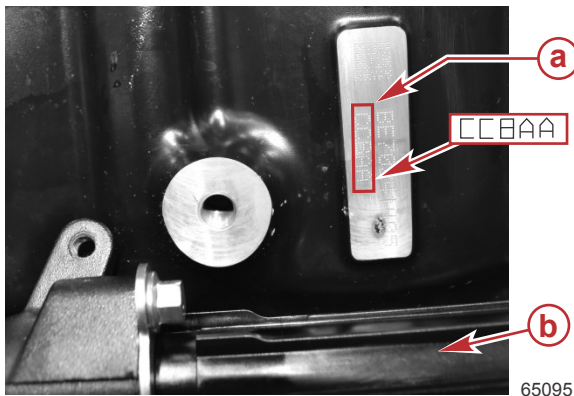

- a** - Cylinder block main bearing journal grade (from top to bottom, **CCBAA** in this example)
- b** - Oil tube


Selecting Main Bearings

Select the main bearing color for each main bearing journal from the following chart. Refer to the preceding procedures to locate the journal codes on the crankshaft and cylinder block.

Crankshaft Journal Code	Cylinder Block Code	Bearing Color Selection
A	A	Green
A	B	Blue
A	C	White
B	A	Blue
B	B	White
B	C	Orange

Connecting Rod Bearings

Select the connecting rod bearing color for each connecting rod from the following chart. Refer to the **Crankshaft** to locate the connecting rod bearing journal codes.

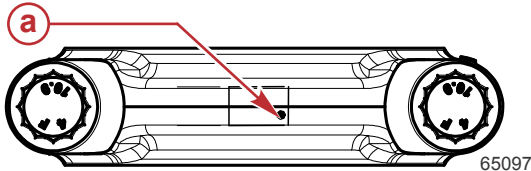

Connecting rod cap

a - Connecting rod bearing grade (I or 0)

Connecting Rod Bore Diameter		
	Dimension (at 20 °C (68 °F))	Mark
Connecting rod bore diameter	57.000–57.008 mm (2.2441–2.2444 in.)	I
	57.008–57.016 mm (2.2444–2.2447 in.)	0

Connecting Rod Journal Code	Crankshaft Journal Code	Bearing Color Selection
I	C	Green
I	D	Blue
0	C	Blue
0	D	White

Powerhead Assembly

Powerhead Preassembly Cleaning Recommendations


IMPORTANT: Any threaded hole or bolt with threadlocking compound that is contaminated with oil, must be thoroughly cleaned with a solvent to remove all traces of oil contamination. Failure to remove oil contamination will result in poor threadlocking compound adhesion.

Prior to assembling the powerhead, all threaded holes on the cylinder head and cylinder block must be cleared of threadlocking compound dust. Use compressed air to clear threadlocking compound dust.


Wash the cylinder block and crankcase cover with hot soapy water to remove debris and honing compound. Dry the cylinder block with compressed air. Failure to thoroughly clean the cylinder block of honing compound and/or debris will result in premature engine failure.

Installing Oil Gallery Plugs

1. Install new O-rings onto the oil gallery plugs or install new oil gallery plugs. Lubricate the new O-rings with 10W-30 4-Stroke Marine Engine Oil.

Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	O-rings	92-8M0078625

2. Install the oil gallery plugs. Tighten the plugs to the specified torque.

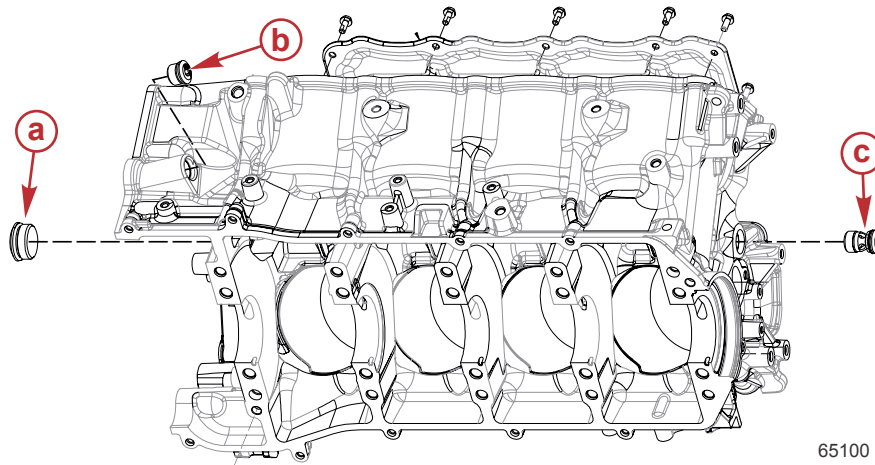


- a - 30 mm oil gallery plug
- b - 18 mm oil gallery plug
- c - 18 mm special oil gallery plug

65100

Description	Nm	lb-in.	lb-ft
30 mm oil gallery plug	55	–	40.6
18 mm oil gallery plug	15	132.8	–
18 mm special oil gallery plug	15	132.8	–

Balance Shaft and Oil Filter Adapter Installation

NOTE: Balance shaft timing can be verified before disassembly by removing the alternator and balance shaft top cover. Check the timing mark alignment as shown.

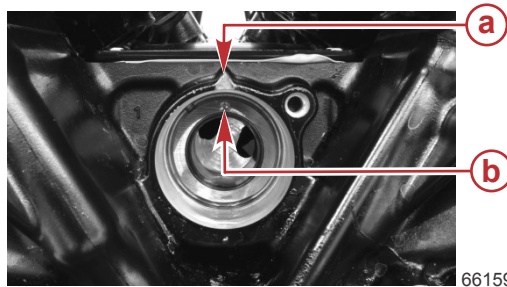


- a - Timing pointer
- b - Balance shaft timing mark

66159

NOTE: The balance shaft turns at the same speed and rotates in the opposite direction of the crankshaft.

1. Use a balance shaft sprocket and screw to press the lower ball bearing if replacement is necessary.

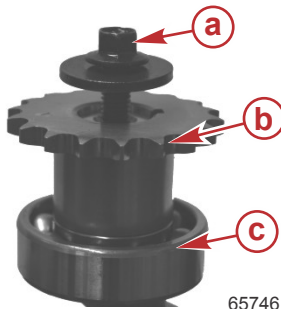


- a - Screw and washer
- b - Balance shaft sprocket
- c - Bearing


65746

2. Apply Lubriplate SPO 255 to the balance shaft upper bearing and bottom bore. Ensure that the oil hole of the bearing is aligned with the oil gallery of the cylinder block.


IMPORTANT: If the oil hole of the bearing is not aligned with the oil gallery of the cylinder block, catastrophic engine damage can occur due to oil starvation of the upper bearing.

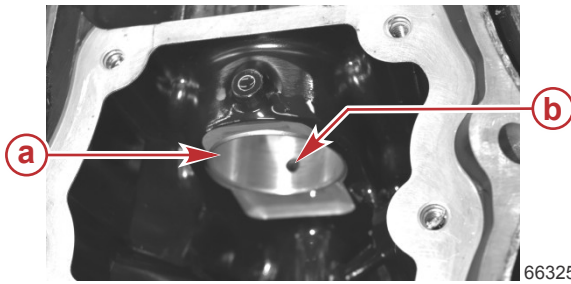

- a - Bearing
- b - Oil hole aligned with oil gallery


Tube Ref No.	Description	Where Used	Part No.
 136	Lubriplate SPO 255	Balance shaft upper bearing and bottom bore	Obtain Locally

3. Install the balance shaft from the bottom of the cylinder block. The balance shaft must be rotated as it enters the block, with the counterweight down when inserted through the bore, then rotate.
4. Press the lower balance shaft ball bearing into the block (the bearing is already installed on the shaft).
5. Apply Loctite 242 Threadlocker to the balance shaft retainer screw threads and tighten the two screws to the specified torque.

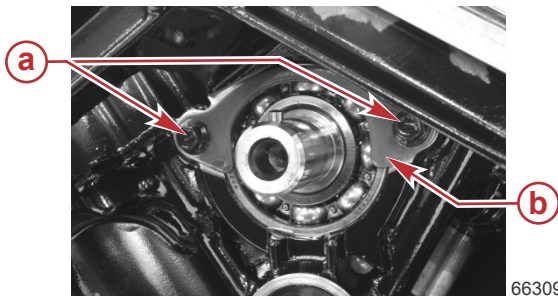


- a - M5 x 12 screws (2)
- b - Balance shaft retainer

Description	Nm	lb-in.	lb-ft
Balance shaft retainer screws (M5 x 12)	8.5	75.2	-

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	Balance shaft retainer screw threads	92-809821

6. Turn the shaft by hand to ensure smooth rotation.
7. Prevent the balance shaft from rotating by using a rubber coated tool as shown.

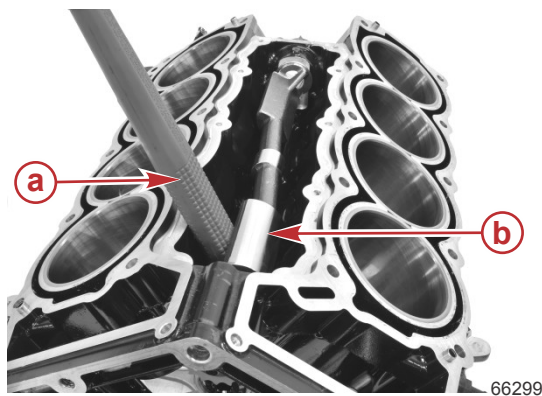


- a - Balance shaft
- b - Rubber coated tool

8. Install the balance shaft sprocket. Apply Loctite 242 Threadlocker to the sprocket screw threads and tighten the sprocket screw to the specified torque.


Cylinder Block/Crankcase

NOTE: The balance shaft sprocket is keyed and it has a timing mark that must be verified after final power head assembly.

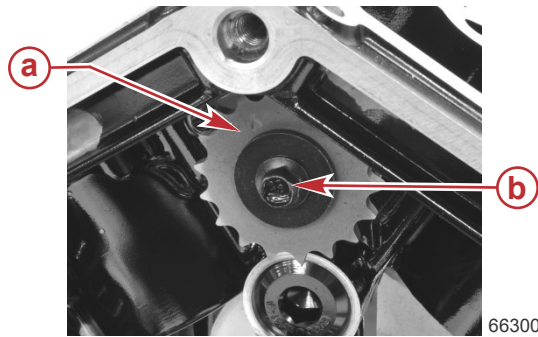


- a** - Balance shaft sprocket
- b** - Screw and washer

Description	Nm	lb-in.	lb-ft
Sprocket screw (M8 x 1.25)	40	-	29.5


Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	Sprocket screw threads	92-809821

- Apply 10W-30 4-Stroke Marine Engine Oil or equivalent to the double O-ring balance shaft top cover and install the cover. Tighten the T30 Torx® screw to the specified torque.

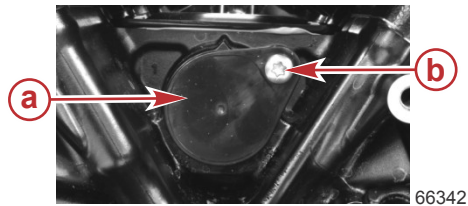


- a** - Balance shaft top cover
- b** - Screw

Description	Nm	lb-in.	lb-ft
T30 Torx screw	10	88.5	-

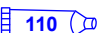Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Double O-ring balance shaft top cover	92-8M0078625

- Install a new oil gallery cover gasket onto the cylinder block.
- Install the oil gallery cover and tighten the four T30 Torx screws to the specified torque.

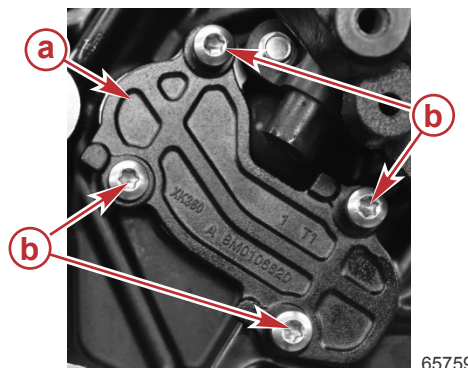


- a** - Oil gallery cover
- b** - T30 Torx screws (4)

Description	Nm	lb-in.	lb-ft
T30 Torx screws	10	88.5	-


- Apply a 2 mm bead of Three Bond® 1217F or equivalent to the balance shaft cover mating surface and install the balance shaft cover.

NOTE: Guide studs may be helpful to align the balance shaft cover with the cylinder block.

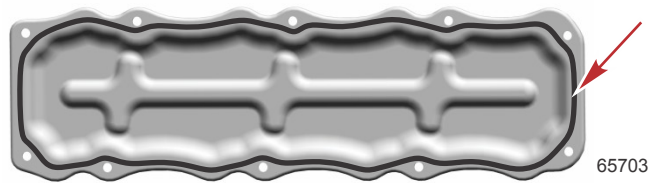

Tube Ref No.	Description	Where Used	Part No.
135	Three Bond 1217F	Mating surface of balance shaft cover	92-858005K02

13. Starting from the center and working outward, tighten the ten M5 screws to the specified torque in a crisscross pattern.

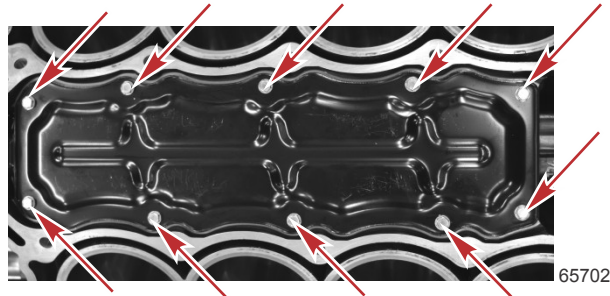


Description	Nm	lb-in.	lb-ft
M5 x 13 balance shaft cover screws (10)	5	44.3	-

14. Lubricate the oil tube O-rings with 10W-30 4-Stroke Marine Engine Oil.

Tube Ref No.	Description	Where Used	Part No.
110	10W-30 4-Stroke Marine Engine Oil	Oil tube O-rings	92-8M0078625

15. Install a new oil filter adapter gasket onto the cylinder block.
 16. Install the oil tube and filter adapter and secure with four T30 Torx screws. Tighten the screws to the specified torque.


IMPORTANT: Do not drop the oil tube flange screws into the oil circulation passage.

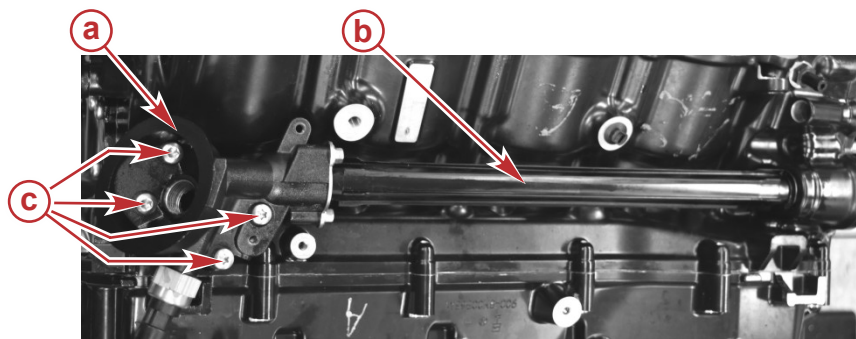

- a** - Filter adapter
- b** - Oil tube
- c** - M6 x 20 T30 Torx screws (4)

Description	Nm	lb-in.	lb-ft
M6 x 20 T30 Torx screws (4)	10	88.5	-

17. Install the oil filter fitting. Tighten the fitting to the specified torque.

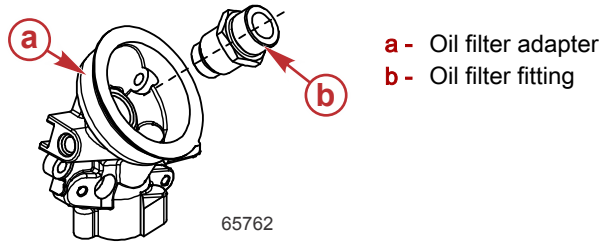


Description	Nm	lb-in.	lb-ft
Oil filter fitting	40	-	29.5

Crankshaft Installation


IMPORTANT: Use the old main bearing bolts to tighten the bedplate when checking the main bearing oil clearance. Install new main bearing bolts for the final assembly.

1. Ensure that the cylinder block, bedplate, main bearing bore, and sealing surfaces are absolutely clean and free of debris.
2. Install the new crankshaft main bearing halves into the cylinder block. Ensure that the bearing tabs are fully seated. Refer to **Selecting New Crankshaft and Connecting Rod Bearings** to select the proper size bearings.

IMPORTANT: Ensure that the bearing halves with the oil holes are installed into the cylinder block. Installing the wrong bearing halves will cause catastrophic engine damage.

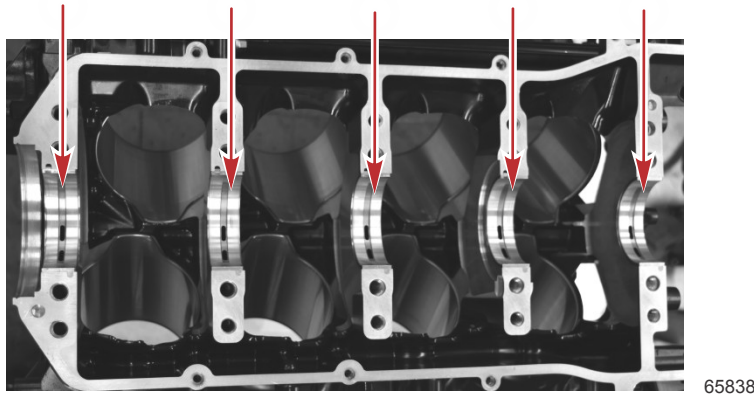


3. Install the new crankshaft main bearing halves into the bedplate. Ensure that the bearing tabs are fully seated and the two dowel pins are installed.

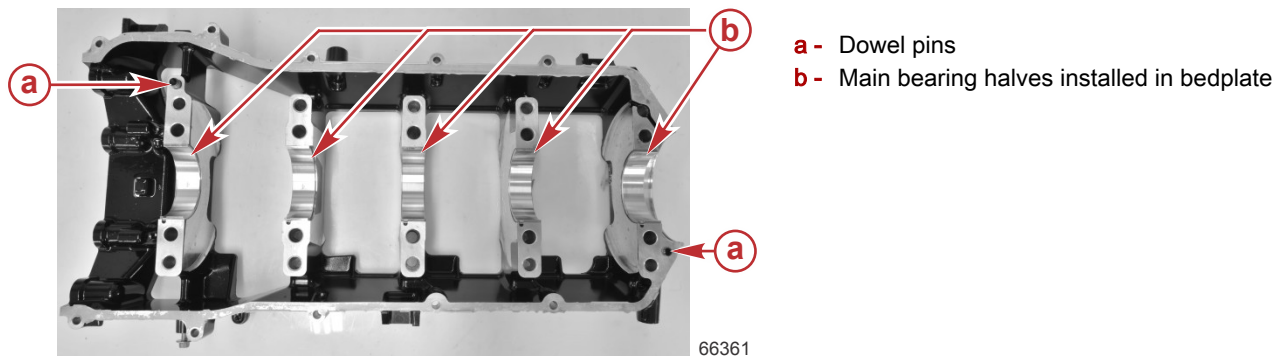


4. Apply 2-4-C with PTFE to the inner thrust bearing surfaces to hold them to the crankcase while installing the crankshaft.

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Inner thrust bearing surfaces	92-802859A 1


- Install the thrust bearings into the crankcase. Ensure that the thrust bearing grooves are facing outward. Apply Torco MPZ® Engine Assembly Lube HP to the outer thrust bearing surfaces.

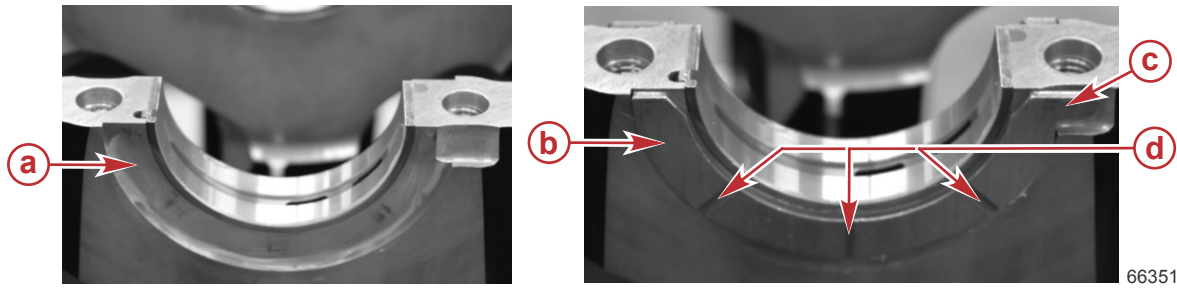

- a - Inner thrust bearing surface (apply 2-4-C with PTFE)
- b - Outer thrust bearing surface (apply Torco MPZ® Engine Assembly Lube HP)
- c - Bearing tab
- d - Thrust bearing grooves

Tube Ref No.	Description	Where Used	Part No.
	Torco MPZ® Engine Assembly Lube HP	Outer thrust bearing surfaces	Obtain Locally


- Install the crankshaft into the crankcase.
- Install a piece of Plastigauge® parallel to the crankshaft on the main bearing journals.

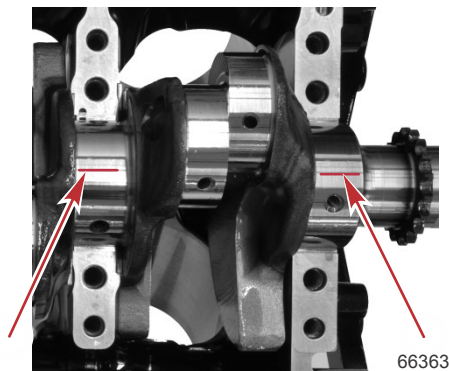

- Install the bedplate onto the cylinder block. Apply Lubriplate SPO 255 to the threads and under the heads of all main bearing bolts.

IMPORTANT: Do not allow the crankshaft to rotate when checking the bearing clearance with Plastigauge.



IMPORTANT: Use the old main bearing bolts to tighten the bedplate when checking the main bearing oil clearance. Install new main bearing bolts for the final assembly.

Tube Ref No.	Description	Where Used	Part No.
 136	Lubriplate SPO 255	Threads and under the heads of all main bearing bolts	Obtain Locally

- Tighten each main bearing bolt to the specified torque. For the third and final steps of the torque sequence, tighten the bolt to the specified torque, then tighten the bolt to the degree indicated before moving to the next bolt in the sequence. Refer to the following table and follow the sequence exactly.

Cylinder Block/Crankcase

IMPORTANT: Each main bearing cap has two 10 mm bolts and two 11 mm bolts. The 10 mm bolts are on the outside of the cap (furthest from the crankshaft) and have hex heads. The 11 mm bolts are nearest to the crankshaft and have 12-point heads. Do not intermix these bolts as cylinder block thread damage will result.

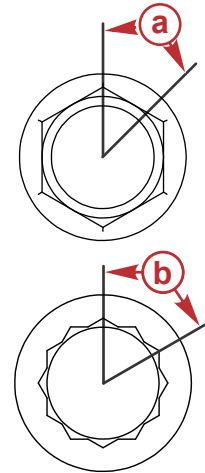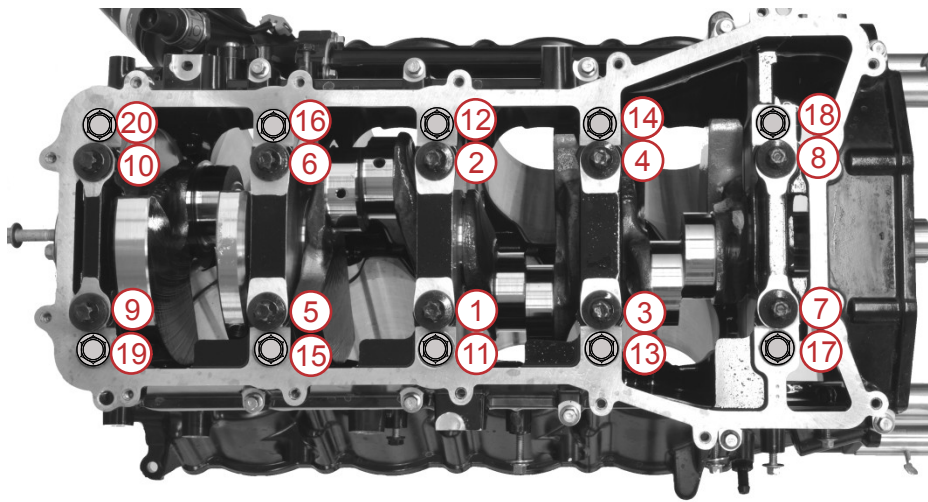

66372


a - 45°

b - 60°

Main Bearing Bolt Torque Sequence	Nm	lb-in.	lb-ft
First —Inner main bearing/bedplate bolts (1-10)	20	177	—
Second —Outer main bearing/bedplate bolts (11-20)	20	177	—
Third —Inner main bearing/bedplate bolts (1-10)	40 + 60°	—	29.5 + 60°
Final —Outer main bearing/bedplate bolts (11-20)	25 + 45°	—	18.4 + 45°

Angle Gauge	Obtain Locally
-------------	----------------

10. Remove the bedplate and measure the Plastigauge width. If the compressed Plastigauge measurement is not within the following specification, check the crankshaft code and measurement, cylinder block main bearing code, and the bearing grade selection.

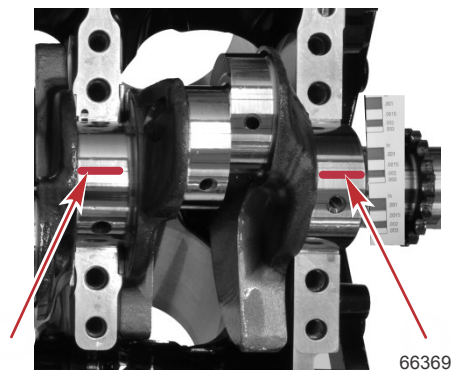


66369


Main Bearing Oil Clearance	
Oil clearance	0.036–0.070 mm (0.0015–0.0027 in.)

11. If the measurement is within specification, remove all Plastigauge material from the bearing and crankshaft surfaces.
12. Remove the crankshaft from the crankcase.


13. Apply Torco MPZ® Engine Assembly Lube HP to the outer thrust bearing surfaces.

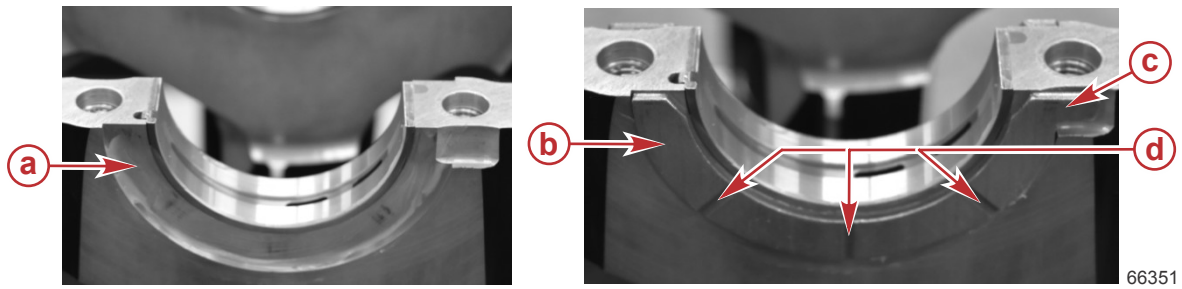


- a** - Inner thrust bearing surface (apply 2-4-C with PTFE)
- b** - Outer thrust bearing surface (apply Torco MPZ® Engine Assembly Lube HP)
- c** - Bearing tab
- d** - Thrust bearing grooves

Tube Ref No.	Description	Where Used	Part No.
	Torco MPZ® Engine Assembly Lube HP	Outer thrust bearing surfaces	Obtain Locally

14. Apply Lubriplate SPO 255 to the main bearing halves in the cylinder block.

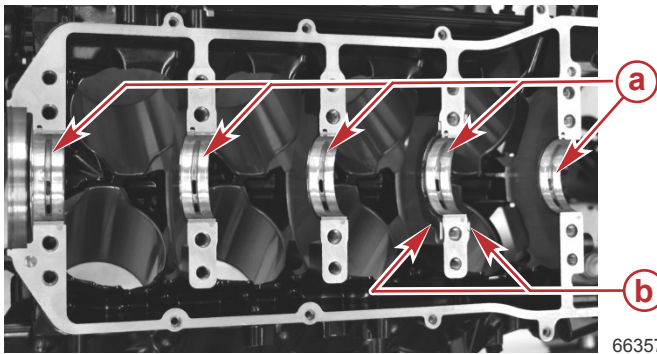


- a** - Main bearing halves lubricated with Lubriplate SPO 255
- b** - Thrust bearings lubricated with Torco MPZ® Engine Assembly Lube HP


Tube Ref No.	Description	Where Used	Part No.
 136	Lubriplate SPO 255	Main bearing halves	Obtain Locally


15. Install the crankshaft into the cylinder block. Use care to prevent dislodging the thrust bearings.

16. Use isopropyl alcohol to clean the mating surfaces of the cylinder block and bedplate.

Tube Ref No.	Description	Where Used	Part No.
 99	Isopropyl Alcohol	Mating surfaces of the cylinder block and bedplate	Obtain Locally


17. Apply a 2 mm (0.08 in.) bead of Three Bond® 1217F to the bedplate sealing surface. Ensure that the two dowel pins are fully installed.

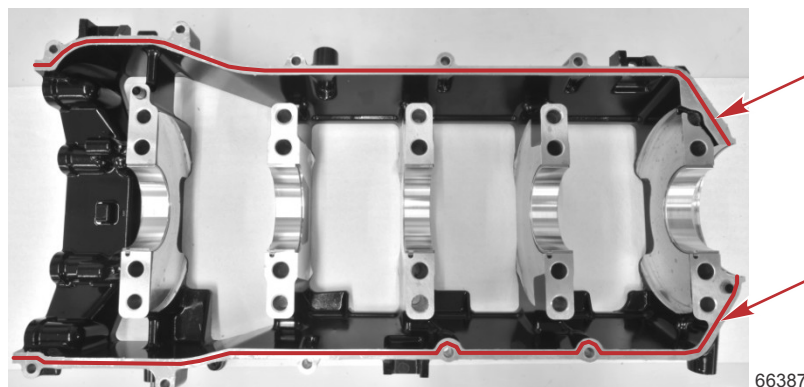

Tube Ref No.	Description	Where Used	Part No.
 135	Three Bond 1217F	Bedplate sealing surface	92-858005K02


18. Install the bedplate onto the cylinder block. Ensure that the dowel pins engage with the holes in the crankcase.
19. Apply Lubriplate SPO 255 to the bolt holes, bolt threads, and mating area around holes.

IMPORTANT: Install new main bearing bolts for the final assembly.

Tube Ref No.	Description	Where Used	Part No.
 136	Lubriplate SPO 255	Bolt holes, threads, and mating area around holes	Obtain Locally

20. Tighten each main bearing bolt to the specified torque. For the third and final steps of the torque sequence, tighten the bolt to the specified torque, then tighten the bolt to the degree indicated before moving to the next bolt in the sequence. Refer to the following table and follow the sequence exactly.

IMPORTANT: Each main bearing cap has two 10 mm bolts and two 11 mm bolts. The 10 mm bolts are on the outside of the cap (furthest from the crankshaft) and have hex heads. The 11 mm bolts are nearest to the crankshaft and have 12-point heads. Do not intermix these bolts as cylinder block thread damage will result.

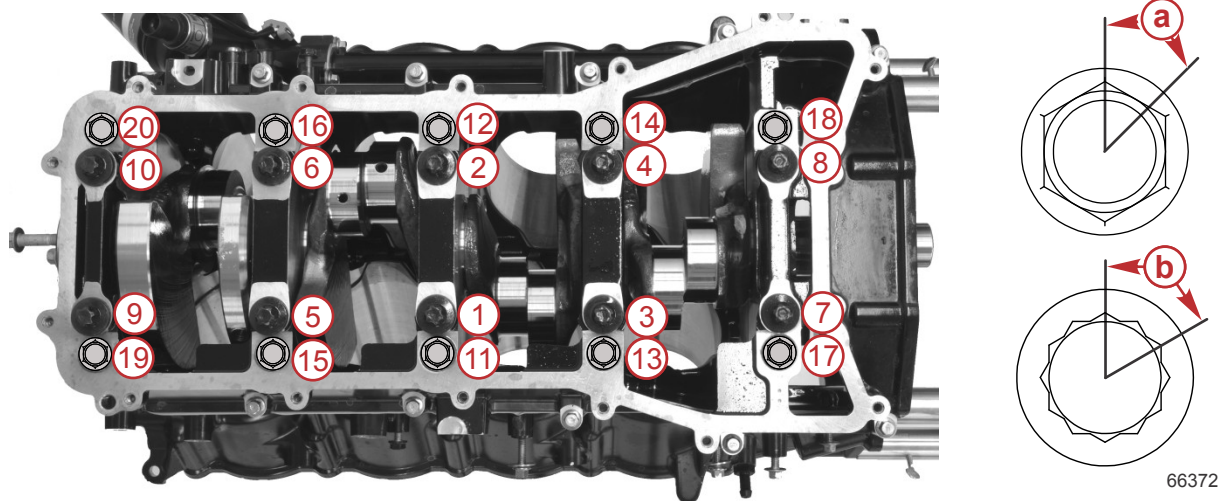


- a - 45°
- b - 60°

Main Bearing Bolt Torque Sequence	Nm	lb-in.	lb-ft
First —Inner main bearing/bedplate bolts (1-10)	20	177	–
Second —Outer main bearing/bedplate bolts (11-20)	20	177	–
Third —Inner main bearing/bedplate bolts (1-10)	40 + 60°	–	29.5 + 60°
Final —Outer main bearing/bedplate bolts (11-20)	25 + 45°	–	18.4 + 45°

Angle Gauge	Obtain Locally
-------------	----------------

21. Apply Loctite 242 Threadlocker to the bedplate perimeter bolt threads and tighten to the specified torque.

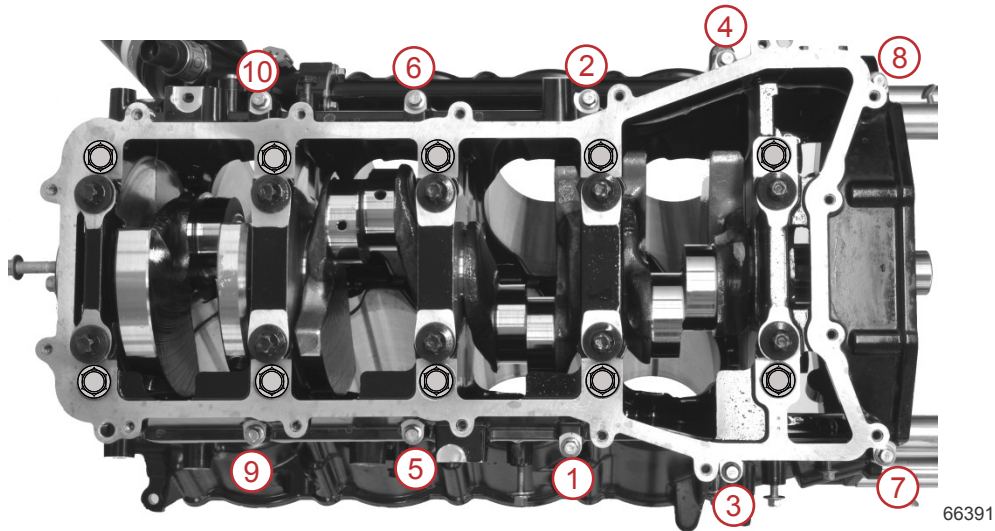

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	Threads of bedplate perimeter bolts	92-809821

Description	Nm	lb-in.	lb-ft
Bedplate perimeter bolts (M6 x 40)	10	88.5	–


22. Clean the top area around the crankshaft seal bed and remove any sealant that has squeezed out during assembly.
23. Rotate the crankshaft. It should rotate smoothly with no dragging or catching.
24. Check the crankshaft end play with a dial indicator.

Crankshaft end play	0.00–0.432 mm (0.00–0.017 in.)
----------------------------	--------------------------------

25. Lubricate the inside lip of the crankshaft seal with Engine Coupler Spline Grease.

Tube Ref No.	Description	Where Used	Part No.
91	Engine Coupler Spline Grease	Inside lip of the crankshaft seal	8M0071842


26. Install the spacer and crankshaft seal into the cylinder block. The spacer can be installed on either side of the seal to move the seal lip location if the crankshaft has a groove caused by the seal.

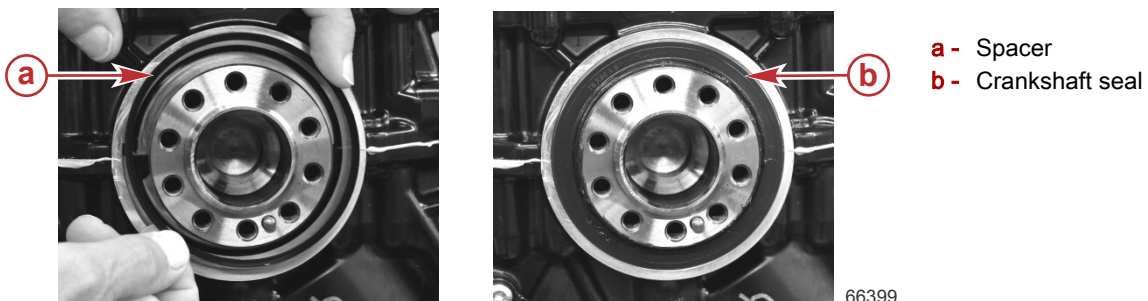

27. Use a short length of 8.89 cm (3.5 in.) outside diameter PVC pipe to press the crankshaft seal into the cylinder block.

Cylinder Block/Crankcase

- Install the snap ring to retain the crankshaft seal and spacer.

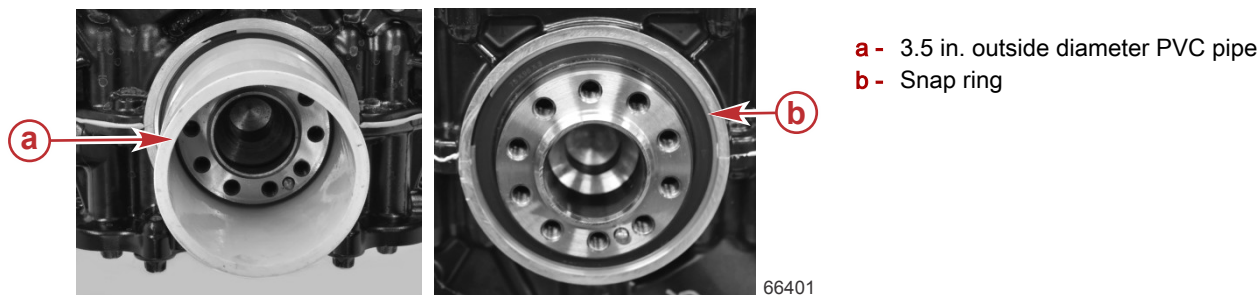

Piston/Connecting Rod Assembly


- Lubricate the piston pin with Lubriplate SPO 255.
- Assemble the piston, connecting rod, piston pin, and new piston pin retaining clips.

IMPORTANT: Always install new piston pin retaining clips.

Ensure that the piston pin retaining clip gap faces the crown of the piston (12 o'clock position).

Ensure that the piston and connecting rod are assembled in the same orientation as removed.

The dot on the piston crown faces the top of the powerhead.

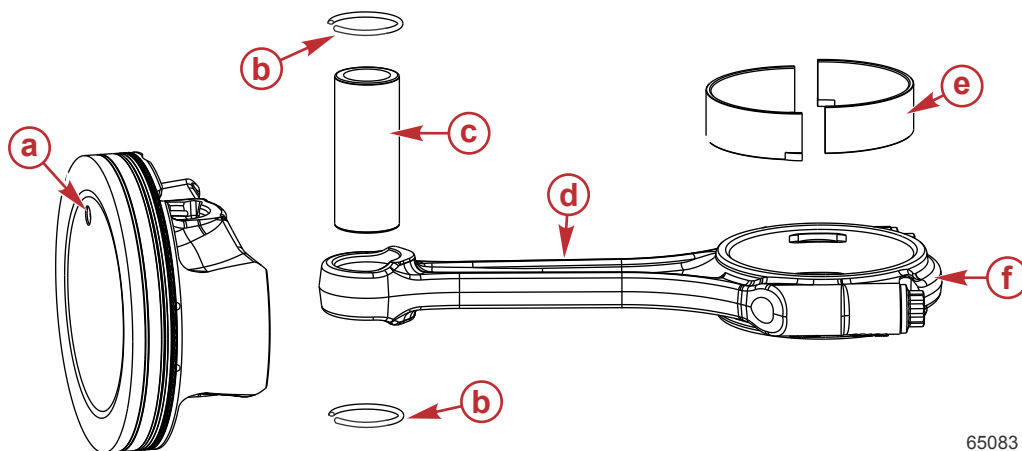

- a - Dot on piston crown (faces top of powerhead)
- b - Piston pin retaining clips (gap faces crown of piston, 12 o'clock position)
- c - Piston pin
- d - Connecting rod
- e - Connecting rod bearings
- f - Rod cap

Tube Ref No.	Description	Where Used	Part No.
136	Lubriplate SPO 255	Piston pin	Obtain Locally

- Ensure that both sides of the bearing are free of debris before installing the bearing halves.
 - Ensure that the connecting rod and cap bearing areas are free of debris before installing the bearing halves.
 - Install the bearing halves into the connecting rod and cap.
- IMPORTANT: Ensure that the bearing tabs are seated into the connecting rod and the rod cap.**
- Lubricate the inside diameter of the connecting rod bearing halves with Lubriplate SPO 255.

Tube Ref No.	Description	Where Used	Part No.
136	Lubriplate SPO 255	Inside diameter of the connecting rod bearing halves	Obtain Locally

Piston Ring Installation

IMPORTANT: Do not reuse the original rings during reassembly. Always install new rings when rebuilding the engine.


IMPORTANT: Use caution when installing piston rings to avoid scratching the piston.

1. Apply Synthetic Blend 4-Stroke Outboard Oil 25W-40 engine oil to the piston ring grooves and the piston rings.
2. Install the oil ring expander into the lower ring groove of the piston.

NOTE: Ensure that the oil ring expander gap is properly orientated on the piston. The oil ring spacer cannot be rotated after the bottom and top oil control rings are installed.

3. Install the bottom oil control ring.
4. Install the top oil control ring.
5. Install the second compression ring.
6. Install the top compression ring.
7. Position the piston ring gaps as shown.

IMPORTANT: The second and top piston compression rings must be installed with the identifying marks facing up. Spread the rings just enough to slip over the piston.

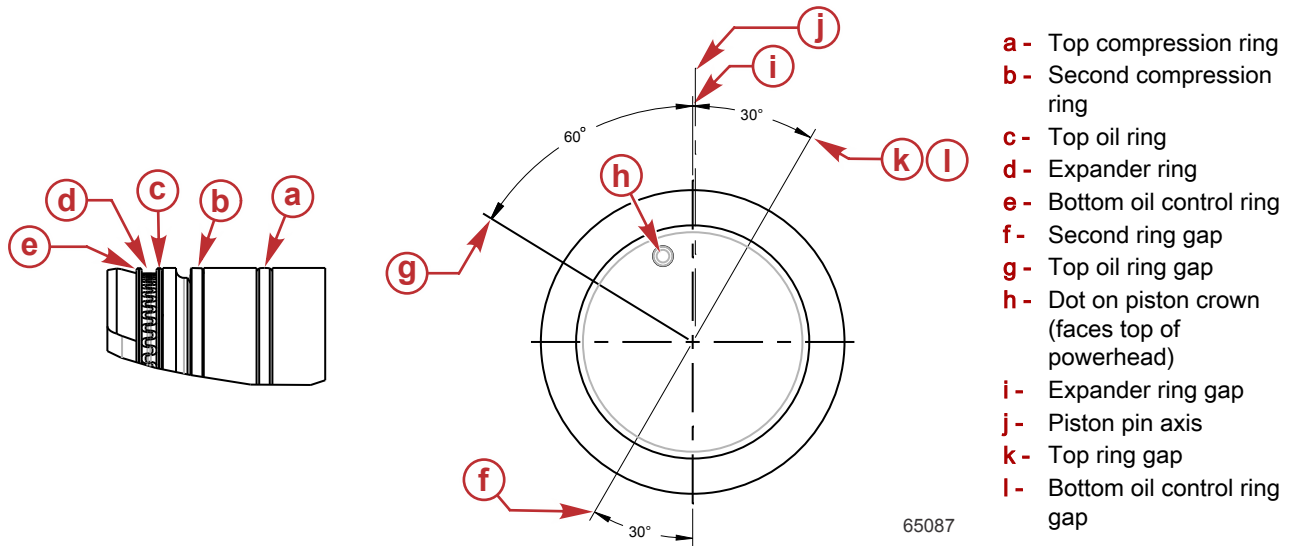

Tube Ref No.	Description	Where Used	Part No.
139	Synthetic Blend 4-Stroke Outboard Oil 25W-40	Piston ring grooves and piston rings	92-8M0078629

Piston Assembly Installation

IMPORTANT: Use the old connecting rod cap bolts to tighten the connecting the rod caps when checking the connecting rod bearing oil clearance. Install new connecting rod cap bolts for the final assembly.

1. Apply 10W-30 4-Stroke Marine Engine Oil to the cylinder bores.

Tube Ref No.	Description	Where Used	Part No.
110	10W-30 4-Stroke Marine Engine Oil	Cylinder bores	92-8M0078625

2. Ensure that the piston ring orientation is correct. Refer to **Piston Ring Installation**.
3. Apply Lubriplate SPO 255 to the piston skirts and rings.


Tube Ref No.	Description	Where Used	Part No.
136	Lubriplate SPO 255	Piston skirts and rings	Obtain Locally

4. Compress the piston rings with a ring compressor.

ARP Piston Ring Compressor	ARP 901-9200
----------------------------	--------------

Cylinder Block/Crankcase



5. Install rod guide dowels onto the connecting rods to prevent bearing journal damage when installing the pistons.

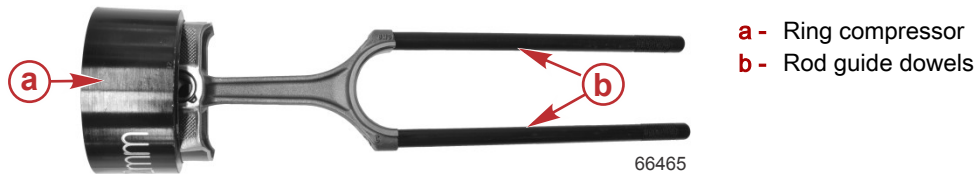

Rod Guide Dowels	8M0148866
------------------	-----------


6. Install the piston and connecting rod assemblies into their respective bores in the correct orientation. The piston dot faces the top of the powerhead, with orientation marks on the connecting rod caps facing each other.

NOTE: On certain cylinders, it may be necessary to use only one rod guide dowel due to interference with the cylinder block.

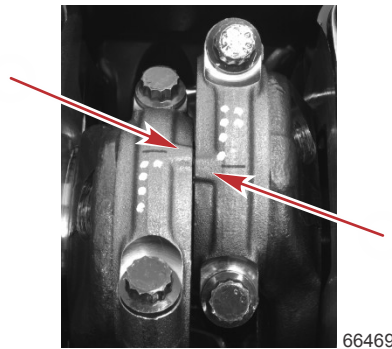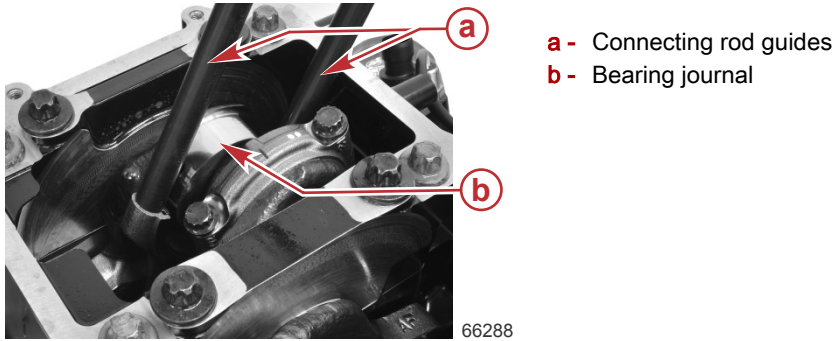


Note the connecting rod cap orientation marks (V8 only)

7. Install a piece of Plastigauge® parallel to the crankshaft on the connecting rod bearing journals.

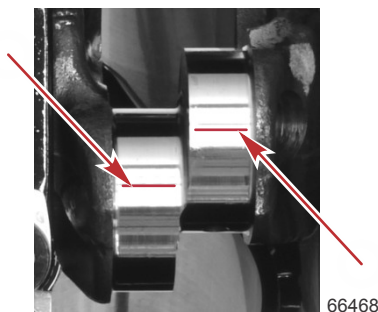

8. Install the connecting rod caps in the correct orientation.
9. Tighten the connecting rod cap bolts to the specified torque.

IMPORTANT: Use the old connecting rod cap bolts to tighten the connecting rod caps when checking the connecting rod bearing oil clearance. Install new connecting rod cap bolts for the final assembly.

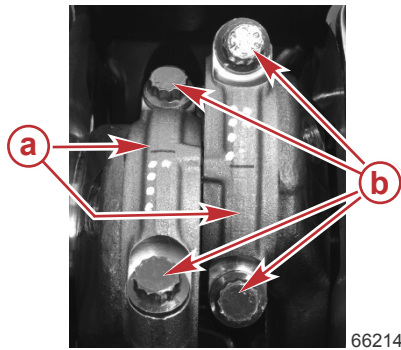


- a - Connecting rod caps
- b - Connecting rod cap bolts (10 mm)

66214

Description		Nm	lb-in.	lb-ft
Connecting rod cap bolts	First	10	88.5	–
	Second	25	–	18.4
	Final	Tighten an additional 90 degrees		

Angle Gauge	Obtain Locally
-------------	----------------


10. Remove the connecting rod caps and measure the Plastigauge width. If the compressed Plastigauge measurement is not within the following specification, check the crankshaft code and measurement, cylinder block main bearing code, and the bearing grade selection.

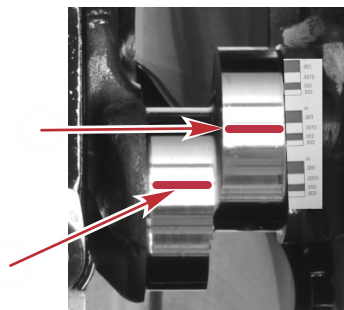

66472


Connecting Rod Bearing Oil Clearance	
Oil clearance	0.046–0.074 mm (0.0019–0.0029 in.)

11. If the measurement is within specification, remove all Plastigauge material from the bearing and crankshaft surfaces.
12. Push the connecting rod and piston assemblies away from the bearing journals.
13. Apply Lubriplate SPO 255 to the rod cap mating surfaces, connecting rod bearing halves, connecting rod bolt threads, and under the connecting rod bolt heads.

Tube Ref No.	Description	Where Used	Part No.
 136	Lubriplate SPO 255	Rod cap mating surfaces, bearing halves, rod bolt threads, and under the connecting rod bolt heads	Obtain Locally

IMPORTANT: Install new connecting rod cap bolts for the final assembly.


14. Install the connecting rod caps in the correct orientation.

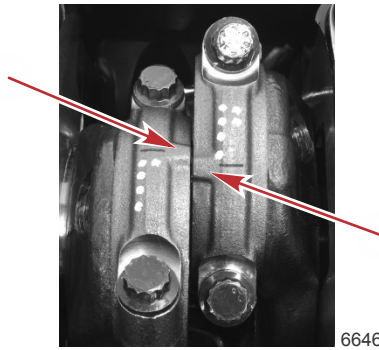

Note the connecting rod cap orientation marks

15. Tighten the connecting rod cap bolts to the specified torque.

IMPORTANT: Install new connecting rod cap bolts for the final assembly.

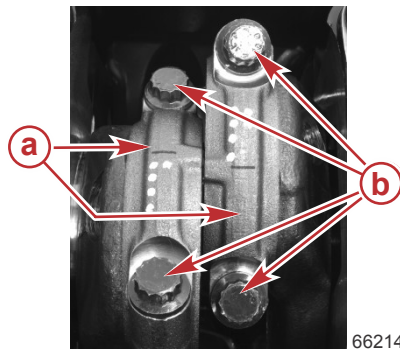

- a - Connecting rod caps
- b - Connecting rod cap bolts

Description		Nm	lb-in.	lb-ft
Connecting rod cap bolts	First	10	88.5	-
	Second	25	-	18.4
	Final	Tighten an additional 90 degrees		

Angle Gauge	Obtain Locally
-------------	----------------


Intake Plenum, Throttle Body, and Flywheel Installation

IMPORTANT: The intake plenum and throttle body must be installed before the flywheel.

Plenum Installation

1. Inspect the intake plenum seal. Replace the seal if damage is found.

2. Install the intake plenum onto the cylinder block. Tighten the screws to the specified torque in the sequence shown.

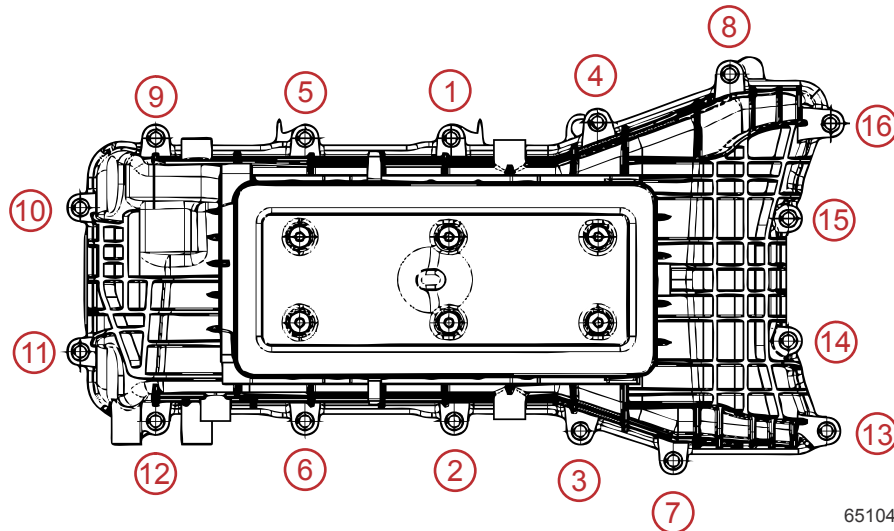


Intake plenum torque sequence

Description	Nm	lb-in.	lb-ft
Intake plenum screws (M6 x 1 x 30)	10	88.5	-

Throttle Body Installation

If removed, install the throttle body onto the intake plenum studs before installing the flywheel. Install a gasket between the throttle body and intake plenum. Tighten the nylon locking nuts to the specified torque.

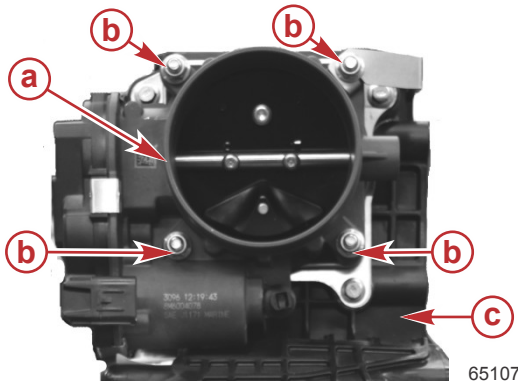


- a - Throttle body
- b - Nylon locking nuts (4)
- c - Intake plenum

Description	Nm	lb-in.	lb-ft
M6 nylon locking nut (4)	7	62	-

Flywheel Installation

IMPORTANT: The intake plenum and throttle body must be installed before the flywheel.

1. Align the crankshaft dowel pin with the dowel pin hole on the bottom of the flywheel. Install the flywheel onto the crankshaft.

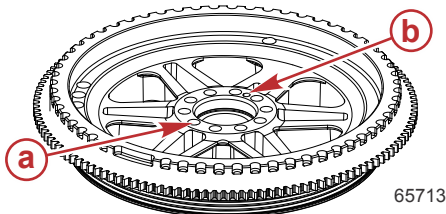


- a - Flywheel mounting holes
- b - Dowel pin hole

2. Start the flywheel screws by hand to prevent cross-threading.
3. Prevent the flywheel from turning by using a flywheel holding tool.

Flywheel Holding Tool	91- 52344
-----------------------	-----------

4. Starting with the screw closest to the dowel pin, tighten the screws to the specified torque in the sequence shown.

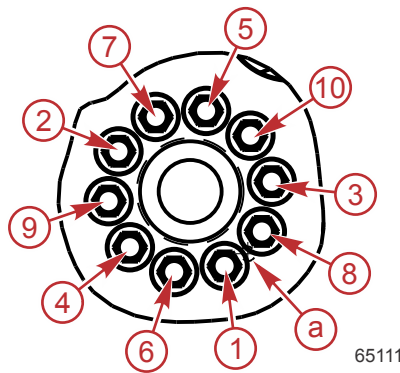



Flywheel screw torque sequence
a - Dowel pin location

Description	Nm	lb-in.	lb-ft
Flywheel mounting screw (M8 x 1 x 42)	40	-	29.5

Cylinder Head Installation

FourStroke V8 DOHC—Camshaft Identification


The port exhaust camshaft can be identified by the sensor target at the top of the camshaft. The starboard intake camshaft can be identified by the groove below the chain gear. Each camshaft has an identification mark.

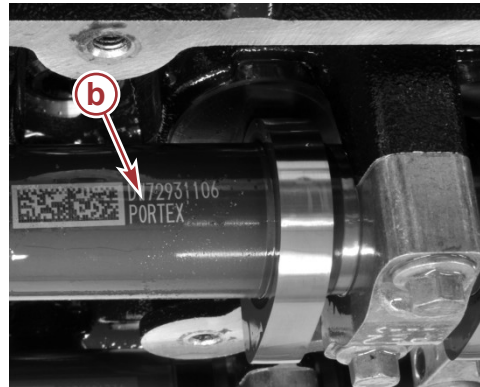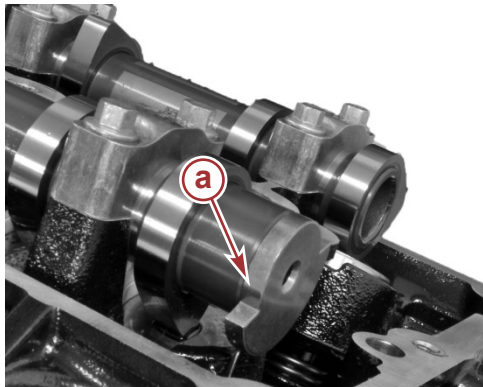

67354

- a -** Sensor target
- b -** Camshaft identification mark

NOTE: Observe the camshafts identification marks during powerhead assembly to ensure that each camshaft is installed in the correct location.

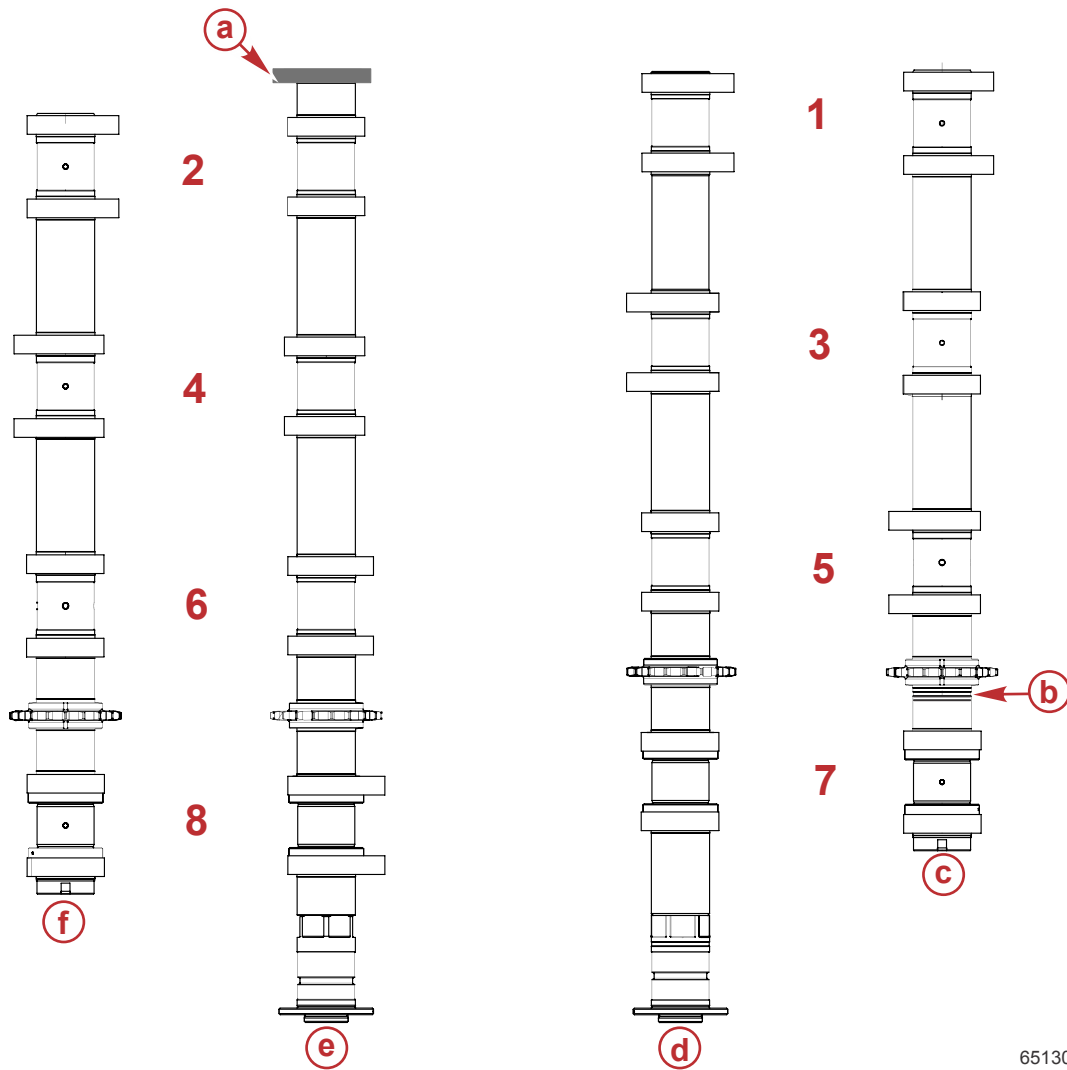

65130

Camshaft identification

- a**- Sensor target
- b**- Port intake camshaft
- c**- Port exhaust camshaft
- d**- Starboard exhaust camshaft
- e**- Starboard intake camshaft
- f**- Groove below the chain gear (starboard intake camshaft only)

Ref.	Description
1	Cylinder number 1
2	Cylinder number 2
3	Cylinder number 3
4	Cylinder number 4
5	Cylinder number 5
6	Cylinder number 6
7	Cylinder number 7
8	Cylinder number 8

IMPORTANT: The installation of the cylinder head must be strictly followed. Failure to follow the installation outline procedure may damage the valve train components.

Cylinder Block/Crankcase

IMPORTANT: This engine utilizes an interference valve train design. Do not rotate the crankshaft or cams when the timing chain is loose or removed from the cam gears unless advised to do so. Failure to adhere to this caution may result in valve and piston damage.

IMPORTANT: The crankshaft must be in the service position during cylinder head installation and the balance shaft cover must be installed prior to cylinder head installation.

IMPORTANT: The cylinder head must be installed onto the block with the camshafts removed and the lifter buckets installed, with a length of rubber hose installed to prevent the lifter buckets from falling out of the cylinder heads.

IMPORTANT: Refer to Section 4B - Valve Clearance and Adjustments to verify the valve lash specifications. Valve lash must be verified with the cylinder heads, camshafts, and timing chain tensioners installed.


IMPORTANT: V8 models only—Ensure that the balance shaft cover is installed prior to installing the cylinder heads.

1. Inspect the cylinder block and cylinder head mating surfaces for cleanliness and flatness per specification. Refer to **Section 4B - V8 Cylinder Head Specifications**.
2. Ensure that two alignment dowels are installed into each bank of the cylinder block.



Dowel pins (two per bank)

3. Rotate the engine to the service position.

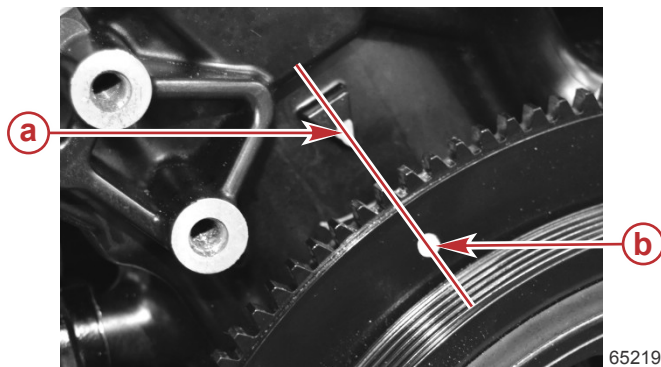


Timing marks aligned in the service position

- a** - Pointer on cylinder block (starboard bank)
- b** - Dot on flywheel (identified with yellow paint for visibility)


4. Place the port side head gasket onto the cylinder block.

IMPORTANT: No dressing or sealant is required on the head gaskets or head bolts.

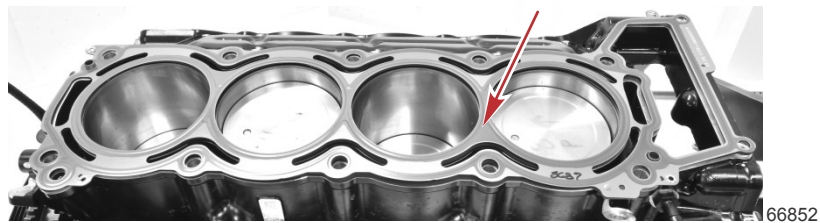


5. Place the port side cylinder head onto the cylinder block.

- Remove the Tygon tubing.

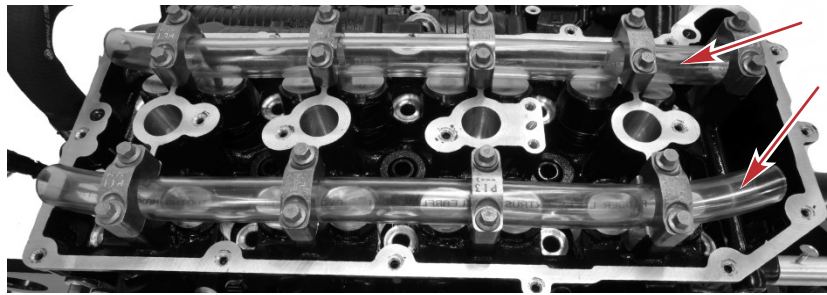

66184

- Install and tighten the E14 external Torx® cylinder head bolts to the specified torque in the sequence shown.
- Install and tighten the two M6 x 1 x 35 bolts at the bottom of the cylinder head to the specified torque.

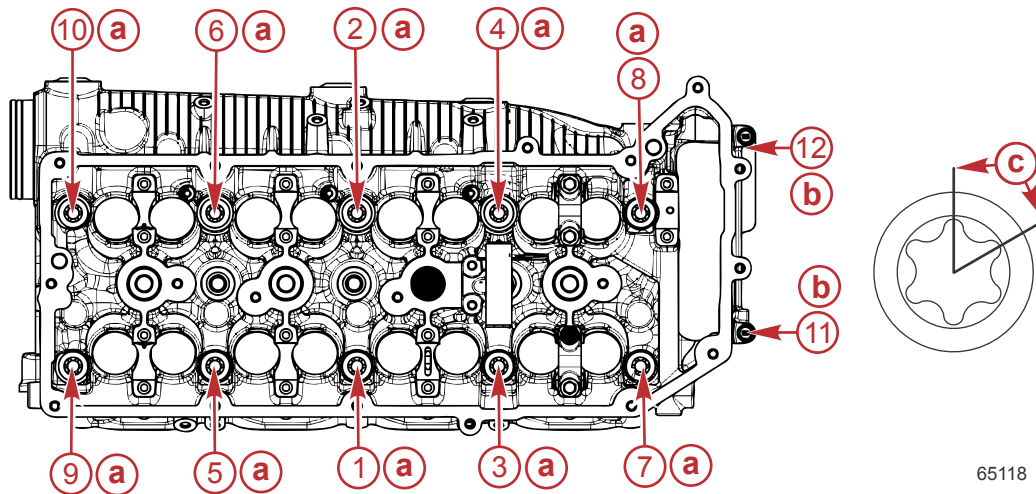

65118

Port side cylinder head

- a** - E14 External Torx cylinder head bolts
- b** - M6 x 1 x 35 bolts
- c** - 60°

Description		Nm	lb-in.	lb-ft
E14 external Torx cylinder head bolts	First	15	132.8	–
	Second	35	–	25.8
	Final	Tighten an additional 60°		


Description	Nm	lb-in.	lb-ft
M6 x 1 x 35 bolts	12	106.2	–

Angle Gauge	Obtain Locally
-------------	----------------

- Place the starboard side cylinder head gasket onto the cylinder block.
- Place the starboard side cylinder head onto the cylinder block. Remove the tygon tubing.
- Install and tighten the E14 external Torx® cylinder head bolts to the specified torque in the sequence shown.

Cylinder Block/Crankcase

12. Install and tighten the two M6 x 1 x 35 bolts at the bottom of the cylinder head to the specified torque.

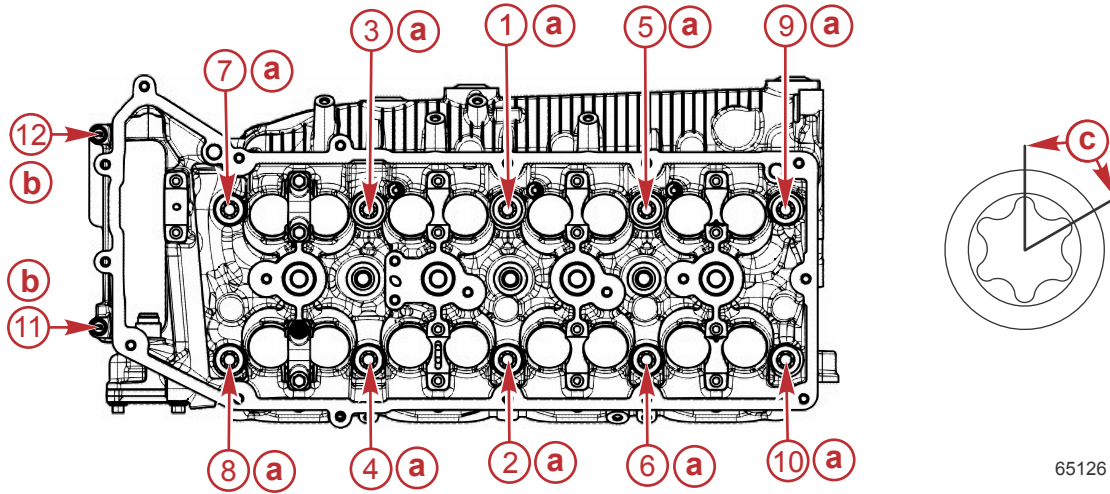

65126

Starboard cylinder head

- a - E14 External Torx cylinder head bolts
- b - M6 x 1 x 35 bolts
- c - 60°

Description		Nm	lb-in.	lb-ft
E14 external Torx cylinder head bolts	First	15	132.8	–
	Second	35	–	25.8
	Final	Tighten an additional 60°		
Description		Nm	lb-in.	lb-ft
M6 x 1 x 35 bolts		12	106.2	–
Angle Gauge	Obtain Locally			

13. Apply Lubriplate SPO 255 to the camshaft bearing surfaces, lifter buckets, camshaft bearing journals, and camshaft thrust surfaces on the port and starboard cylinder heads.

Tube Ref No.	Description	Where Used	Part No.
136	Lubriplate SPO 255	Camshaft bearing surfaces, lifter buckets, camshaft bearing journals, and camshaft thrust surfaces	Obtain Locally

14. Align the port intake camshaft, port exhaust camshaft, and camshaft-to-camshaft timing chain as shown.
15. Place the port camshafts and timing chain into the port cylinder head. Ensure that the timing marks on the camshaft sprockets and timing chain are aligned as shown. Finesse the camshafts into the bearing journals to prevent damage to the bearing surfaces.




66497

Port camshafts in TDC position

- a - Timing marks on timing chain
- b - Timing marks on camshaft sprockets


16. Turn the camshafts and timing chain clockwise (as viewed from the bottom of the cylinder block) to the assembly position. Note the locations of the camshaft timing marks. Finesse the camshafts into the bearing journals to prevent damage to the bearing surfaces.

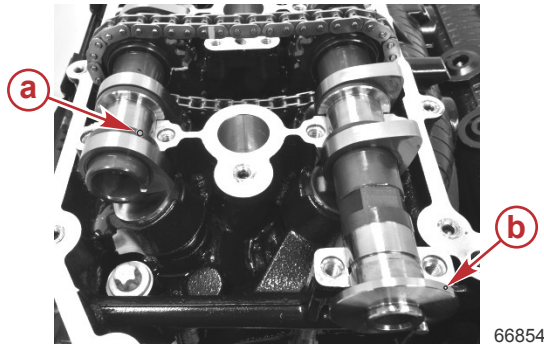

- a - Port intake camshaft timing mark in the assembly position
- b - Port exhaust camshaft timing mark in the assembly position


17. Place the four camshaft caps into position and tighten the screws until they are snug. Alternate tightening the screws to draw the camshafts down evenly.

IMPORTANT: The directional arrow on each camshaft points to the top of the powerhead.

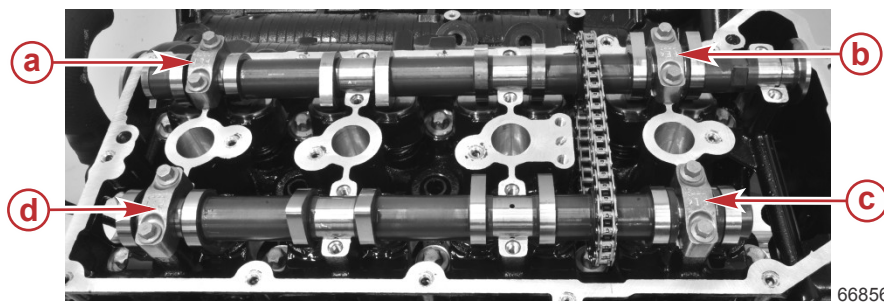

- a - Camshaft cap PE1
- b - Camshaft cap PE4
- c - Camshaft cap PI4
- d - Camshaft cap PI1


18. Use a wrench on the camshaft hex to turn the camshafts back to the TDC position. The camshaft timing marks must align with the camshaft cap parting lines.

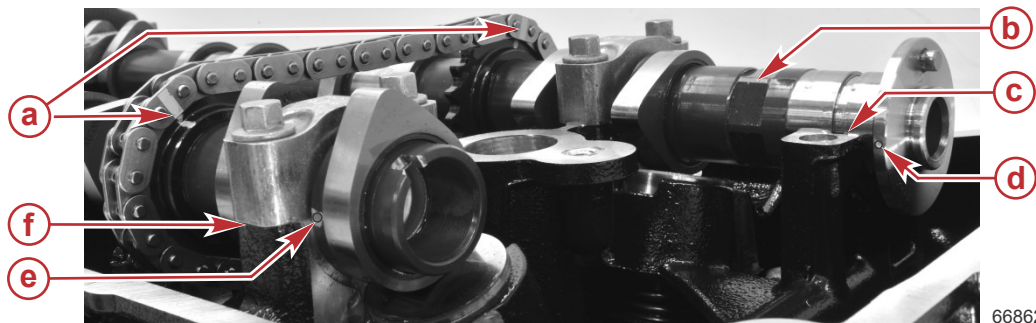

Port camshafts in TDC position

- a - Timing marks on timing chain
- b - Camshaft hex
- c - Camshaft cap parting line
- d - Timing mark on port exhaust camshaft aligned with camshaft cap parting line
- e - Timing mark on port intake camshaft aligned with camshaft cap parting line
- f - Camshaft cap parting line

19. Install the camshaft caps in the correct position and orientation. Tighten the screws until they are snug.

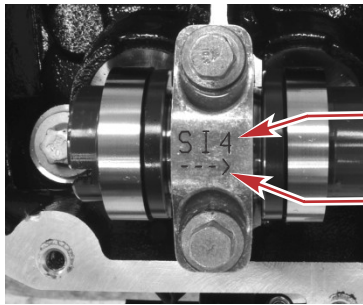


a
b

- a** - Identification mark—starboard intake, cylinder 4 of the starboard bank in this example
- b** - Directional arrow—points to top of powerhead

65768

20. Install and tighten the camshaft cap screws to the specified torque.

IMPORTANT: Complete both stages of the torque specification on each camshaft cap before moving to the next cap.

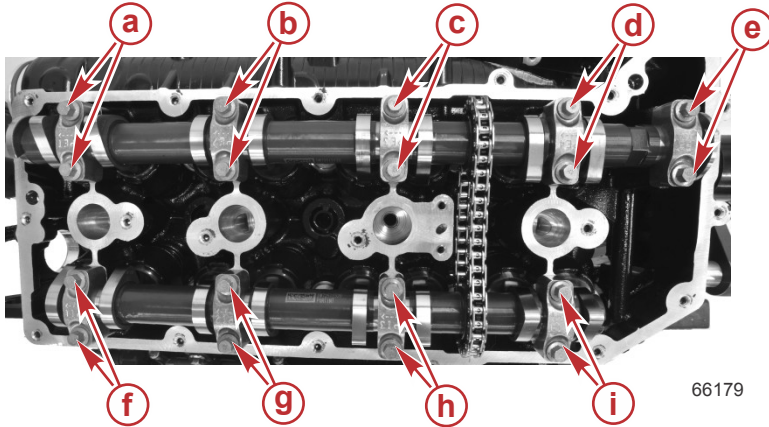


Port cylinder head

- a** - Screws securing camshaft cap PE1
- b** - Screws securing camshaft cap PE2
- c** - Screws securing camshaft cap PE3
- d** - Screws securing camshaft cap PE4
- e** - Screws securing camshaft cap PE5
- f** - Screws securing camshaft cap PI1
- g** - Screws securing camshaft cap PI2
- h** - Screws securing camshaft cap PI3
- i** - Screws securing camshaft cap PI4

66179

Description		Nm	lb-in.	lb-ft
Camshaft cap screws (M6 x 35 hex flange)	First	6	53.1	–
	Final	12	106.2	–

21. Install the timing chain tensioner. Do not release the pin or drill bit until the tensioner is secured.

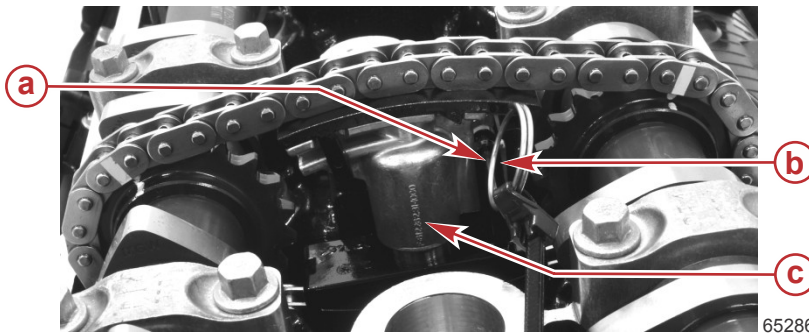


- a** - Slots of the timing chain tensioner
- b** - Pin or drill bit inserted through the slots
- c** - Timing chain tensioner

65286

22. Install the two screws securing the timing chain tensioner. Tighten the screws to the specified torque.

IMPORTANT: Remove the pin from the tensioner after the screws are tightened. Failure to remove the pin will cause engine damage.

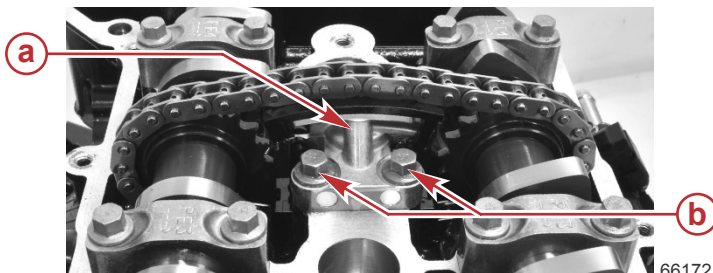


- a** - Camshaft-to-camshaft timing chain tensioner
- b** - Screws (2)


66172

Description		Nm	lb-in.	lb-ft
Timing chain tensioner screws (M6 x 30 hex flange)	First	6	53.1	-
	Final	12	106.2	-


23. Remove the pin from the tensioner.
24. Apply Torco MPZ® Engine Assembly Lube HP to each camshaft lobe, including the base circle of each camshaft lobe.

Tube Ref No.	Description	Where Used	Part No.
	Torco MPZ® Engine Assembly Lube HP	Each camshaft lobe, including the base circle of each camshaft lobe	Obtain Locally

25. Align the starboard intake camshaft, starboard exhaust camshaft, and camshaft-to-camshaft timing chain as shown.

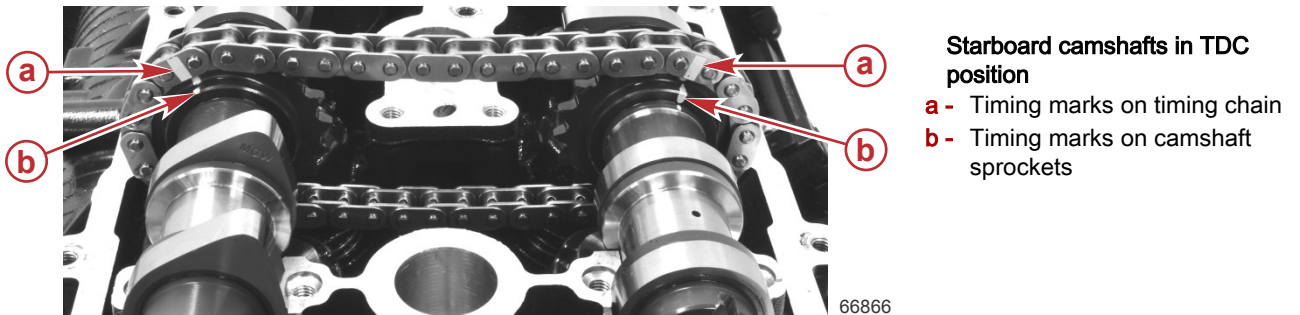

26. Turn the camshafts and timing chain counterclockwise (as viewed from the bottom of the cylinder block) to the assembly position. Note the locations of the camshaft timing marks. Finesse the camshafts into the bearing journals to prevent damage to the bearing surfaces.

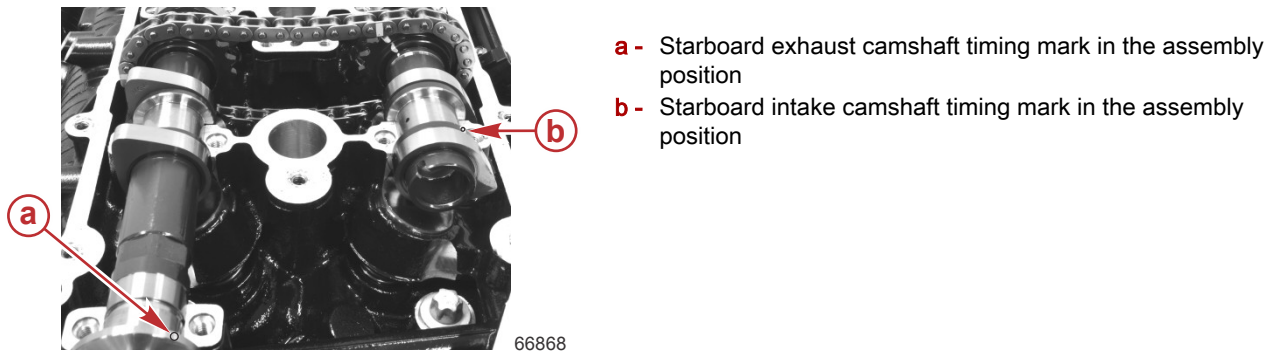


27. Place the four camshaft caps into position and tighten the screws until they are snug. Alternate tightening the screws to draw the camshafts down evenly.



Cylinder Block/Crankcase


28. Use a wrench on the camshaft hex to turn the camshafts back to the TDC position. The camshaft timing marks must align with the camshaft cap parting lines.

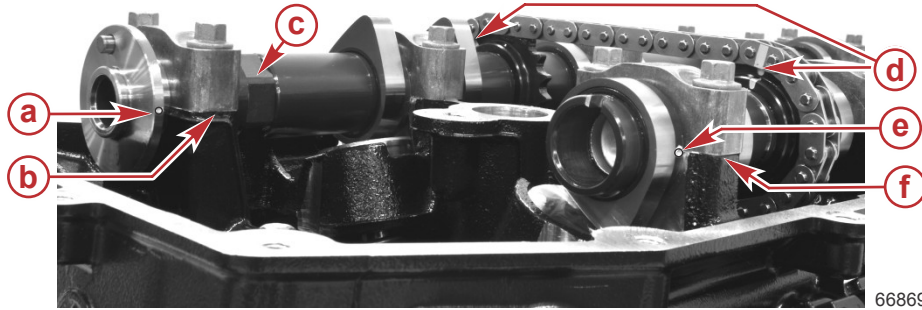

Starboard camshafts in TDC position

- a** - Timing mark on starboard exhaust camshaft aligned with camshaft cap parting line
- b** - Camshaft cap parting line
- c** - Camshaft hex
- d** - Timing marks on timing chain
- e** - Timing mark on starboard intake camshaft aligned with camshaft cap parting line
- f** - Camshaft cap parting line


29. Install the camshaft caps in the correct position and orientation. Tighten the screws until they are snug.

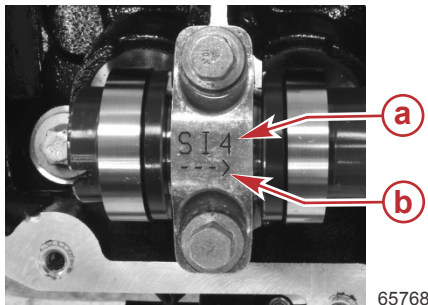

- a** - Identification mark—starboard intake, cylinder 4 of the starboard bank in this example
- b** - Directional arrow—points to top of powerhead

30. Install and tighten the camshaft cap screws to the specified torque.

IMPORTANT: Complete both stages of the torque specification on each camshaft cap before moving to the next cap.

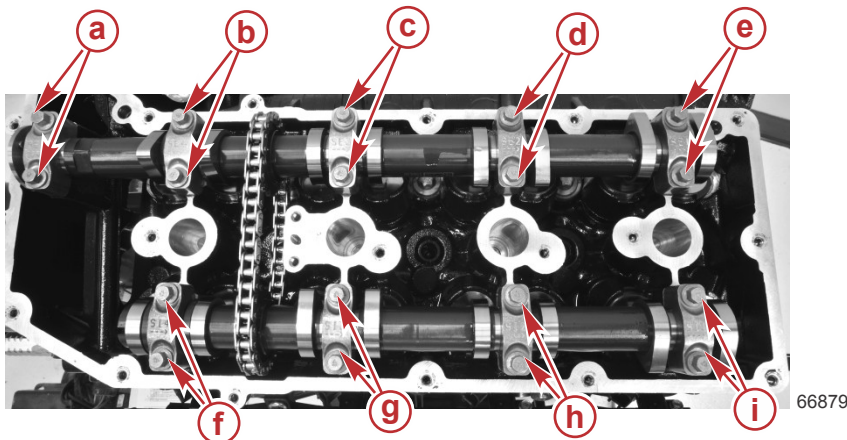


Starboard cylinder head

- a** - Screws securing camshaft cap SE5
- b** - Screws securing camshaft cap SE4
- c** - Screws securing camshaft cap SE3
- d** - Screws securing camshaft cap SE2
- e** - Screws securing camshaft cap SE1
- f** - Screws securing camshaft cap SI4
- g** - Screws securing camshaft cap SI3
- h** - Screws securing camshaft cap SI2
- i** - Screws securing camshaft cap SI1

Description		Nm	lb-in.	lb-ft
Camshaft cap screws (M6 x 35 hex flange)	First	6	53.1	–
	Final	12	106.2	–


31. Install the camshaft-to-camshaft timing chain tensioner.

IMPORTANT: Remove the pin from the tensioner after the screws are tightened. Failure to remove the pin will cause engine damage.

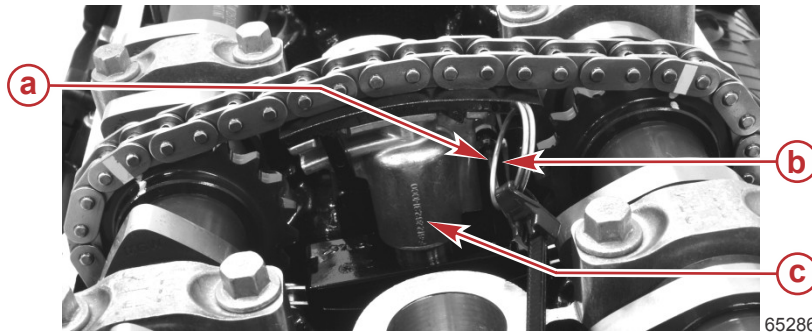

- Port side shown, starboard similar
- a - Slots of the timing chain tensioner
 - b - Pin or drill bit inserted through the slots
 - c - Timing chain tensioner

32. Install the two screws securing the timing chain tensioner. Tighten the screws to the specified torque.

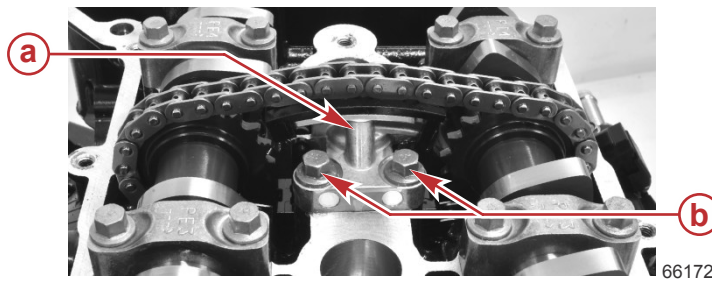

- Port side shown, starboard similar
- a - Timing chain tensioner
 - b - Screws (2)


Description		Nm	lb-in.	lb-ft
Timing chain tensioner screws (M6 x 30 hex flange)	First	6	53.1	–
	Final	12	106.2	–

33. Remove the pin or drill bit from the tensioner.

IMPORTANT: Remove the pin from the tensioner after the screws are tightened. Failure to remove the pin will cause engine damage.

34. Refer to **Section 4B - Valve Clearance and Adjustments** to verify the valve lash specifications. Valve lash must be verified with the cylinder heads, camshafts, and timing chain tensioners installed.

35. Apply Torco MPZ® Engine Assembly Lube HP to each camshaft lobe, including the base circle of each camshaft lobe.

Tube Ref No.	Description	Where Used	Part No.
	Torco MPZ® Engine Assembly Lube HP	Each camshaft lobe, including the base circle of each camshaft lobe	Obtain Locally


Timing Chain Installation

IMPORTANT: This engine utilizes an interference valve train design. Do not rotate the crankshaft or camshafts when the timing chain is loose or removed from the camshaft gears unless advised to do so. Failure to adhere to this caution may result in valve and piston damage.

IMPORTANT: The removal, disassembly, reassembly, and installation procedure of the heads and camshafts must be strictly followed. Failure to follow the removal outline procedure may damage the valve train components.


Cylinder Block/Crankcase

1. Ensure that the camshaft timing marks of the port and starboard cylinder heads are in the TDC position.

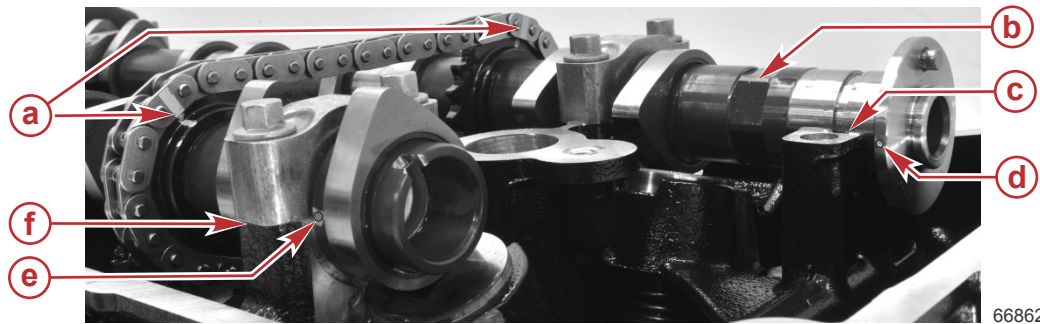

Port camshafts in TDC position

- a - Timing marks on timing chain
- b - Camshaft hex
- c - Camshaft cap parting line (camshaft cap not shown for clarity)
- d - Timing mark on port exhaust camshaft aligned with camshaft cap parting line
- e - Timing mark on port intake camshaft aligned with camshaft cap parting line
- f - Camshaft cap parting line

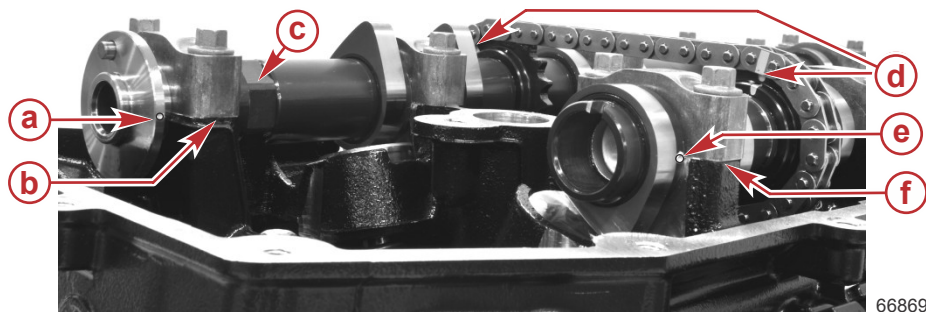


Starboard camshafts in TDC position

- a - Timing mark on starboard exhaust camshaft aligned with camshaft cap parting line
- b - Camshaft cap parting line
- c - Camshaft hex
- d - Timing marks on timing chain
- e - Timing mark on starboard intake camshaft aligned with camshaft cap parting line
- f - Camshaft cap parting line

2. Turn the flywheel 45° clockwise to the TDC position. Ensure that the line on the flywheel aligns with the timing pointer on the top of the cylinder block.


IMPORTANT: Do not rotate the flywheel 315° counterclockwise to reach the TDC position. Valve and piston damage will occur.

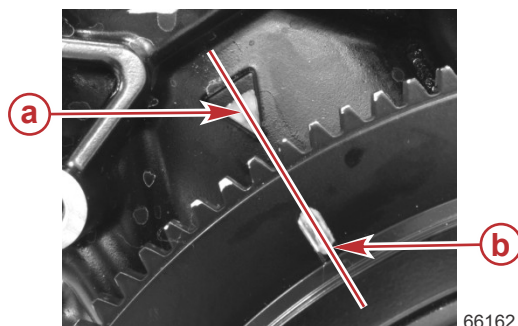


Timing marks aligned at cylinder #1 TDC

- a - Timing pointer
- b - Line on the flywheel

- Place the timing chain into the cylinder block as shown.

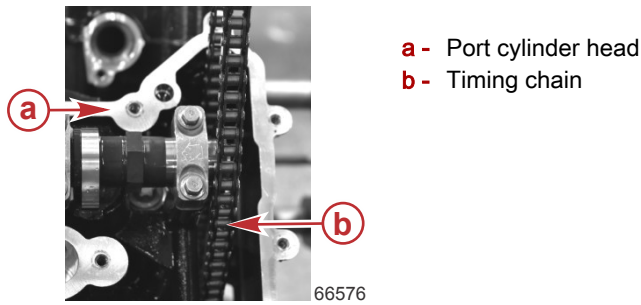


- Install the timing chain onto the crankshaft sprocket with the timing marks positioned as shown.
- Install the timing chain holding tool to prevent the timing chain from falling off of the crankshaft sprocket.

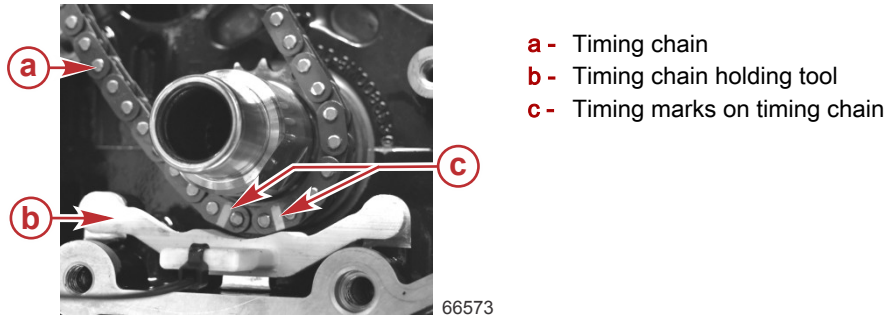


Timing Chain Holding Tool	8M0148867
---------------------------	-----------

- Verify that the timing mark on the crankshaft is aligned with the timing pointer on the cylinder block.

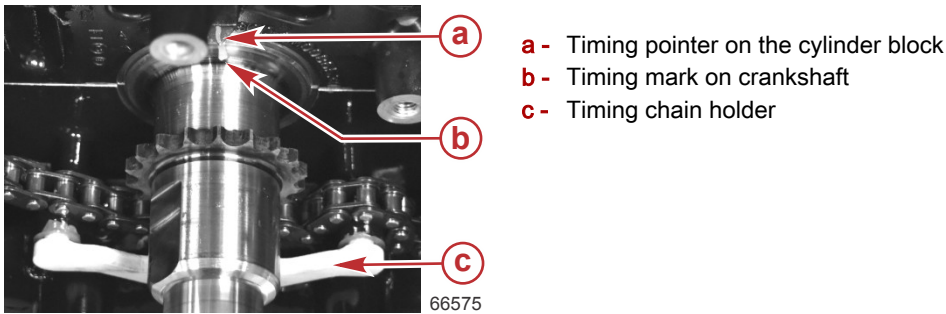


- Install the fixed timing chain guide (white plastic) into the cylinder block through the opening at the bottom of the cylinder head. Secure with the special flange head screw and tighten the screw to the specified torque.

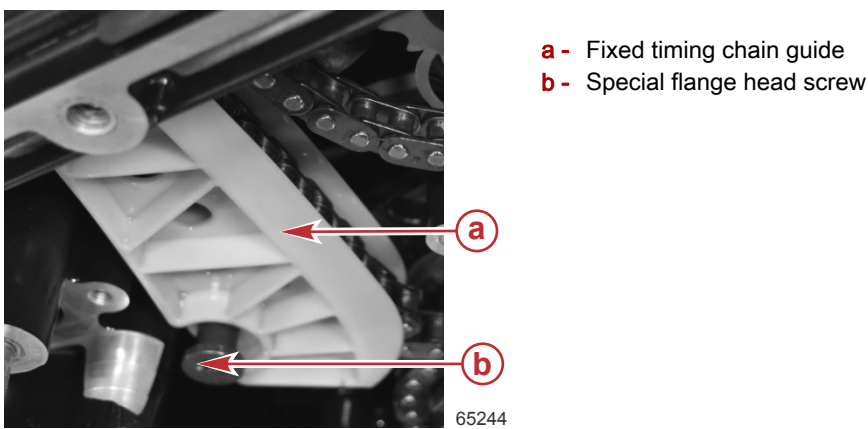

Description	Nm	lb-in.	lb-ft
Special flange head screw (M8 x 1.25)	24	-	17.7

- Ensure that the timing chain is within the rails of the fixed timing chain guide.
- Lubricate the threads of the special left-hand thread screw with 10W-30 4-Stroke Marine Engine Oil.

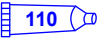
Tube Ref No.	Description	Where Used	Part No.
	10W-30 4-Stroke Marine Engine Oil	Threads of the special left-hand thread screw	92-8M0078625

10. Install the port camshaft sprocket and secure with the special left-hand thread screw. Use a wrench on the camshaft hex to hold the camshaft, then tighten the screw to the specified torque:

IMPORTANT: The special left-hand thread screw has a port in it for oil flow. Do not substitute a similar screw from other Mercury engines or catastrophic engine damage can occur.

NOTE: The special left-hand thread screw has two identifying marks 20° apart.


- Tighten the special left-hand thread screw to the first stage of the torque specification.
- Place a paint mark on the sprocket adjacent to the first identifying mark of the special screw.
- Tighten the screw an additional 20°. The second identifying mark will align with the paint mark on the sprocket.

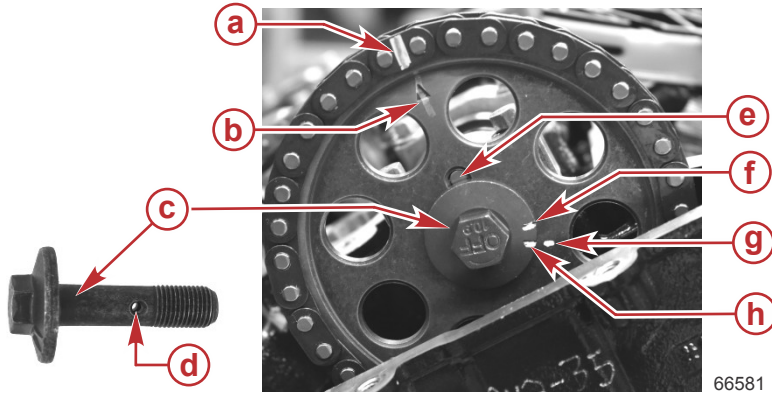

- a - Timing mark on the timing chain
- b - Timing mark on the camshaft sprocket
- c - Special left-hand thread screw
- d - Oil port in the special left-hand thread screw
- e - Dowel pin
- f - First identifying mark on special left-hand thread screw
- g - Paint mark on the sprocket
- h - Second identifying mark on special left-hand thread screw


Description		Nm	lb-in.	lb-ft
Special left-hand thread screw	First	45	-	33.2
	Final	Tighten an additional 20°		

- Install the port timing chain guide into the cylinder block from below the camshaft sprocket. Ensure that the port timing chain guide is seated on the ridge and ensure that the timing chain is within the rails of the port timing chain guide.
- Install the timing chain onto the balance shaft sprocket. Ensure that the timing mark on the timing chain aligns with the timing mark on the balance shaft sprocket.

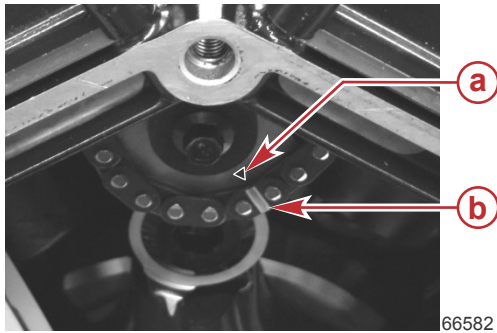


- a - Timing mark on the balance shaft sprocket
- b - Timing mark on the timing chain

13. Install the port and starboard timing chain guides into the cylinder block. Ensure that the timing chain guides are seated on the ridges.

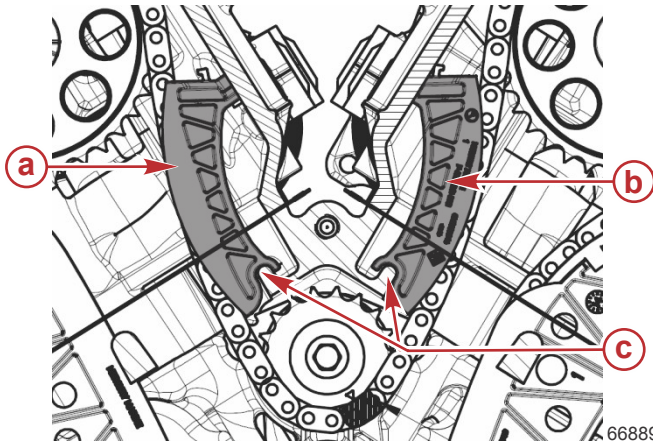

- a - Port timing chain guide
- b - Starboard timing chain guide
- c - Ridges

14. Lubricate the threads of the special left-hand thread screw with 10W-30 4-Stroke Marine Engine Oil.

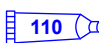
Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Threads of the special left-hand thread screw	92-8M0078625

15. Install the starboard camshaft sprocket and secure with the special left-hand thread screw. Tighten the screw to the specified torque:

IMPORTANT: The special left-hand thread screw has a port in it for oil flow. Do not substitute a similar screw from other engines or catastrophic engine damage will occur.

NOTE: The special left-hand thread screw has two identifying marks 20° apart.


- a. Tighten the special left-hand thread screw to the first stage of the torque specification.
- b. Place a paint mark on the sprocket adjacent to the first identifying mark of the special screw.
- c. Tighten the screw an additional 20°. The second identifying mark will align with the paint mark on the sprocket.

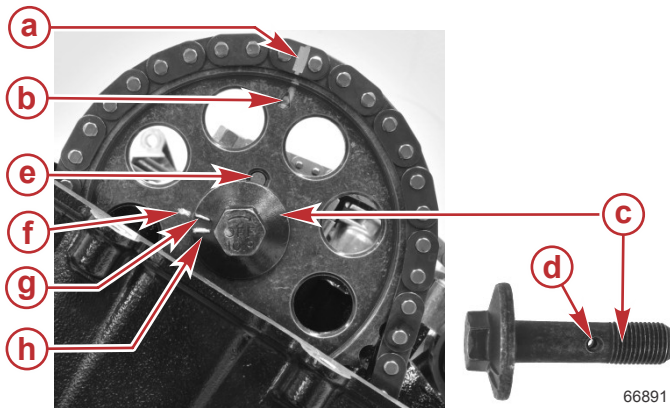

- a - Timing mark on the timing chain
- b - Timing mark on the camshaft sprocket
- c - Special left-hand thread screw
- d - Oil port in the special left-hand thread screw
- e - Dowel pin
- f - Paint mark on the sprocket
- g - Second identifying mark on special left-hand thread screw
- h - First identifying mark on special left-hand thread screw

Description		Nm	lb-in.	lb-ft
Special left-hand thread screw	First	45	-	33.2
	Final	Tighten an additional 20°		

16. Install the movable timing chain guide onto the cylinder block. Tighten the special flange head screw to the specified torque.

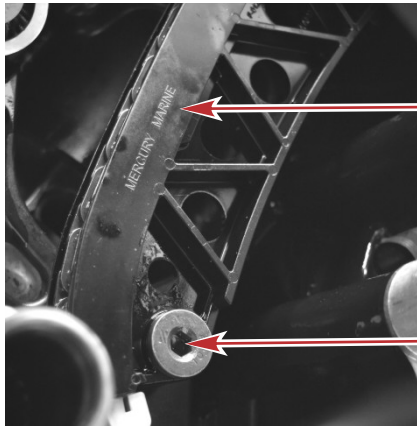


65242

- a - Movable timing chain guide
- b - Special flange head screw

Description	Nm	lb-in.	lb-ft
Special flange head screw (M8 x 1.25)	24	-	17.7

17. Verify all timing marks and ensure that the timing chain is within the rails of all timing chain guides.

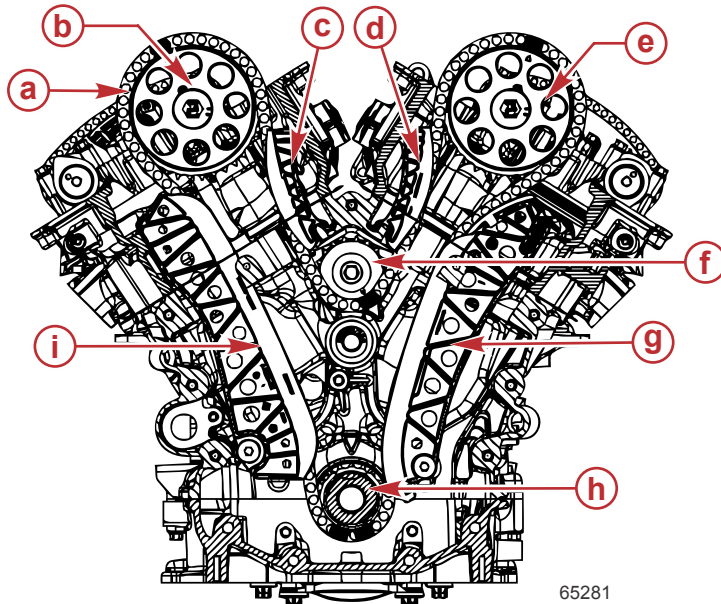


65281

- a - Timing chain
- b - Port camshaft sprocket
- c - Port timing chain guide
- d - Starboard timing chain guide
- e - Starboard camshaft sprocket
- f - Balance shaft sprocket
- g - Movable timing chain guide
- h - Crankshaft sprocket
- i - Fixed timing chain guide

18. Install the timing chain tensioner:


- a. Compress the tensioner by hand on a bench to purge all remaining oil from the tensioner.
- b. Ensure that the tensioner cover O-ring is in place.
- c. Install the tensioner into the starboard cylinder head as shown, then secure the tensioner with the timing chain tensioner cover and two screws.

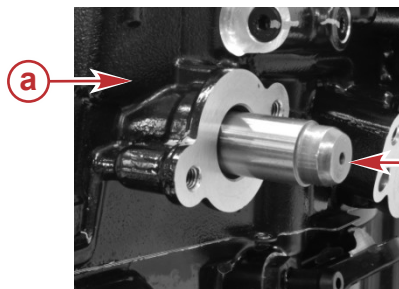

66887


- a - Starboard cylinder head
- b - Tensioner

d. Tighten the screws to the specified torque.

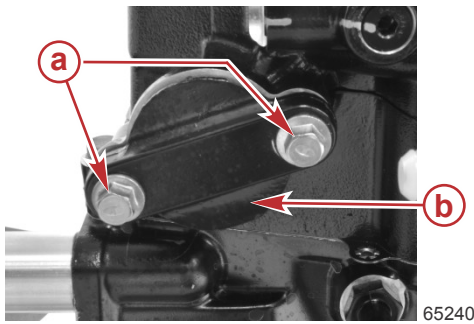


- a - Screws
- b - Timing chain tensioner cover

Description	Nm	lb-in.	lb-ft
Timing chain tensioner cover screws (M6 x 25 hex flange)	10	88.5	-

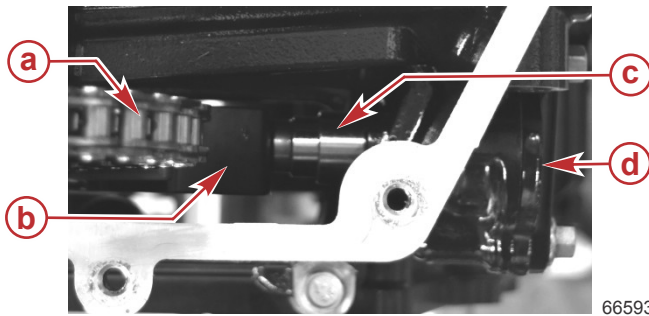

- Tensioner installed**
- a - Timing chain
 - b - Movable timing chain guide
 - c - Timing chain tensioner
 - d - Tensioner cover

19. Remove the timing chain holder tool.

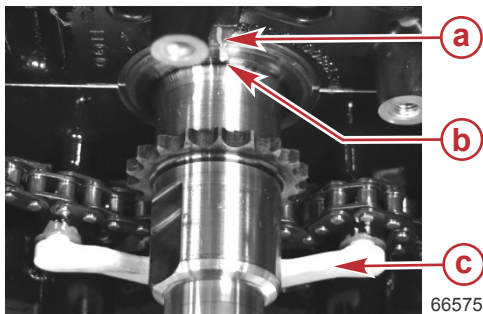


- a - Timing pointer on the cylinder block
- b - Timing mark on crankshaft
- c - Timing chain holder

20. Reset the timing chain tensioner:

IMPORTANT: The timing chain tensioner must be reset or engine damage will occur.


a. Turn the crankshaft counterclockwise (as viewed from the flywheel end) to the service position.

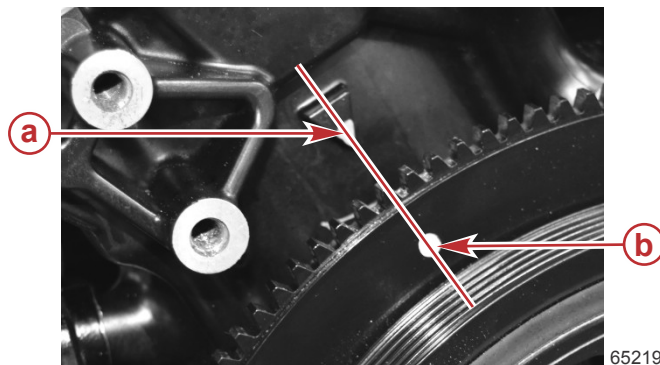

- Timing marks aligned in the service position**
- a - Pointer on cylinder block (starboard bank)
 - b - Dot on flywheel (identified with yellow paint for visibility)

Cylinder Block/Crankcase


21. Turn the crankshaft clockwise back to the cylinder #1 TDC position.

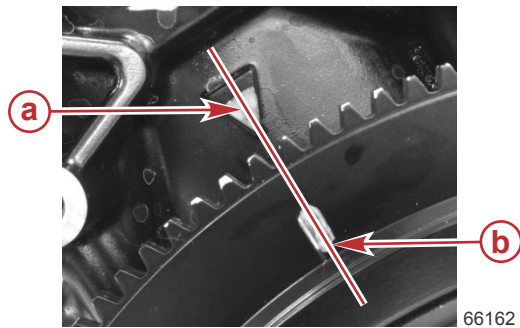


Timing marks aligned at cylinder #1 TDC

- a - Timing pointer
b - Line on the flywheel

22. Apply Torco MPZ® Engine Assembly Lube HP to each camshaft lobe, including the base circle of each camshaft lobe.


Tube Ref No.	Description	Where Used	Part No.
	Torco MPZ® Engine Assembly Lube HP	Each camshaft lobe, including the base circle of each camshaft lobe	Obtain Locally

23. Inspect the camshaft cover seals at the perimeter of the cover and at each spark plug hole.
24. Install the camshaft covers and tighten the screws to the specified torque.

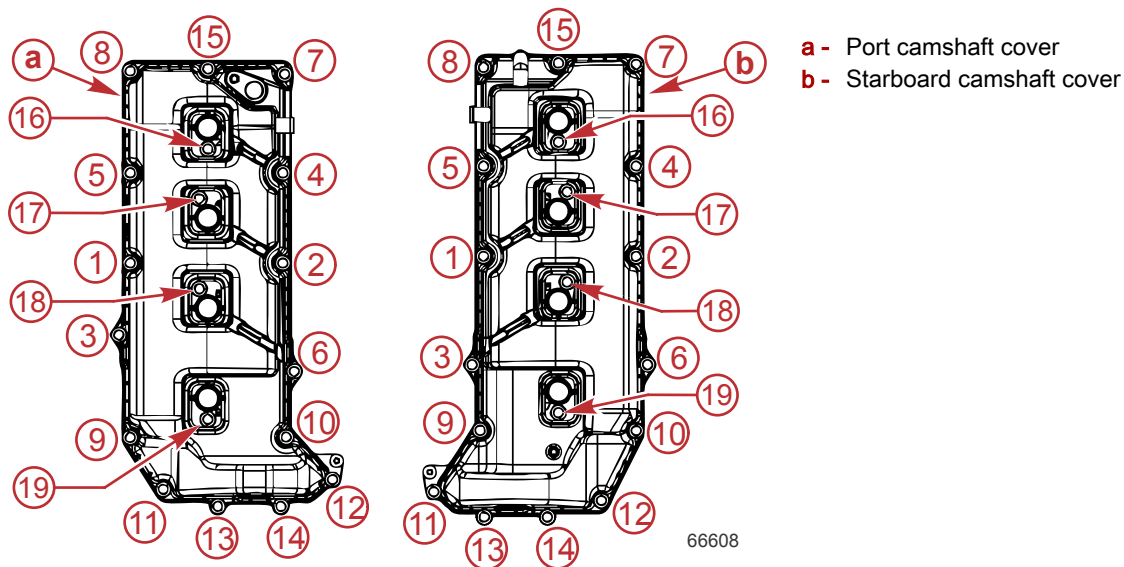

Description	Nm	lb-in.	lb-ft
Camshaft cover screws (M6 x25 hex flange)	10	88.5	-

25. Apply Anti-Seize Compound to the spark plug threads.

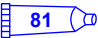Tube Ref No.	Description	Where Used	Part No.
 81	Anti-Seize Compound	Spark plug threads	92-898101389

26. Install the spark plugs. Tighten the spark plugs to the specified torque.


Description	Nm	lb-in.	lb-ft
Spark plug	22	-	16.2

Installing Powerhead Components and Powerhead Installation

Component Installation Prior to Powerhead Installation

Some components must be installed prior to installing the powerhead onto the midsection. Refer to the following steps to install components before installing the powerhead to save time during assembly.

1. Install the crankshaft position sensor onto the cylinder head. Tighten the screws to the specified torque.

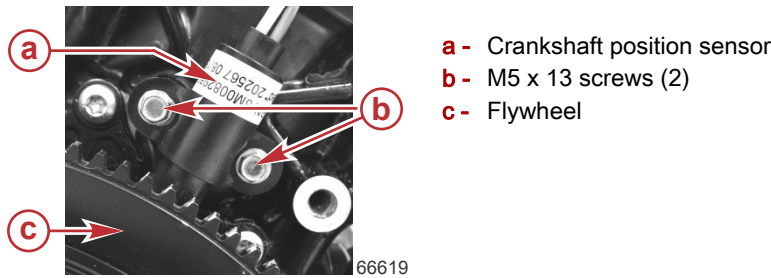


Description	Nm	lb-in.	lb-ft
Crankshaft position sensor screws (M5 x 13)	5	44.3	-

2. Install the block water pressure sensor. Tighten the sensor to the specified torque.

Description	Nm	lb-in.	lb-ft
Block water pressure sensor	15	132.8	-

3. Install the port and starboard alternator brackets onto the cylinder head.


NOTE: Install two fill bracket screws into the outermost holes of the alternator brackets to keep the brackets aligned while tightening the screws. Remove the fill bracket screws after the alternator bracket screws have been tightened.

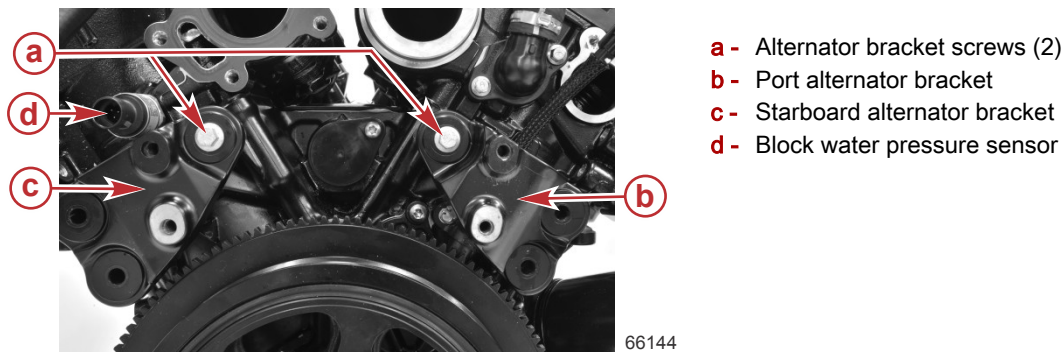

Description	Nm	lb-in.	lb-ft
Alternator bracket screws (M8 x 35)	30	-	22.1

4. Install the alternator bracket and alternator. Tighten the screws to the specified torque.


IMPORTANT: Place the alternator belt onto the alternator pulley before installing the alternator.

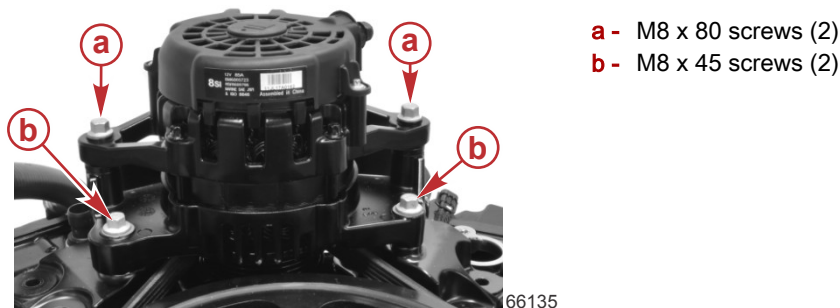

Description	Nm	lb-in.	lb-ft
Alternator screws (M8 x 80 and M8 x 45)	30	-	22.1

Cylinder Block/Crankcase


- Lubricate the oil fill hose fitting O-ring with 10W-30 4-Stroke Marine Engine Oil. Install the oil fill hose fitting onto the cylinder head. Tighten the screw to the specified torque.

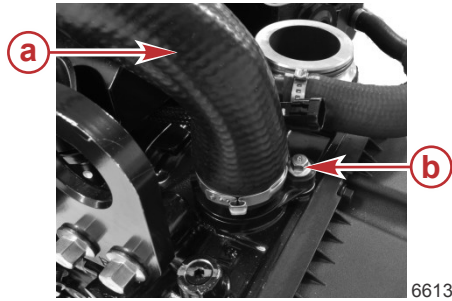


- a - Oil fill hose
- b - M6 x 20 screw

66134

Description	Nm	lb-in.	lb-ft
Oil fill hose fitting screw (M6 x 20)	10	88.5	-

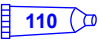Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Oil fill hose fitting O-ring	92-8M0078625

- Install the oil fill bracket onto the powerhead. Tighten the four screws to the specified torque.

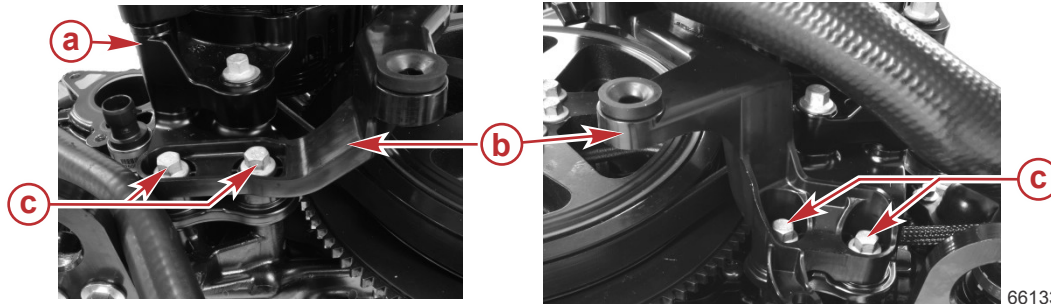


66133

- a - Alternator
- b - Oil fill bracket
- c - M8 x 45 screws (4)

Description	Nm	lb-in.	lb-ft
Oil fill bracket screws (M8 x 45)	30	-	22.1

- Install the alternator belt onto the flywheel. Ensure that the belt is seated on the alternator pulley. Use the flywheel socket and alternator belt shoe to install the belt onto the flywheel.

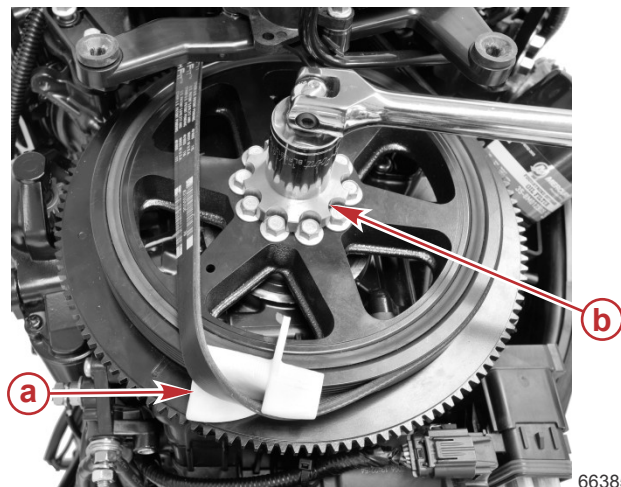


- a - Alternator belt shoe
- b - Flywheel socket

66385

Flywheel Socket	8M0146861
-----------------	-----------

Alternator Belt Shoe	8M0146862
----------------------	-----------



8. Remove the flywheel socket and alternator belt shoe.

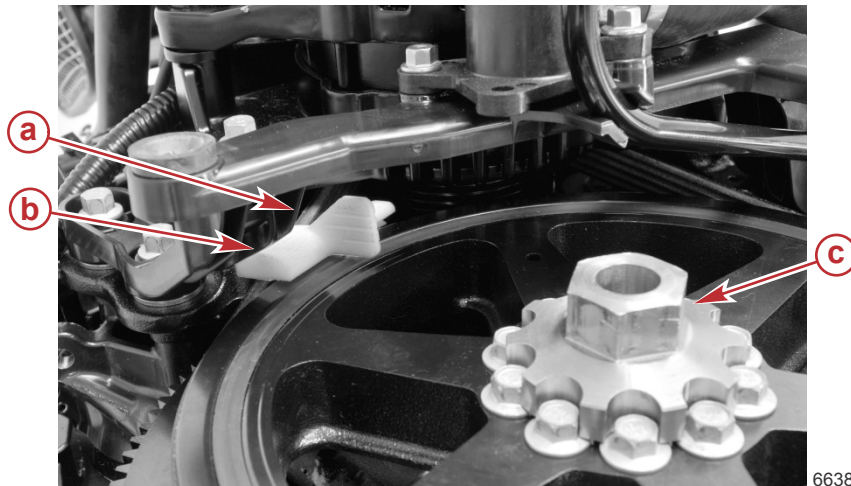

- a - Alternator belt
- b - Alternator belt shoe
- c - Flywheel socket

66384

9. Install the water supply fittings and hoses onto each cylinder head. Tighten the screws to the specified torque.

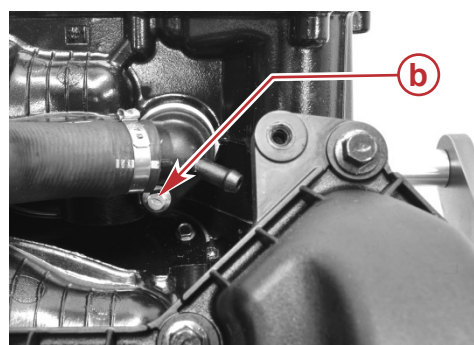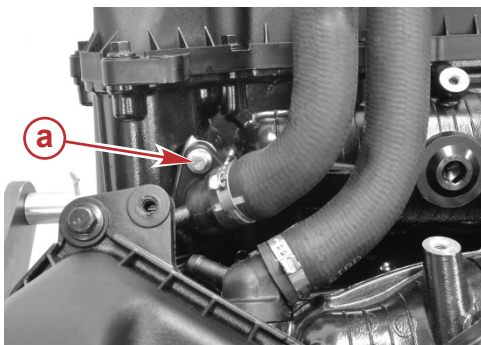


66142

- a - Screw securing the port water supply fitting
- b - Screw securing the starboard water supply fitting

Description	Nm	lb-in.	lb-ft
Water fitting screws (M6 x 20)	10	88.5	-

10. If they were removed, install the drain hoses and T-fitting onto the water supply fittings. Secure the hoses with cable ties.

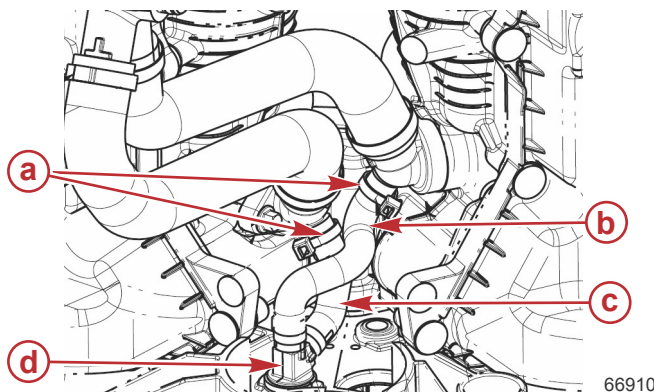


- a - Cable ties
- b - Starboard cylinder head drain hose
- c - Port cylinder head drain hose
- d - T-fitting

66910

Cylinder Block/Crankcase

- Install the ignition coils with the spark plug wires and ignition coil primary harness attached. Install the screws and tighten them to the specified torque.

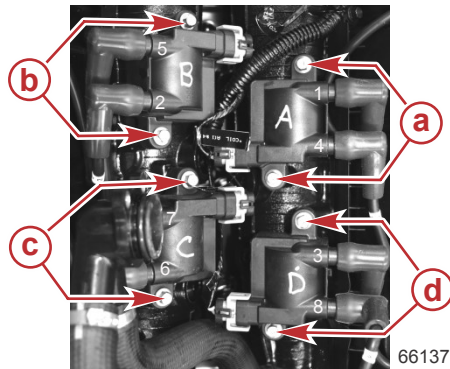


- a - Screws securing ignition coil A
- b - Screws securing ignition coil B
- c - Screws securing ignition coil C
- d - Screws securing ignition coil D

Description	Nm	lb-in.	lb-ft
Ignition coil screws (M6 x 30)	10	88.5	-


- Install the spark plug wires onto the spark plugs.
- Install the oil pump. Refer to **Oil Pump Installation**. The oil pump must be installed before installing the powerhead.

Oil Pump Installation

- Prime the oil pump with approximately 88 mL (3 fl oz) 10W-30 4-Stroke Marine Engine Oil.

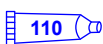Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Oil pump	92-8M0078625


- Lubricate the oil pump seals and O-rings with Engine Coupler Spline Grease.

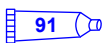Tube Ref No.	Description	Where Used	Part No.
 91	Engine Coupler Spline Grease	Oil pump seals and O-rings	8M0071842

- Slide a 39.6 mm Oetiker® clamp onto the oil pickup assembly, and install the assembly onto the oil pump.
- Position the clamp so that it covers the white mark on the oil pickup hose and the ear is aligned with the screw by the oil output, as shown. Install the oil pump and tighten the four M6 x 48 hex flange screws to the specified torque.


IMPORTANT: The oil pickup hose must be pushed all the way onto the oil pump so the end of the hose contacts the oil pump housing.

The Oetiker clamps must be installed so that the ears of the clamps are positioned as shown. Assembly interference and catastrophic engine damage can occur if the clamps are not installed correctly.

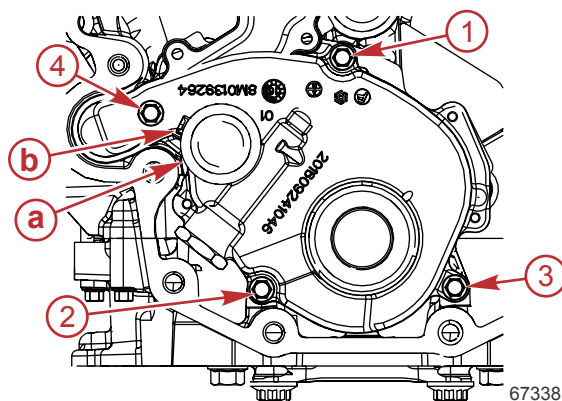

Oil pump fastener torque sequence

- a - Oil pickup assembly
- b - Ears on Oetiker clamps (aligned with screw 4)

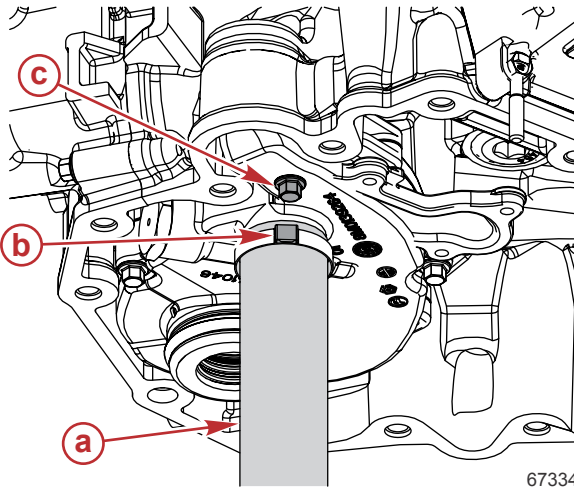

- a - Oil pickup assembly
- b - Orientation of ear on Oetiker clamp, aligned with item C
- c - Fastener on oil pump, at the outlet

67334

Description	Nm	lb-in.	lb-ft
M6 x 48 hex flange screw	10	88.5	-


Powerhead Installation Onto Advanced Midsection (AMS)

⚠ CAUTION


Improper lifting during removal or installation of the engine can cause injury or damage to engine components. Use a hoist, lifting arm, or other approved lifting device. Do not allow the lifting device to hook or compress any engine components.

1. Install a new powerhead gasket onto the midsection.
2. Lubricate the driveshaft splines with Engine Coupler Spline Grease.

IMPORTANT: Apply Engine Coupler Spline Grease to the driveshaft splines only. Ensure that the top of the driveshaft is clean and has no grease applied.

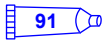Tube Ref No.	Description	Where Used	Part No.
 91	Engine Coupler Spline Grease	Driveshaft splines	8M0071842

3. Ensure that the components are in place and will not be pinched by the powerhead during installation.

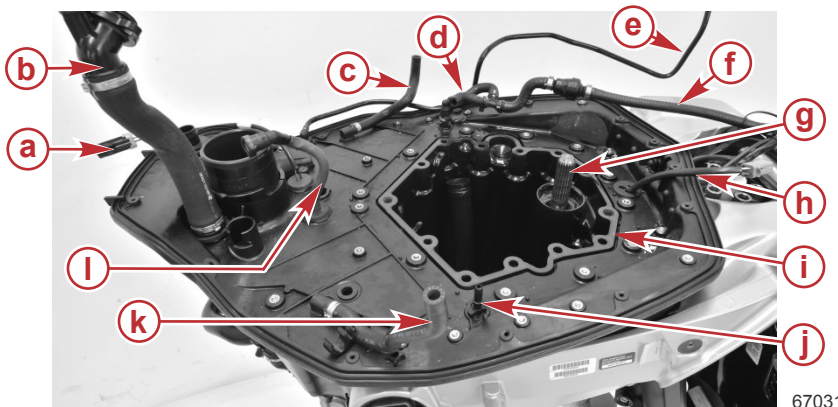


- a - Fuel supply module (FSM) connector
- b - Water strainer fitting and hose assembly
- c - Fuel line to port fuel rail
- d - Port block drain hose
- e - FSM reference line
- f - Flush hose
- g - Driveshaft splines
- h - Shift actuator harness
- i - Powerhead gasket
- j - Starboard block drain hose fitting
- k - Fuel line to starboard fuel rail
- l - Fuel line from fuel supply module (FSM)

67031

4. Attach the lifting strap to the lifting eyes. Attach the lifting strap to a hoist with a capacity of at least 450 kg (1000 lb).

IMPORTANT: All engine lifting devices (straps, slings, chains, or hoists) must have a minimum capacity of 450 kg (1000 lb).

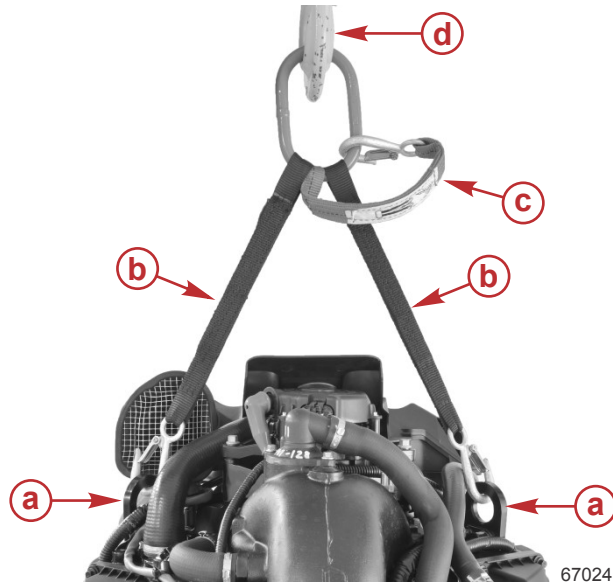


- a - Lifting eyes on the engine
- b - Equal length straps (black)
- c - Short strap (red); secure out of the way
- d - Overhead hoist

Lifting strap	883705T01
---------------	-----------


5. Lift the powerhead into position above the midsection, then guide the powerhead onto the midsection. Ensure that the oil pump pickup tube is inserted into the sump.
6. While lowering the powerhead onto the midsection, ensure that the drain fitting is inserted through the chap plate. Ensure that the fuel line is not pinched while lowering the powerhead.

NOTE: The grommet must be aligned with the drain fitting tab.

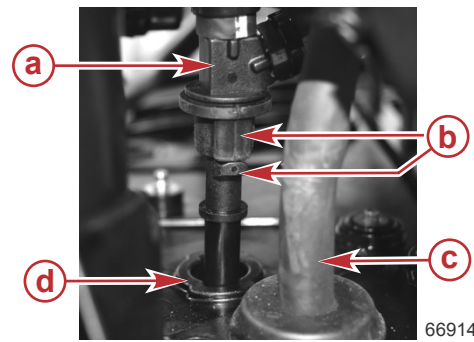


- a - Drain fitting
- b - Grommet aligned with drain fitting tab
- c - Fuel line from FSM
- d - Chap plate

7. Connect the quick-connect fitting to the drain fitting under the chap plate.

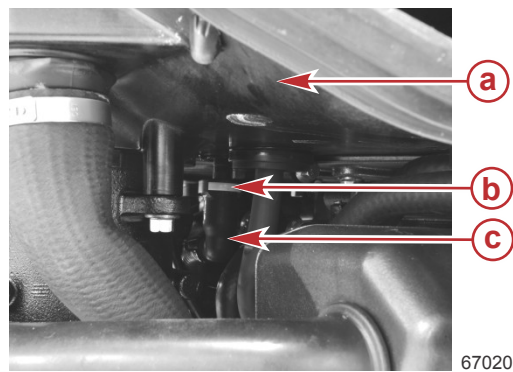

- a - Chap plate
- b - Lock tab
- c - Quick-connect fitting

8. Install the four M10 15 mm nylon insert locknuts onto the studs on each side of the outboard. Tighten the nuts to the specified torque.

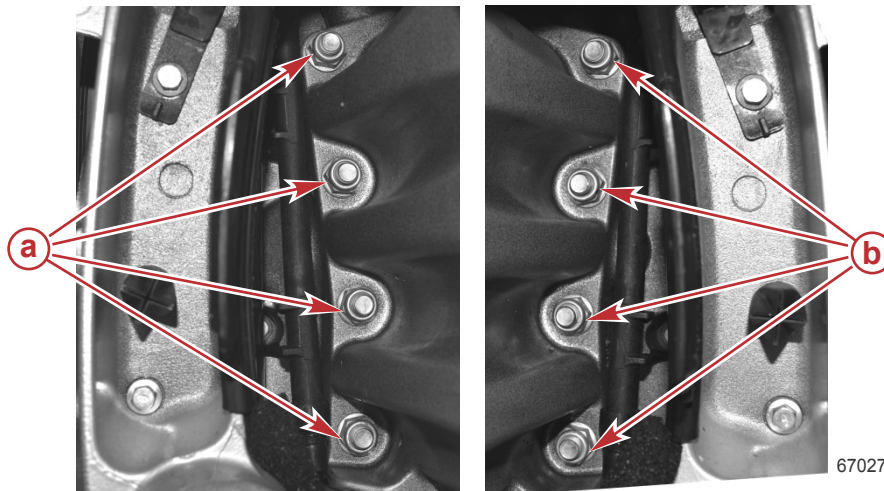


- a - 15 mm nuts on port side under the mount cradle
- b - 15 mm nuts on the starboard side under the mount cradle

67027

Description	Nm	lb-in.	lb-ft
M10 15 mm nylon insert locknuts	30	-	22.1

9. Install the 15 mm nut onto the stud on the port side under the mount cradle. Tighten the nut to the specified torque.

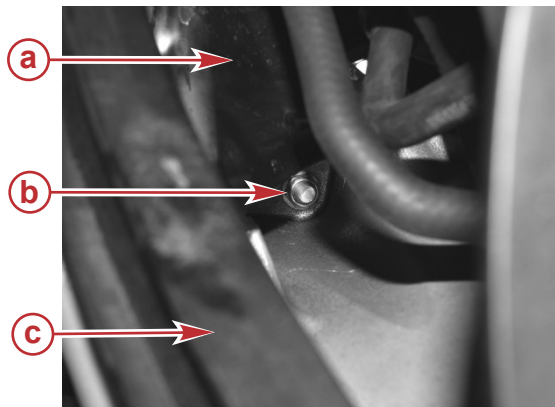


- a - Port idle exhaust muffler
- b - 15 mm nut
- c - Port chap support bracket

67025

Description	Nm	lb-in.	lb-ft
M10 15 mm nylon insert locknut	30	-	22.1

10. Install the 15 mm nut onto the stud on the starboard side under the mount cradle. Tighten the nut to the specified torque.

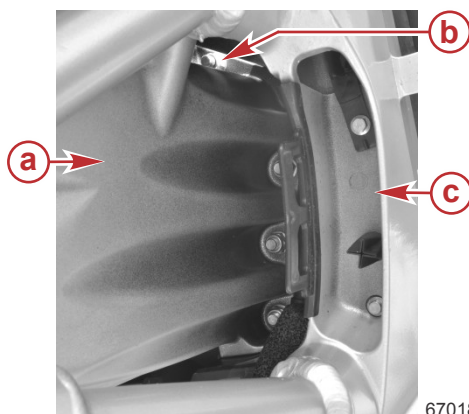


- a - Driveshaft housing
- b - 15 mm nut
- c - Starboard side of the mount cradle

67018

Description	Nm	lb-in.	lb-ft
M10 15 mm nylon insert locknut	30	-	22.1

Cylinder Block/Crankcase


- Install the 15 mm nut onto the stud at the aft end of the powerhead. Tighten the nut to the specified torque.

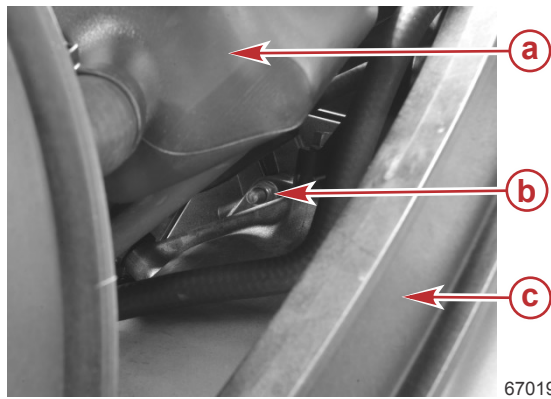

- a** - Starboard idle exhaust relief muffler
- b** - 15 mm nut
- c** - Starboard chap support bracket

Description	Nm	lb-in.	lb-ft
M10 15 mm nylon insert locknut	30	-	22.1

- Tilt the outboard up and engage the tilt lock lever.
- Install the two 15 mm nuts onto the studs under the mount cradle at the front of the powerhead. Tighten the nuts to the specified torque.

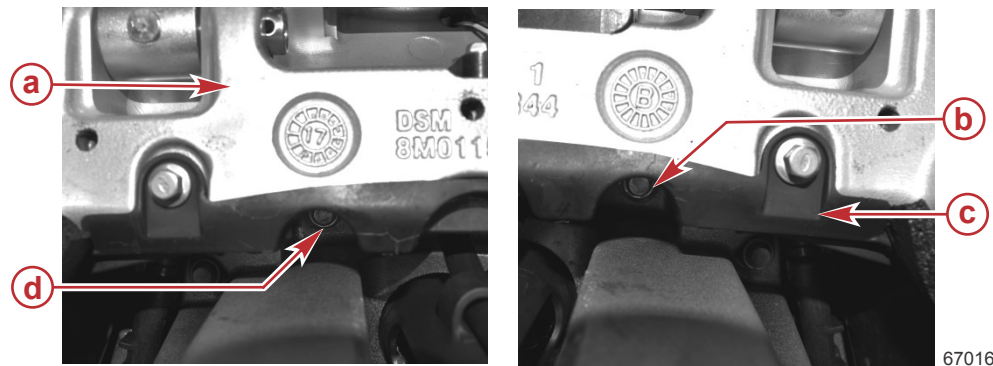


- a** - Mount cradle
- b** - 15 mm nut on starboard side
- c** - Plastic shield
- d** - 15 mm nut on port side

Description	Nm	lb-in.	lb-ft
M10 15 mm nylon insert locknut	30	-	22.1


Dipstick Tube and Exhaust Tube Installation

Dipstick Tube

- Lubricate the dipstick grommet with 10W-30 4-Stroke Marine Engine Oil.


Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Dipstick grommet	92-8M0078625

- Install the dipstick grommet into the opening on the port side of the powerhead.
- Install the dipstick tube into the grommet.

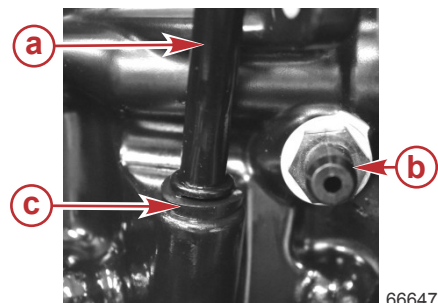


- a** - Dipstick tube
- b** - Port water drain fitting
- c** - Dipstick grommet

- Lubricate the upper dipstick O-ring with 10W-30 4-Stroke Marine Engine Oil.

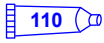
Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Upper dipstick O-ring	92-8M0078625

- Secure the dipstick tube to the cylinder block with an M6 x 12 screw. Tighten the screw to the specified torque.

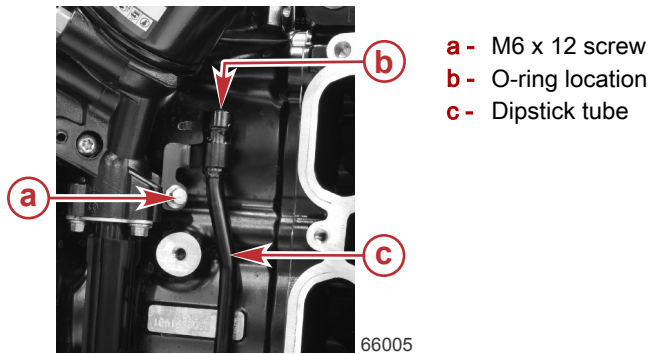


Description	Nm	lb-in.	lb-ft
M6 x 12 screw	10	88.5	-

- Insert the upper dipstick tube into the lower dipstick tube, then clip the dipstick tube into the retainer.

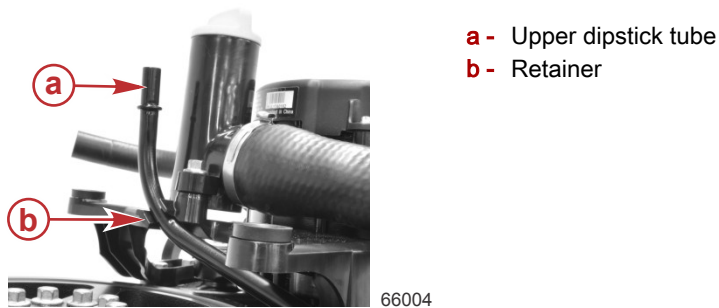

Exhaust Tube Installation


- Install the spark plug wire retainer and install the two M6 x 20 screws. Tighten the screws to the specified torque.

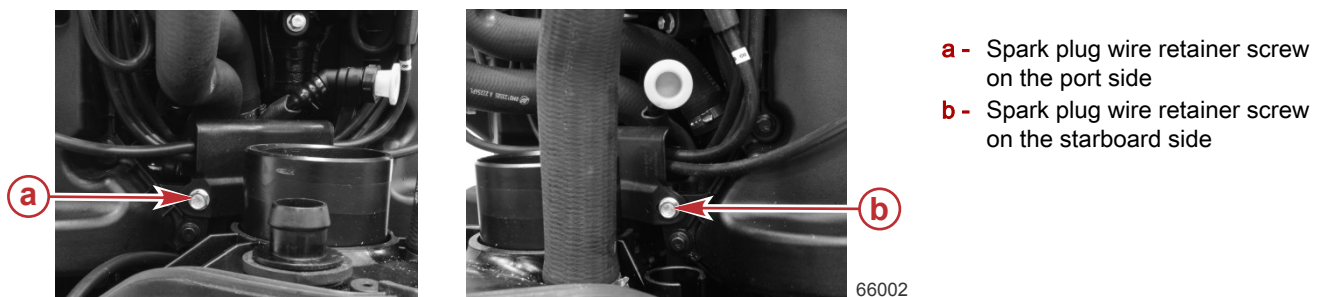

Description	Nm	lb-in.	lb-ft
M6 x 20 screws	7	62	-

- Assemble the exhaust boots and clamps:
 - Insert the aluminum collars into the exhaust boots. Align the collars with the ridge inside of the exhaust boots.


b. Install the exhaust clamps loosely onto the exhaust boots.

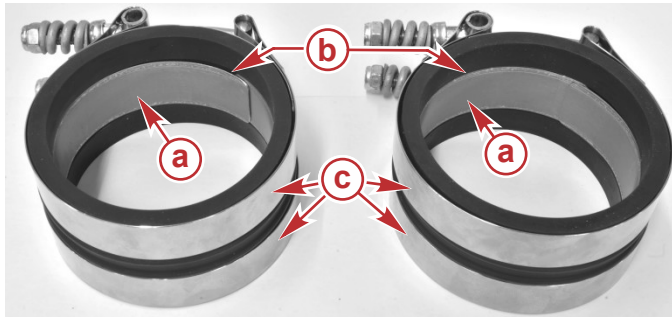

- a - Aluminum collars
- b - Ridge inside of the exhaust boots
- c - Exhaust clamps

66935


c. Align the exhaust boots with the ridges on the outside of the collar.

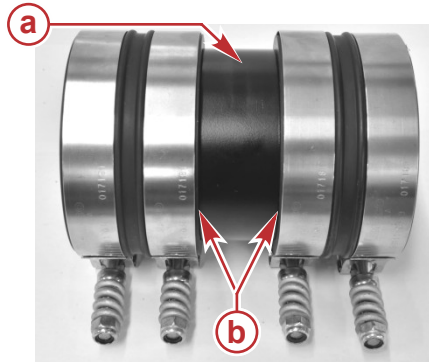

- a - Collar
- b - Ridges on the outside of the collar

66936


d. Slide the exhaust boots and collar onto the exhaust tube until the upper exhaust boot is resting against the stop. Tighten the clamps just enough to keep the boots in place.

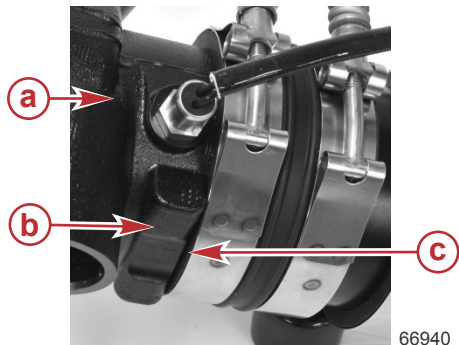

- a - Exhaust tube
- b - Stop
- c - Upper exhaust boot resting against the stop

66940

3. Lubricate the exhaust tube O-ring with Parker® Super O-Lube O-ring lubricant.

Tube Ref No.	Description	Where Used	Part No.
	Parker® Super O-Lube	Exhaust tube O-ring	Obtain Locally


4. Install a new exhaust tube gasket onto the starboard exhaust outlet surface.



- a - O-ring
- b - Starboard exhaust outlet surface


66649

5. Guide the exhaust tube assembly onto the powerhead. Align the bottom of the rubber exhaust boot with the exhaust tube and lower the exhaust tube down onto the exhaust outlets.

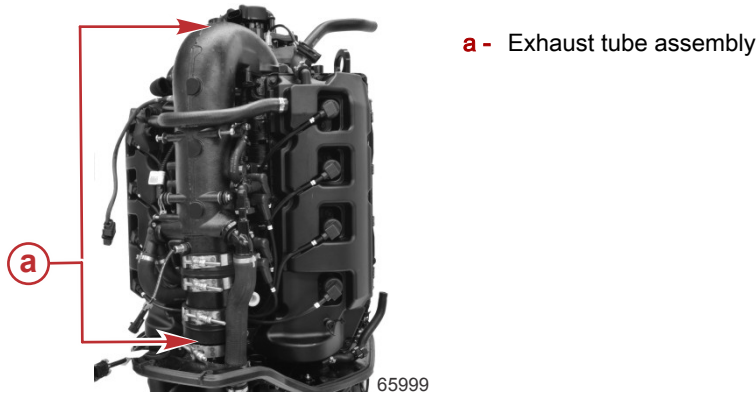

6. Install the four exhaust tube mounting screws securing the exhaust tube assembly to the powerhead. Tighten the screws to the specified torque, then tighten the screws to the specified torque again.


IMPORTANT: Ensure that the exhaust tube is fully seated onto the exhaust outlet surfaces. Do not use the mounting screws to pull the exhaust tube assembly down.

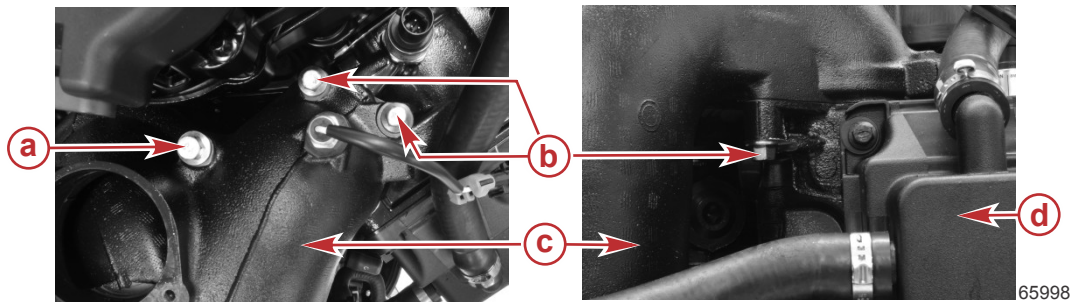

- a** - M8 x 85 screw
- b** - M8 x 45 screw (3)
- c** - Exhaust tube
- d** - Starboard camshaft cover

Description		Nm	lb-in.	lb-ft
Exhaust tube mounting screws	First	28	–	20.7
	Final	28	–	20.7

7. Tighten the exhaust boot clamp nuts to the specified torque. Install the thread protectors onto each exhaust clamp.

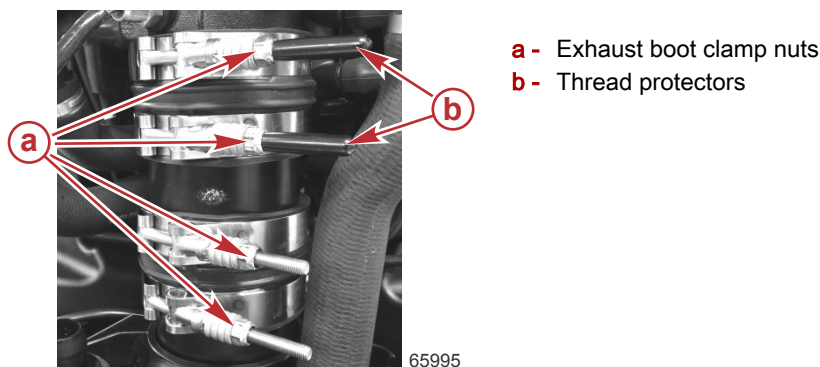


Description	Nm	lb-in.	lb-ft
Exhaust boot clamp nut	6.2	54.9	–


8. Install the breather hose onto the port camshaft cover. Install a 25.6 mm Oetiker clamp to secure the breather hose to the port camshaft cover.

Cylinder Block/Crankcase

9. Install the water hose onto the fitting. Install a 31.6 mm Oetiker clamp to secure the water hose to the fitting on the exhaust tube.

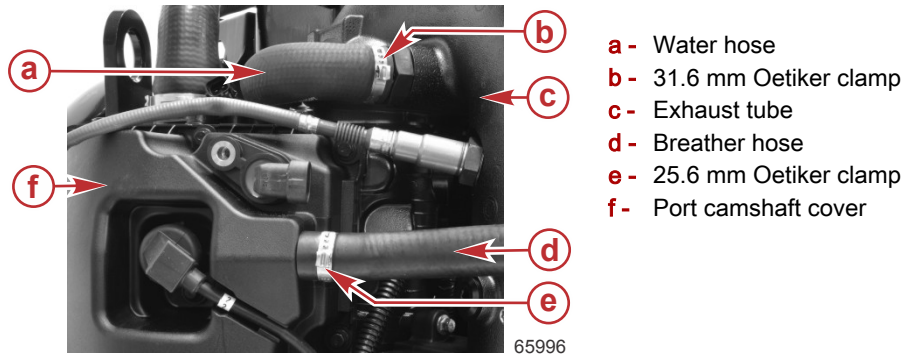


10. Install the water supply fitting onto the port side of the exhaust tube. Tighten the screw to the specified torque.

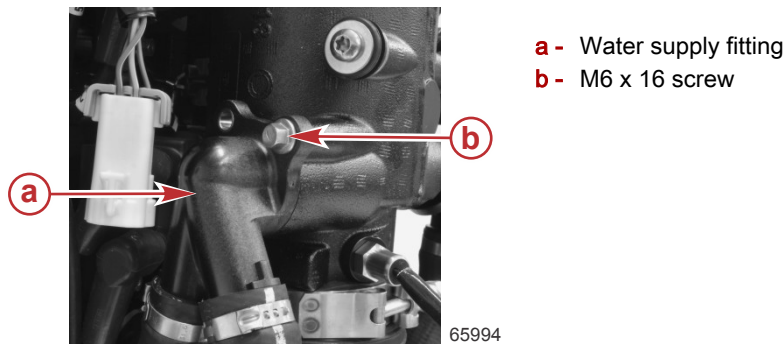


Description	Nm	lb-in.	lb-ft
Water supply fitting screw (M6 x 16)	10	88.5	-

11. Install the water strainer fitting onto the starboard side of the exhaust tube. Tighten the screw to the specified torque.

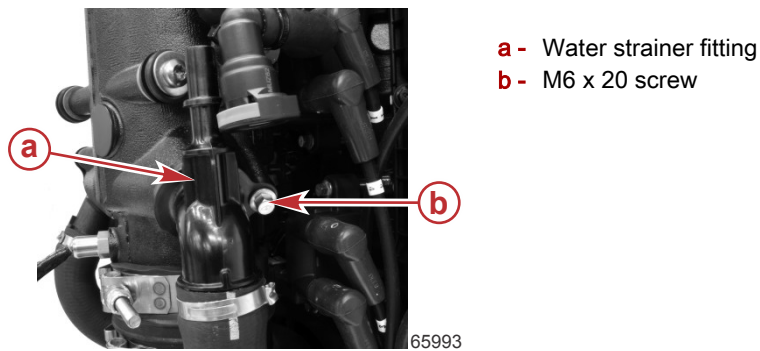


Description	Nm	lb-in.	lb-ft
Water strainer fitting screw (M6 x 20)	10	88.5	-

12. Ensure that the strainer is free of debris or restrictions. Install the strainer into the water strainer fitting.

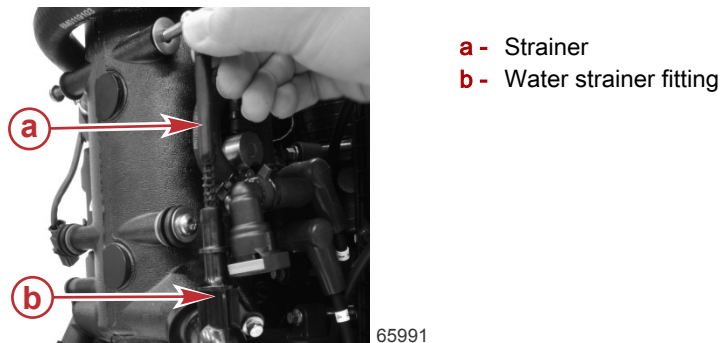

- Install the water hose connector onto the water strainer fitting. Press the water hose connector down until it clicks into place.

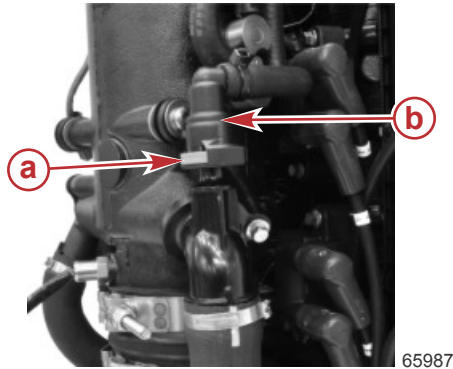


- a - Blue tab on the water hose connector
- b - Water hose connector

65987

Electrical Harness and Component Installation

- Install the electrical plate (together with the harness and PCM) onto the exhaust tube. Tighten the two T30 Torx screws to the specified torque.
- Install the ignition coil primary lead connector onto the electrical plate.

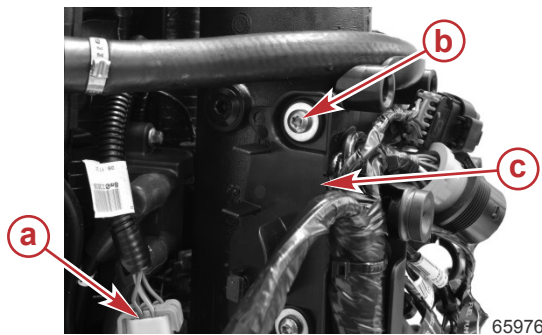


- a - Ignition coil primary lead connector
- b - T30 Torx screws and washers (one each per side)
- c - Electrical plate

65976

Description	Nm	lb-in.	lb-ft
T30 Torx screws	10	88.5	-

- Connect the fuel pump connector and exhaust gas temperature (EGT) sensor connectors to the engine harness.

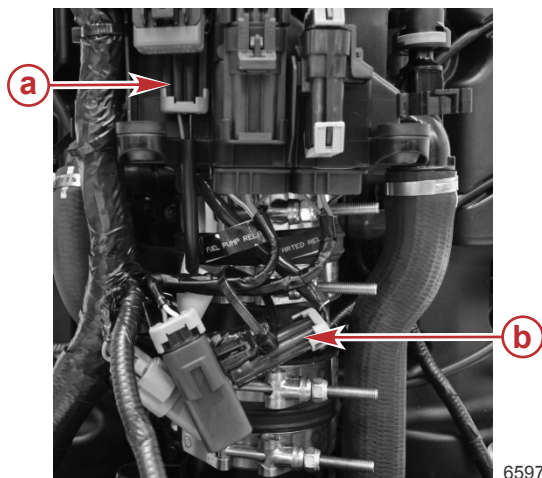


- a - Fuel pump connector
- b - EGT sensor connector

65975

- Install the thermostat dump hose behind the exhaust tube and route the hose down along the port side of the electrical plate.


Cylinder Block/Crankcase

5. Connect the ignition coil primary lead connector to the engine harness. Attach the connector to the electrical plate.

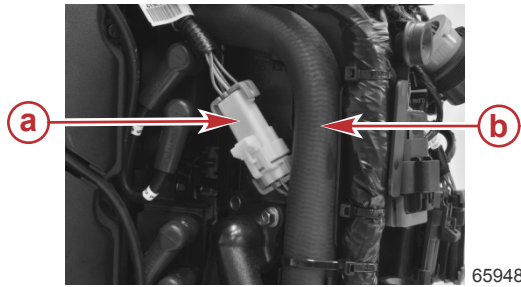


- a - Ignition coil primary lead connector
- b - Thermostat dump hose

6. Install a 31.6 mm Oetiker clamp to secure the thermostat dump hose to the fitting on the adapter plate.

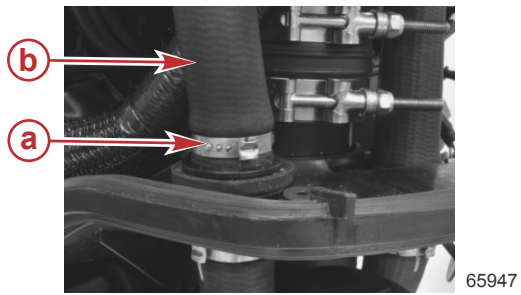

- a - Thermostat dump hose
- b - 31.6 mm Oetiker clamp


7. Carefully insert the electrical harness under the breather hose, then behind the exhaust tube and push it through to the starboard side.
8. Install a cable tie to secure the aft wiring bundle together.
9. Install a cable tie to secure the thermostat dump hose to the electrical plate
10. Install a cable tie to secure the breather hose to the electrical plate.

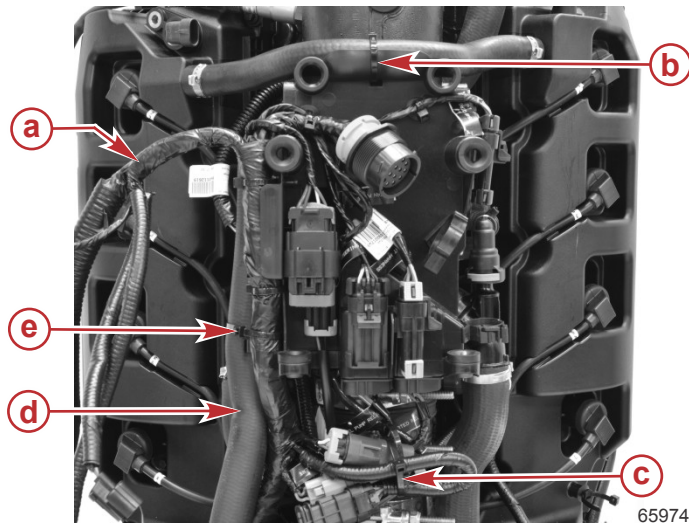

- a - Electrical harness to starboard side
- b - Cable tie securing the breather hose
- c - Cable tie securing the aft wiring bundle
- d - Thermostat dump hose
- e - Cable tie securing thermostat dump hose

11. Connect the advanced sound control module connector:
 - a. Push the connector onto the module.


- b. Push the red lock tab forward to secure the connector.

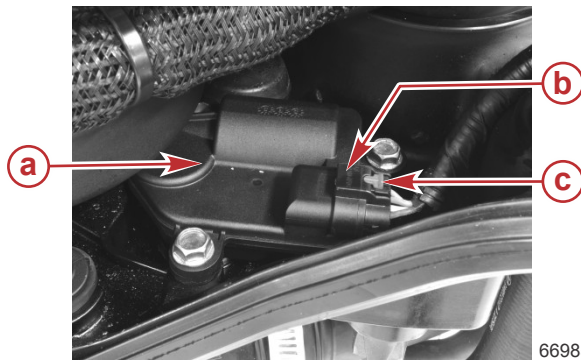

- a** - Advanced sound control module
- b** - Connector
- c** - Red lock tab

66985


12. Route the starboard side injector harness into position and secure it with a cable tie.

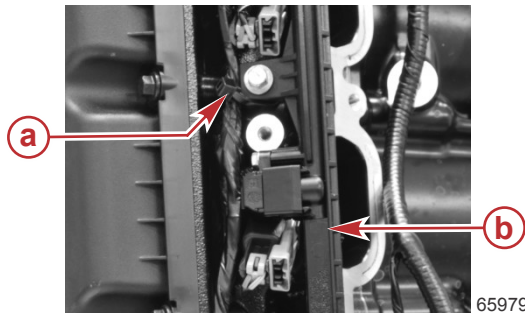

- a** - Cable tie
- b** - Starboard fuel rail

65979

13. Connect the fuel injector connectors to the appropriate fuel injectors:
- a. Push the fuel injector connector onto the fuel injector.
 - b. Slide the gray lock tab down to secure the connector.

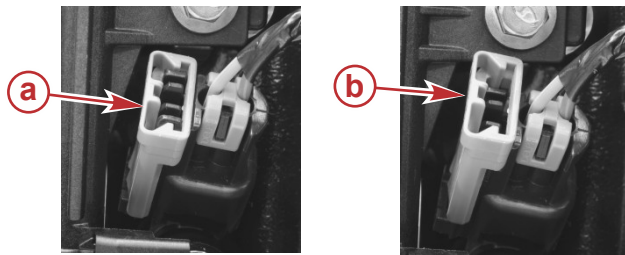


- a** - Gray lock tab in the locked position
- b** - Gray lock tab in the unlocked position

65908

14. Install the fuel line filters into the fuel rails.

15. Install the fuel hoses onto the fuel rails. Secure the fuel hoses with 16.2 mm Oetiker clamps.

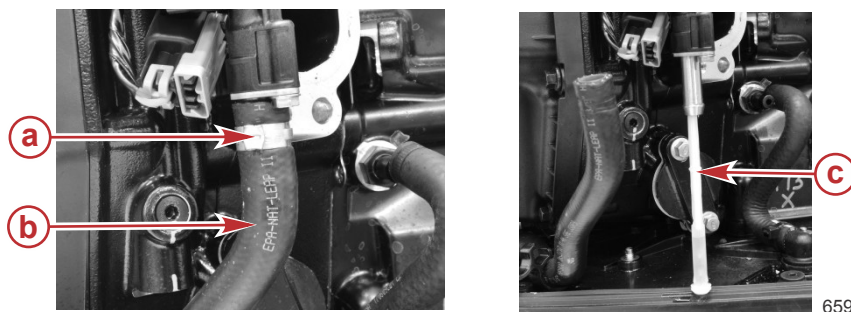

Starboard side shown, port side similar


- a** - 16.2 mm Oetiker clamps (one per fuel rail)
- b** - Fuel hose (one per fuel rail)
- c** - Fuel line filter (one per fuel rail)

65971

16. Place the harness assembly onto the chap plate. Route the harness onto the port side of the chap plate toward the front of the powerhead.

Cylinder Block/Crankcase

17. Connect the port side drain hose to the fitting and secure the drain hose with a cable tie.

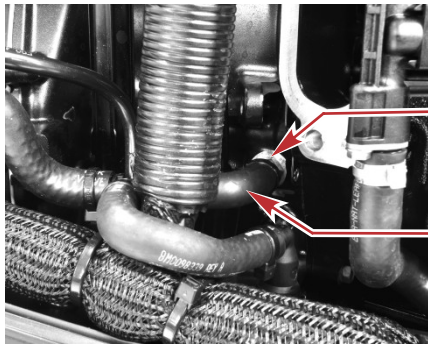


- a** - Cable tie
- b** - Drain hose

67000

18. Install the ground wire connections. Tighten the ground screw to the specified torque. Cover the connection with Liquid Neoprene.

Tube Ref No.	Description	Where Used	Part No.
25	Liquid Neoprene	Ground wire connections	92- 25711 3

19. Secure the fuse box with two screws. Tighten the screws to the specified torque.

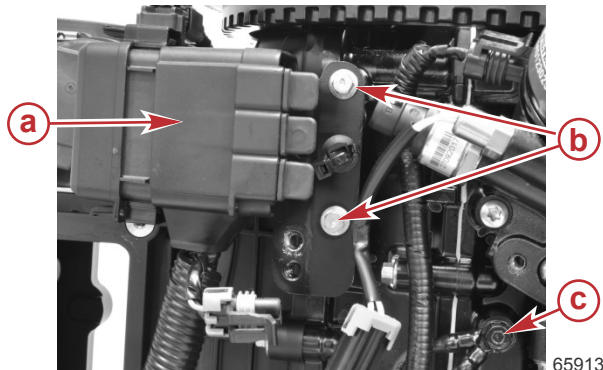


- a** - Fuse box
- b** - M6 x 16 screws (2)
- c** - Ground wire connections

65913

Description	Nm	lb-in.	lb-ft
Fuse box screws (M6 x 16)	10	88.5	-
Ground screw	10	88.5	-

20. Secure the harness next to the PCM with a cable tie.

21. Install the PCM and tighten the three M6 x 25 screws to the specified torque.

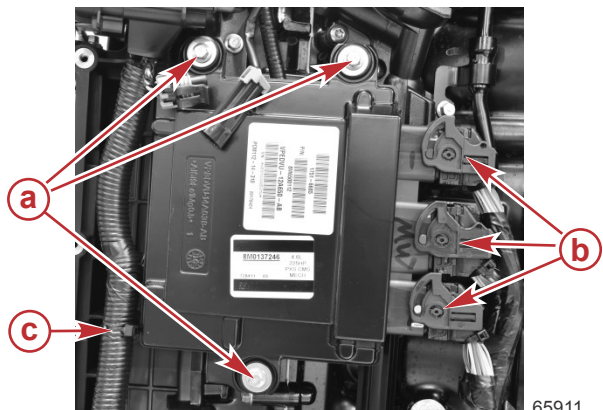


- a** - M6 x 25 crews (3)
- b** - PCM connectors
- c** - Cable tie

65911

Description	Nm	lb-in.	lb-ft
M6 x 25 screws	10	88.5	-

22. Secure the wiring harness under the intake plenum with a cable tie.

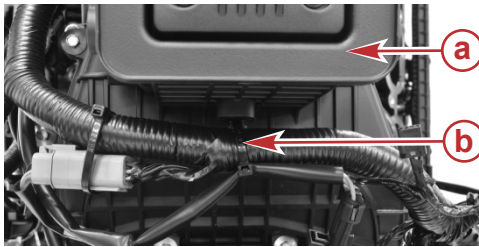


65914

- a** - Intake plenum
- b** - Cable tie

23. Install the starter motor. Tighten the three M8 screws to the specified torque.


24. Install the starter solenoid wire (yellow/red) and the positive (+) battery cable to the starter solenoid. Cover the connections with Liquid Neoprene.

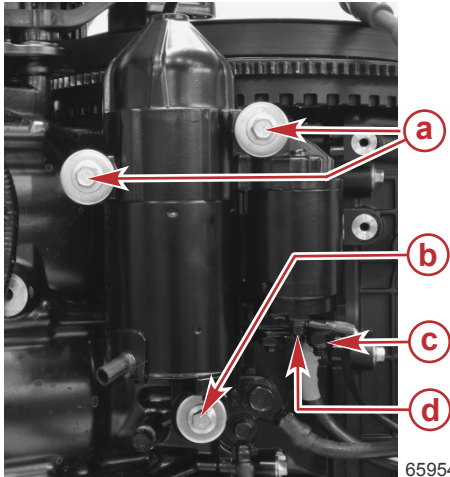


65954

- a** - M8 x 80 screws and washers
- b** - M8 x 45 screws and washers
- c** - Positive (+) battery cable
- d** - Starter solenoid wire (yellow/red)

Description	Nm	lb-in.	lb-ft
M8 x 80 screws (2)	24	-	17.7
M8 x 45 screw	24	-	17.7

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Starter motor electrical connections	92- 25711 3

25. Install the digital oil level sensor. Tighten the sensor to the specified torque.

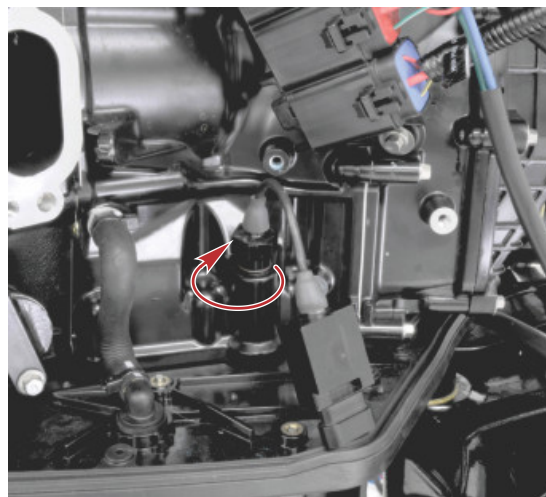


66061


Description	Nm	lb-in.	lb-ft
Digital oil level sensor	20	177	-

Cylinder Block/Crankcase


26. Install the relay bracket. Tighten the screws to the specified torque.
27. Secure the electronic dipstick module to the relay bracket with a cable tie. Connect the harness connector to the module.
28. Install the ground wire connection. Tighten the ground wire screw to the specified torque and cover the connection with Liquid Neoprene.

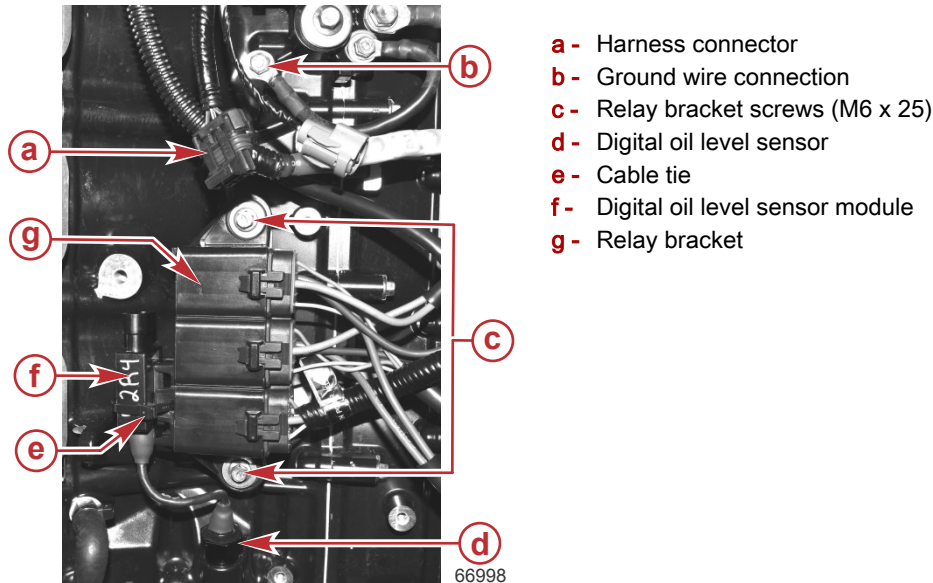


Description	Nm	lb-in.	lb-ft
Relay bracket screws (M6 x 25)	10	88.5	–
Ground wire screw	10	88.5	–

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Ground wire connection	92- 25711 3


29. Lubricate the thermostat housing O-ring with Parker© O-Lube. Install the thermostat housing and tighten the two screws to the specified torque.

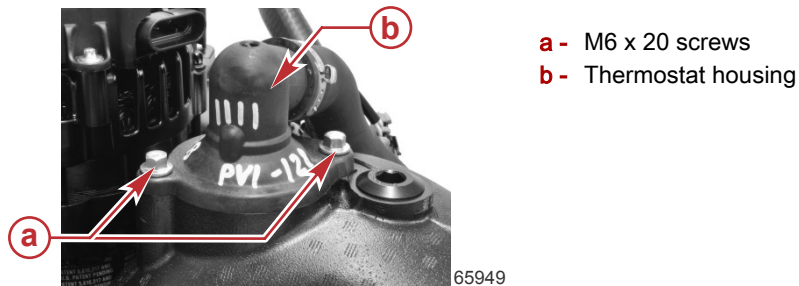

Description	Nm	lb-in.	lb-ft
Thermostat housing screws (M6 x 20)	10	88.5	–

Tube Ref No.	Description	Where Used	Part No.
 Parker© O-Lube	Parker© O-Lube	Thermostat housing O-ring	Obtain Locally


30. Connect the engine harness to the camshaft position sensor connector. Install the sensor guard and tighten the screw to the specified torque.

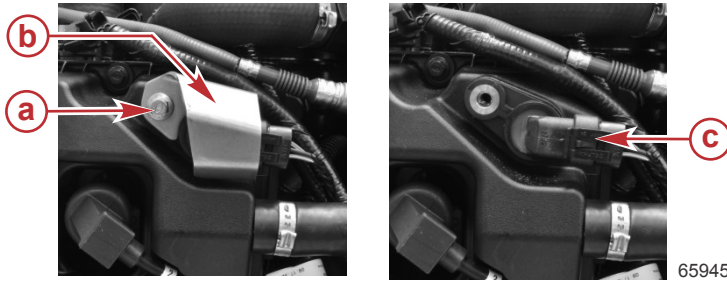

- a - M6 x 20 screw
- b - Sensor guard
- c - Camshaft position sensor connector


Description	Nm	lb-in.	lb-ft
Camshaft position sensor screw (M6 x 20)	10	88.5	–

31. Connect the crankshaft position sensor connector. Secure the harness with a cable tie as shown.

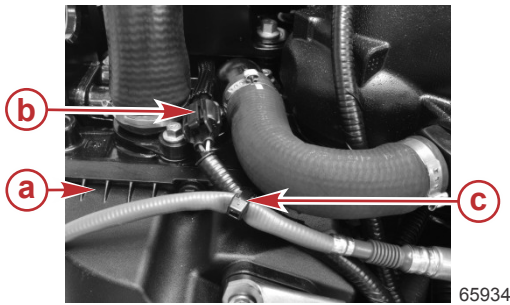


- a - Port camshaft cover
- b - Crankshaft position sensor connector
- c - Cable tie

32. Install the alternator output lead onto the alternator. Tighten the nut to the specified torque. Apply Liquid Neoprene to protect the connection from corrosion.
33. Plug in the alternator wire connector.
34. Install a cable tie as shown to secure the alternator wiring.

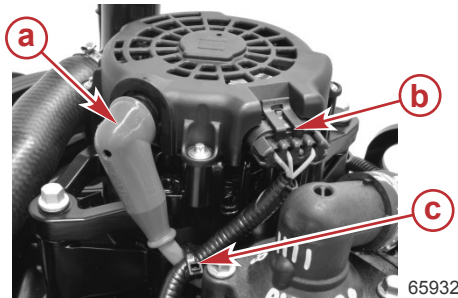


- a - Cable boot
- b - Alternator wire connector
- c - Cable tie

Description	Nm	lb-in.	lb-ft
Output lead nut	7	62	–

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Alternator output connection	92- 25711 3

35. Connect the block water pressure sensor connector.
36. Connect the water temperature sensor connector.


37. Secure the harness with cable ties as shown.

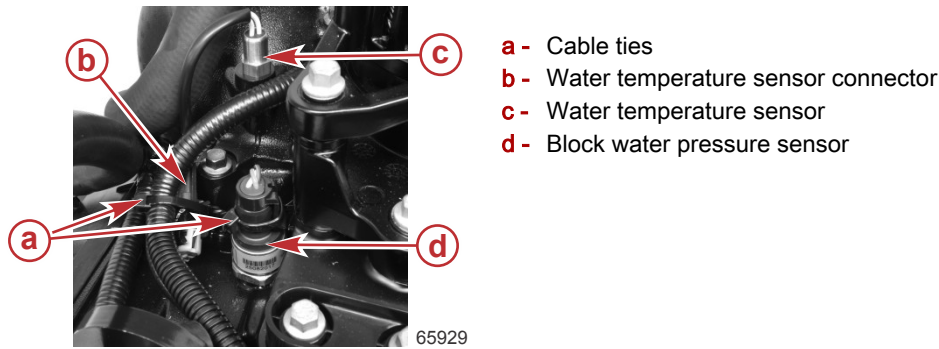


38. Connect the electronic throttle body connector by pushing the connector onto the throttle body, then pushing in the red lock tab.

39. Install a cable tie behind the throttle body to secure the harness.


40. Connect the MAP sensor connector and secure the connector with a cable tie as shown.

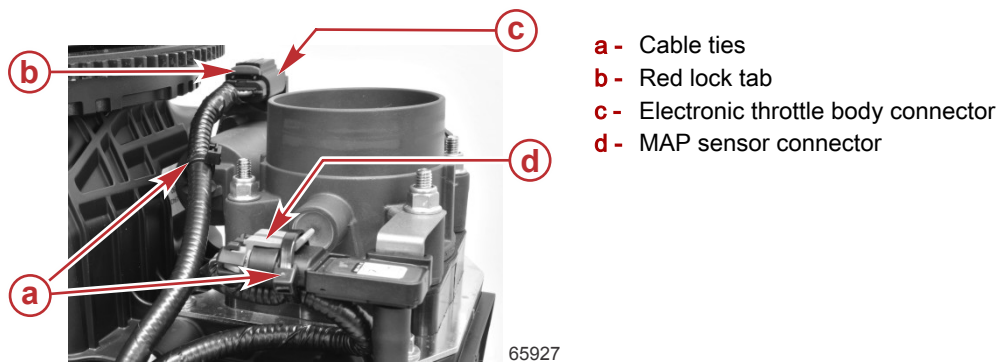

41. Install the starboard side drain hose and secure the hose with a cable tie.

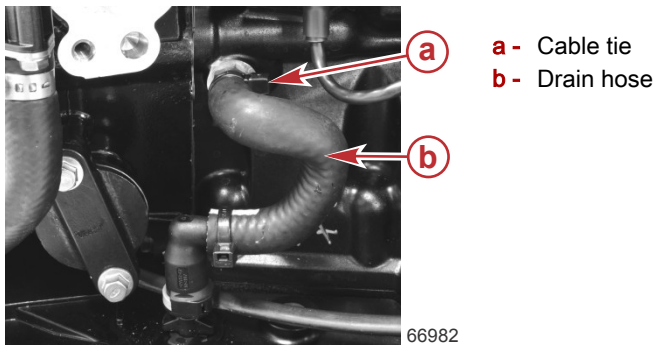


42. Install the battery cable terminal block onto the powerhead. Tighten the three T30 Torx screws to the specified torque.

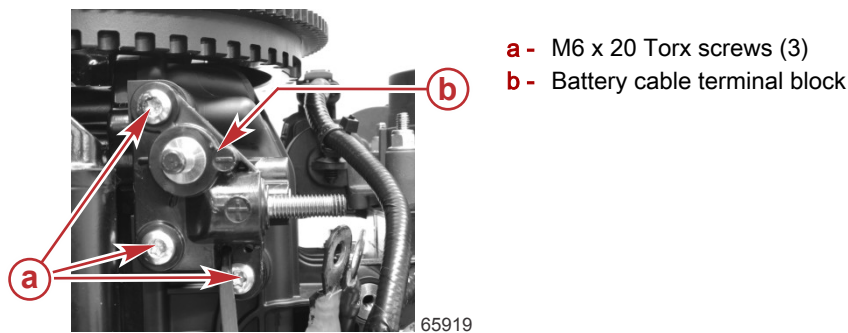

Description	Nm	lb-in.	lb-ft
M6 x 20 T30 Torx screws	10	88.5	-


43. Install the battery cables onto the terminals according to the following table. Tighten the nuts to the specified torque. Cover the connections with Liquid Neoprene.

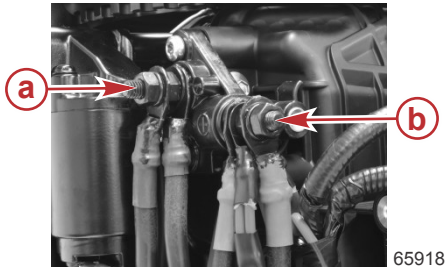


- a - Negative (-) battery terminal
- b - Positive (+) battery terminal

Installation Order	Positive (+) Battery Terminal Connections	Negative (-) Battery Terminal Connections
1st	Starter positive (+) cable	Starter ground (-)
2nd	Alternator fusible link	Relay ground (-)
3rd	Positive (+) ring terminal to relays	Negative (-) battery cable
4th	Positive (+) battery cable	-

Description	Nm	lb-in.	lb-ft
Battery cable nuts	17	150.5	-


Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Battery connections at the engine	92- 25711 3

44. Secure the shift actuator connector to the harness with a cable tie under the intake plenum.

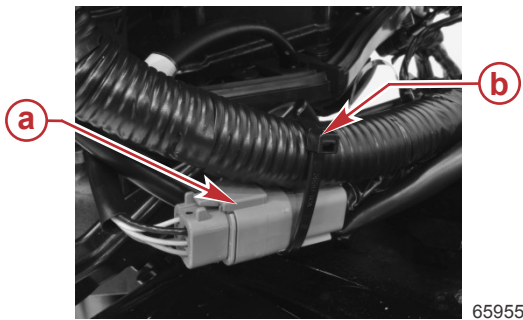

- a - Shift actuator connector
- b - Cable tie

45. Secure the ground cable with a screw and tighten the screw to the specified torque. Cover the connection with Liquid Neoprene.

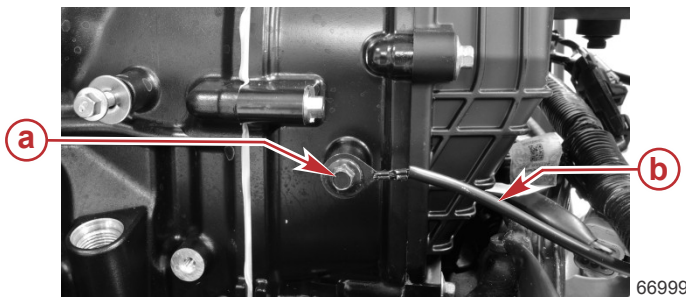


- a - Screw
- b - Ground cable

Description	Nm	lb-in.	lb-ft
Ground screw (M6 x 12)	10	88.5	-

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Ground cable connection	92- 25711 3



46. Install a cable tie to secure the wiring harness as shown. Install the battery terminal cover.

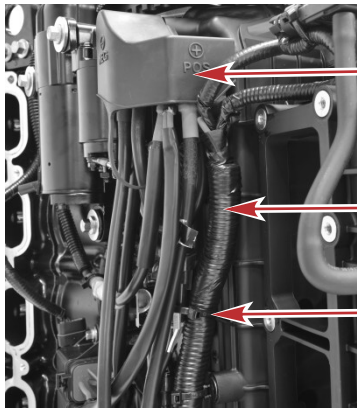

65917

- a** - Battery terminal cover
- b** - Wiring harness
- c** - Cable tie


47. Connect the fuel injector connectors to the fuel injectors on the port fuel rail and press the gray lock tab down to engage.

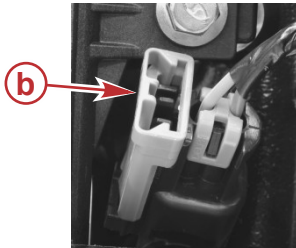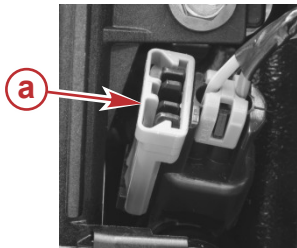

65908

- a** - Gray lock tab (locked)
- b** - Gray lock tab (unlocked)


48. Install a cable tie to secure the injector harness to the port fuel rail.

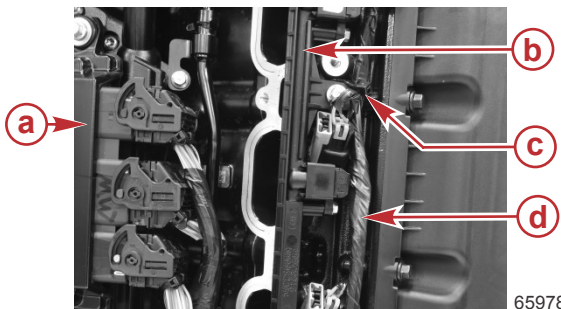

65978

- a** - PCM
- b** - Port fuel rail
- c** - Cable tie
- d** - Injector harness

49. Connect the oxygen sensor connector to the engine harness and secure it with a cable tie.

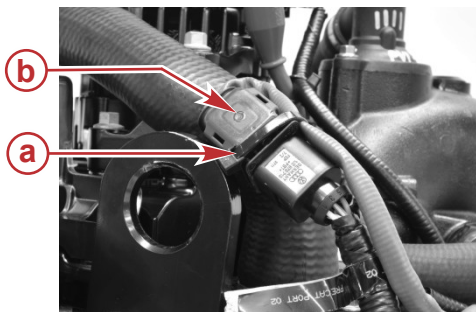


65910


- a** - Cable tie
- b** - Oxygen sensor connector

50. Connect the oil pressure and oil temperature sensor connectors.

51. Install a cable tie to secure the wiring harness behind the fuse box.

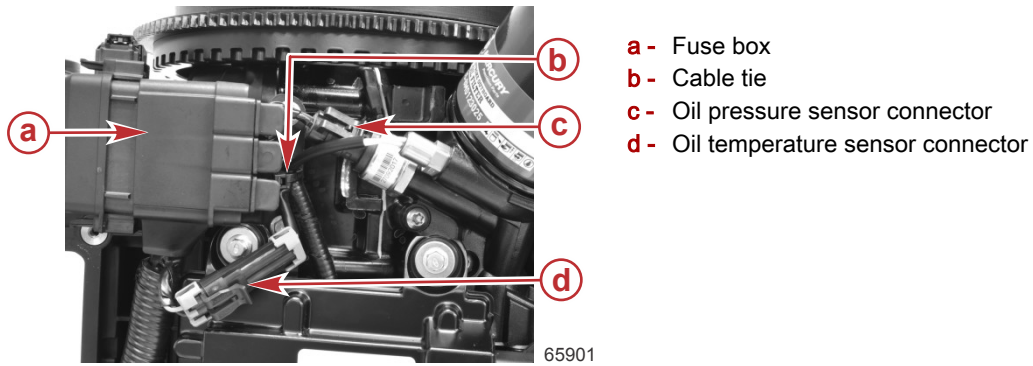


52. Install the flywheel cover onto the throttle body. Tighten the throttle body clamp to the specified torque.

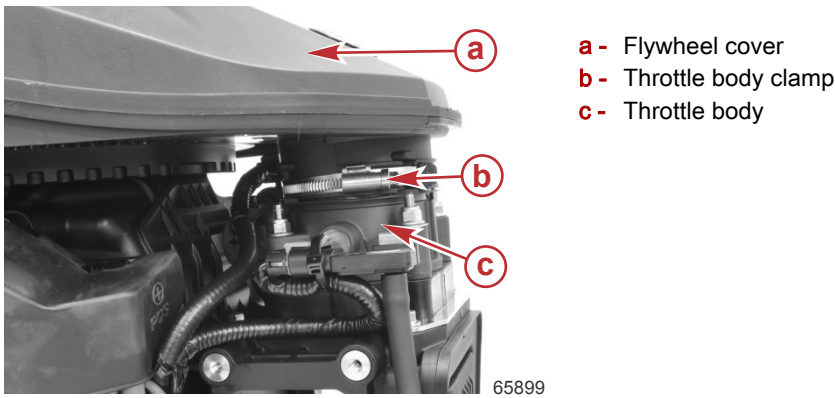


Description	Nm	lb-in.	lb-ft
Throttle body clamp	3	26.6	-

53. Install the engine oil dipstick.


54. Install the breather hose onto the flywheel cover and secure the breather hose with a cable tie.

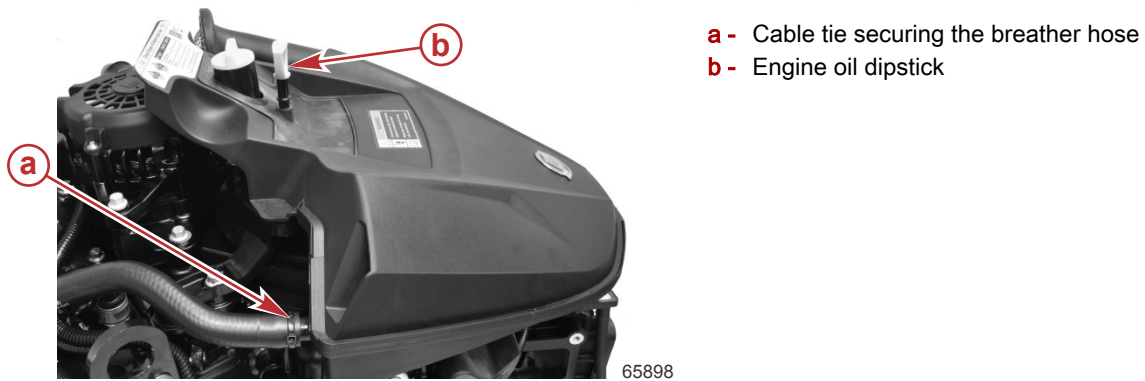

55. Install the fuel hose into the retainer and secure the fuel hose with a cable tie.

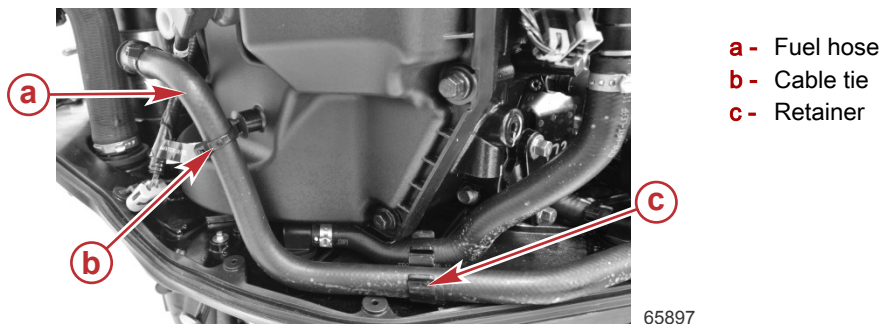

56. Plug in the manifold air temperature (MAT) sensor connector. The MAT sensor is located behind the starboard intake runners.

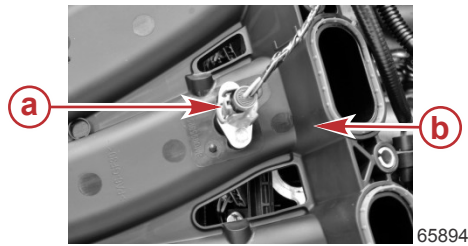


- a - MAT sensor
- b - Starboard intake runners

57. Install the starboard intake runner. Apply Loctite 242 Threadlocker to the screw threads and tighten the screws to the specified torque in the sequence shown.


IMPORTANT: Intake runner screws are different lengths. Do not intermix the hardware.

IMPORTANT: Ensure that the intake runner seals are in place and not damaged.

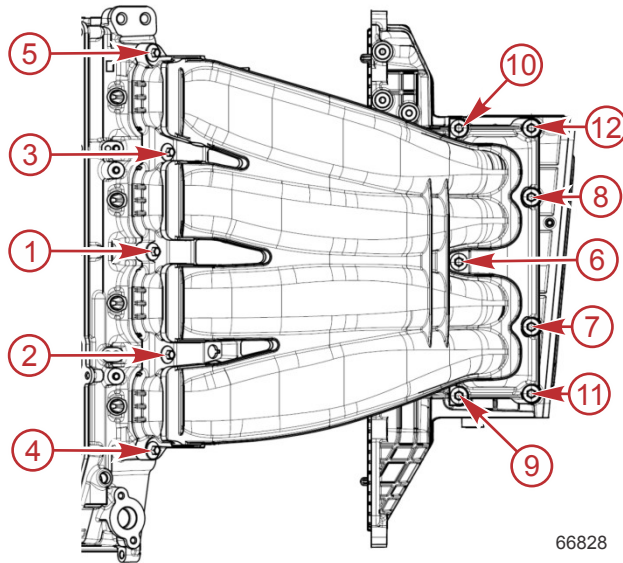

V8 starboard intake runner


Description	Nm	lb-in.	lb-ft
M6 x 30 screws (1-5)	10	88.5	-
M6 x 37 screws (6-12)	10	88.5	-

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	Threads of the intake runner screws	92-809821

58. Install the port intake runner. Apply Loctite 242 Threadlocker to the screw threads and tighten the screws to the specified torque in the sequence shown.

IMPORTANT: Intake runner screws are different lengths. Do not intermix the hardware.

IMPORTANT: Ensure that the intake runner seals are in place and not damaged.

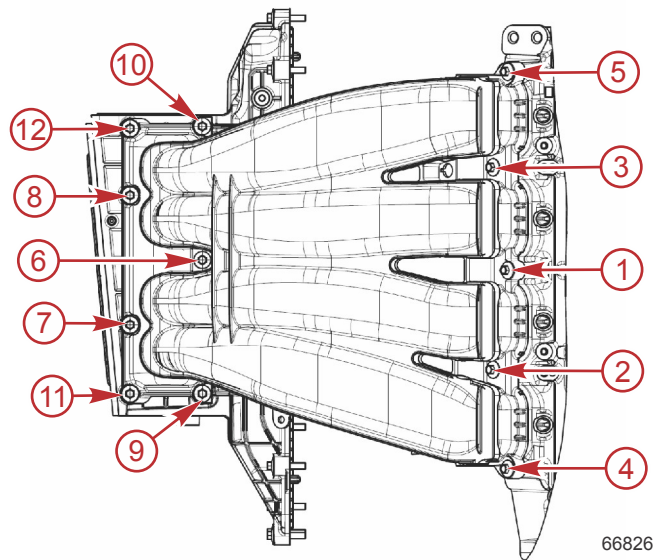


V8 port intake runner

Description	Nm	lb-in.	lb-ft
M6 x 30 screws (1-5)	10	88.5	-
M6 x 37 screws (6-12)	10	88.5	-

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	Threads of the intake runner screws	92-809821


59. Install the fuel rail covers. Tighten the screws to the specified torque.

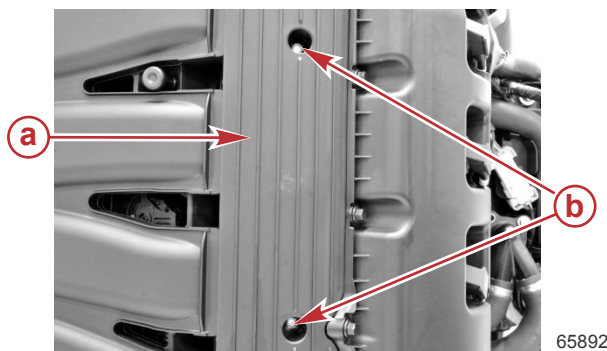

Port side shown; starboard similar
a - Fuel rail cover
b - M6 shoulder screws (2 per side)


Description	Nm	lb-in.	lb-ft
Fuel rail cover screws (M6 shoulder screws)	10	88.5	-

60. Connect the manifold reference hose onto the fitting near the starboard intake runners.

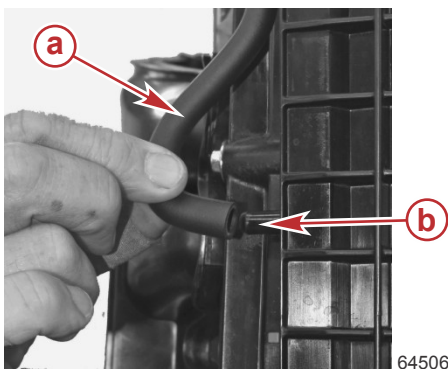

a - Manifold reference hose
b - Fitting


61. Install the FSM reference hose onto the fitting near the port intake runners.

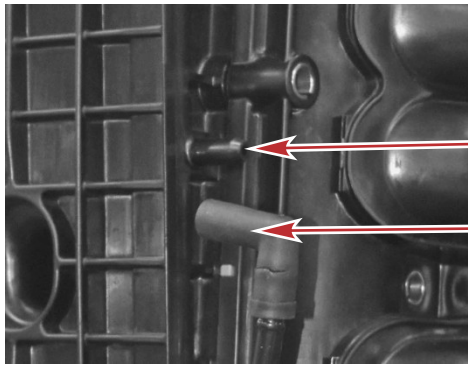

- a - Fitting
- b - FSM reference hose

64505


62. Install the flush hose and manifold reference hose into the retainer on the port intake runner.

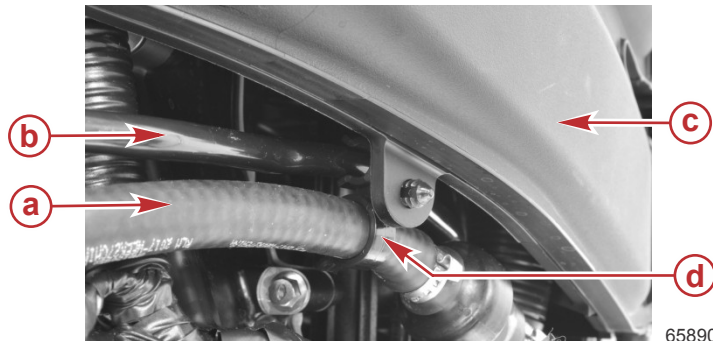

- a - Flush hose
- b - Manifold reference hose
- c - Port intake runner
- d - Retainer


65890

63. Install the fuel filter into the chap plate by pressing down and turning 1/4 turn counterclockwise.

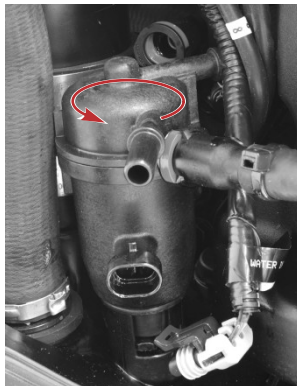

66822

64. Connect the fuel hoses to the fuel filter and plug in the WIF sensor connector.

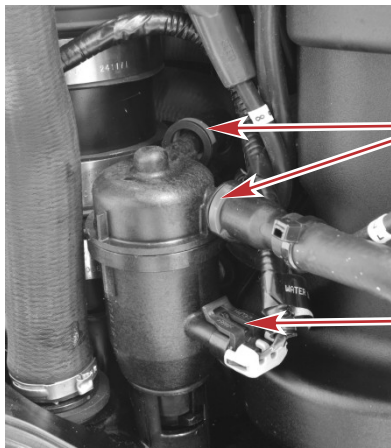

- a - Fuel hoses
- b - WIF sensor connector

65886

65. Install the upper and lower cowls. Refer to **Section 5C - Upper and Lower Cowls**.

66. Fill the engine with oil. Refer to **Section 1B - Changing Engine Oil and Filter**.

Engine Break-in Procedure

IMPORTANT: Failure to follow the engine break-in procedures can result in poor performance throughout the life of the engine and can cause engine damage. Always follow break-in procedures.

1. For the first two hours of operation, run the engine at varied throttle settings up to 4500 RPM or at three-quarter throttle, and at full throttle for approximately one minute every ten minutes.
2. For the next eight hours of operation, avoid continuous operation at full throttle for more than five minutes at a time.

Notes:

Powerhead

Section 4B - Cylinder Head

Table of Contents

V8 Cylinder Head Specifications.....	4B-2	Valve Bucket Tappets.....	4B-12
Cylinder Head Components.....	4B-4	Valves.....	4B-13
Cylinder Head Service Recommendations.....	4B-6	Valve Springs.....	4B-14
Machine Shop Information—Lash for Life Cylinder		Valve Guides.....	4B-15
Head Repair.....	4B-6	Valve Seat Reconditioning.....	4B-16
FourStroke V8 DOHC—Camshaft Identification.....	4B-6	Cylinder Head Reassembly.....	4B-17
Cylinder Head Disassembly.....	4B-8	V8 Cylinder Head Plugs—Installation.....	4B-17
Valve Removal.....	4B-8	Valves.....	4B-18
V8 Cylinder Head Plugs—Removal.....	4B-9	Valve Bucket Tappets.....	4B-19
Cleaning/Inspection/Repair	4B-11	Valve Clearance and Adjustments.....	4B-20
Camshaft.....	4B-11	Valve Clearance Measurement Steps.....	4B-20
V8 Cylinder Head.....	4B-11	Changing Valve Clearance.....	4B-21




**4
B**

V8 Cylinder Head Specifications


Description	Specification
Head deck maximum warp	0.1 mm (0.0039 in.)
Number of valves	32
Number of valves per cylinder	4
Camshaft bearing inside diameter (cylinder head)	26.000–26.021 mm (1.0236–1.0244 in.)
Camshaft bearing journal	25.96–25.98 mm (1.022–1.023 in.)
Camshaft lobe height	
Intake	43.02 mm (1.694 in.)
Exhaust	44.24 mm (1.742 in.)
Valve lash clearance	
Intake	0.125–0.225 mm (0.005–0.009 in.)
Exhaust	0.300–0.400 mm (0.012–0.016 in.)
Valve seat angles (referenced relative to the valve guide axis)	
Intake	30°, 44° ± 0.25°, 60°
Exhaust	35°, 44° ± 0.25°, 55°
Valve seat width (44°)	
Intake	1.0 ± 0.1 mm (0.039 ± 0.0039 in.)
Exhaust	1.2 ± 0.1 mm (0.047 ± 0.0039 in.)
Valve spring height	
Uncompressed	Reference 46.1 mm (1.815 in.)
Compressed to 33.66 mm (1.3252 in.)	157–173 Nm (35.295–38.892 lb-ft) spring load
Compressed to 24.31 mm (0.9149 in.)	356–390 Nm (80.03–87.67 lb-ft) spring load
Valve outside diameter	
Intake	36.9–37.1 mm (1.4528–1.4606 in.)
Exhaust	30.9–31.1 mm (1.2165–1.2244 in.)
Valve face angle (referenced relative to the end face of the valve)	
Intake	44.75°–45.25°
Exhaust	43.75°–44.25°
Valve margin width	
Intake	0.875 mm (0.034 in.)
Exhaust	1.331 mm (0.052 in.)
Valve stem diameter	
Intake	5.4645–5.4805 mm (0.2151–0.2158 in.)
Exhaust	5.456–5.472 mm (0.2148–0.2154 in.)
Valve stem runout (service limit measured at valve face)	
Intake and exhaust	0.030 mm (0.0012 in.)
Valve height	
Intake	88.49 ± 0.25 mm (3.484 ± 0.0098 in.)
Exhaust	87.667 ± 0.25 mm (3.451 ± 0.0098 in.)
Valve guide bore inside diameter	
Intake and exhaust	5.500–5.512 mm (0.2165–0.217 in.)
Valve stem to valve guide clearance	
Intake	0.0195–0.0475 mm (0.0008–0.0019 in.)
Exhaust	0.028–0.056 mm (0.0011–0.0022 in.)
Valve guide height (dimension from spring seat to end of guide)	
Intake	14.5 mm (0.570 in.)
Exhaust	14.5 mm (0.570 in.)
Valve bucket	

Description	Specification
Intake bucket bore inside diameter	32.000–32.025 mm (1.2589–1.2608 in.)
Exhaust bucket bore inside diameter	32.005–32.025 mm (1.2600–1.2608 in.)
Valve bucket outside diameter	31.964–31.980 mm (1.2584–1.2591 in.)
Bucket to bore clearance	0.020–0.061 mm (0.0008–0.0024 in.)


Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
	Torco® MPZ HP Engine Assembly Lube	Valve guide seals	Obtain Locally
	2-4-C with PTFE	End of the screwdriver to help install the valve spring retaining key	92-802859A 1
	Lubriplate SPO 255	Valve bucket tappet outside diameter and valve tip contact pad, or valve tip	Obtain Locally

Special Tools

Valve Spring Compressor	91-809494A1
 <p>3454</p>	Removes and installs valve springs.

Cylinder Head Components

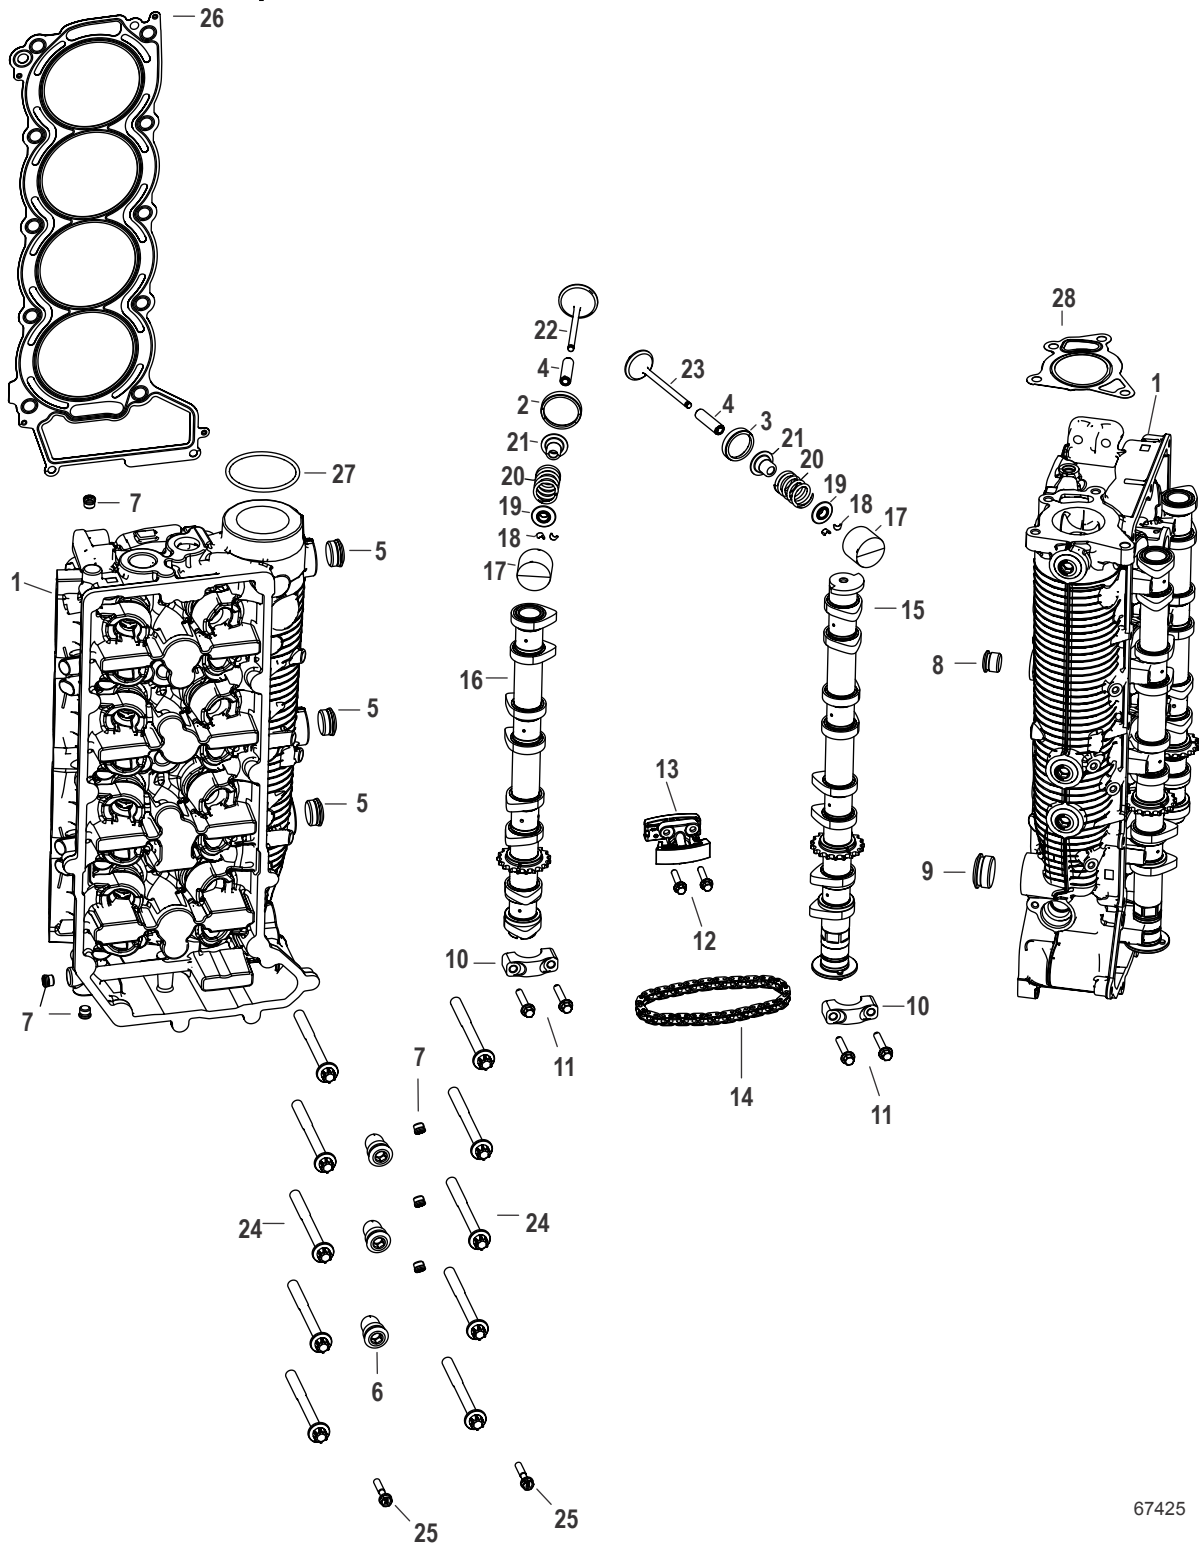

67425

Cylinder Head Components

Ref. No.	Qty.	Description	Torque			
			Nm	lb-in.	lb-ft	
1	1	Port cylinder head assembly				
	1	Starboard cylinder head assembly				
2	16	Intake valve seat				
3	16	Exhaust valve seat				
4	32	Valve guide				
5	6	24 mm plug	55	–	40.6	
6	6	21 mm plug (special)	30	–	22.1	
7	11	10 mm plug	7	62	–	
8	2	18 mm plug	22	–	16.2	
9	2	30 mm plug	55	–	40.6	
10	18	Cap				
11	36	M6 x 35 hex flange	First	6	53.1	–
			Final	12	106.2	–
12	4	M6 x 30 screw	First	6	53.1	–
			Final	12	106.2	–
13	2	Tensioner				
14	2	Cam-to-cam chain				
15	1	Port exhaust camshaft				
	1	Starboard exhaust camshaft				
16	1	Port intake camshaft				
	1	Starboard intake camshaft				
17	32	Valve bucket tappet				
18	64	Valve key				
19	32	Retainer				
20	32	Spring				
21	32	Valve seal				
22	16	Intake valve				
23	16	Exhaust valve				
24	32	E14 Torx flange head bolt	First	15	132.8	–
			Second	35	–	25.8
			Final	Tighten an additional 60°		
25	4	M6 x 35 screw	12	106.2	–	
26	1	Port cylinder head gasket				
	1	Starboard cylinder head gasket				
27	1	O-ring				
28	1	Exhaust manifold gasket				

Cylinder Head Service Recommendations

All marine engines require periodic inspection and maintenance. Extreme duty cycles and harsh marine environments can cause catastrophic engine failure if routine maintenance is not performed at the specified intervals. Failure to follow the engine's **Inspection and Maintenance Schedule** can lead to performance problems, engine failure, and expensive repairs.

Cylinder heads and machined components are manufactured to extremely close tolerances and should only be repaired or replaced by a qualified technician. An automotive machine shop that is capable of performing high quality, close tolerance, machining operations to the manufacturer's specifications must be utilized if a cylinder head is damaged. Damage to cylinder heads from improper machining can cause detonation, alter exhaust emissions, and compromise engine performance.



IMPORTANT: When estimating service work, always compare the price of a complete cylinder head replacement assembly with the cost of cylinder head repair and valve installation.

Machine Shop Information—Lash for Life Cylinder Head Repair

- The cylinder head must be properly installed on the cylinder block using a new head gasket to verify valve lash clearance. Failure to properly install the cylinder head before checking valve clearance will result in inaccurate measurements. Refer to **Section 4A - Cylinder Head Installation**.
- If the valve lash clearance is not within the tolerance as listed in the **V8 Cylinder Head Specifications** table, then a problem with the camshaft lobes, journals, caps, or cylinder head is indicated.
- Valve tappets are available in a variety of dimensions. Do not replace an original tappet with a taller or shorter tappet to compensate for a worn or damaged part.
- The valve guide seals must be replaced if the valves are removed from the cylinder head.
- The valve spring coil ratio is the same at both ends of the spring, and the springs do not have a top or bottom orientation.
- Bronze-sleeved guide bore liners are an acceptable service replacement, as an alternative to valve guides.
- The cylinder head must be heated to 176.6 °C (350 °F) before the valve guides are extracted. Remove all plugs before heating.
- Lubricate the valve guides with a light oil before installation.

FourStroke V8 DOHC—Camshaft Identification


The port exhaust camshaft can be identified by the sensor target at the top of the camshaft. The starboard intake camshaft can be identified by the groove below the chain gear. Each camshaft has an identification mark. Refer to **Section 4A** for camshaft installation procedures.

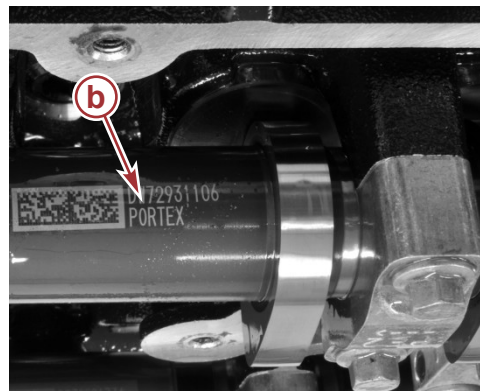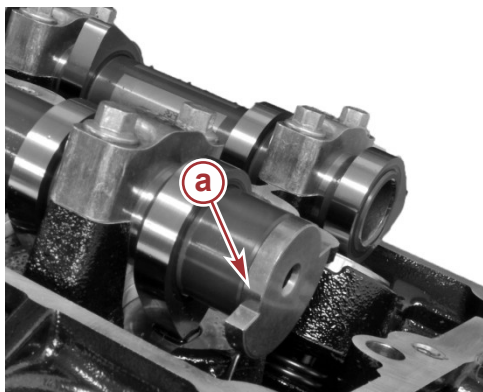

67354

- a** - Sensor target—port exhaust camshaft
- b** - Camshaft identification mark

NOTE: Observe the camshafts identification marks during powerhead assembly to ensure that each camshaft is installed in the correct location.

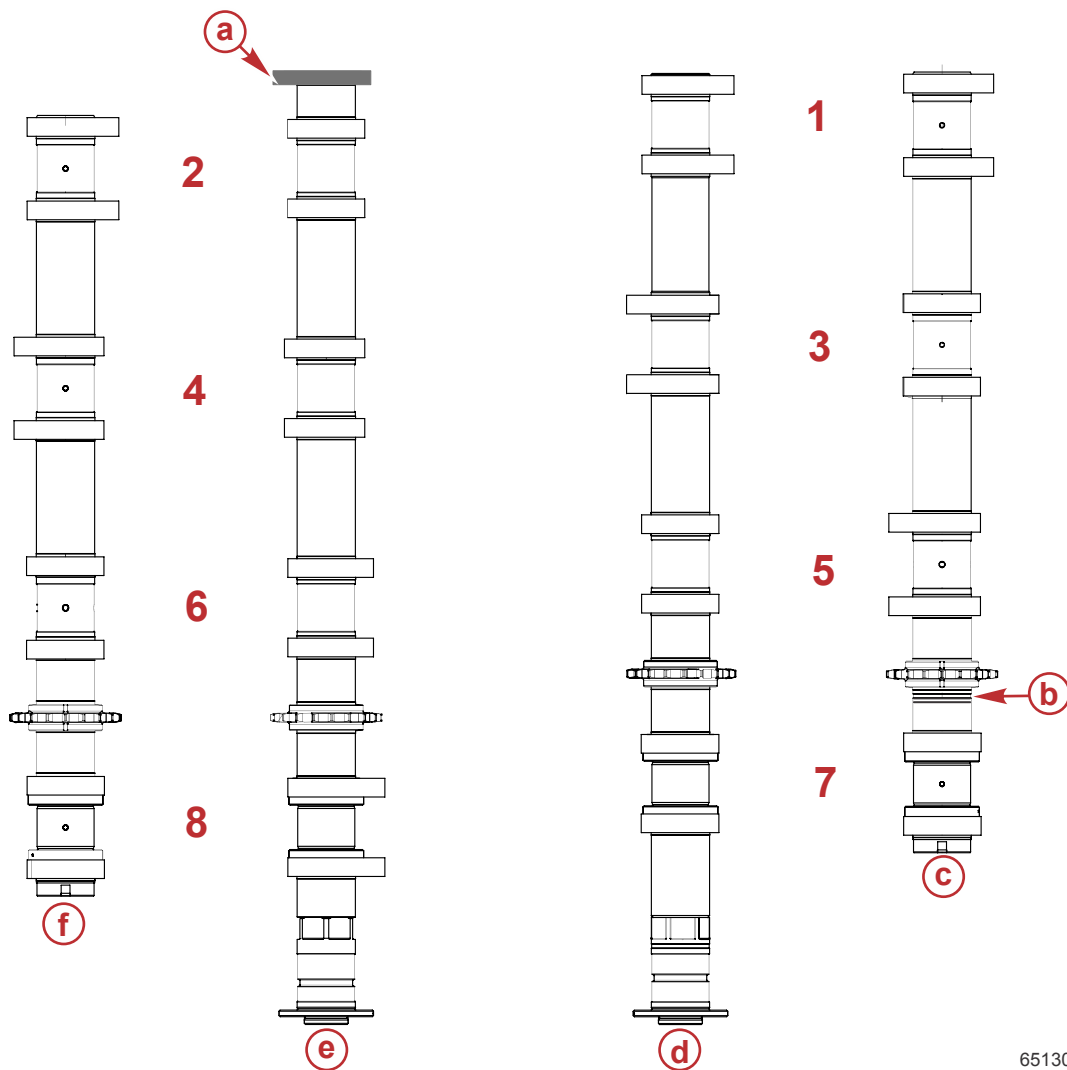

65130

Camshaft identification

- a**- Sensor target
- b**- Groove below the chain gear (starboard intake camshaft only)
- c**- Starboard intake camshaft
- d**- Starboard exhaust camshaft
- e**- Port exhaust camshaft
- f**- Port intake camshaft

Ref.	Description
1	Cylinder number 1
2	Cylinder number 2
3	Cylinder number 3
4	Cylinder number 4
5	Cylinder number 5
6	Cylinder number 6
7	Cylinder number 7
8	Cylinder number 8

Cylinder Head Disassembly


Valve Removal

NOTE: Refer to **Section 4A - Cylinder Block/Crankcase** for powerhead, timing chain, camshaft, and cylinder head removal procedures.

1. Clean the surface of the valve buckets with a solvent to remove any oil residue. Use an indelible marker to write the location of each valve bucket on top of the bucket: E1, E2, E3, I1, I2, I3, etc.
2. Remove the valve bucket tappet with a plunger or suction cup device. Do not use a magnet to remove the valve bucket tappets.

IMPORTANT: Do not intermix the location of the valve train parts.

The valve bucket tappets have different dimensions to correct for proper valve lash clearance. Note the location of the valve bucket tappets and valves.

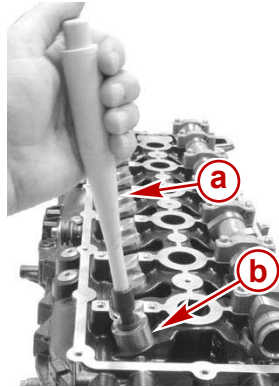



- a - Suction cup device
- b - Valve bucket tappet

4016

3. Use a valve spring compressor to collapse the valve spring, and remove the valve spring retainers and keys.

NOTE: Be certain that the cylinder head valve bucket tappet bore is not damaged when using the valve spring compressor.

IMPORTANT: Each part must be installed in its original location during reassembly.

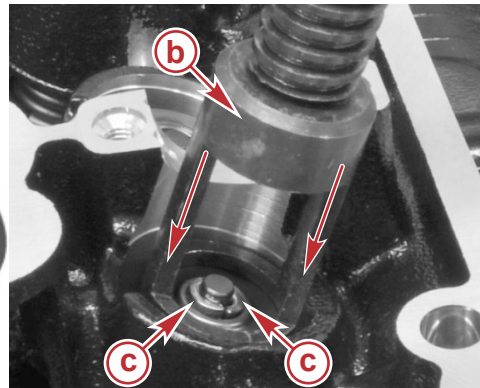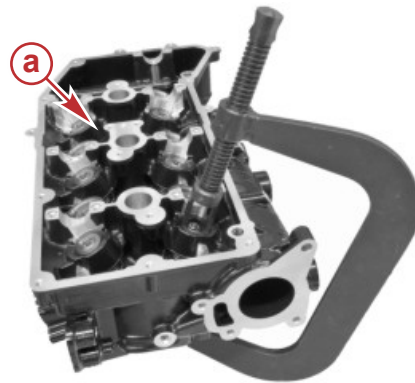


- a - Cylinder head
- b - Valve spring compressor
- c - Keys (2)

65424


Valve Spring Compressor	91-809494A1
-------------------------	-------------

4. Release the valve spring compressor.
5. Remove the valve from the cylinder head by pulling it through the valve guide and seal.

6. Remove the valve spring.

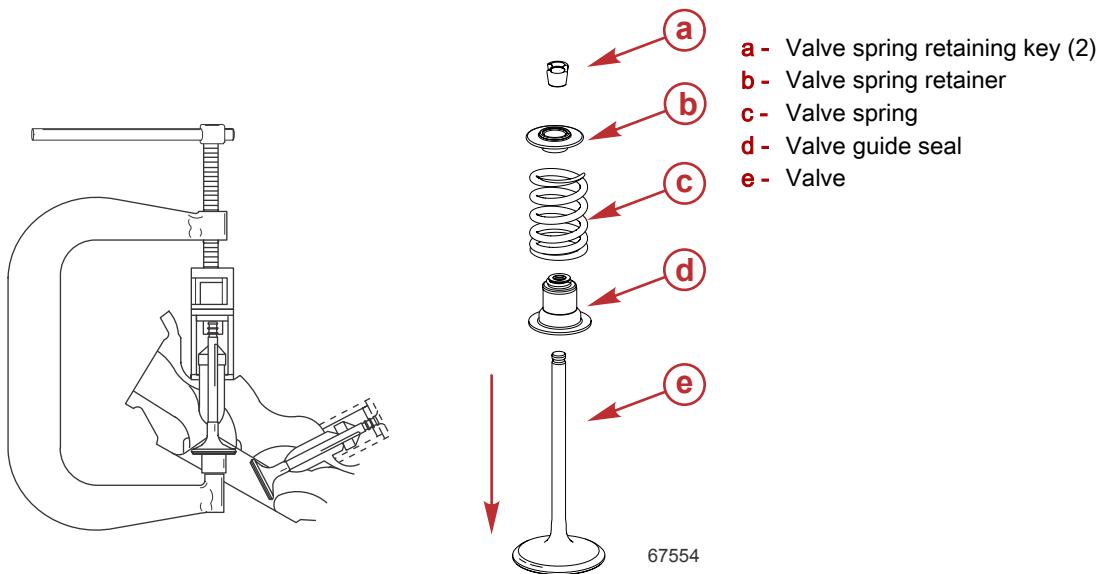

7. Remove and discard the valve guide seal.

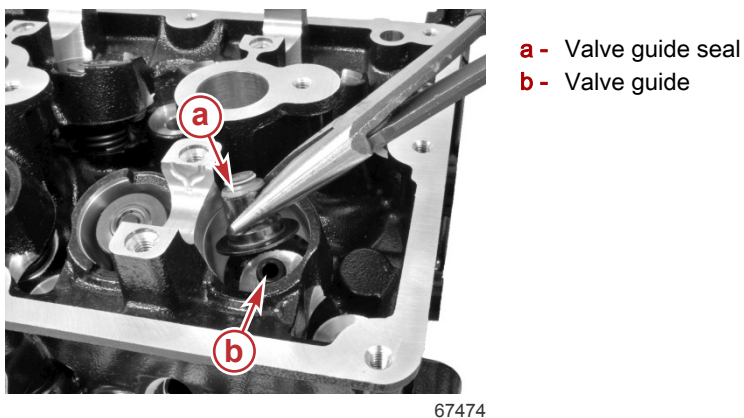

IMPORTANT: Do not reuse valve guide seals. Valve guide seals must be replaced if the valve has been removed.


V8 Cylinder Head Plugs—Removal

NOTE: It may be necessary to lightly tap on the gallery plugs with a brass drift and hammer to break the gallery plug seal.

1. Remove two 10 mm plugs from the bottom of the oil gallery and discard the O-rings.

Cylinder Head

- Remove three 10 mm plugs and three 21 mm special plugs from the back of the cylinder head. Discard the O-rings.

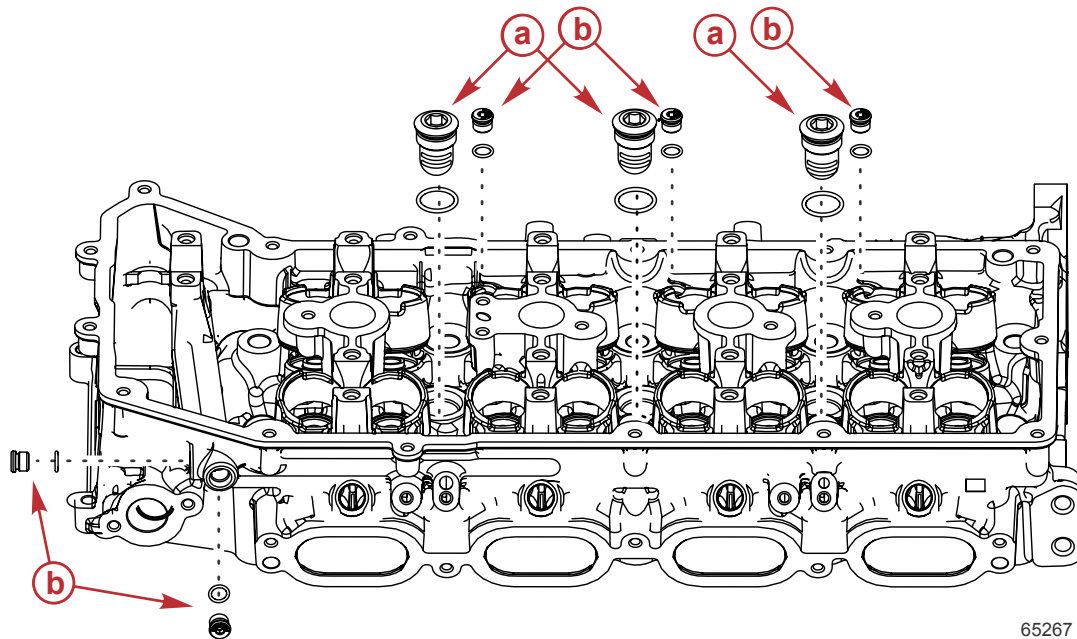


65267

Starboard head shown

- a** - 21 mm special plug (3)
- b** - 10 mm plug (5)

- Remove the 10 mm plug from the end of the oil gallery, and discard the O-ring (port cylinder head only).
- Remove the three 24 mm plugs from the exhaust water jacket, and discard the O-rings.
- Remove the 18 mm and the 30 mm plug from the front of the cylinder head, and discard the O-rings.

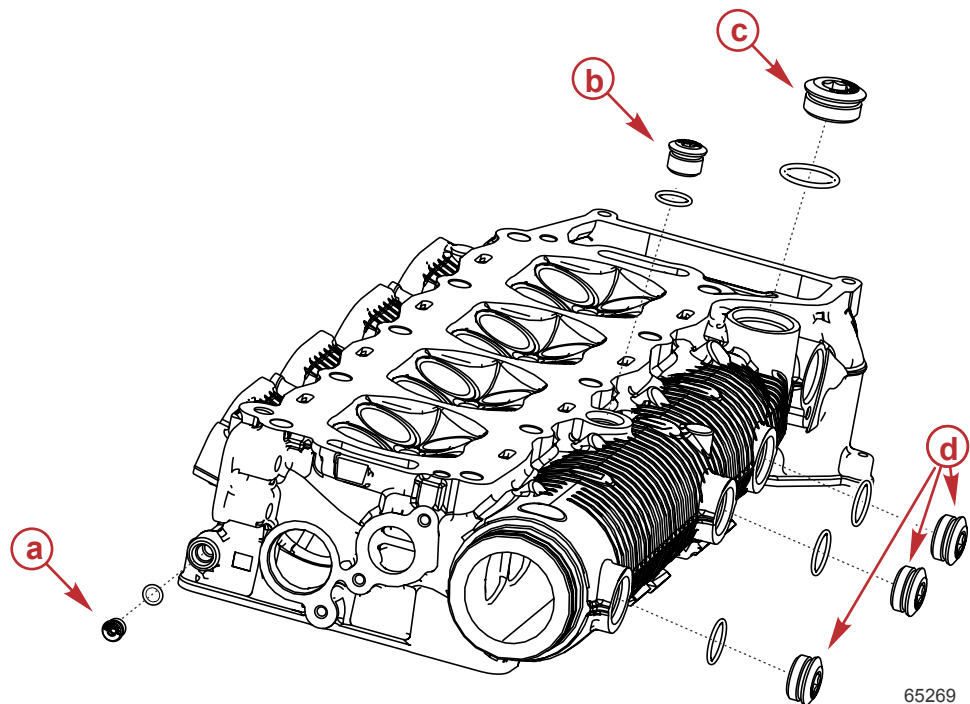

Port head shown


- a** - 10 mm oil gallery plug (port cylinder head only)
- b** - 18 mm plug
- c** - 30 mm plug
- d** - 24 mm plug (3)

65269

Cleaning/Inspection/Repair


Camshaft

1. Measure the camshaft lobe at its maximum valve lift. Replace the camshaft if the dimensions are out of specification.

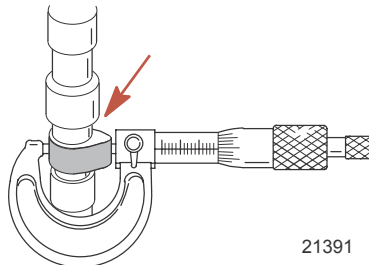

Camshaft Lobe Height	
Intake cam	43.02 mm (1.694 in.)
Exhaust cam	44.24 mm (1.742 in.)

2. Measure all of the camshaft bearing journals with a micrometer. Replace the camshaft if the journal dimensions are out of specification.

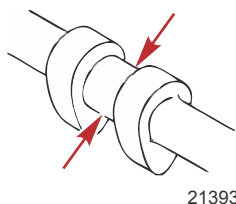


Camshaft Bearing Journal	
Intake and exhaust journal outside diameter	25.96–25.98 mm (1.022–1.023 in.)

IMPORTANT: Torque stages apply to a pair of fasteners for a single camshaft cap, i.e. both fasteners tightened to first stage specified torque, then both fasteners tightened to final stage specified torque.

3. Install the camshaft caps in their correct location and orientation. Tighten the camshaft bearing cap fasteners to the specified torque.

Description		Nm	lb-in.	lb-ft
	Camshaft caps	First	6	53.1
	Final	12	106.2	–

4. Measure the inside diameter of the camshaft bearing surface. Replace the cylinder head if the dimension is out of specification.

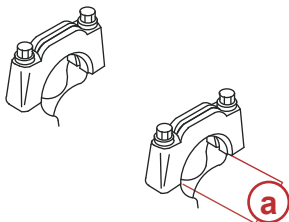

a - Camshaft bearing surface inside diameter

Camshaft Bearing Surface Inside Diameter	
Inside diameter	26.000–26.021 mm (1.0236–1.0244 in.)


V8 Cylinder Head

1. Inspect the cylinder head for mineral deposits and corrosion in the water passageways. Remove deposits and corrosion if found.
2. Pressure test the cylinder head to ensure that there are no leaks or cracks.
3. Inspect the cylinder head for carbon deposits in the combustion chamber. Use a round scraper to clean away deposits. Be careful not to scratch or remove material from the cylinder head.

Cylinder Head

4. Measure the cylinder head for warpage using a straightedge and a feeler gauge. Maximum warpage must not exceed 0.1 mm (0.0039 in.) in any area of the cylinder head deck. Replace the cylinder head if it is out of specification.

NOTE: Use a straightedge and a feeler gauge to inspect the cylinder head for warpage.

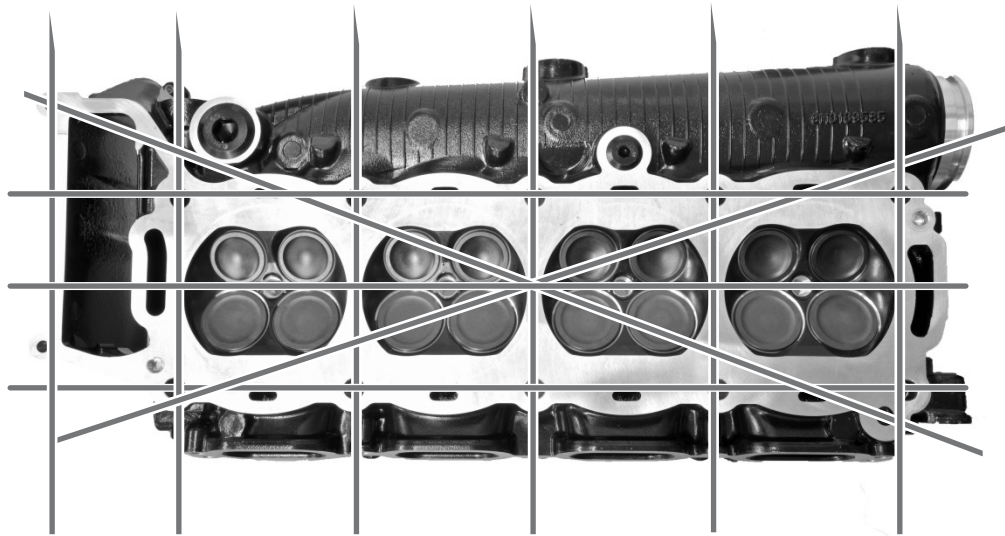



65195

Description	Specification
Head deck maximum warp	0.1 mm (0.0039 in.)

Valve Bucket Tappets

Bore Inside Diameter

Description	Specification
Intake bucket bore inside diameter	32.000–32.025 mm (1.2589–1.2608 in.)
Exhaust bucket bore inside diameter	32.005–32.025 mm (1.2600–1.2608 in.)

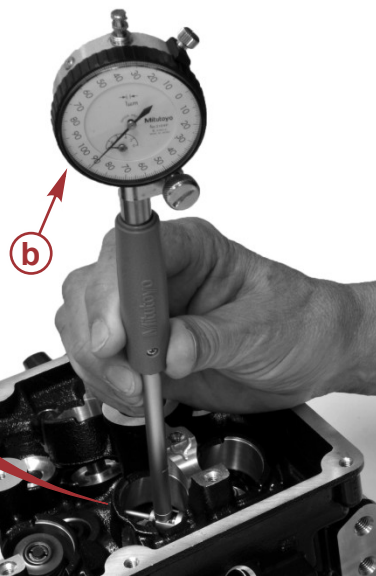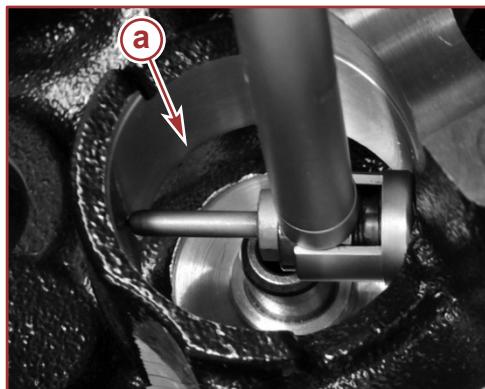

Checking bucket bore diameter

- a** - Bucket bore
- b** - Bore gauge

67535

Valve Bucket Tappet Outside Diameter

Description	Specification
Valve bucket outside diameter	31.964–31.980 mm (1.2584–1.2591 in.)



- a - Valve bucket tappet
- b - Digital micrometer


67538

Bucket Tappet to Bore Clearance

Description	Specification
Bucket to bore clearance	0.020–0.061 mm (0.0008–0.0024 in.)

Valves


1. Inspect the valves for damage or warpage. Replace the valves if necessary.
2. Measure the valve stem runout. Replace the valves if they are out of specification.

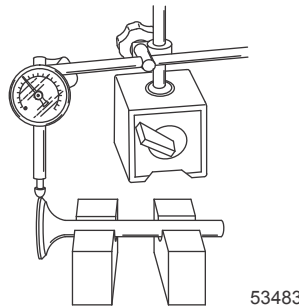

53483

Valve Stem Runout	
Service limit measured at valve face (maximum)	0.030 mm (0.0012 in.)

3. Measure the valve stem diameter. Replace the valves if they are out of specification.

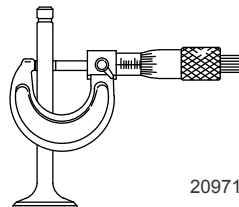


20971

Valve Stem Diameter	
Intake	5.4645–5.4805 mm (0.2151–0.2158 in.)
Exhaust	5.456–5.472 mm (0.2148–0.2154 in.)

Cylinder Head

- Measure the valve margin width and valve height. Replace the valve if it is out of specification.

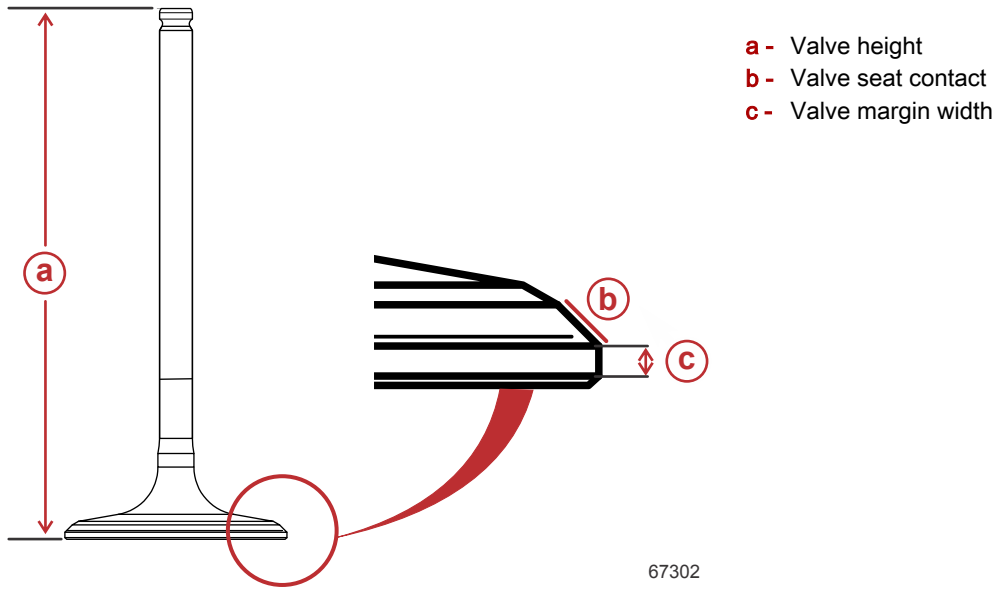


67302

Valve Margin Width	
Intake	0.875 mm (0.034 in.)
Exhaust	1.331 mm (0.052 in.)

Valve Height	
Intake	88.49 ± 0.25 mm (3.484 ± 0.0098 in.)
Exhaust	87.667 ± 0.25 mm (3.451 ± 0.0098 in.)


Valve Springs

- Using a valve spring tester, test the valve spring load at the installed height. Refer to the following table for height and load specifications.

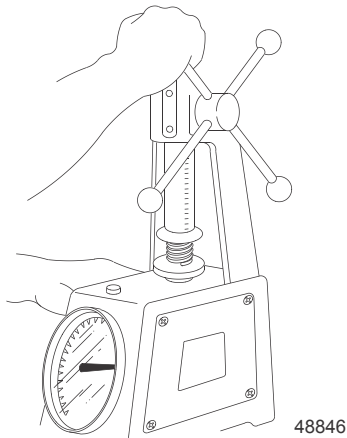

48846

Valve Spring Height	Length Specification
Uncompressed	46.1 mm (1.815 in.)

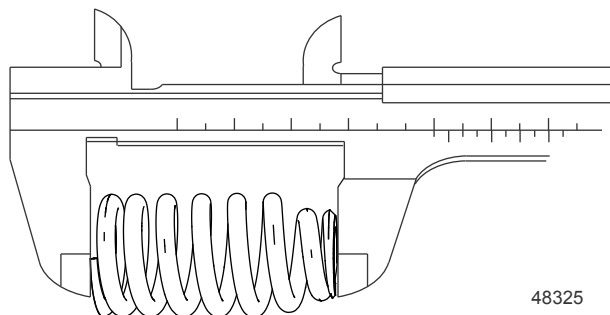


48325

Valve Spring Height	Spring Load Specification
Compressed to 33.66 mm (1.3252 in.)	157–173 Nm (35.295–38.892 lb-ft)
Compressed to 24.31 mm (0.9149 in.)	356–390 Nm (80.03–87.67 lb-ft)

2. Replace the valve springs if they are out of specification.

Valve Guides

Measure the valve guide bore with a valve guide bore gauge. If the valve guide wear is out of specification, replace the valve guide.

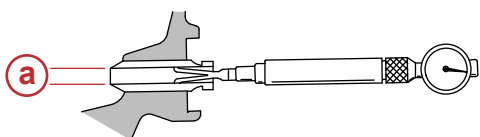

20975

a - Valve guide bore


Valve Guide Bore Inside Diameter	
Intake	5.500–5.512 mm (0.2165–0.2170 in.)
Exhaust	5.500–5.512 mm (0.2165–0.2170 in.)

Valve Guide Replacement

NOTE: Inexperienced personnel should not attempt to replace the valve guides.

Bronze sleeved guide bore liners are an acceptable service replacement as an alternative to valve guides.

IMPORTANT: Install valve guides using light oil lubrication and a seat and guide machine.

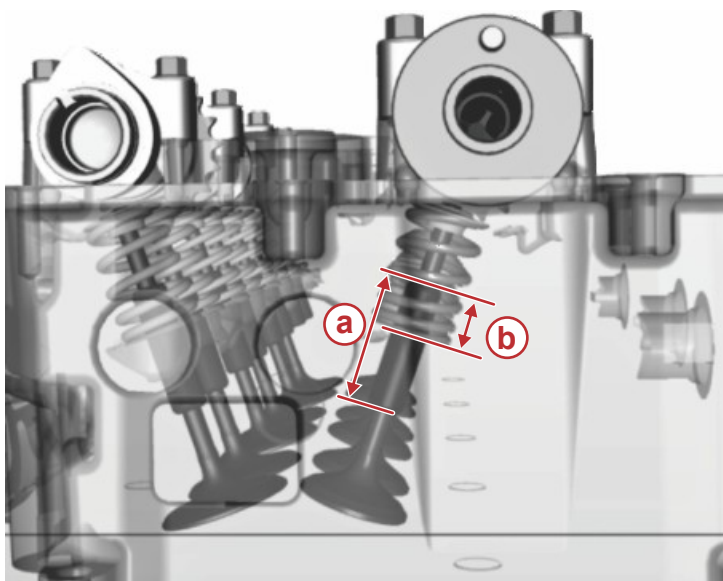

67475

Exhaust shown, intake is same dimension

- a - Overall guide length
- b - Valve guide height (dimension from spring seat to end of guide)

Cylinder Head

Valve Guide Height	
Intake (dimension from spring seat to end of guide)	14.5 mm (0.570 in.)
Exhaust (dimension from spring seat to end of guide)	14.5 mm (0.570 in.)

Valve Stem to Valve Guide Clearance	
Intake	0.0195–0.0475 mm (0.0008–0.0019 in.)
Exhaust	0.028–0.056 mm (0.0011–0.0022 in.)

Valve Seat Reconditioning

The cylinder head is machined to extremely close tolerances. The cylinder head and related components should only be repaired by a qualified technician with experience in servicing high-performance engines. A qualified machine shop with special industrial tools that is familiar with automotive engine machining techniques must be utilized if the cylinder head requires reconditioning or clearance correction repair. Damage to the cylinder head combustion area can alter the emissions output of the engine. In some cases it may be necessary to replace the cylinder head assembly if it cannot be repaired, or if repair costs exceed the cost of cylinder head replacement.


IMPORTANT: Valve seat angle specifications must be carefully observed when cutting valve seats. Modification of the combustion chamber area or flow characteristics of the engine will alter exhaust emissions and can effect the engine's performance.

Valve seat angles are referenced relative to the guide axis, not the face of the valve seat as is commonly used when specifying a service seat cutting tool. This is especially critical for an angle such as the main seat contact surface angle of 44° which would be 46° if referenced to the face of the valve seat.

NOTE: Follow all special equipment manufacturer's instructions.

1. Clean the carbon deposits from the combustion chambers and valve seats. Check the valve seats for pitting.
2. Minimal and light pitting should be cleaned up with 600 grit lapping compound.

IMPORTANT: The exhaust valve and seat should be replaced if the pitting cannot be cleaned with a minimal amount of lapping the valve to the seat. If the valve seat is replaced, the top cut of the valve seat must not go below or alter the factory machining of the combustion chamber.
3. Apply a thin, even layer of mechanic's bluing dye (Dykem®) onto the valve seat.
4. Insert the valve into the valve guide and lap the valve slowly on the valve seat.
5. Remove the valve and measure the valve seat contact pattern width.

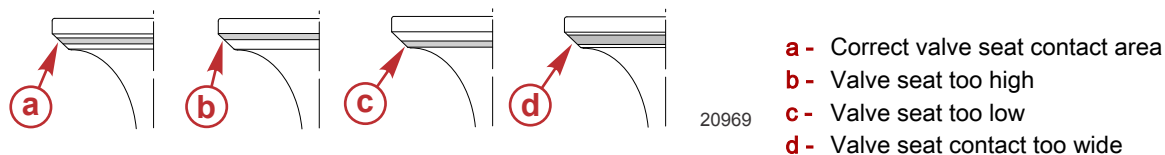

Valve Outside Diameter	
Intake	36.9–37.1 mm (1.4528–1.4606 in.)
Exhaust	30.9–31.1 mm (1.2165–1.2244 in.)

Valve Face Angle	
Intake	44.75°–45.25°
Exhaust	43.75°–44.25°

Valve Seat Angles	
Intake	30°, 44° ± 0.25°, 60°
Exhaust	35°, 44° ± 0.25°, 55°

Valve Seat Width (44°)	
Intake	1.0 ± 0.1 mm (0.039 ± 0.0039 in.)
Exhaust	1.2 ± 0.1 mm (0.047 ± 0.0039 in.)


IMPORTANT: After refacing the valve seat, or replacing the valve and valve guide, the valve seat and valve face should be lapped.

IMPORTANT: After reconditioning the valve seat, the valve stem protrusion must be checked.

Cylinder Head Reassembly

V8 Cylinder Head Plugs—Installation

1. Install new O-rings on all plugs, or install new plugs.
2. Install two 10 mm plugs into the bottom of the oil gallery.
3. Install three 10 mm plugs and three 21 mm special plugs into the back of the cylinder head.

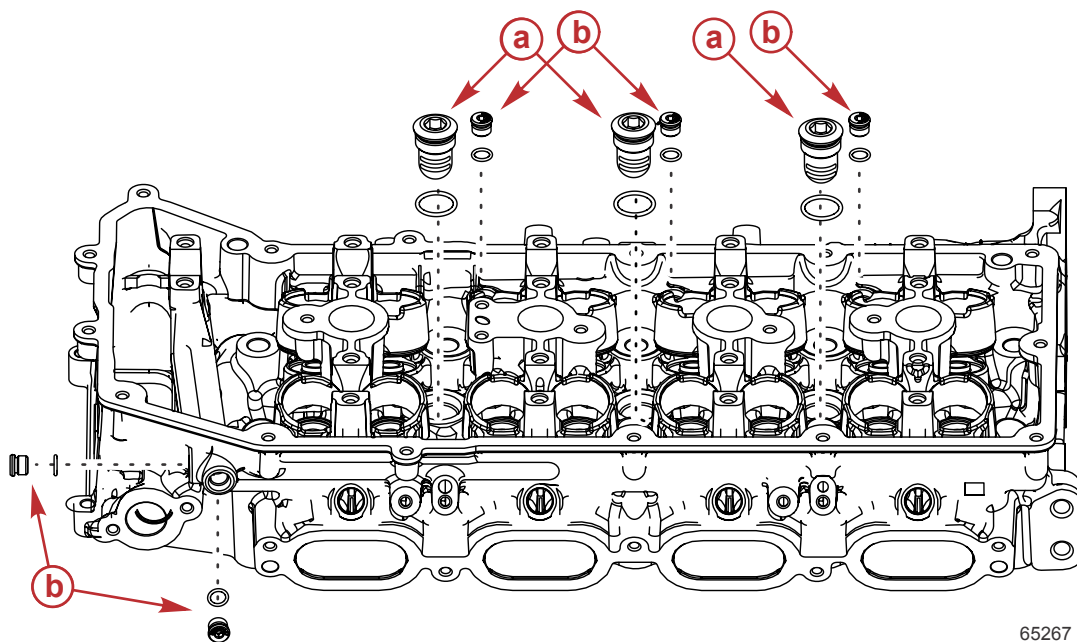


65267

Starboard cylinder head

- a - 21 mm special plug (3)
- b - 10 mm plug (5)

4. Install one 10 mm plug into the end of the oil gallery (port cylinder head only).
5. Install three 24 mm plugs into the exhaust water jacket.
6. Install the 18 mm and the 30 mm plug into the front of the cylinder head.

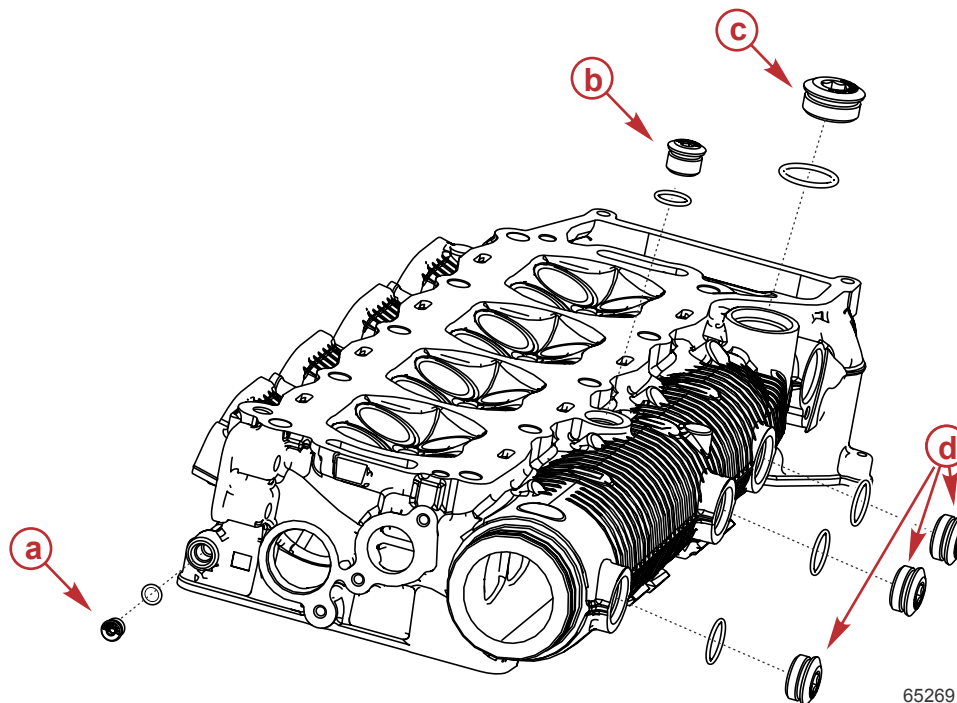

Port cylinder head

- a - 10 mm oil gallery plug (port cylinder head only)
- b - 18 mm plug
- c - 30 mm plug
- d - 24 mm plug (3)

65269

Cylinder Head


- Tighten all plugs to the specified torque.

Description	Nm	lb-in.	lb-ft
10 mm oil gallery plug	7	62	–
18 mm plug	22	–	16.2
21 mm plug	30	–	22.1
24 mm plug	55	–	40.6
30 mm plug	55	–	40.6


Valves

IMPORTANT: The reassembly procedure for the cylinder head must be strictly followed. Failure to follow the assembly procedure may damage the valves, camshaft, or cylinder head.



- Lubricate the valve guide seals with Torco® MPZ HP Engine Assembly Lube.

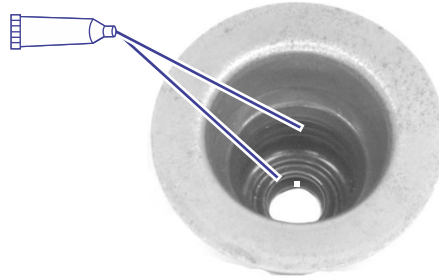

67467

Tube Ref No.	Description	Where Used	Part No.
	Torco® MPZ HP Engine Assembly Lube	Valve guide seals	Obtain Locally


- Insert the valve guide seal into a 17 mm deep well socket.
- Install the valve guide seal onto the valve guide. Lightly push the valve guide seal with the socket until it is seated on the cylinder head. Remove the socket.

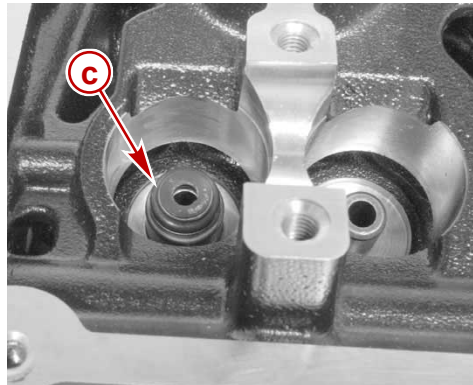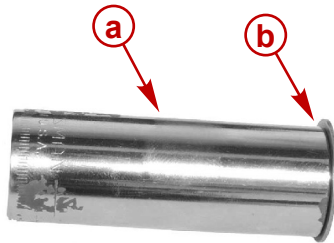

4832


- a - 17 mm deep well socket
- b - Valve guide seal
- c - Valve guide seal installed on valve guide

- Lubricate the valve stem with Torco® MPZ HP Engine Assembly Lube, and push the valve through the valve guide seal.

Tube Ref No.	Description	Where Used	Part No.
	Torco® MPZ HP Engine Assembly Lube	Valve stem	Obtain Locally

- Place the valve spring and valve spring retainer over the valve stem.
- Compress the valve spring with a valve spring compressor.


IMPORTANT: Use caution when compressing the valve spring. Do not damage the valve, valve spring retainer, or the cylinder head valve bucket tappet bore.

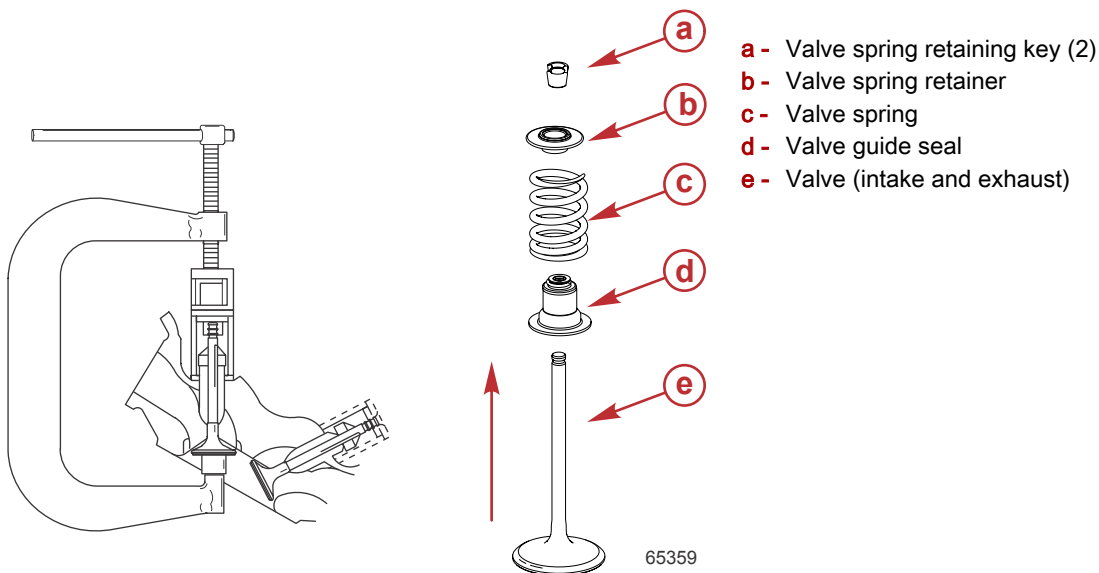


Valve Spring Compressor	91-809494A1
-------------------------	-------------

- Place each valve spring retaining key onto the end of a small screwdriver. A small amount of 2-4-C with PTFE applied to the end of the screwdriver will help the valve spring retaining keys to adhere to the screwdriver. Install each valve spring retaining key onto the valve stem.

IMPORTANT: Two valve spring retaining keys are required per valve.

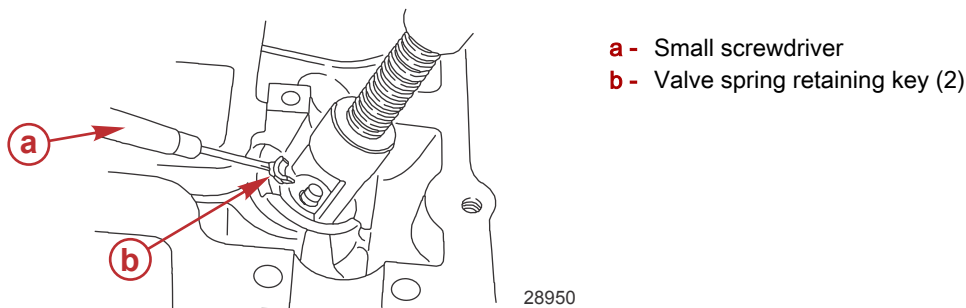

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	End of the screwdriver to help install the valve spring retaining key	92-802859A 1


- Release the valve spring compressor.
- Repeat steps 1–8 to install the remaining valves into the cylinder head.

Valve Bucket Tappets

NOTE: Refer to **Section 4A - Cylinder Block/Crankcase** for installation of the cylinder head. The cylinder head must be installed on the cylinder block before valve clearance measurements are taken, and adjustments are made.


Cylinder Head

Lubricate the valve bucket tappet outside diameter and either the valve tip or the valve tip contact pad with Lubriplate SPO 255. Install the valve bucket tappet in the same location it was removed from during disassembly.

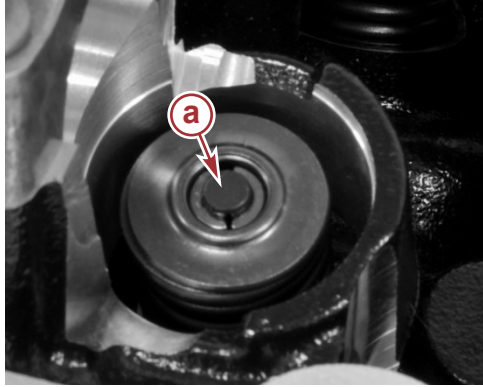

67511

- a - Valve tip
- b - Valve tip contact pad

Tube Ref No.	Description	Where Used	Part No.
 136	Lubriplate SPO 255	Valve bucket tappet outside diameter and valve tip contact pad, or valve tip	Obtain Locally

IMPORTANT: Valve lash clearance must be confirmed when valve and valve seat replacement or refacing operations are performed. Check valve lash clearance when replacing camshafts or cylinder heads. Use a 3 mm (0.118 in.) valve bucket tappet as a starting point when checking valve clearance and measurements.

Valve Clearance and Adjustments

Valve Clearance Measurement Steps

Valve Lash Clearance	
Intake	0.125–0.225 mm (0.005–0.009 in.)
Exhaust	0.300–0.400 mm (0.012–0.016 in.)

IMPORTANT: Do not remove the cylinder head from the cylinder block to check the valve lash. Powerhead removal is recommended when checking valve lash. Refer to Section 4A - Removing Powerhead Components and Powerhead Removal.

IMPORTANT: Accurate valve clearance measurements must be made on a cold engine only after the following assembly procedures are complete.



- If removed, the cylinder head must be installed on the cylinder block with head bolts tightened to the specified torque.
- All camshafts (4) must be fully installed, with the cam-to-cam chain and camshaft cap fasteners tightened to the specified torque.

Refer to **Section 4A** for cylinder head, and camshaft installation procedures.

IMPORTANT: The valve lash measurement must be made with the cam lobe facing 180° from the valve bucket tappet.

An offset feeler gauge works best for checking the valve lash measurement. A straight feeler gauge will contact the cylinder head. This contact with the cylinder head may be misleading when checking the valve lash measurement.

1. Insert the feeler gauge between the cam and the valve bucket tappet. A slight drag on the feeler gauge indicates that the feeler gauge measurement is accurate.

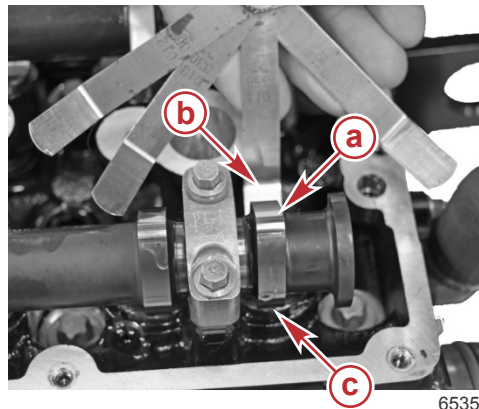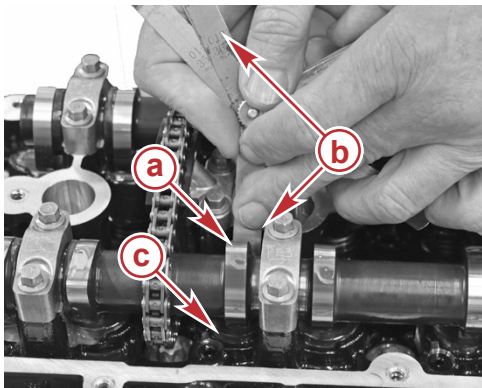

65352

- a - Cam lobe (facing 180° from the valve bucket tappet)
- b - Feeler gauge
- c - Valve bucket tappet

2. For each valve, record the feeler gauge valve lash measurement in the **Measurement Table**.
3. If any of the valve lash measurements are out of specification, remove the cam as described in **Cylinder Head Disassembly**.

Changing Valve Clearance

IMPORTANT: Prior to performing the following procedure, the cylinder head must be mated to the cylinder block and all fasteners must be tightened to specification.

Measurements must be taken with the powerhead at room temperature (cold engine).

Refer to **Section 4A - Cylinder Head Installation** for torque specifications and complete cylinder head installation instructions.

Valve Lash Clearance Specification	
Intake	0.125–0.225 mm (0.005–0.009 in.)
Exhaust	0.300–0.400 mm (0.012–0.016 in.)

1. If the valve lash clearance is out of specification, remove the valve bucket tappet and measure its height. Record your measurement in the **Measurement Table**.



4127

2. Add the valve bucket tappet height measurement and the feeler gauge valve lash measurement.
3. Subtract the specified valve lash clearance from the sum calculated in the previous step. This is the required valve bucket tappet height.

EXAMPLE

If the removed valve bucket tappet height is 3 mm (0.118 in.), the feeler gauge valve lash measurement is 0.297 mm (0.011 in.), and the specified valve lash clearance is 0.177 mm (0.007 in.), then the formula will appear as:

Metric measurement: $3 + 0.297 - 0.177 = 3.120$ mm. The new valve bucket tappet height is 3.120 mm.

English measurement: $0.118 + 0.011 - 0.007 = 0.122$ in. The new valve bucket tappet height is 0.122 in.

NOTE: Service bucket tappets are available from 3 mm–3.690 mm in 0.015 mm increments, round to the nearest 0.015 mm.

Cylinder Head

Measurement Table				
Valve	Valve Bucket Tappet Height (Measured)	Feeler Gauge Valve Lash Measurement	Specified Clearance	New Valve Bucket Tappet Height
Cyl #1 intake				
Cyl #1 intake				
Cyl #1 exhaust				
Cyl #1 exhaust				
Cyl #2 intake				
Cyl #2 intake				
Cyl #2 exhaust				
Cyl #2 exhaust				
Cyl #3 intake				
Cyl #3 intake				
Cyl #3 exhaust				
Cyl #3 exhaust				
Cyl #4 intake				
Cyl #4 intake				
Cyl #4 exhaust				
Cyl #4 exhaust				
Cyl #5 intake				
Cyl #5 intake				
Cyl #5 exhaust				
Cyl #5 exhaust				
Cyl #6 intake				
Cyl #6 intake				
Cyl #6 exhaust				
Cyl #6 exhaust				
Cyl #7 intake				
Cyl #7 intake				
Cyl #7 exhaust				
Cyl #7 exhaust				
Cyl #8 intake				
Cyl #8 intake				
Cyl #8 exhaust				
Cyl #8 exhaust				



Powerhead

Section 4C - Lubrication

Table of Contents


Lubrication System Components - V8.....	4C-4	Oil Pressure Sensor.....	4C-12
Oil Pump and Pickup Components.....	4C-6	Sensor Removal.....	4C-12
Oil Pump.....	4C-8	Sensor Installation.....	4C-12
Oil Pump Removal.....	4C-8	Oil Temperature Sensor.....	4C-13
Oil Pump Disassembly and Inspection.....	4C-8	Sensor Removal.....	4C-13
Oil Pump Assembly.....	4C-10	Sensor Installation.....	4C-13
Oil Pump Installation.....	4C-11		

Lubricants, Sealants, Adhesives

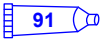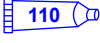Tube Ref No.	Description	Where Used	Part No.
 91	Engine Coupler Spline Grease	Oil pump seals and O-rings	8M0071842
 110	10W-30 4-Stroke Marine Engine Oil	Oil pump outer rotor	92-8M0078625
		Oil pump inner rotor	
		Oil pump	

Notes:

Lubrication System Components - V8

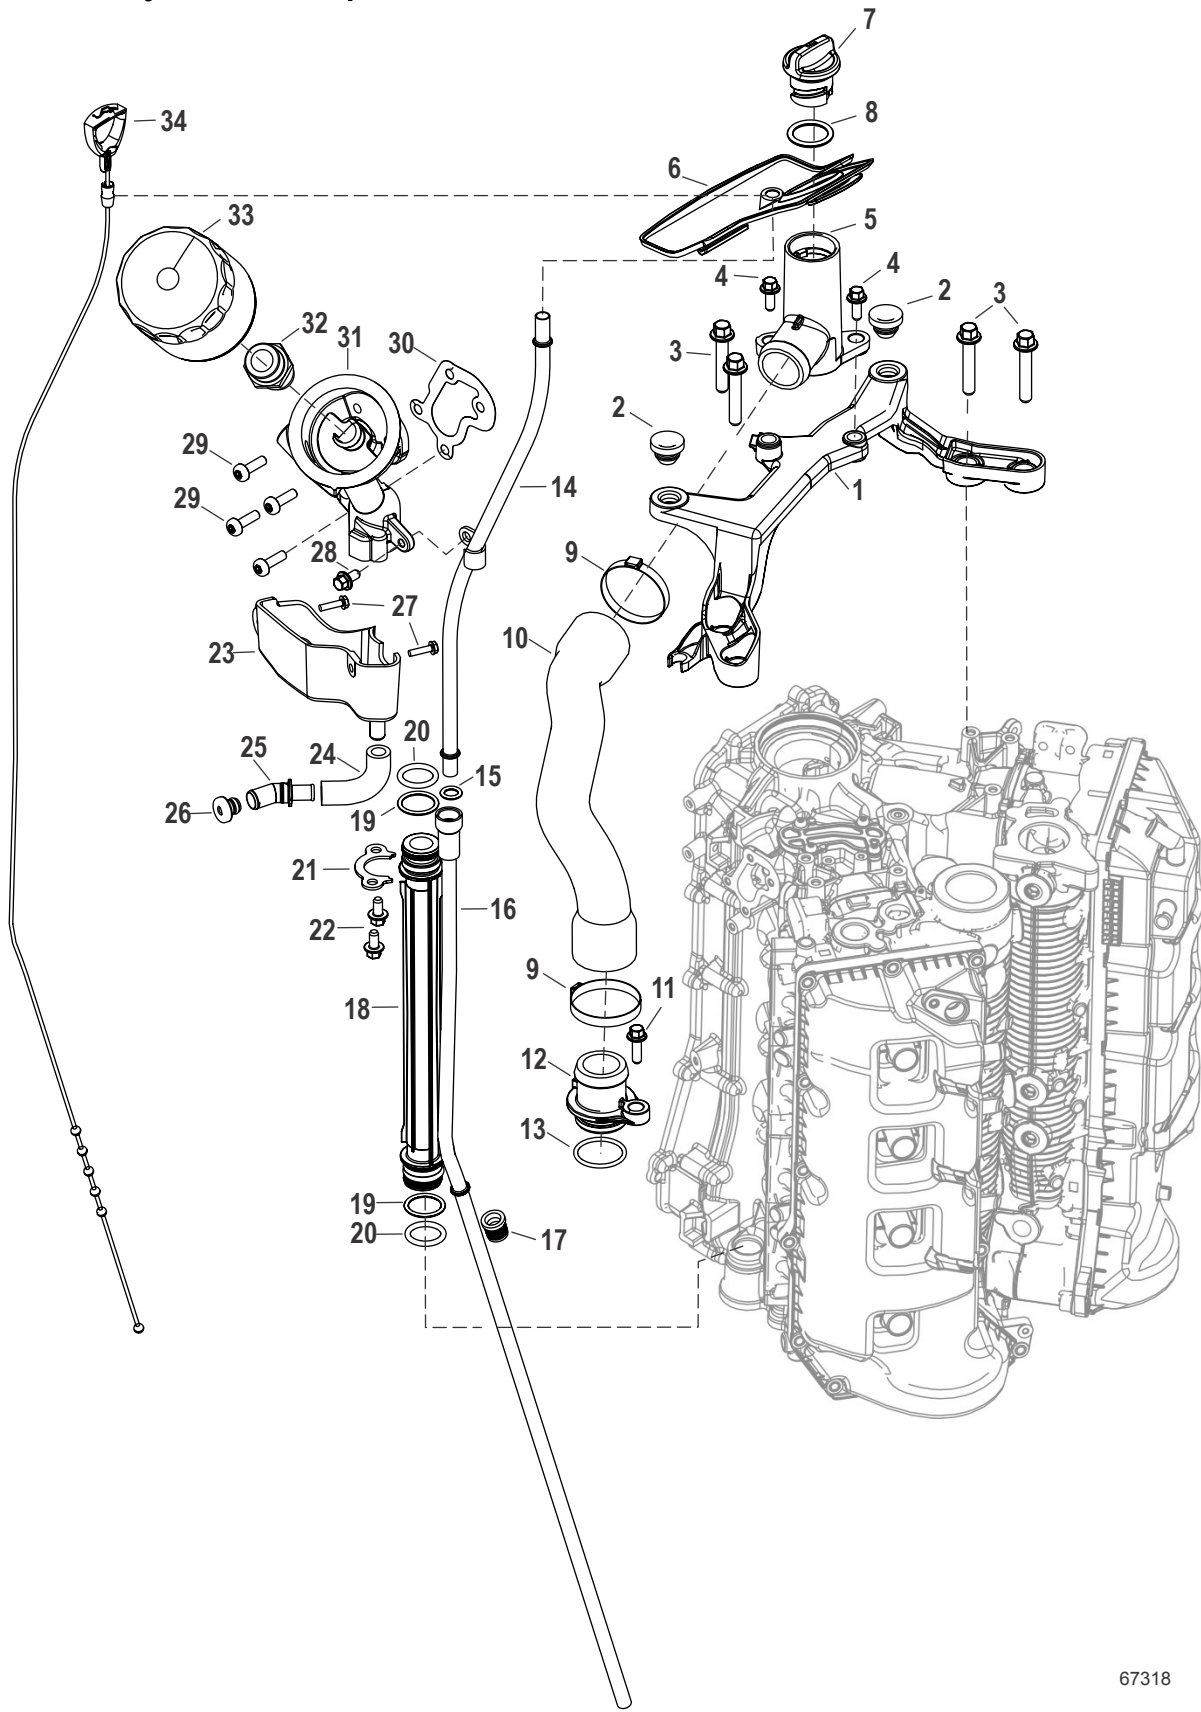


67318

Lubrication System Components - V8

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Bracket			
2	2	Grommet			
3	4	M8 x 45 hex flange head screw	30	–	22.1
4	2	M6 x 16 hex flange head screw	10	88.5	–
5	1	Oil fill neck			
6	1	Oil fill and dipstick grommet			
7	1	Oil fill cap			
8	1	O-ring			
9	2	45.5 mm Oetiker® clamp			
10	1	Oil fill hose			
11	1	M6 x 20 hex flange head screw	10	88.5	–
12	1	Oil fill spigot			
13	1	O-ring			
14	1	Upper dipstick tube			
15	1	O-ring			
16	1	Dipstick tube			
17	1	Grommet			
18	1	Oil filter tube			
19	2	O-ring			
20	2	O-ring			
21	1	Oil tube retention bracket			
22	2	M6 hex flange head screw	10	88.5	–
23	1	Oil drip tray			
24	1	Drip tray hose			
25	1	Drip tray hose fitting			
26	1	Drip tray plug			
27	2	M4 x 1.75 x 16 hex washer head screw	2	17.7	–
28	1	M6 x 12 hex flange head screw	10	88.5	–
29	4	M6 x 20 Torx® pan head screw	10	88.5	–
30	1	Oil filter adapter gasket			
31	1	Oil filter adapter			
32	1	Oil filter fitting	40	–	29.5
33	1	Oil filter			
34	1	Dipstick			

Oil Pump and Pickup Components

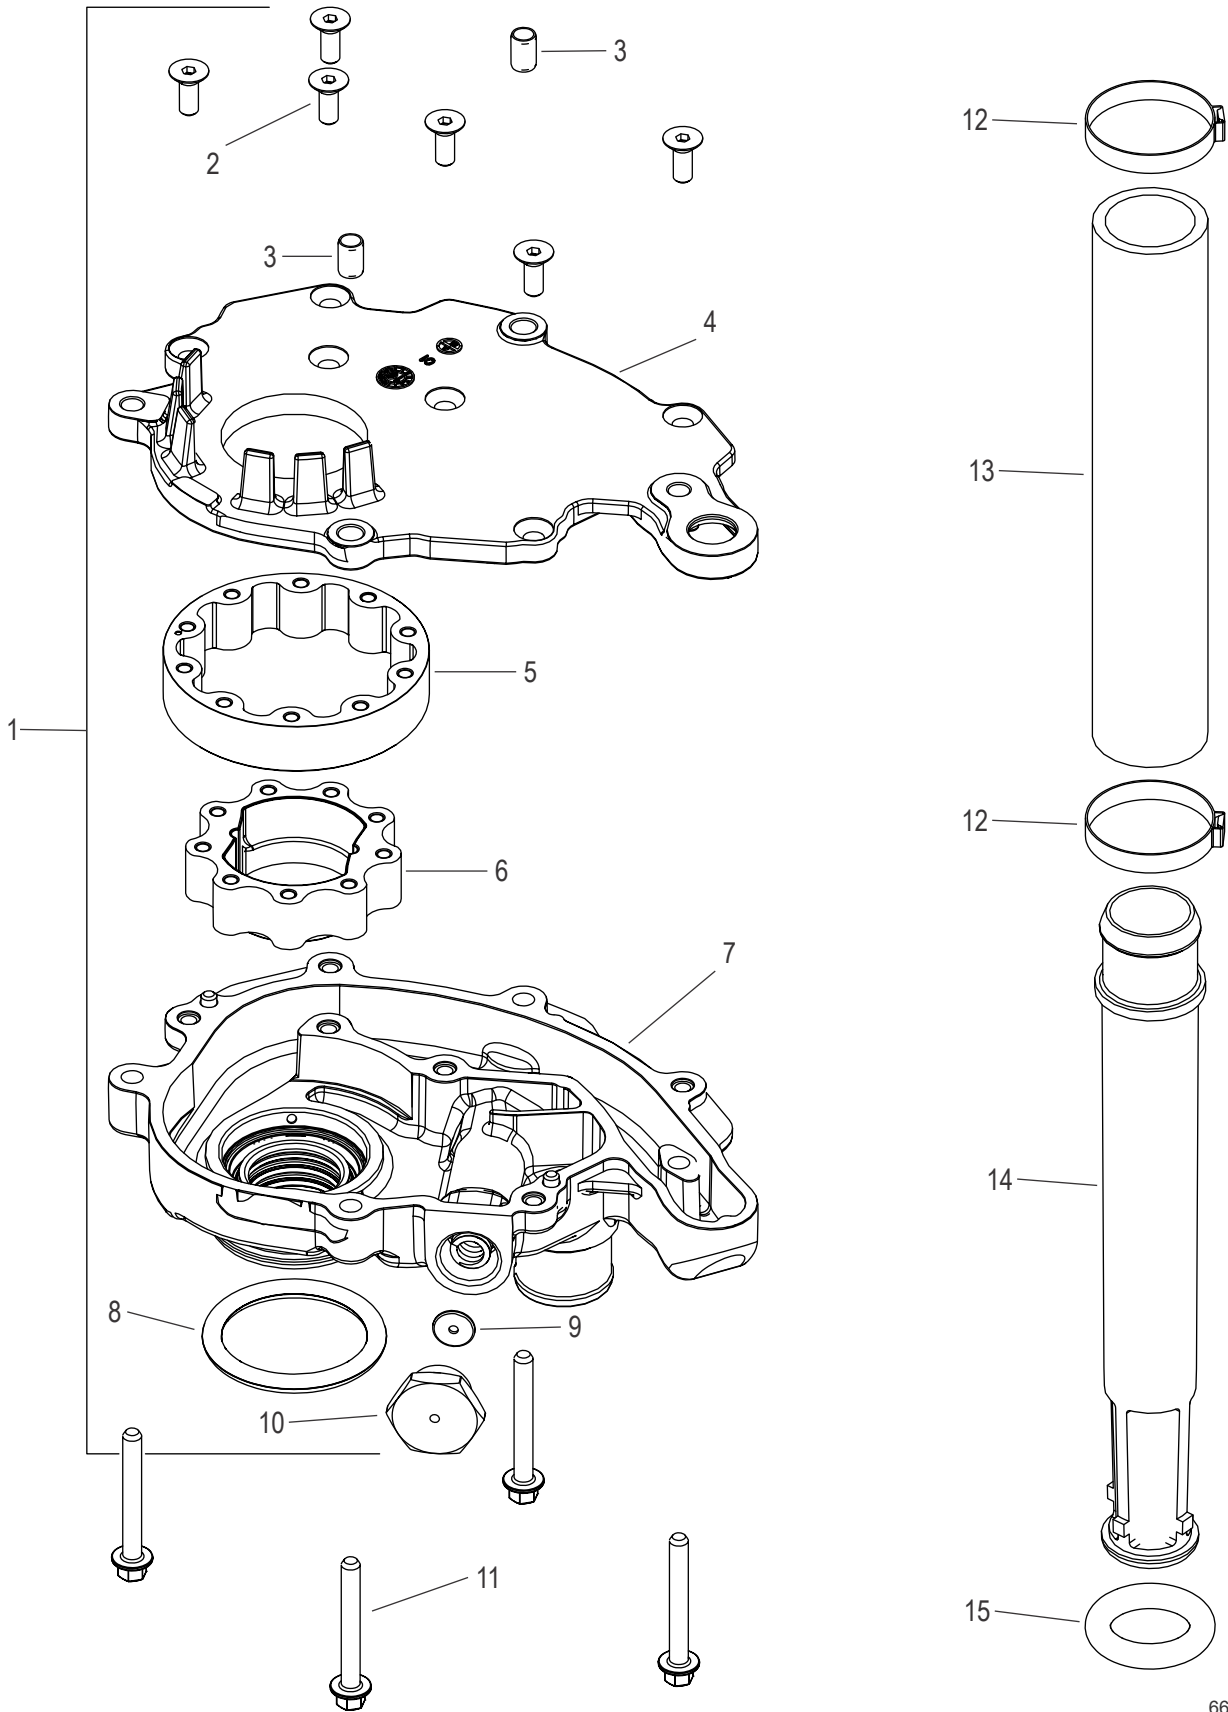

66931

Oil Pump and Pickup Components


Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Oil pump assembly			
2	6	M6 x 16 hex socket flat head screw	4.5	39.8	–
3	2	Dowel pin			
4	1	Oil pump cover			
5	1	Outer rotor			
6	1	Inner rotor			
7	1	Oil pump housing			
8	1	M6 x 46 O-ring			
9	1	Wear disc			
10	1	Plug			
11	4	M6 x 48 hex flange screw	10	88.5	–
12	2	39.6 mm Oetiker® clamp			
13	1	Oil pickup hose			
14	1	Oil pickup assembly			
15	1	M8 x 25 O-ring			

Oil Pump

Oil Pump Removal


NOTE: The powerhead must be removed to access the oil pump.

1. Remove the powerhead. Refer to **Section 4A - Cylinder Block/Crankcase**.
2. Remove the 39.6 mm Oetiker clamp to remove the oil pickup assembly from the oil pump.

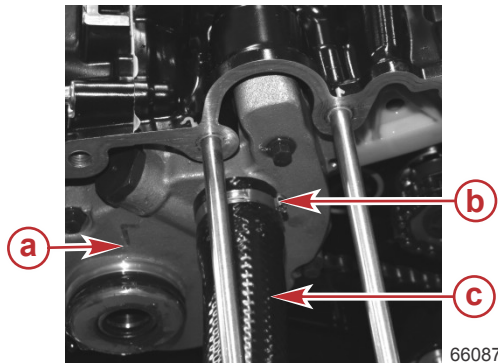

- a - Oil pump
- b - 39.6 mm Oetiker clamp
- c - Oil pickup assembly

3. Remove the four screws securing the oil pump to the powerhead. Remove the oil pump.

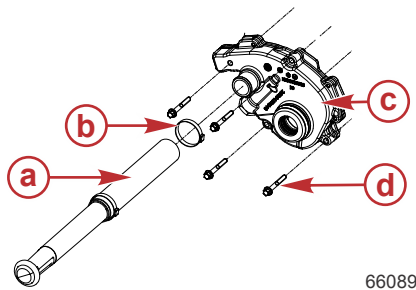


- a - Oil pickup assembly
- b - 39.6 mm Oetiker clamp
- c - Oil pump
- d - Screws (4)

Oil Pump Disassembly and Inspection

IMPORTANT: The oil pump assembly is a nonserviceable component. The oil pump assembly should only be disassembled, cleaned, and assembled in a clean environment knowing internal oil pump components are not replaceable or sold individually. When possible, the first choice should always be to replace the oil pump assembly.

Ensure all other engine components relating to maintaining proper oil pressure are inspected prior to the disassembly of the oil pump. The oil pump generally will not be the source of low oil pressure problems.


1. Remove and discard the six screws securing the oil pump cover to the oil pump housing.

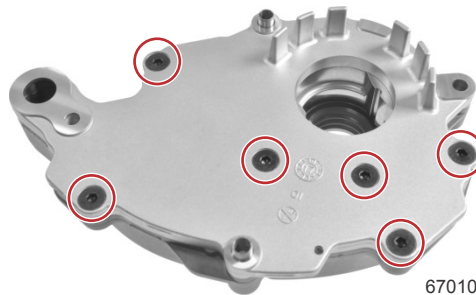

Oil pump cover screws (discard)

2. Remove the oil pump cover.

- Remove the outer rotor from the oil pump housing.

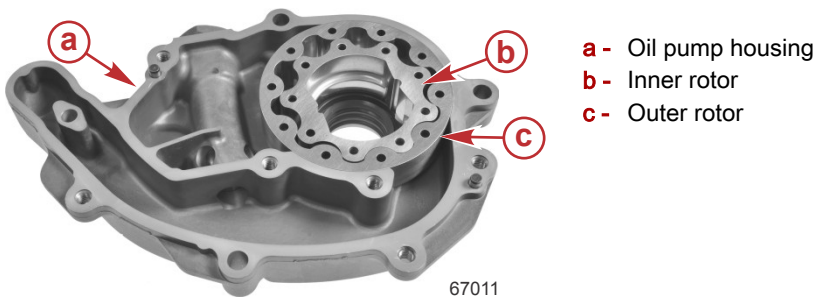


- Clean the outer rotor with solvent.
- Inspect the top and bottom surfaces, the outside diameter, and the inner diameter of the rotor for damage, scoring, or embedded particles. If any part of the outer rotor is damaged or has embedded particles, replace the oil pump.
NOTE: Minor wear is acceptable. For high hour engines, the entire oil pump should be replaced, regardless of condition.



- Inspect the outer rotor housing for scoring or embedded particles.
- Remove the inner rotor from the oil pump housing.
- Clean the inner rotor with a solvent.
- Inspect the inner rotor for damage. If the oil pump inner rotor shows signs of excessive wear or embedded particles, replace the oil pump.




- Inspect the area between the suction and pressure sides of the oil pump housing.
- Inspect the three seals around the driveshaft opening.

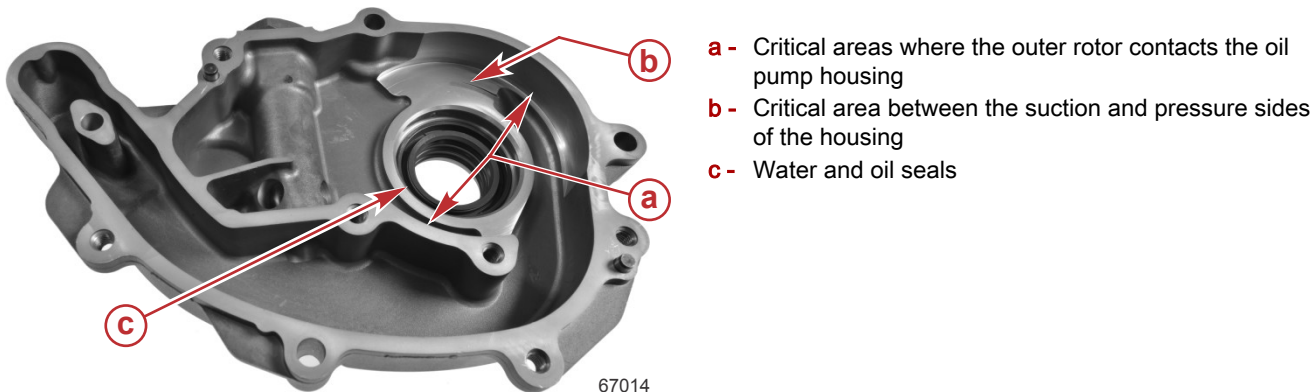


- Replace the oil pump assembly if damage or embedded particles are found.

Oil Pump Assembly


1. Lubricate the oil pump outer rotor with 10W-30 4-Stroke Marine Engine Oil.

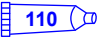Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Oil pump outer rotor	92-8M0078625

2. Install the outer rotor into the oil pump housing with the orientation mark facing toward the oil pump cover.
3. Lubricate the oil pump inner rotor with 10W-30 4-Stroke Marine Engine Oil.

Tube Ref No.	Description	Where Used	Part No.
 110	10W-30 4-Stroke Marine Engine Oil	Oil pump inner rotor	92-8M0078625


4. Install the inner rotor with the lip facing toward the oil pump cover (larger bore toward the cover).

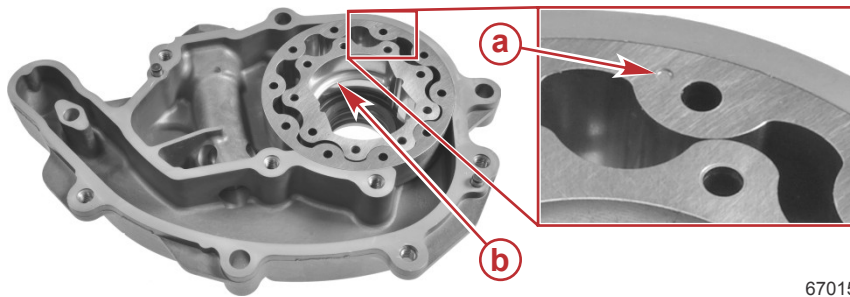

a - Orientation mark
b - Lip on inner rotor

67015

5. Install the oil pump cover assembly onto the oil pump housing.
6. Attach the cover using six new M6 x 16 hex socket flat head screws. Tighten the screws to the specified torque, in the specified sequence.

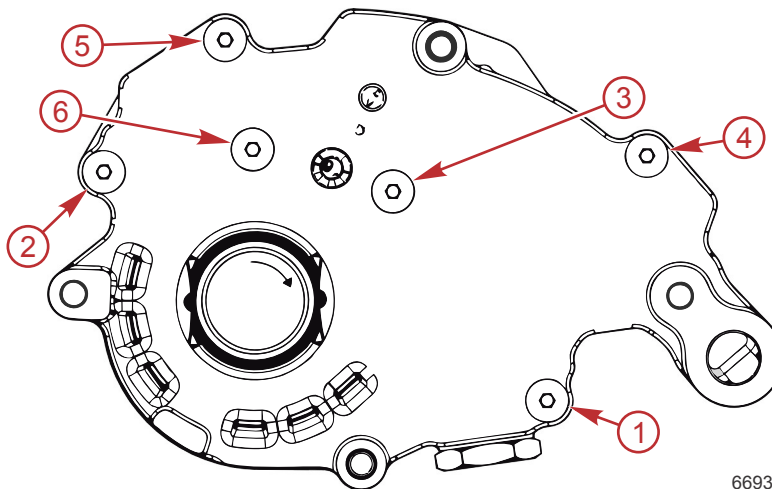

66937

Oil pump cover screw torque sequence

Description	Nm	lb-in.	lb-ft
M6 x 16 hex socket flat head screw	4.5	39.8	-

- Install a new O-ring onto the oil pump assembly.



Oil Pump Installation

- Prime the oil pump with approximately 88 mL (3 fl oz) 10W-30 4-Stroke Marine Engine Oil.

Tube Ref No.	Description	Where Used	Part No.
110	10W-30 4-Stroke Marine Engine Oil	Oil pump	92-8M0078625


- Lubricate the oil pump seals and O-rings with Engine Coupler Spline Grease.

Tube Ref No.	Description	Where Used	Part No.
91	Engine Coupler Spline Grease	Oil pump seals and O-rings	8M0071842

- Slide a 39.6 mm Oetiker® clamp onto the oil pickup assembly, and install the assembly onto the oil pump.
- Position the clamp so that it covers the white mark on the oil pickup hose and the ear is aligned with the screw by the oil output, as shown. Install the oil pump and tighten the four M6 x 48 hex flange screws to the specified torque.


IMPORTANT: The oil pickup hose must be pushed all the way onto the oil pump so the end of the hose contacts the oil pump housing.

The Oetiker clamps must be installed so that the ears of the clamps are positioned as shown. Assembly interference and catastrophic engine damage can occur if the clamps are not installed correctly.

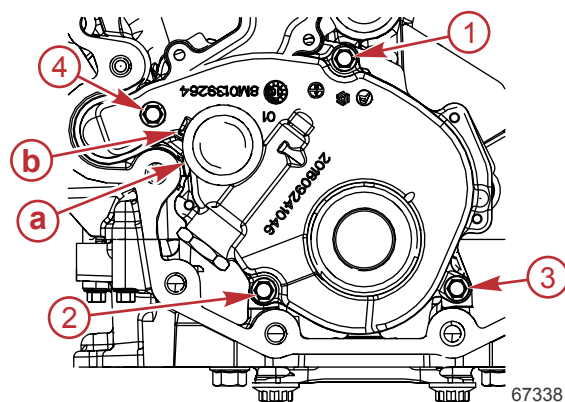

Oil pump fastener torque sequence

- a** - Oil pickup assembly
- b** - Ears on Oetiker clamps (aligned with screw 4)

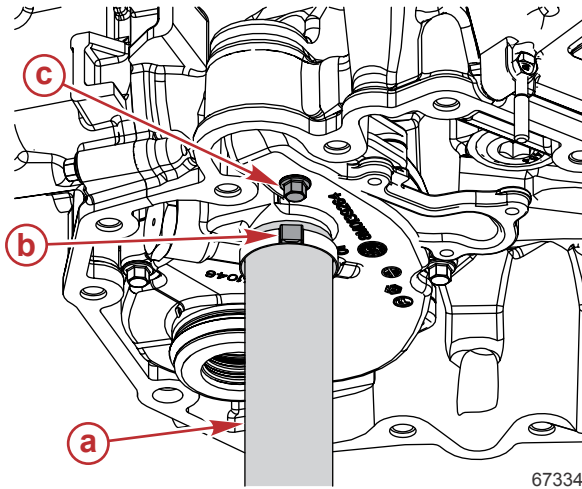


- a - Oil pickup assembly
- b - Orientation of ear on Oetiker clamp, aligned with item C
- c - Fastener on oil pump, at the outlet

Description	Nm	lb-in.	lb-ft
M6 x 48 hex flange screw	10	88.5	-

Oil Pressure Sensor

The oil pressure sensor is located next to the oil filter, near the top of the port side of the engine.

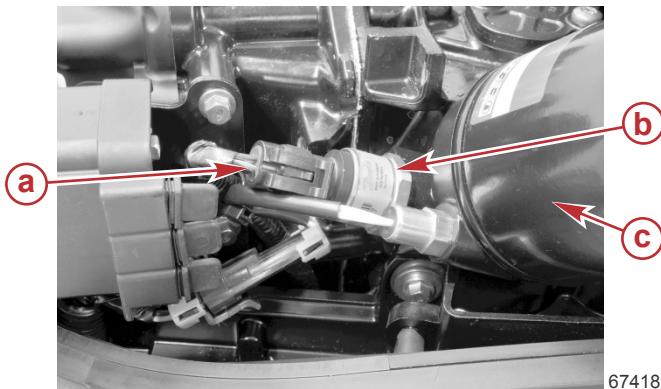

- a - Oil pressure sensor connector on the engine harness
- b - Oil pressure sensor
- c - Oil filter

Sensor Removal

1. Disconnect the engine harness from the sensor.
2. Remove the sensor from the engine.

Sensor Installation


1. Ensure that the O-ring is in good condition and is installed on the sensor.
2. Install the oil pressure sensor into the engine.
3. Tighten the sensor to the specified torque.

Description	Nm	lb-in.	lb-ft
Oil pressure sensor	15	132.8	-

4. Connect the engine harness to the sensor.

Oil Temperature Sensor

The oil temperature sensor is located next to the oil filter, near the top of the port side of the engine.

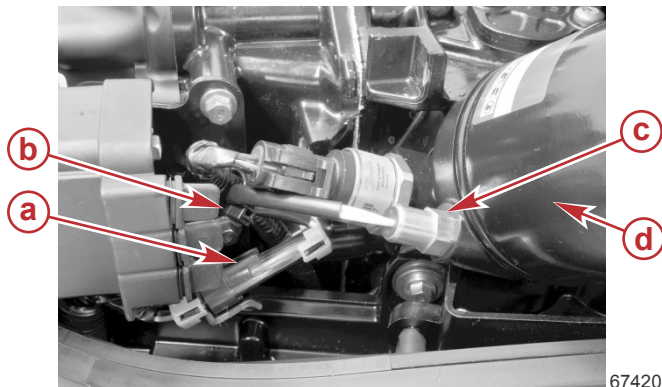

- a** - Oil temperature sensor connection to engine harness
- b** - Cable tie
- c** - Oil temperature sensor
- d** - Oil filter

67420

Sensor Removal

1. Cut the cable tie that secures the sensor harness to the engine harness.
2. Disconnect the sensor harness from the engine harness.
3. Remove the sensor from the engine.

Sensor Installation

1. Ensure that the O-ring is in good condition and is installed on the sensor.
2. Install the oil temperature sensor into the engine.
3. Tighten the sensor to the specified torque.

Description	Nm	lb-in.	lb-ft
Oil temperature sensor	15	132.8	-

4. Connect the sensor harness to the engine harness.
5. Secure the sensor harness to the engine harness with a cable tie.

Notes:

Powerhead

Section 4D - Cooling

Table of Contents

Cooling System Specifications.....	4D-2	Sensor Removal.....	4D-8
Additional Cooling System Information.....	4D-2	Sensor Installation.....	4D-8
Cooling System Components.....	4D-4	Engine Coolant Temperature Sensor.....	4D-8
Thermostat Assembly.....	4D-6	Sensor Removal.....	4D-8
Thermostat Assembly Removal.....	4D-6	Sensor Installation.....	4D-9
Thermostat Cleaning and Inspection.....	4D-6	Exhaust Gas Temperature (EGT) Sensor.....	4D-9
Thermostat Assembly Installation.....	4D-7	Sensor Removal.....	4D-9
Block Water Pressure Sensor.....	4D-8	Sensor Installation.....	4D-10

**4
D**

Cooling System Specifications

Description		Specification
Cooling system		Water cooled, thermostat control
Water pressure	At 600 RPM (idle)	10–20 kPa (1.5–2.9 psi)
	At 6000 RPM (WOT)	60–260 kPa (8.7–37.7 psi)
Thermostat	Valve stroke (minimum) at full open temperature	10.0 mm (0.39 in.)
	Start to open temperature	57–61 °C (134.6–141.8 °F)
	Full open temperature	77 °C (170.6 °F)


Additional Cooling System Information

This section covers the replacement of cooling components located on the powerhead. Additional cooling system information can be found in other sections of this manual.

- For exhaust water strainer inspection details, refer to **Section 1B - Maintenance**.
- For information on the cooling components located in the midsection, such as the sprayer assembly, refer to **Section 5A - Pedestal/Mount Cradle and Driveshaft Housing**.
- For cooling system flow diagrams, refer to **Section 8A - Color Diagrams**.

Notes:

Cooling System Components

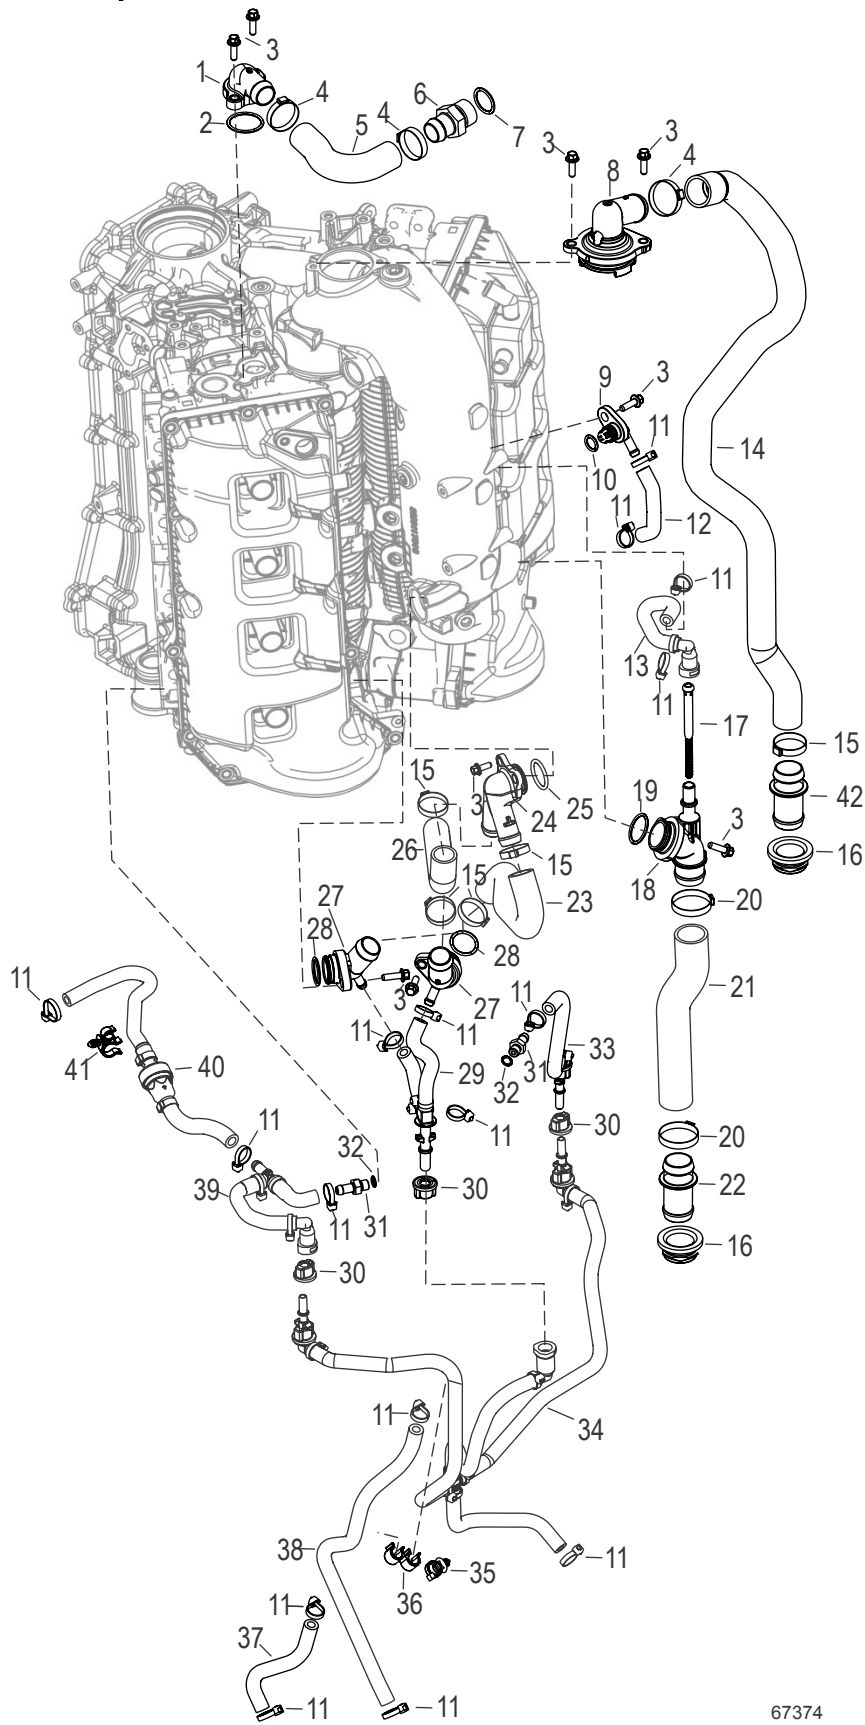

67374


Cooling System Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Fitting			
2	1	O-ring			
3	9	M6 x 20 screw	10	88.5	–
4	3	Clamp			
5	1	Hose			
6	1	Barbed fitting			
7	1	O-ring			
8	1	Thermostat			
9	1	Strainer fitting			
10	1	O-ring			
11	16	Cable tie			
12	1	Hose			
13	1	Hose			
14	1	Thermostat outlet hose			
15	5	Clamp			
16	2	Grommet			
17	1	Water strainer			
18	1	Fitting			
19	1	O-ring			
20	2	38.1 mm Oetiker® clamp			
21	1	Hose			
22	1	Fitting			
23	1	Hose			
24	1	Fitting			
25	1	O-ring			
26	1	Hose			
27	2	Fitting			
28	2	O-ring			
29	1	Hose assembly			
30	3	Grommet			
31	2	Barbed fitting			
32	2	O-ring			
33	1	Starboard water outlet hose assembly			
34	1	Hose assembly			
35	1	Cable tie clip			
36	1	Clip			
37	1	Hose			
38	1	Hose			
39	1	Port water outlet hose assembly			
40	1	Hose assembly			
41	1	Clip			
42	1	Fitting			

Thermostat Assembly

Thermostat Assembly Removal

1. Remove the two M6 x 20 screws securing the thermostat assembly to the top of the exhaust tube.
2. If the thermostat assembly is being replaced, remove the Oetiker® clamp to disconnect the thermostat outlet hose from the thermostat assembly.
3. Remove the thermostat assembly from the exhaust tube.

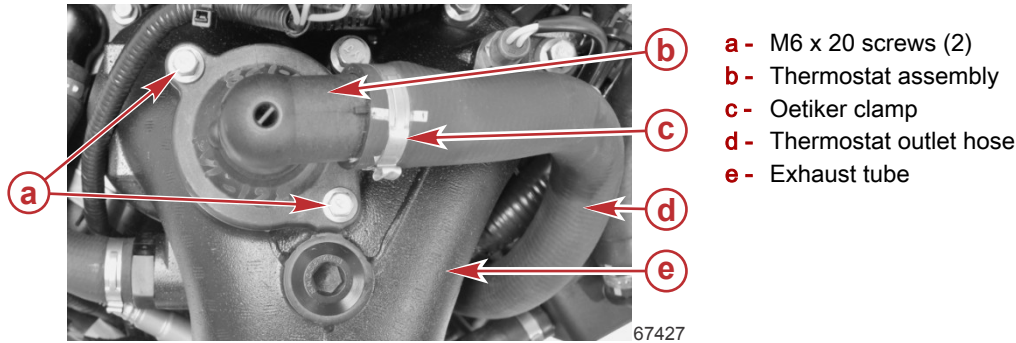


4. Inspect the O-ring. If the O-ring is in poor condition, replace the thermostat assembly.
5. Clean any sealant or debris from the sealing surfaces on the thermostat assembly and the exhaust tube.


Thermostat Cleaning and Inspection

IMPORTANT: The thermostat assembly may require cleaning if debris has entered the cooling system.

1. Push down on the thermostat retainer to disengage the thermostat retainer.
2. Turn the thermostat retainer to unlock it from the thermostat housing.

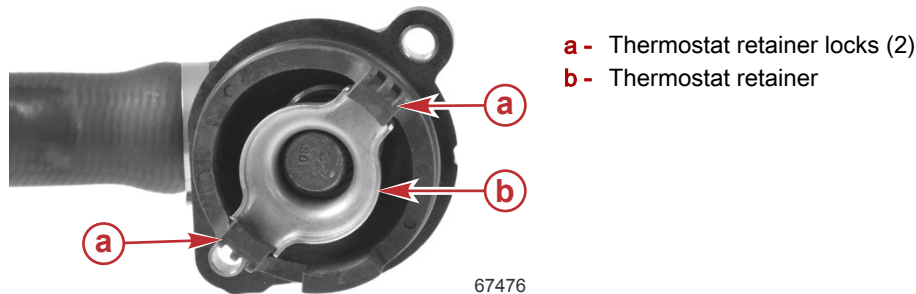


3. Remove the thermostat, thermostat spring, and thermostat retainer from the thermostat housing.

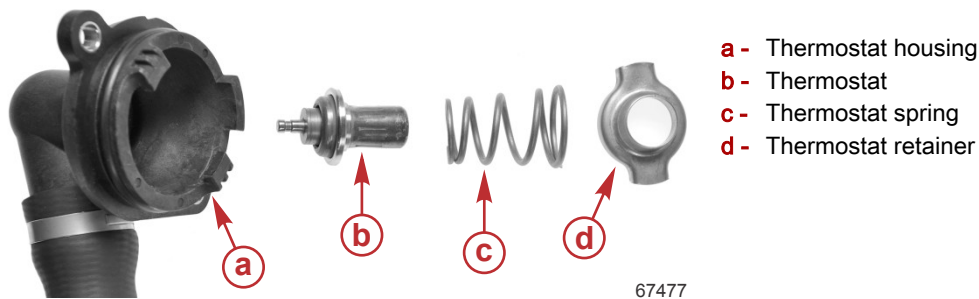


4. Inspect the thermostat for damage or corrosion, and test the thermostat if it is being reinstalled. If any components are damaged or if the thermostat fails testing, replace the entire assembly.


5. Install the thermostat into the thermostat housing.

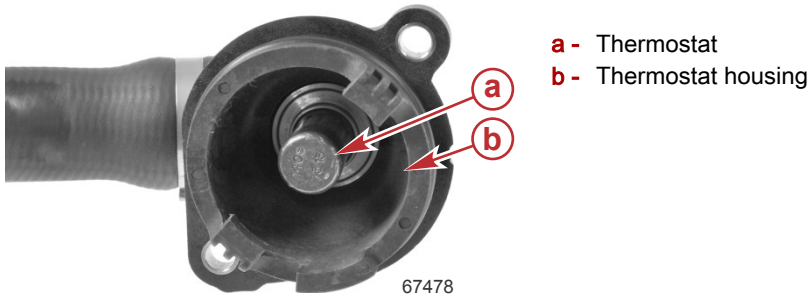

6. Insert the smaller end of the spring into the thermostat housing, and install the thermostat spring onto the thermostat.

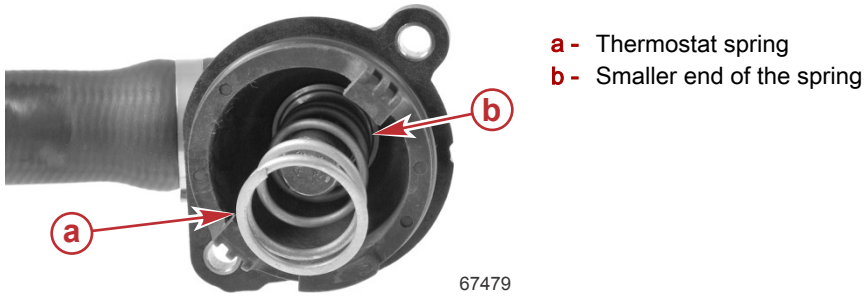


7. Install the thermostat retainer onto the thermostat spring.
8. Push down on the thermostat retainer, and turn it to lock it into the thermostat housing.

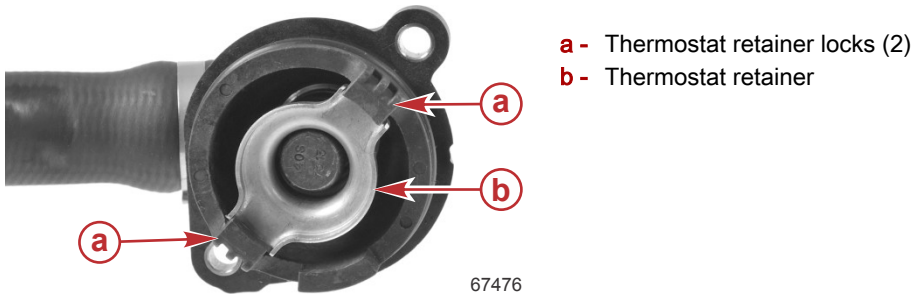

Thermostat Assembly Installation

1. Ensure that the O-ring is in good condition and is in place on the thermostat assembly.

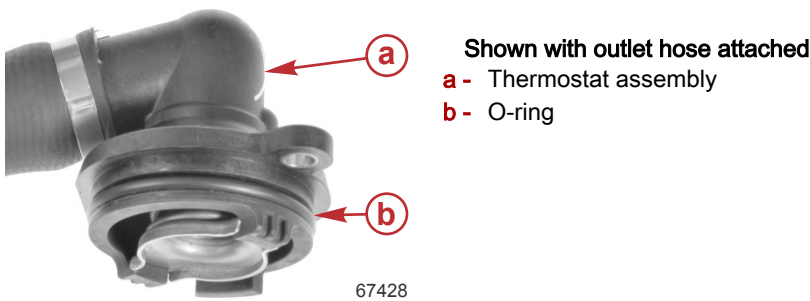


2. Install the thermostat assembly onto the exhaust tube. Tighten the two M6 x 20 screws to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 x 20 screw	10	88.5	-

Cooling

- If previously removed, secure the thermostat outlet hose to the thermostat assembly, using a 34.6 mm Oetiker® clamp.

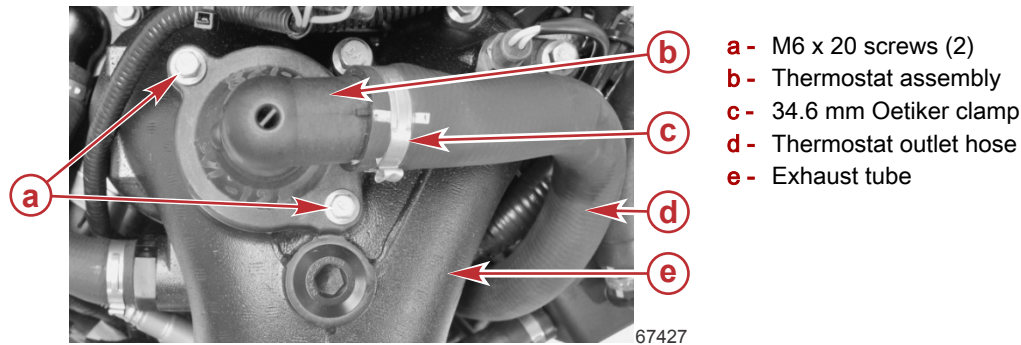


Block Water Pressure Sensor

NOTE: Not all models are equipped with a block water pressure sensor. Some models have a Legris fitting installed in its place, for use with an analog pressure gauge.

The block water pressure sensor, if equipped, is located at the rear of the engine, near the top of the exhaust tube.

Sensor Removal

- Cut the cable tie from the sensor's engine harness connector.
- Disconnect the engine harness from the sensor.
- Remove the sensor from the engine block.

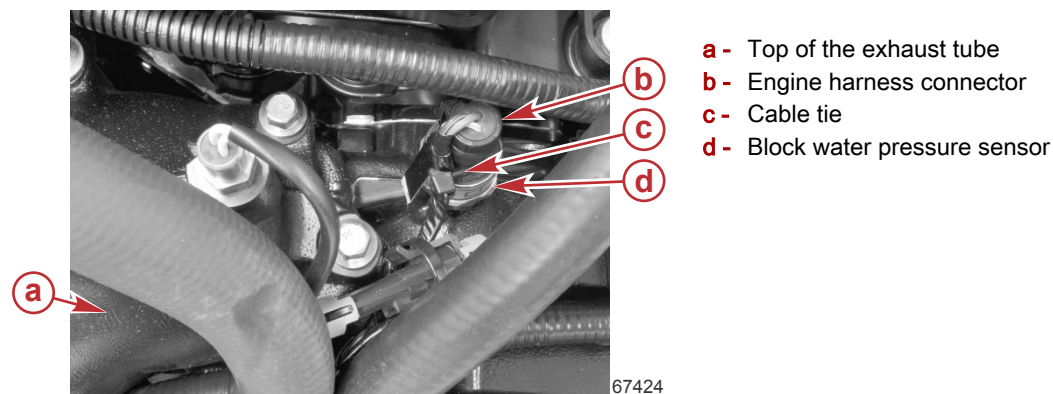

Sensor Installation

- Ensure that the O-ring is in good condition and is installed on the sensor.
- Install the block water pressure sensor into the engine block.
- Tighten the sensor to the specified torque.

Description	Nm	lb-in.	lb-ft
Block water pressure sensor	15	132.8	-

- Connect the engine harness to the sensor.
- Secure the connection with a cable tie.


Engine Coolant Temperature Sensor

The engine coolant temperature sensor is located in the top of the exhaust tube, at the rear of the engine.

Sensor Removal

- Cut the cable tie that secures the sensor harness connector to the engine harness.
- Disconnect the sensor harness from the engine harness.

- Remove the sensor from the exhaust tube.

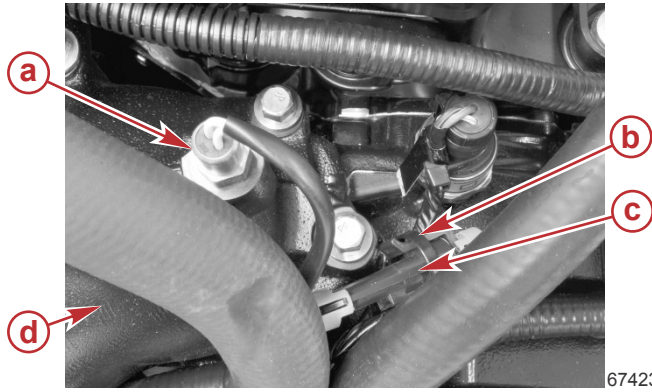

- a** - Engine coolant temperature sensor
- b** - Cable tie
- c** - Sensor harness connector
- d** - Top of the exhaust tube

Sensor Installation

- Ensure that the O-ring is in good condition and is installed on the sensor.
- Install the engine coolant temperature sensor into the exhaust tube.
- Tighten the sensor to the specified torque.

Description	Nm	lb-in.	lb-ft
Engine coolant temperature sensor	15	132.8	-


- Connect the sensor harness to the engine harness.
- Secure the sensor harness connector to the engine harness with a cable tie.

Exhaust Gas Temperature (EGT) Sensor

The exhaust gas temperature (EGT) sensor is located in the exhaust tube, just below the electrical panel, as shown in the following procedures.

Sensor Removal


- Remove the engine cowls. Refer to **Section 5C - Upper and Lower Cowls**.
- Remove the electrical panel cover.
 - On V8 models, pull the top aft until the pins are clear of the grommets, and then lift up.

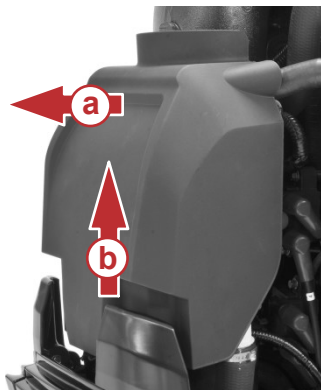

- V8 models**
- a** - Pull aft
 - b** - Lift up

- On V6 models, pull the panel aft.

- Cut the cable tie that secures the electrical connector bundle below the electrical plate, locate the EGT sensor harness, and disconnect it from the engine harness.

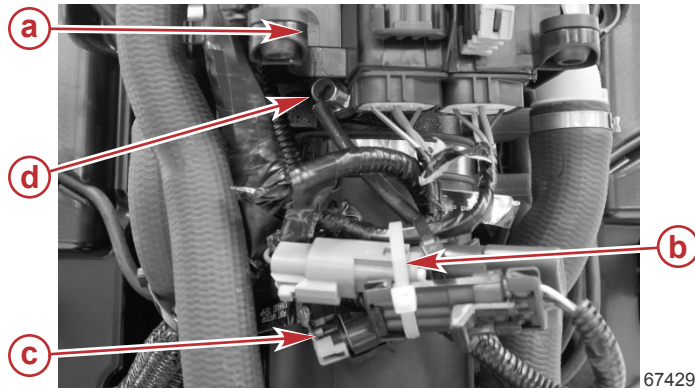

- a** - Electrical panel
- b** - Cable tie
- c** - EGT sensor connector (location varies)
- d** - EGT sensor


- Remove the top two T30 Torx screws and washers securing the electrical plate to the exhaust tube.
- Slide the electrical plate upward to gain additional access to the EGT sensor.
- Remove the EGT sensor from the exhaust tube.

Sensor Installation

- Ensure that the O-ring is in good condition and is present on the sensor.
- Install the EGT sensor into the exhaust tube.
- Tighten the sensor to the specified torque.

Description	Nm	lb-in.	lb-ft
EGT sensor	15	132.8	–

- Connect the sensor harness to the engine harness.
- Secure the electrical connector bundle with a cable tie.

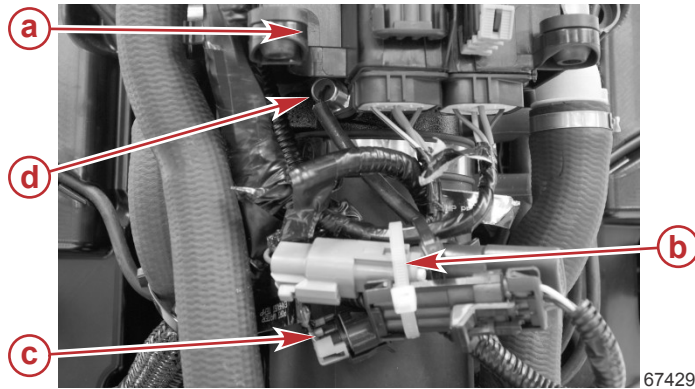

- a** - Electrical panel
- b** - Cable tie to secure electrical connector bundle
- c** - EGT sensor connector (location varies)
- d** - EGT sensor

- Slide the electrical panel into position, and secure it to the exhaust tube with two T30 Torx screws and washers. Tighten the screws to the specified torque.

Description	Nm	lb-in.	lb-ft
T30 Torx screws	10	88.5	–

Midsection

Section 5A - Pedestal/Mount Cradle and Driveshaft Housing



Table of Contents

AMS Pedestal/Mount Cradle and Driveshaft Housing		Fuel Supply Module (FSM) Removal.....	5A-22
Specifications.....	5A-2	Fuel Supply Module (FSM) Installation.....	5A-25
AMS Cradle and Engine Mount Components.....	5A-4	Advanced Midsection (AMS) Disassembly.....	5A-28
AMS Tilt Lock Components.....	5A-6	Preparation for AMS Disassembly.....	5A-28
Pedestal/Power Trim/Steering Cylinder Components.....	5A-8	Driveshaft Housing Removal.....	5A-28
Chap Plate Components.....	5A-12	Driveshaft Housing Disassembly.....	5A-33
Driveshaft Housing Components.....	5A-14	Mount Cradle Disassembly.....	5A-37
Exhaust Tube Components.....	5A-16	Pedestal Disassembly.....	5A-41
Engine Mounts.....	5A-18	Advanced Midsection (AMS) Assembly.....	5A-43
Preparation.....	5A-18	Pedestal Assembly.....	5A-43
Mount Removal.....	5A-18	Mount Cradle Assembly.....	5A-47
Mount Installation.....	5A-18	Exhaust Tube Assembly.....	5A-51
Return to Service.....	5A-19	Chap Plate Assembly.....	5A-53
Idle Relief Muffler.....	5A-19	Mount Installation.....	5A-57
Removal.....	5A-19	Fuel Supply Module and Shift Actuator Installation..	5A-61
Installation.....	5A-20	AMS Final Assembly.....	5A-66
Fuel Supply Module (FSM).....	5A-22		



AMS Pedestal/Mount Cradle and Driveshaft Housing Specifications



Description		Specification
Recommended transom height	L shaft	508 mm (20 in.)
	XL shaft	635 mm (25 in.)
	XXL shaft	762 mm (30 in.)
Steering pivot range		60°
Full tilt up angle		67°
Trim angle (on 14° boat transom)		-6° to +14°
Allowable transom thickness	Minimum	44.5 mm (1.75 in.)
	Maximum	70 mm (2.75 in.)

Lubricants, Sealants, Adhesives


Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 16 hex flange head screws	92-809821
		M6 x 25 hex flange head screw	
		Tilt lock bracket screw threads	
		M6 x 55 hex flange head screws	
		M6 x 20 hex flange head screw	
		M6 x 23 hex flange dog point screws	
		M8 x 1.25 x 40 hex flange head screws	
		M6 hex flange head screws	
 95	2-4-C with PTFE	M6 x 20 Torx socket head screws	92-802859A 1
		Back of snubber washers	

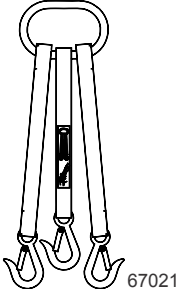Special Tools

Lifting strap  67021	883705T01 Use with an overhead hoist to lift an engine.
AMS Mount Tool  67280	8M0148868 Aligns engine mount and prevents preloading. Tool ID number 8M0147127.

1/4 in. Drive 8 mm Swivel Socket	Snap-on® TMUSM8A
 <p>67098</p>	Use to access fasteners with interfering parts.
Slide Hammer	91-34569A 1
 <p>6761</p>	Aids in the removal of various engine components. Use with puller jaws.

AMS Cradle and Engine Mount Components

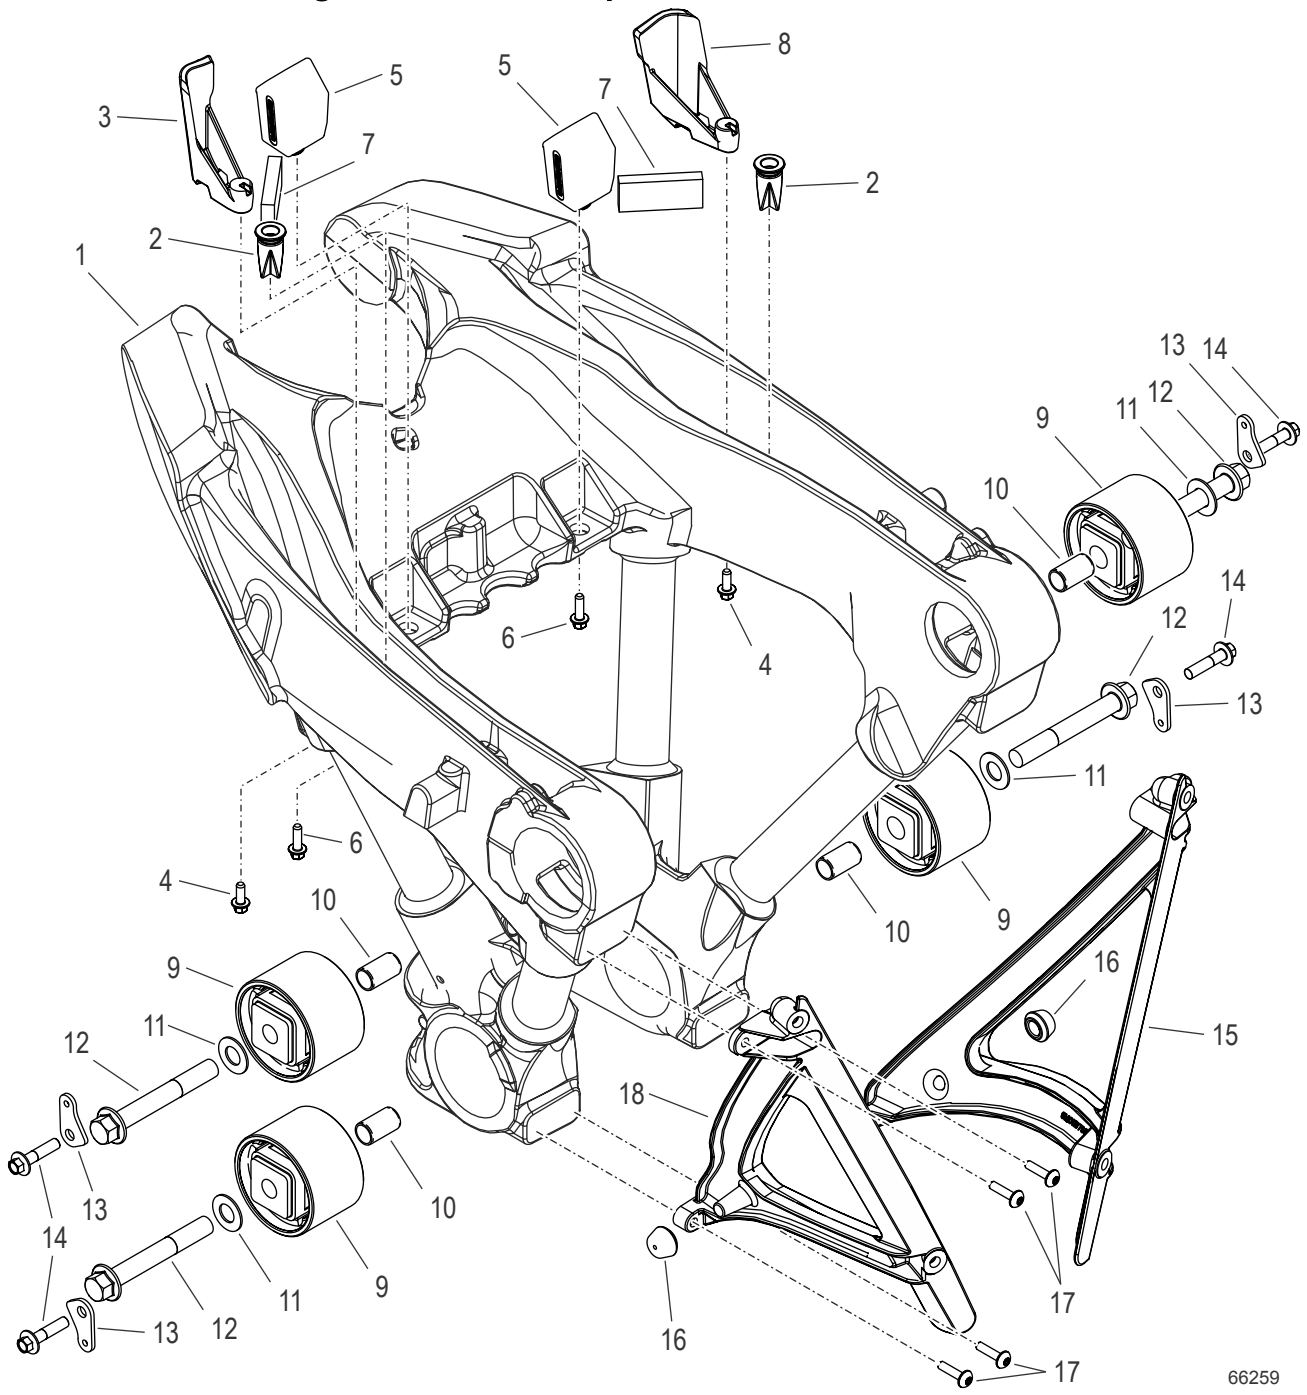


66259

AMS Cradle and Engine Mount Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Cradle mount frame			
2	2	Cowl drain			
3	1	Port seal insert			
4	2	M6 x 16 hex flange head screw	8.0	70.8	–
5	2	Bumper-stop, mount snubber assembly			
6	2	M6 x 20 hex flange head screw	3.5	31	–
7	2	Cradle foam			
8	1	Starboard seal insert			
9	4	AMS upper mount			
10	4	M14 x 29 hollow dowel pin			
11	4	Washer			
12	4	M14 x 2.0 x 100 hex flange head screw	185	–	136.5
13	4	Mount retention washer			
14	4	M8 x 35 hex flange screw	24	–	17.7
15	1	Starboard cover bracket			
16	2	Chap support cap			
17	8	M6 x 25 T30 button head screw	8.0	70.8	–
18	1	Port cover bracket			

AMS Tilt Lock Components

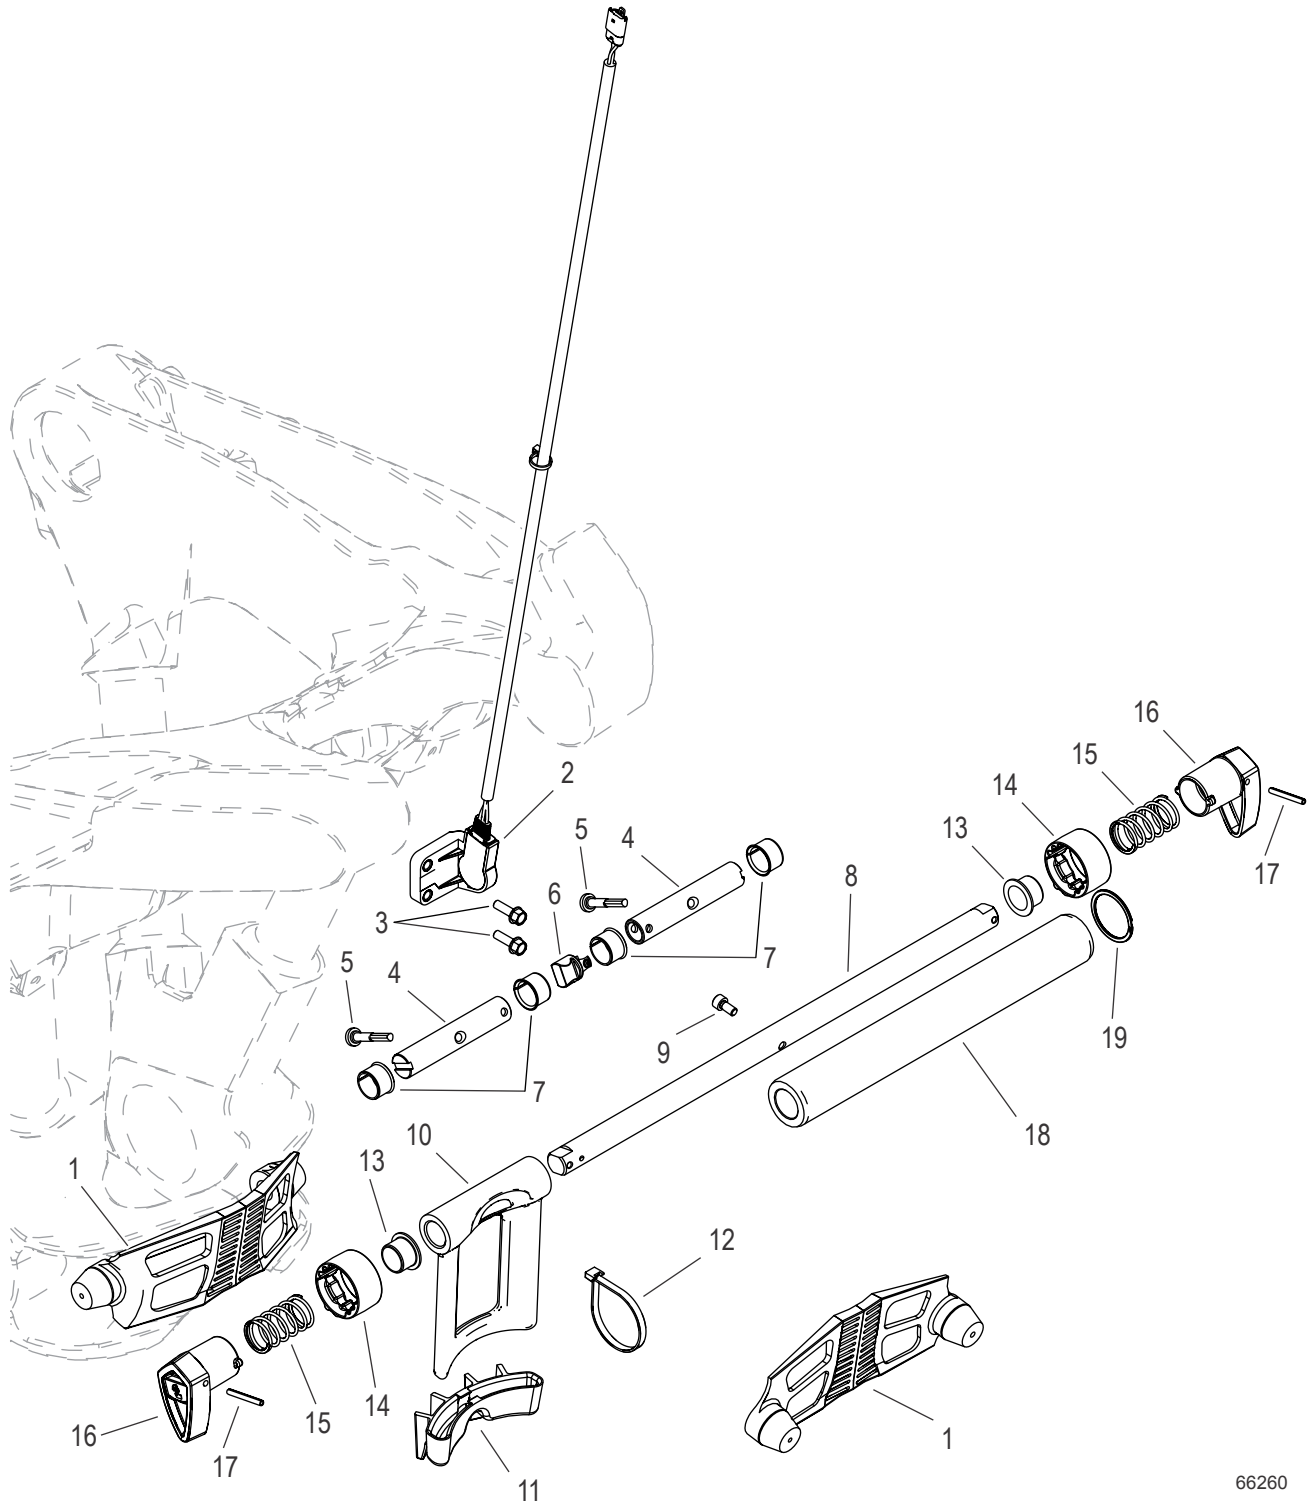


66260

AMS Tilt Lock Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	2	Cradle cover support bumper			
2	1	Trim position sensor assembly			
3	2	M5 x 16 hex washer head screw	1.7	15	–
4	2	Rod eye pin			
5	2	Trilobe pin			
6	1	Rod eye assembly magnet cap			
7	4	Flared journal bearing			
8	1	Tilt lock shaft			
9	1	M5 x 10 Torx® socket head screw	4.0	35.5	–
10	1	Tilt lock bracket			
11	1	Tilt lock pad			
12	1	8 in. cable tie			
13	2	0.625 in. bearing			
14	2	Tilt lock clutch			
15	2	Compression spring			
16	2	Tilt lock lever			
17	2	1/8 x 1.12 roll pin			
18	1	Tilt pin			
19	1	Retaining ring			

Pedestal/Power Trim/Steering Cylinder Components

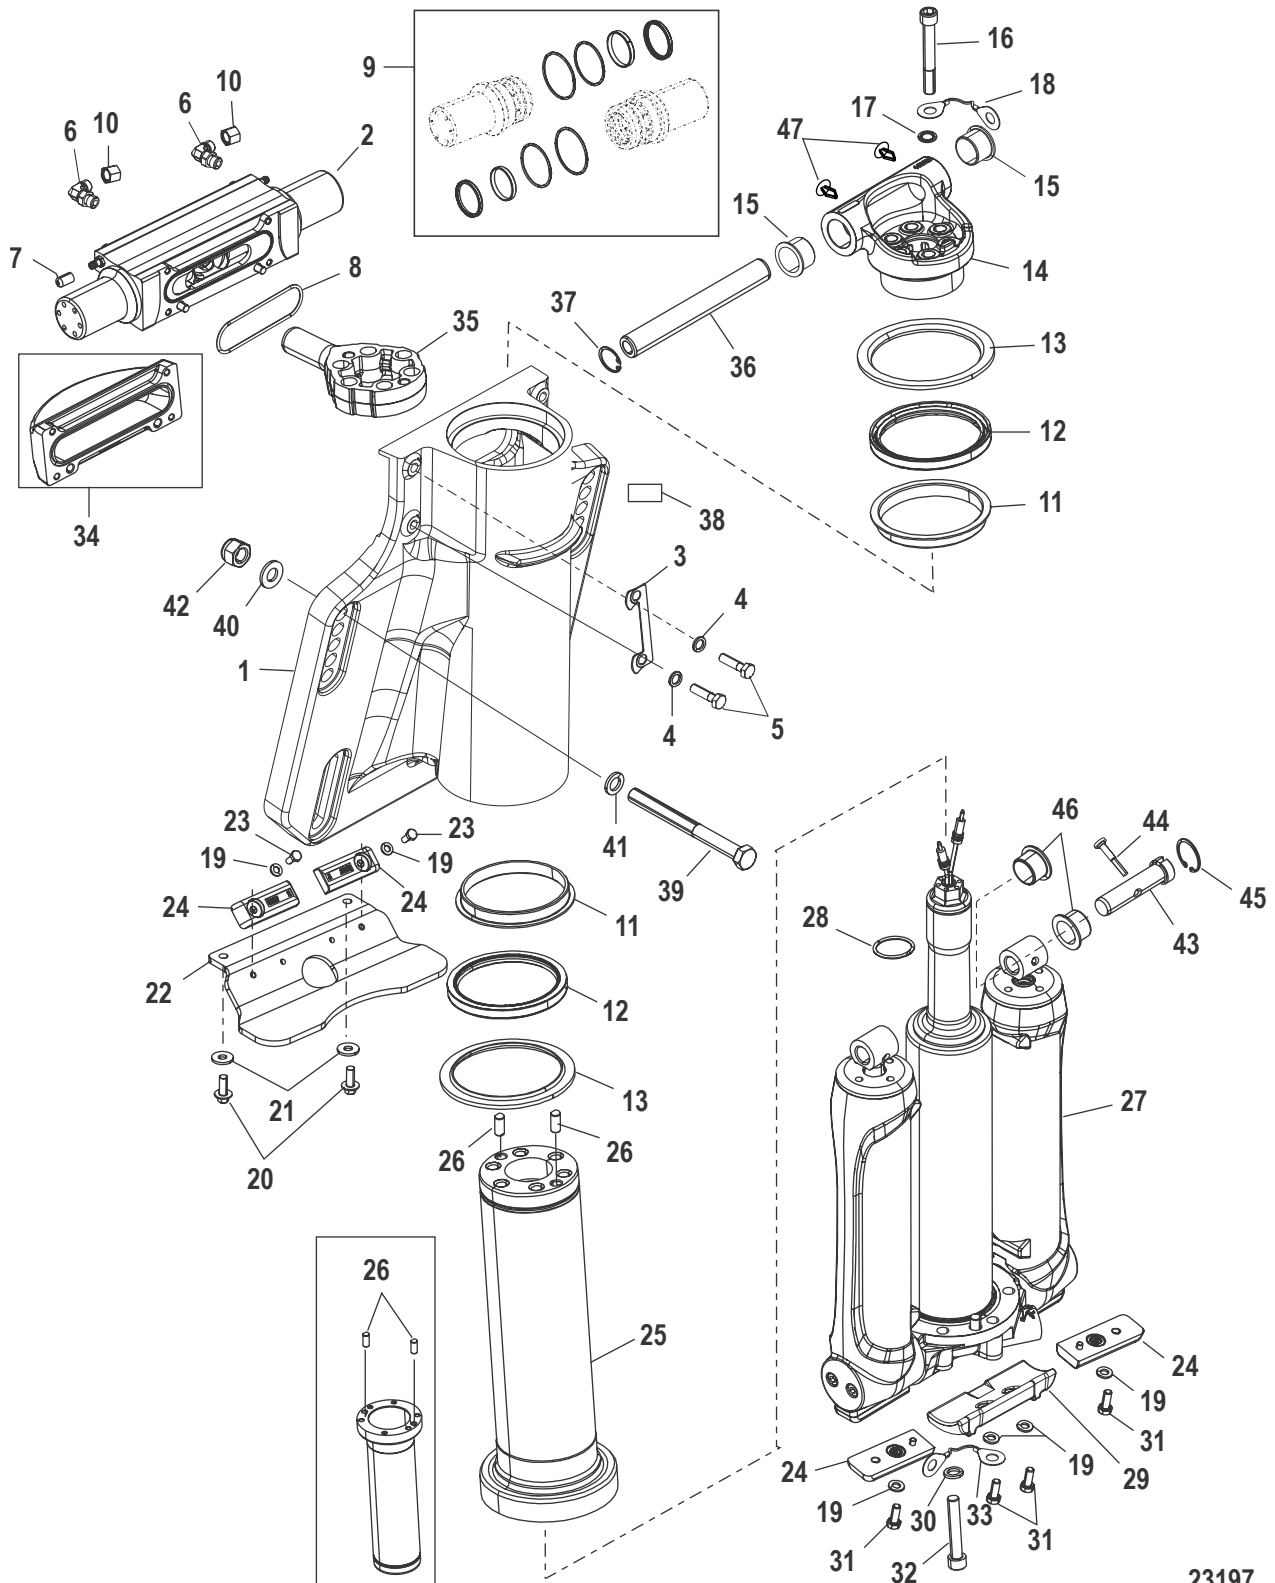

23197


Pedestal/Power Trim/Steering Cylinder Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Pedestal			
2	1	Steering cylinder assembly			
3	2	Retainer			
4	4	Washer			
5	4	Screw (M8 x 30)	25	–	18.4
6	2	Elbow	28	–	20.7
7	2	Bleeder cap			
8	1	Seal			
9	1	Steering cylinder seal kit			
10	2	Fitting cap			
11	2	Bearing			
12	2	Seal			
13	2	Bearing			
14	1	Steering head			
15	2	Bearing (1.250 in.)			
16	6	Screw (M14 x 105)	122	–	90
17	7	Washer			
18	1	Cable assembly			
19	6	Washer			
20	2	Screw (M8 x 20)	14.1	125	–
21	2	Washer			
22	1	Deflector plate			
23	2	Screw (M6 x 14)	5.6	50	–
24	4	Anode			
25	1	Steering tube			
26	6 or 8	Dowel pin (0.375 x 0.875)			
27	1	Power trim assembly			
28	1	O-ring			
29	1	Anode			
30	6	Washer			
31	4	Screw (M6 x 16)	5.6	50	–
32	6	Screw (M10 x 60)	54.2	–	40
33	1	Cable assembly			
34	1	Counterrotation cover			
35	1	Steering arm			
36	1	Tilt pin			
37	1	Retaining ring			
38	1	Serial number decal			
39	4	Screw (0.50-20 x 5.5 in.)			
40	4	Washer (1.5 x 3.05 x 0.13)			
41	4	Washer			
42	4	Nut (0.50-20)			
43	2	Pin			
44	2	Trilobe pin			
45	2	Retaining ring			
46	4	Bearing (0.625 in.)			

Pedestal/Mount Cradle and Driveshaft Housing


Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
47	2	Plug			

Pedestal/Power Trim/Steering Cylinder Components

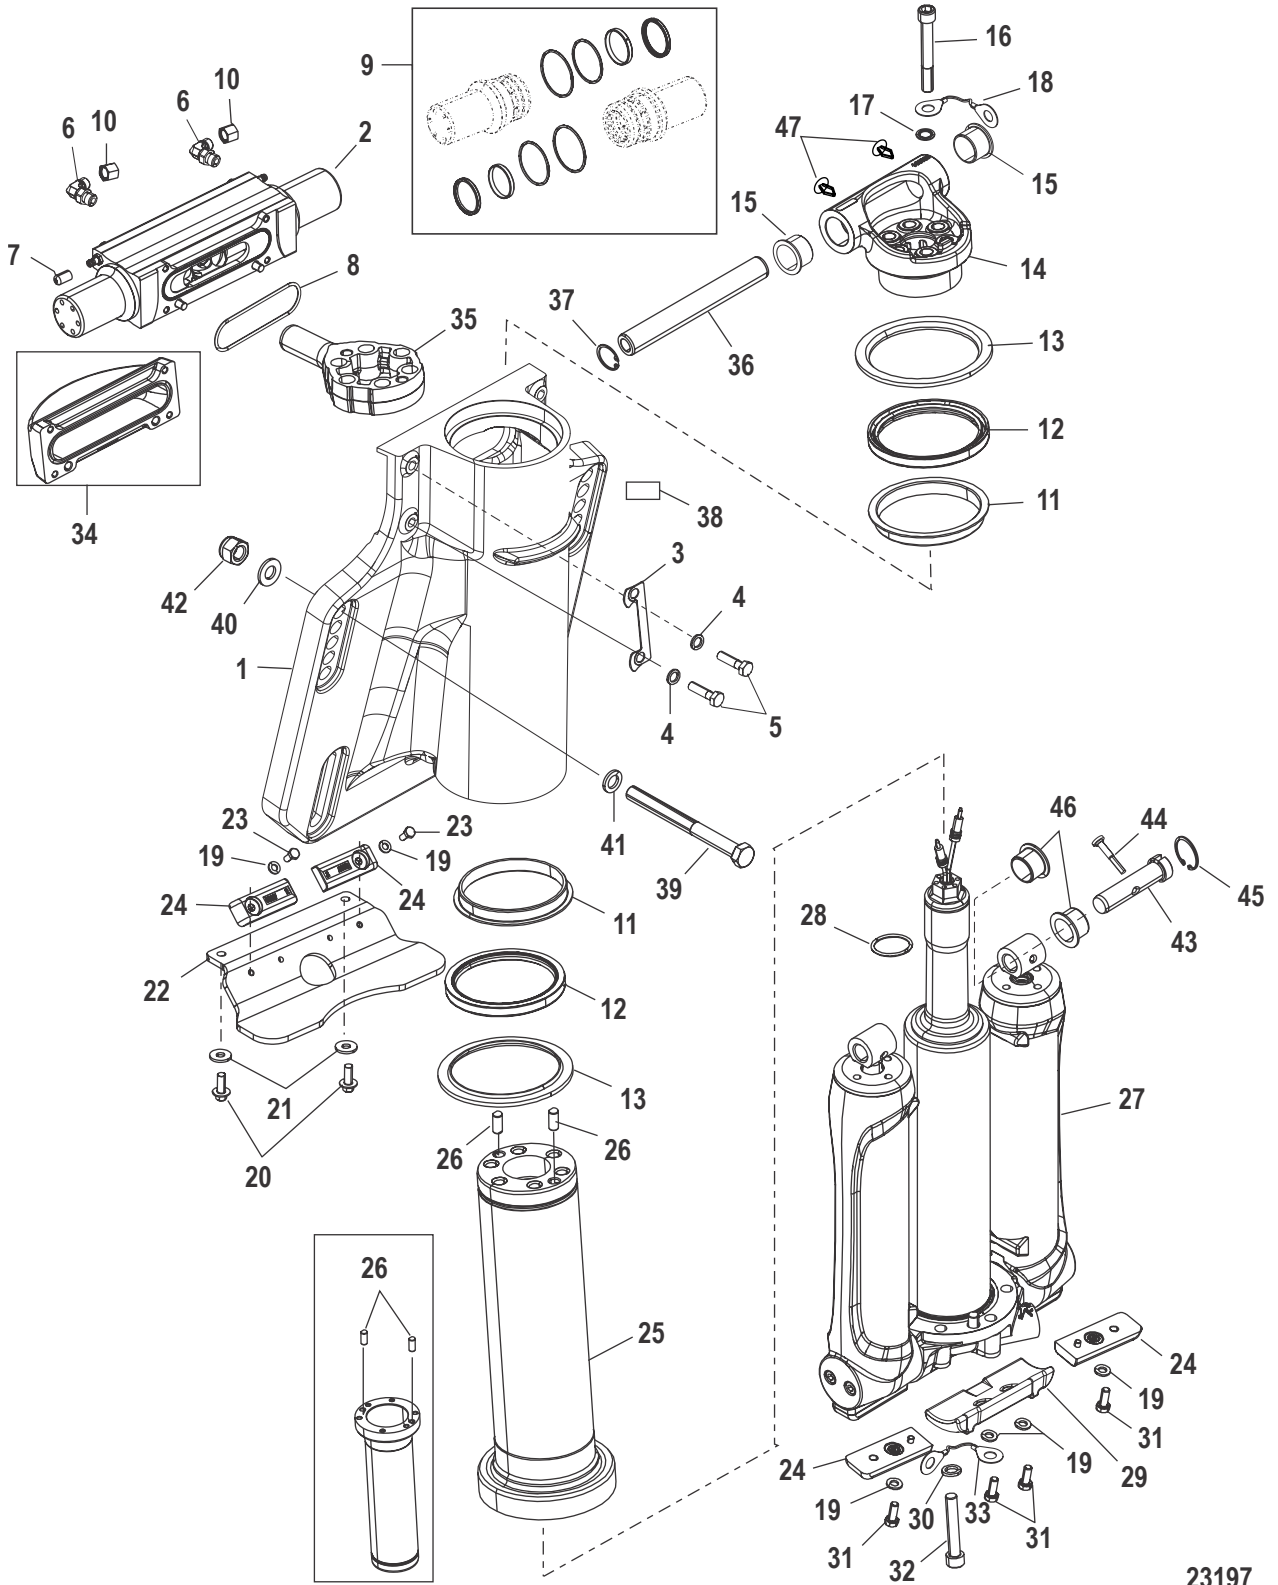

23197

Chap Plate Components

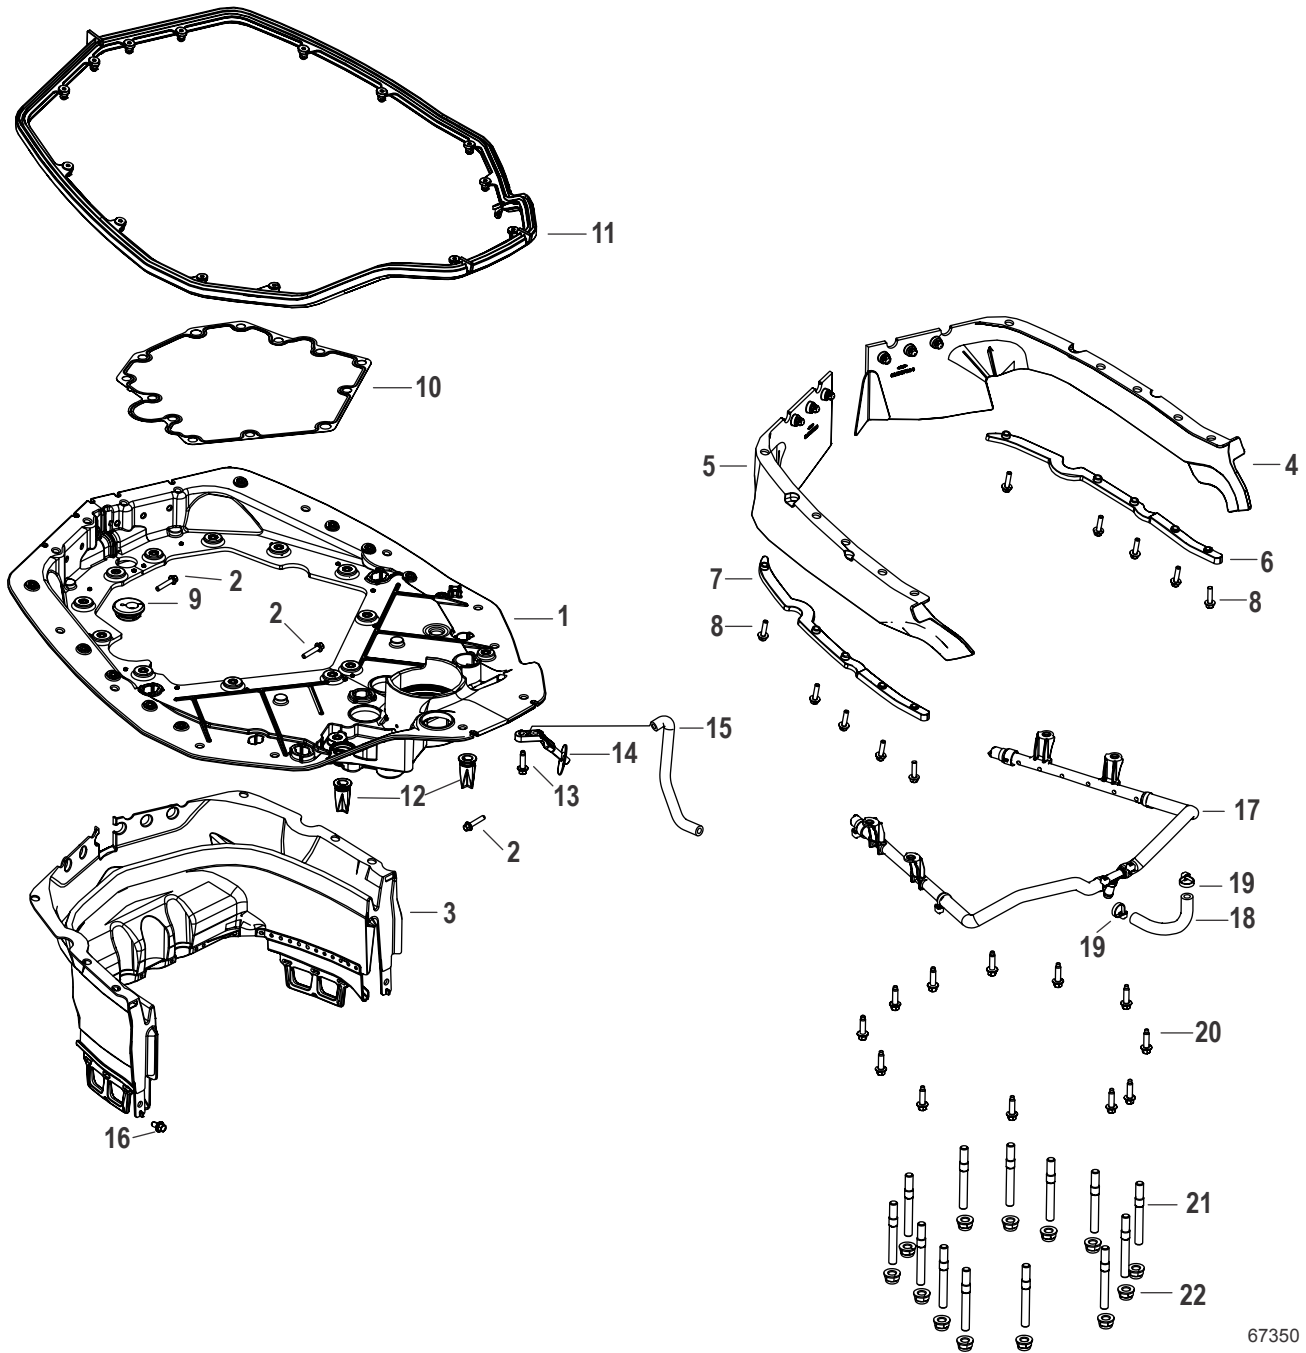


67350

Chap Plate Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Chap plate assembly			
2	3	M6 x 30 hex flange head screw	10	88.5	–
3	1	Sound block			
4	1	Starboard front lower cowl seal			
5	1	Port front lower cowl seal			
6	1	Starboard front lower cowl seal plate			
7	1	Port front lower cowl seal plate			
8	10	M5 x 20 hex flange screw	3.4	30.1	–
9	1	Wire seal grommet			
10	1	Driveshaft housing to engine block gasket			
11	1	Adapter plate seal			
12	2	Cowl drain			
13	1	M6 hex flange dog point screw	10	88.5	–
14	1	Water pump indicator fitting			
15	1	Water pump indicator hose			
16	2	M6 hex flange screw	8	70.8	–
17	1	Sprayer assembly			
18	1	Sprayer water supply hose			
19	2	Cable ties			
20	12	M6 x 23 hex flange dog point screw	10	88.5	–
21	13	M10 x 1.5 x 81.5 stud	22	–	16.2
22	13	M10 x 1.5 locknut	30	–	22.1

Driveshaft Housing Components

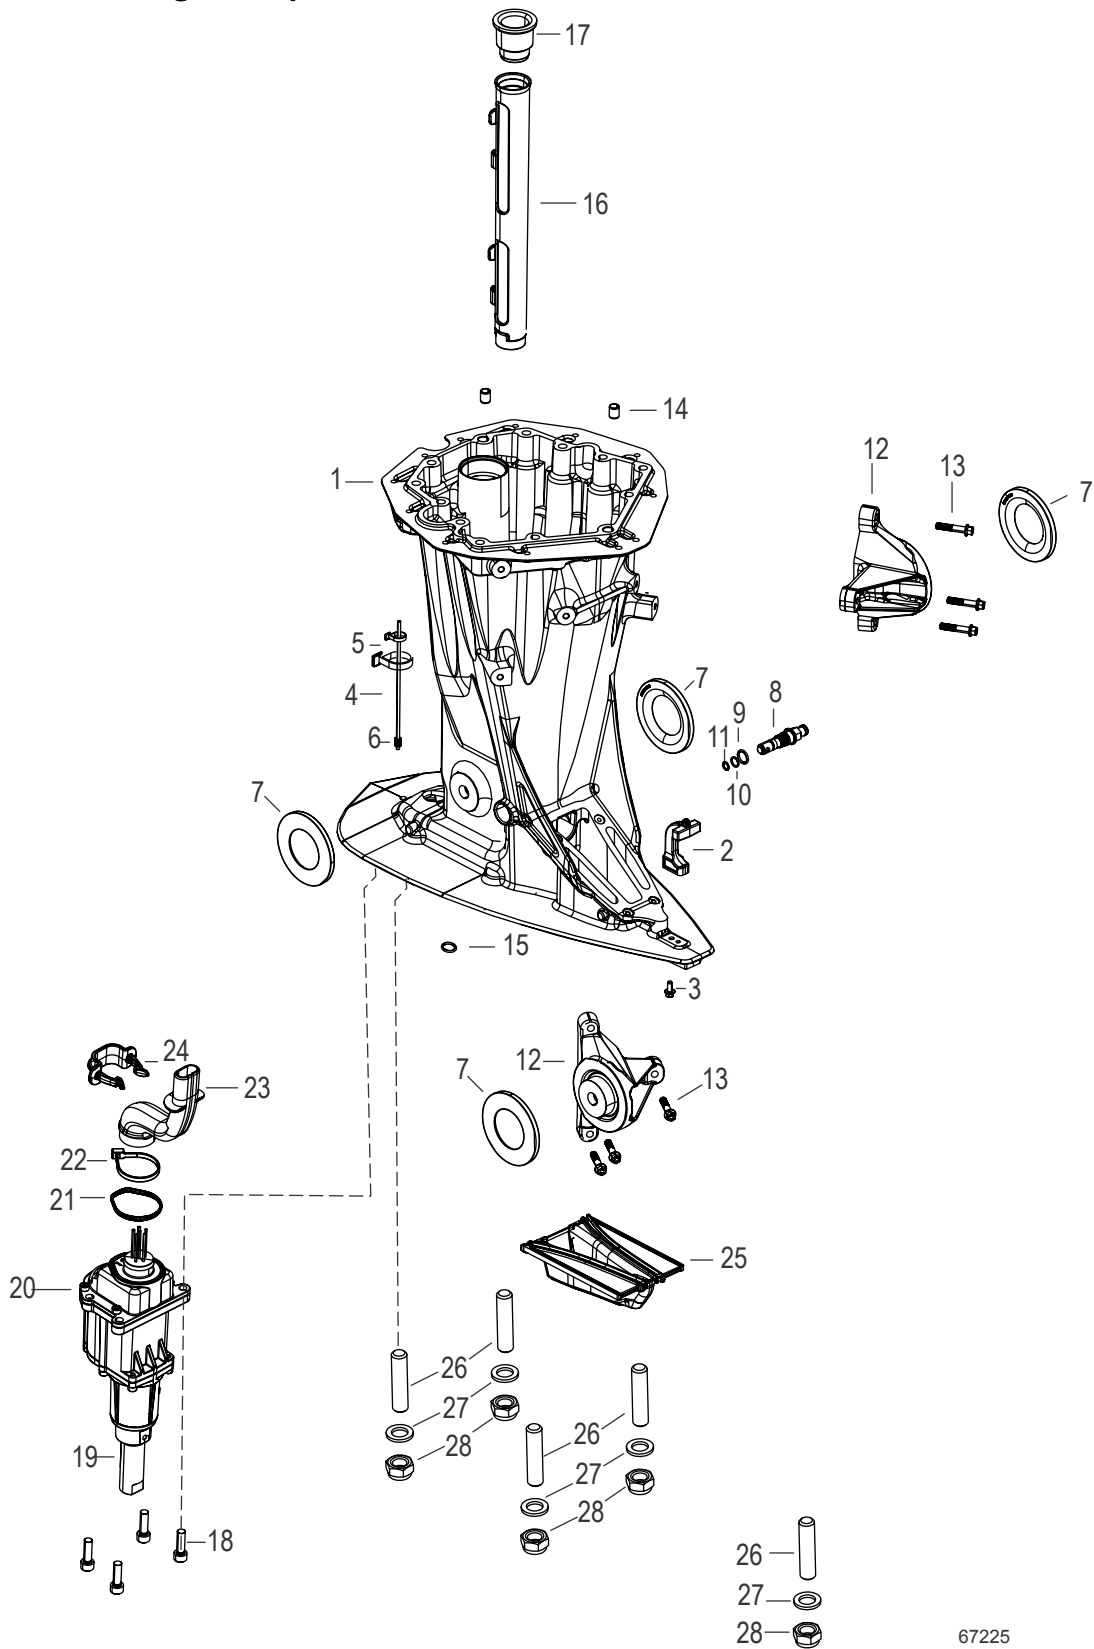


67225

Driveshaft Housing Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Driveshaft housing			
2	1	Lower cowl bumper bracket			
3	1	M6 hex flange head screw	6	53.1	–
4	1	Tubing			
5	2	Cable tie			
6	1	4 mm Legris press fitting			
7	4	Mount snubber washer			
8	1	Oil plug assembly	15	132.8	–
9	1	O-ring			
10	1	O-ring			
11	1	O-ring			
12	2	Upper mount support bracket			
13	6	M8 x 1.25 x 40 hex flange head screw	45	–	33.2
14	2	Dowel pin			
15	1	O-ring			
16	1	Lower shift actuator harness retention bracket			
17	1	Upper shift actuator harness retention bracket			
18	4	M6 x 20 Torx® socket head screw	11	97.4	–
19	1	Shift shaft coupling			
20	1	Shift actuator			
21	1	Seal			
22	1	Cable tie			
23	1	Boot			
24	1	C-clip			
25	1	Lower exhaust muffler			
26	5	M12 x 1.75 x 52 stud	30	–	22.1
27	5	Washer			
28	5	M12 hex locknut	60	–	44.3

Exhaust Tube Components

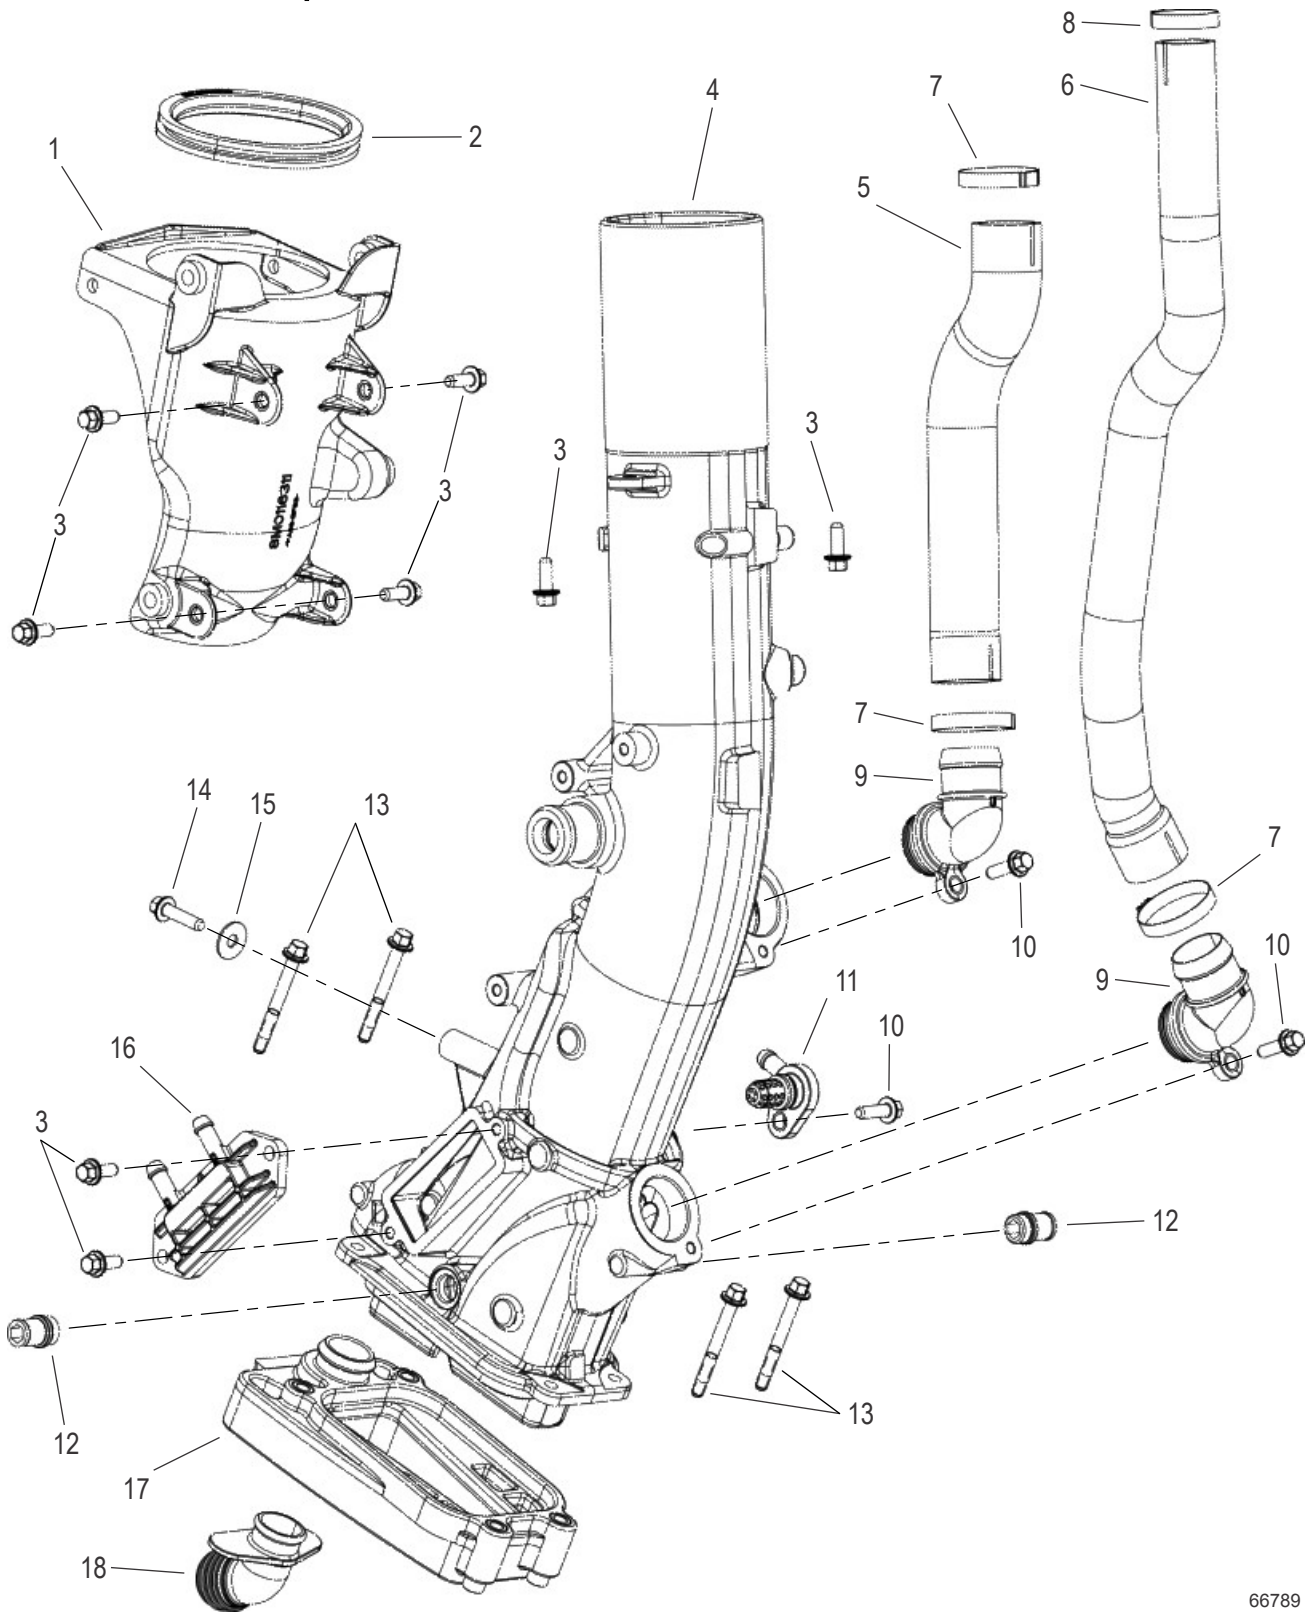

66789

Exhaust Tube Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Fuel supply module (FSM) bracket			
2	1	FSM retainer grommet			
3	8	M6 x 16 hex flange head screw	10	88.5	–
4	1	Exhaust tube			
5	1	Water inlet hose			
6	1	Water outlet hose			
7	3	38.1 mm Oetiker® clamp			
8	1	31.6 mm Oetiker® clamp			
9	2	Elbow fitting			
10	3	M6 x 20 hex flange head screw	10	88.5	–
11	1	Strainer			
12	1 or 2	Muffler drain fitting	2.0	17.7	–
13	4	M6 x 55 hex flange head screw	15	132.8	–
14	1	M6 x 25 hex flange head screw	10	88.5	–
15	1	Washer			
16	1	Strainer assembly			
17	1	Exhaust grommet			
18	1	Elbow fitting			

Engine Mounts

The engine mounts can be replaced without removing the powerhead or gearcase and without dismantling the midsection. Replace the mounts one at a time.

NOTE: The snubber washers behind the mounts cannot be replaced without removing the driveshaft housing from the cradle. Refer to **Advanced Midsection (AMS) Disassembly**.


Preparation

1. Disconnect the starting battery from the engine.
2. Remove the propeller.
3. Remove the top cowl.
4. Remove the lower cowls. Refer to **Section 5C - Advanced Midsection (AMS) Lower Cowl Removal**.
5. Support the engine with a lifting strap and an overhead hoist. Use the two equal length straps.

Lifting strap	883705T01
---------------	-----------


Mount Removal

1. Remove the mount retainer from the mount.
2. Remove the mount screw. Retain the special mount washer.
3. Remove the mount.

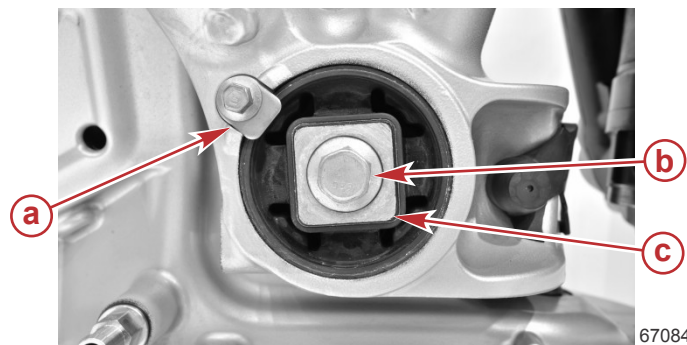

Starboard lower mount shown, others similar
a - Mount retainer
b - Mount screw and special washer
c - Engine mount

4. Remove the mount dowel.

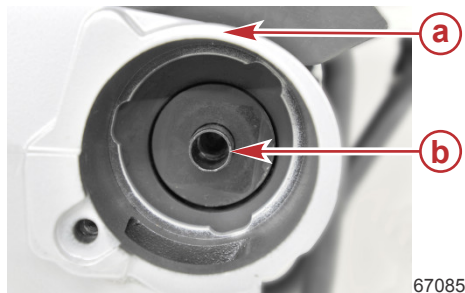


Starboard upper mount location shown, others similar
a - Cradle
b - Mount dowel

Mount Installation

1. Insert the mount dowel into the driveshaft housing.
2. Insert the mount into the cradle.
3. Hand-thread a M14 x 2.0 x 100 hex flange head screw with special washer into the driveshaft housing.

- Install the AMS mount tool, and secure it with a mount retainer screw, to prevent preloading the mount.

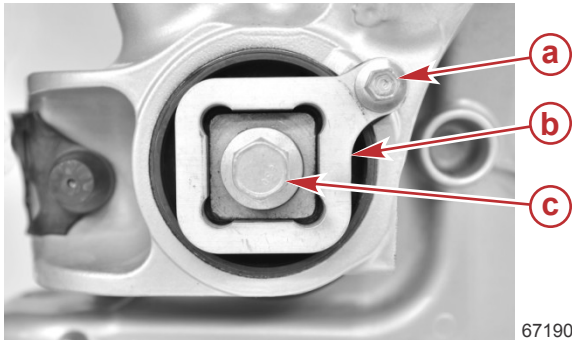

- Port lower mount shown, others similar
- a - Mount retainer screw
 - b - AMS mount tool
 - c - M14 x 2.0 x 100 hex flange head screw

AMS Mount Tool	8M0148868
----------------	-----------

- Tighten the mount screw to the specified torque.

Description	Nm	lb-in.	lb-ft
M14 x 2.0 x 100 hex flange head screw	185	–	136.5

- Remove the AMS mount tool.
- Install the mount retainer, and secure it with an M8 x 35 hex flange head screw. Tighten the screw to the specified torque.

Description	Nm	lb-in.	lb-ft
M8 x 35 hex flange head screw	24	–	17.7

Return to Service

- Repeat the **Mount Removal** and **Mount Installation** procedures as necessary, for the other mounts.
- Install the lower cowls. Refer to **Section 5C - Advanced Midsection (AMS) Lower Cowl Installation**.
- Install the top cowl.
- Install the propeller.
- Connect the starting battery to the engine.


Idle Relief Muffler

IMPORTANT: This procedure assumes the engine has been removed from service and all cowls have been removed.

The idle relief muffler grommet and exhaust outlet hoses are a single assembly and should be removed and installed with the rear cowl.

Removal

- Use a T30 wrench to remove eight screws (four screws each) that secure the port and starboard cover brackets.
NOTE: The starboard cover bracket has a ground continuity cable attached to the outer upper screw.

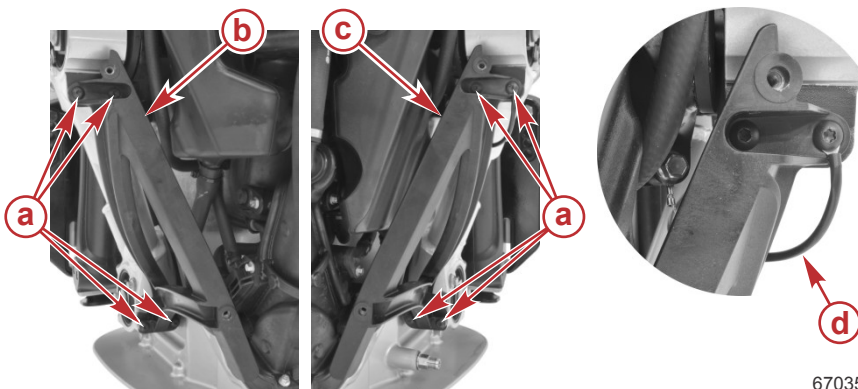


- a - M6 x 25 T30 button head screws (8)
- b - Port cover bracket
- c - Starboard cover bracket
- d - Ground continuity cable

- Disconnect the reference hose from the underside of the chap plate.
- If the powerhead has been removed, remove the reference hose and fitting from the topside of the chap plate.
- Remove the crossover hose from the port muffler.
- Cut the cable tie that secures the port muffler drain hose, and remove the hose from the fitting in the exhaust tube.

Pedestal/Mount Cradle and Driveshaft Housing

6. Remove one screw from the port muffler.
7. Carefully pull the port muffler away from the exhaust tube outlet.

NOTE: If the reference hose fitting was not removed (step 3), exercise care to not damage the fitting.

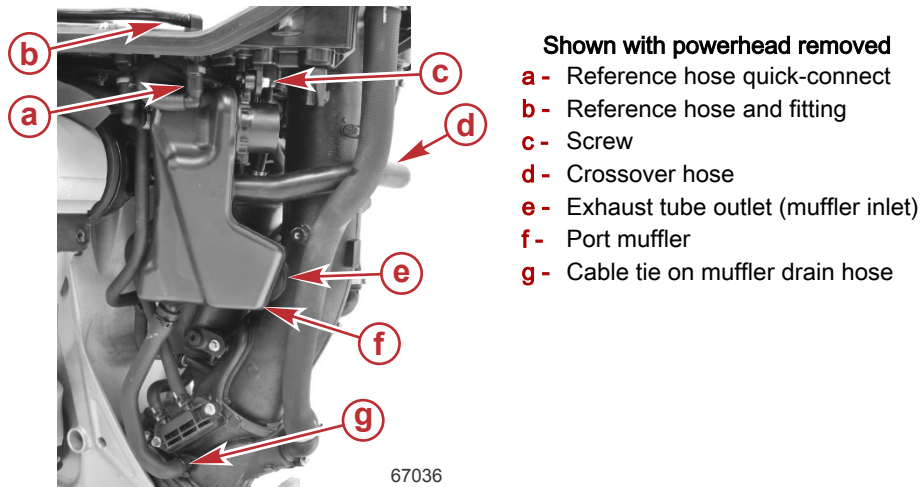


IMPORTANT: Remove the water pump indicator fitting to avoid damaging it when removing the starboard muffler.

8. Use a 1/4 in. drive 8 mm swivel socket (or ratcheting wrench) to remove one M6 x 23 hex flange dog point screw, and to remove the water pump indicator fitting from the chap plate.

NOTE: With the starboard muffler installed, there is insufficient room to fit a standard 8 mm socket onto the M6 x 23 hex flange dog point screw.

1/4 in. Drive 8 mm Swivel Socket	Snap-on® TMUSM8A
----------------------------------	------------------

9. Cut the cable tie that secures the starboard muffler drain hose, and remove the hose from the fitting in the exhaust tube.
10. Pull the starboard muffler away from the FSM bracket.


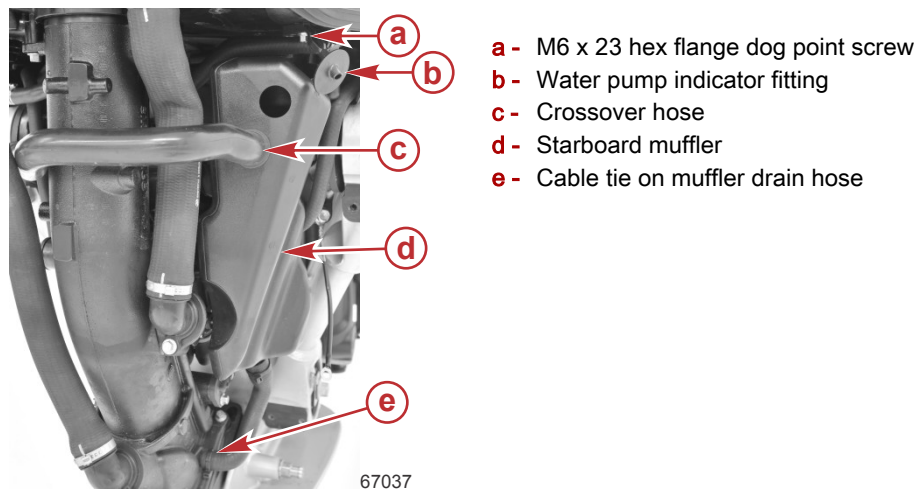


Installation

NOTE: To ease installation of components, use soapy water as a lubricant.

1. Maneuver the port muffler into position under the advanced sound control actuator. The slot in top of the exhaust valve shaft must line up with the coupler on the actuator. It may be necessary to rotate the valve plate with your finger to align the two.

NOTE: If the reference hose fitting was not removed from the chap plate, use care to maneuver the muffler around the fitting, as well.

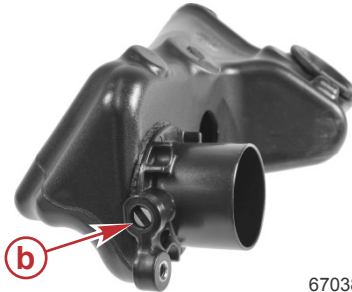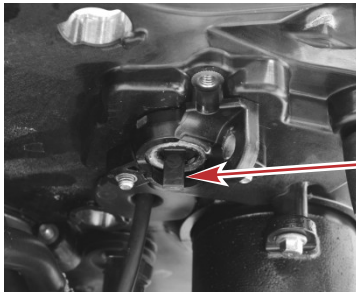


- a - Advanced sound control actuator coupler
- b - Slot in the exhaust valve shaft

67038

2. Press the muffler onto the exhaust tube outlet.
3. Secure the muffler with an M6 x 16 hex flange head screw.

Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange head screw	8.0	70.8	–

4. Attach the drain hose to the bottom of the port muffler and to the fitting on the exhaust pipe. Secure each connection with a cable tie.
5. Install the reference hose and fitting into the topside of the chap plate, if it was removed.
6. Attach the reference hose quick-connect to the fitting on the underside of the chap plate.

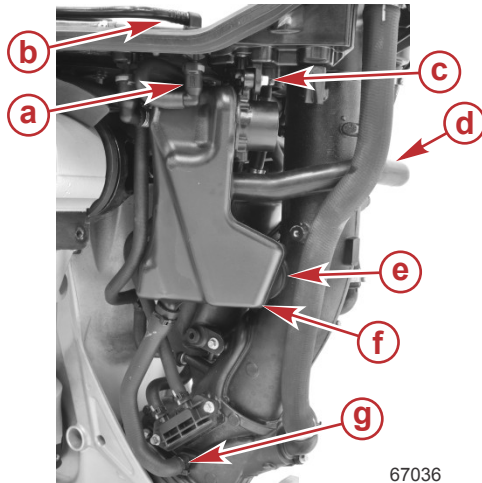


Shown with powerhead removed

- a - Reference hose quick-connect
- b - Reference hose and fitting
- c - M6 x 16 hex flange head screw
- d - Crossover hose
- e - Exhaust tube outlet (muffler inlet)
- f - Port muffler
- g - Cable tie on muffler drain hose

67036

7. Press the pins on the starboard muffler into the grommets in the FSM bracket.

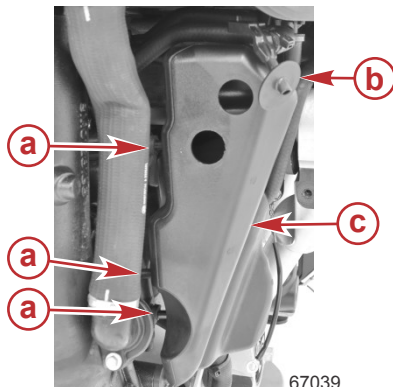

- a - Pins (3) on the starboard muffler
- b - Starboard muffler
- c - Water pump indicator fitting, shown not attached to the chap plate

67039


8. Use one M6 x 23 hex flange dog point screw to attach the water pump indicator fitting to the underside of the chap plate. Use a 1/4 in. drive 8 mm swivel socket and a torque wrench to tighten the screw to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 x 23 hex flange dog point screw	10	88.5	–

1/4 in. Drive 8 mm Swivel Socket	Snap-on® TMUSM8A		
----------------------------------	------------------	--	--

Pedestal/Mount Cradle and Driveshaft Housing


9. Attach the drain hose to the bottom of the starboard muffler and to the fitting on the exhaust pipe. Secure each connection with a cable tie.
10. Route the crossover hose behind the water supply hose, and insert it into both the port and starboard mufflers.

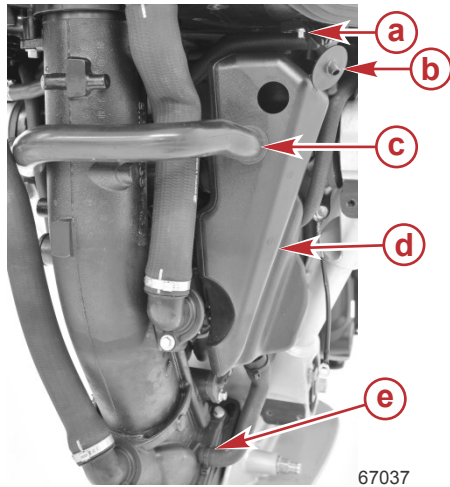

- a - M6 x 23 hex flange dog point screw
- b - Water pump indicator fitting
- c - Crossover hose
- d - Starboard muffler
- e - Cable tie on muffler drain hose

67037

11. Install the port and starboard cover brackets. Secure each bracket with four M6 x 25 T30 button head screws.
IMPORTANT: Ensure that the ground continuity cable is routed behind the starboard bracket and is fastened to the outer upper screw of the bracket, as shown.

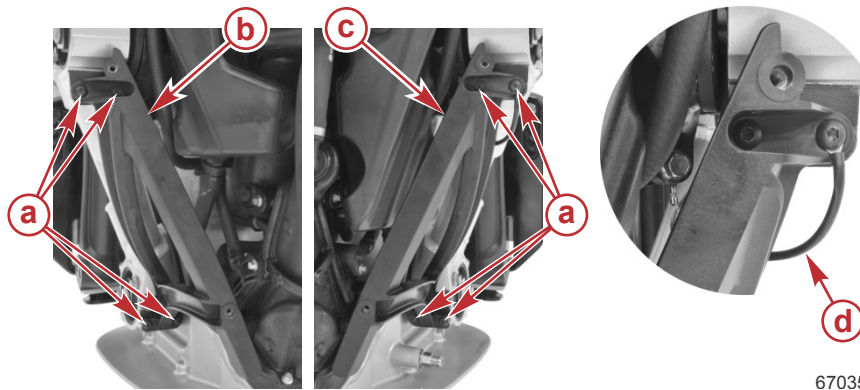

- a - M6 x 25 T30 button head screws (8 total)
- b - Port cover bracket
- c - Starboard cover bracket
- d - Ground continuity cable

67035

12. Tighten the screws to the specified torque.

Description	Nm	lb-in.	lb-ft
M6 x 25 T30 button head screw	8.0	70.8	-

Fuel Supply Module (FSM)

Fuel Supply Module (FSM) Removal


⚠ CAUTION

Failure to release pressure from the fuel system will result in fuel spraying out, which can cause a fire or explosion. Allow the engine to cool completely and release all fuel pressure before servicing any part of the fuel system. Always protect eyes and skin from pressurized fuel and vapors.


Use this procedure to remove the FSM from the midsection for servicing, without removing the powerhead.

1. Remove all engine cowls. Refer to **Section 5C - Upper and Lower Cowls**.
2. Use a fuel pressure gauge or other suitable method to relieve the pressure from both fuel rails. Collect and dispose of fuel according to all applicable regulations.
3. Remove the idle relief mufflers. Refer to **Idle Relief Muffler**.

4. Disconnect the FSM from the engine harness, and remove the FSM harness connector from the electrical bracket.

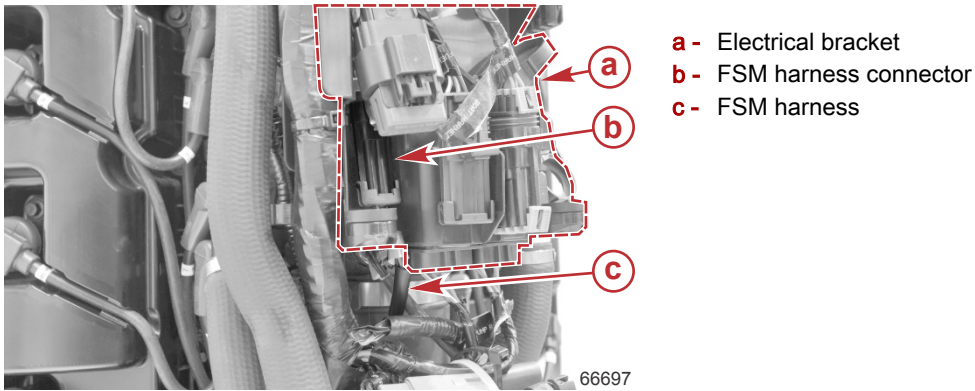


5. Carefully push the grommet down through the chap plate, bringing the FSM harness down with it.

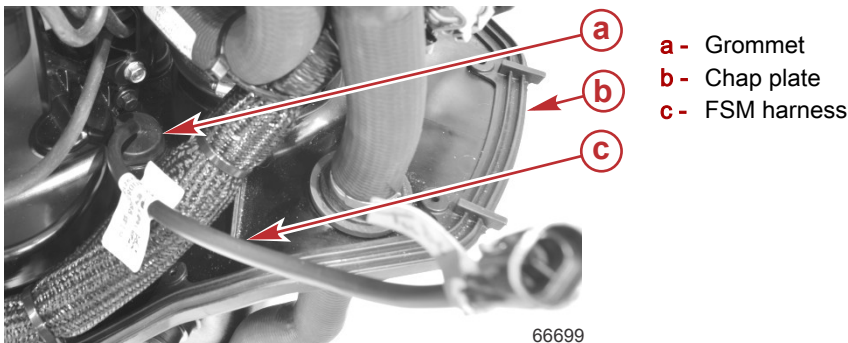

6. Port side connections:


- a. Disconnect the port fuel rail supply quick-connect from the fitting in the chap plate. Be certain to capture and dispose of fuel according to all applicable regulations.
- b. Disconnect the reference hose quick-connect from the fitting on the underside of the chap plate.
- c. Remove the two M6 x 16 hex flange head screws that secure the FSM to the port side of the exhaust tube.
- d. Cut the cable tie and remove the water supply hose from the water strainer.
- e. Remove the M6 x 25 hex flange head screw that secures the bottom of the FSM to the exhaust tube.

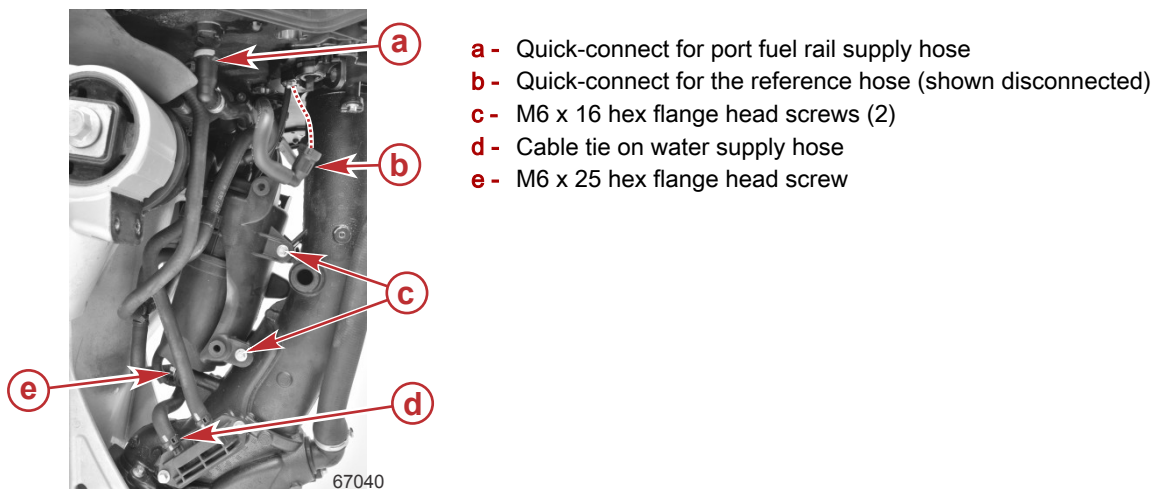

- f. Cut the cable tie that secures the drain hose assembly to the port side of the FSM bracket.

Pedestal/Mount Cradle and Driveshaft Housing

- g. Remove the clip from either the drain hose assembly or the sprayer hose assembly, to separate the two.

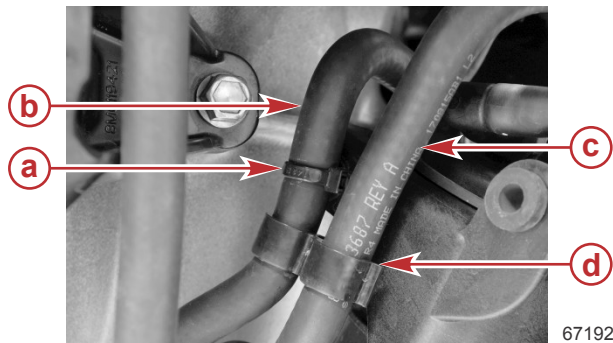


- a - Cable tie and anchor on port side of FSM bracket
- b - Drain hose assembly
- c - Sprayer hose assembly
- d - Clip

67192

7. Starboard side connections:


- a. Cut the cable tie and remove the hose from the water pump indicator fitting.
- b. Disconnect the starboard fuel rail supply hose from the quick-connect fitting in the chap plate. Be certain to capture and dispose of fuel according to all applicable regulations.
- c. Cut the cable tie securing the fuel hose to the FSM bracket.
- d. Disconnect the fuel supply hose from the quick-connect fitting at the bottom of the FSM. Be certain to capture and dispose of fuel according to all applicable regulations.
- e. Remove the two M6 x 16 hex flange head screws that secure the FSM bracket to the starboard side of the exhaust tube.

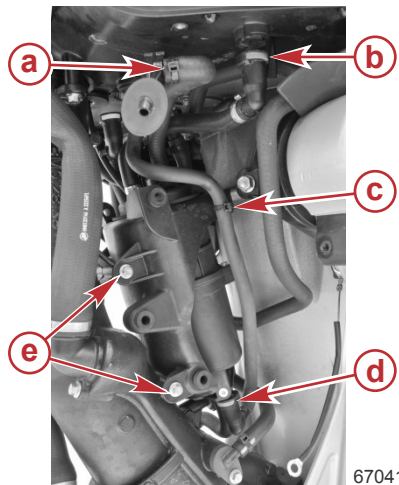

- a - Cable tie on hose at the water pump indicator fitting
- b - Quick-connect for starboard fuel rail supply hose
- c - Cable tie securing fuel hose to FSM bracket
- d - Quick-connect for FSM supply hose
- e - M6 x 16 hex flange head screws

67041

8. To aid in the removal of the FSM, disconnect the cylinder head drain hose quick-connect.

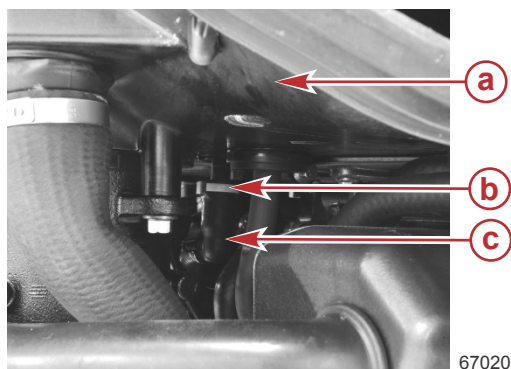


- a - Underside of chap plate
- b - Lock tab
- c - Cylinder head drain hose quick-connect

67020

9. Carefully remove the FSM assembly (including bracket and hoses) from the midsection.

NOTE: Lift the assembly up until the bracket clears the bosses on the exhaust tube. Some shifting of hoses may be required.

- Remove the bracket and hoses as necessary to service the FSM. For FSM service instructions, refer to **Section 3B - Fuel Supply Module (FSM)**.

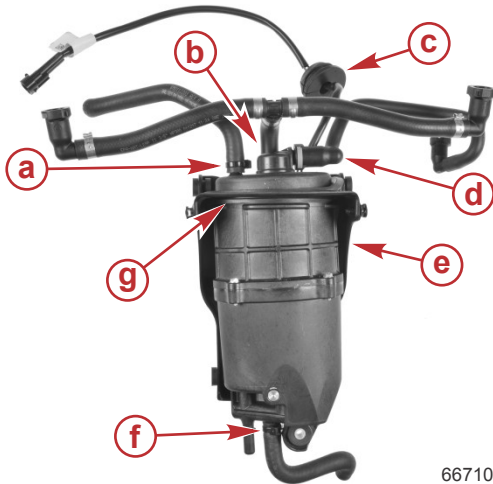


- a - Cut cable tie to remove water outlet hose (to water pump indicator fitting)
- b - Remove Oetiker® clamp (not shown) to remove fuel rail supply hoses
- c - FSM harness grommet
- d - Disconnect quick-connect fitting to remove reference hose
- e - Slide FSM bracket upward to remove
- f - Cut cable tie to remove water inlet hose (from strainer)
- g - FSM bracket grommet

66710

Fuel Supply Module (FSM) Installation

- Ensure that the bracket and hoses are attached to the FSM.

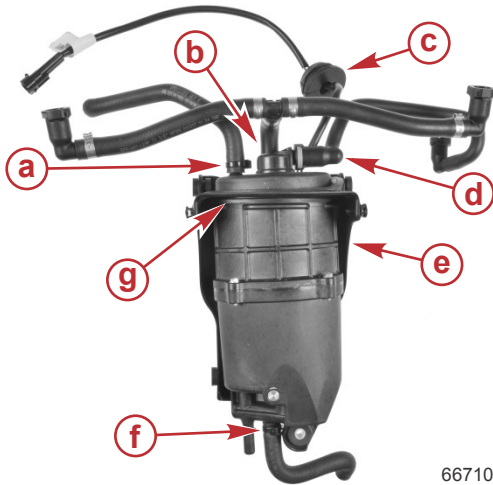

- a - Cable tie used to secure the water outlet hose (to water pump indicator fitting)
 - b - 16.2 mm Oetiker® clamp (not shown) used to secure the fuel rail supply hoses
 - c - Grommet installed on the FSM harness
 - d - Reference hose connected to quick-connect fitting
 - e - FSM bracket (with grommet) installed by sliding down over FSM
- NOTE:** Use soapy water as a lubricant, to ease installation.
- f - Cable tie used to secure the water inlet hose (from strainer)
 - g - FSM bracket grommet securely in position

66710


- Carefully position the FSM assembly (including bracket and hoses) into the midsection.

NOTE: Position the assembly so that the holes in the bracket are above the bosses on the exhaust tube. Then slide the assembly down into position. Some shifting of hoses may be required.
- Apply Loctite® 242 Threadlocker to four M6 x 16 hex flange head screws and one M6 x 25 hex flange head screw.

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	M6 x 16 hex flange head screws	92-809821
66	Loctite 242 Threadlocker	M6 x 25 hex flange head screw	92-809821


Pedestal/Mount Cradle and Driveshaft Housing

4. Use the four short screws to secure the FSM bracket to the exhaust tube and the single long screw to secure the FSM to the exhaust tube. Tighten all five screws to the specified torque.

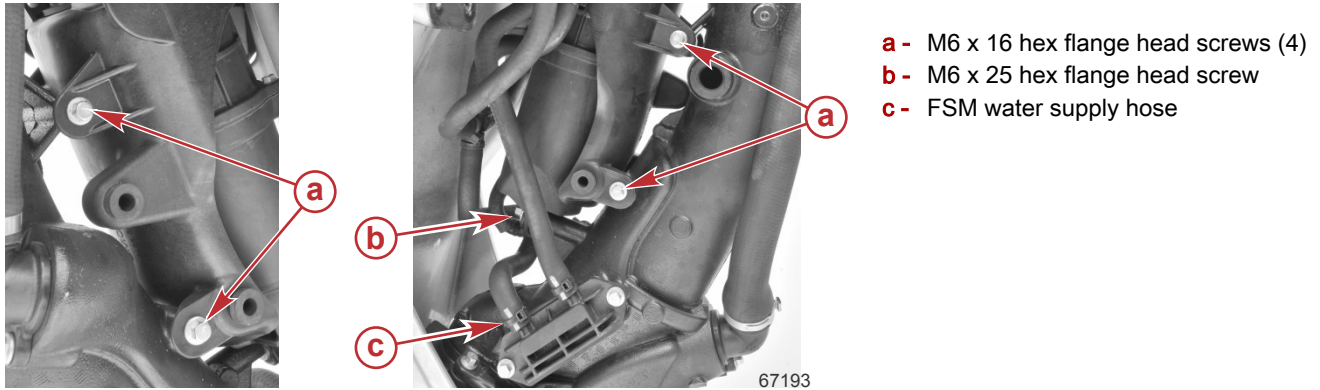


Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange head screw	10	88.5	–
M6 x 25 hex flange head screw	10	88.5	–

5. Connect the cylinder head drain hose quick-connect to the fitting in the chap plate.

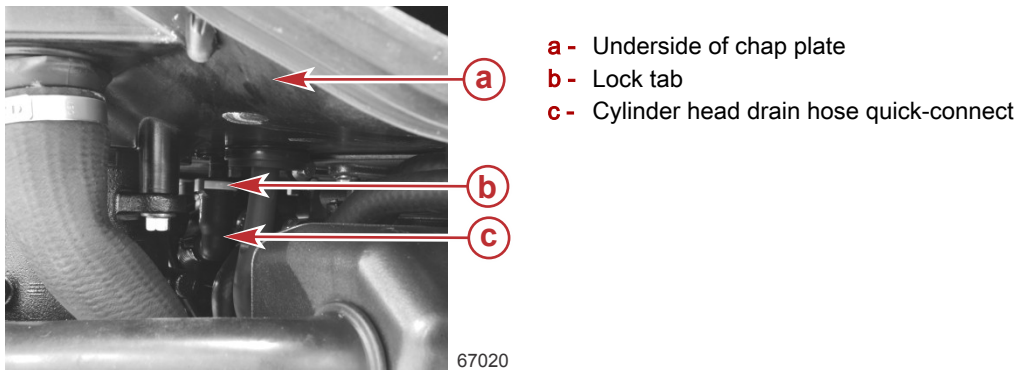

6. Complete the starboard side connections:


- Connect the fuel supply hose to the quick-connect fitting at the bottom of the FSM.
- Secure the fuel hose to the fuel pump bracket with a cable tie through the anchor.
- Connect the starboard fuel rail supply hose to the quick-connect fitting in the chap plate.
- Connect the hose to the water pump indicator fitting and secure it with a cable tie.

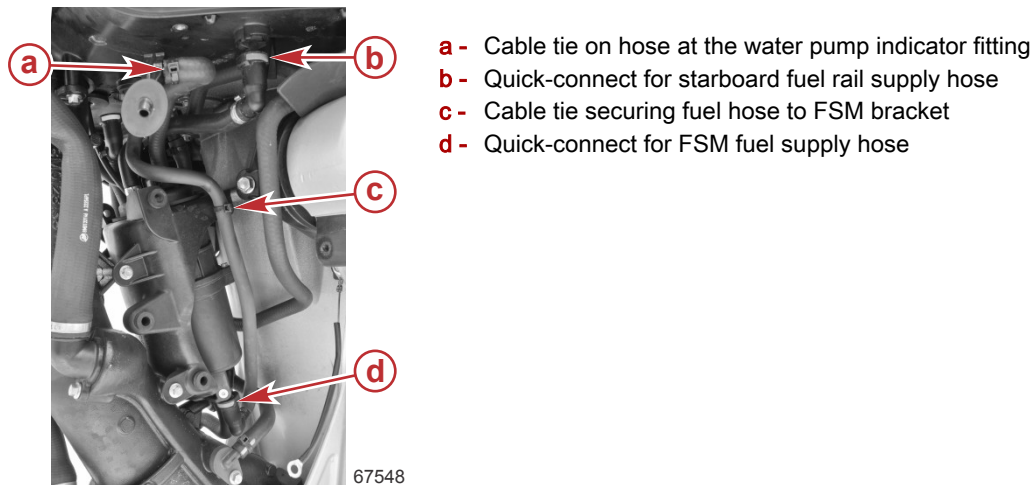

7. Complete the port side connections:


- Connect the port fuel rail supply hose quick-connect to the fitting in the chap plate.
- Connect the reference hose quick-connect to the fitting in the chap plate

- c. Connect the FSM water supply hose to the strainer, and secure it with a cable tie.

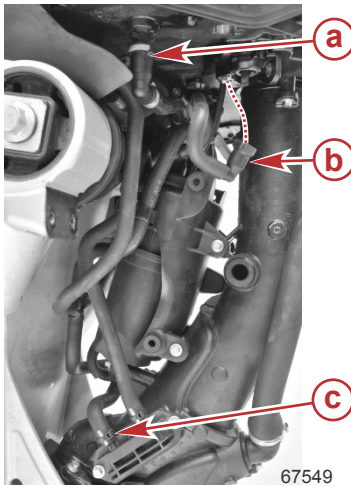


- a** - Quick-connect for port fuel rail supply hose
- b** - Quick-connect for the reference hose (shown disconnected)
- c** - Cable tie on water supply hose

8. Secure the drain hose assembly to the anchor on the FSM bracket with a cable tie.
 9. Use a clip to attach the sprayer hose assembly to the drain hose assembly, near the cable tie anchor.

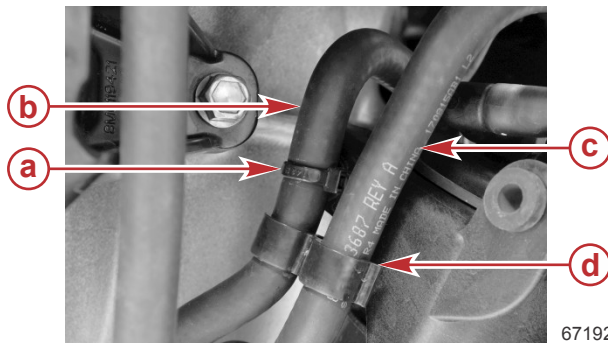

- a** - Cable tie and anchor on port side of FSM bracket
- b** - Drain hose assembly
- c** - Sprayer hose assembly
- d** - Clip


10. Feed the FSM harness up through the chap plate, and carefully press the grommet up into place. Use soapy water as a lubricant, to ease installation.

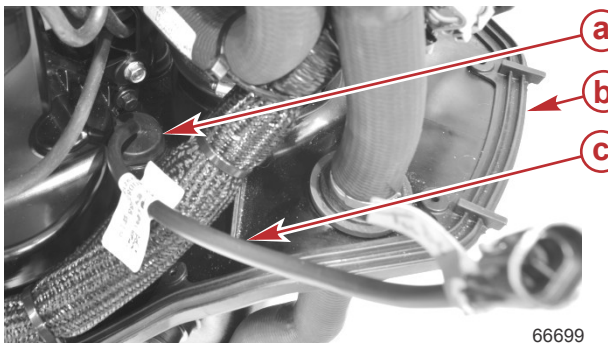

- a** - Grommet
- b** - Chap plate
- c** - FSM harness

Pedestal/Mount Cradle and Driveshaft Housing

11. Attach the FSM harness connector to its anchor on the electrical bracket, and connect the FSM harness to the engine harness.

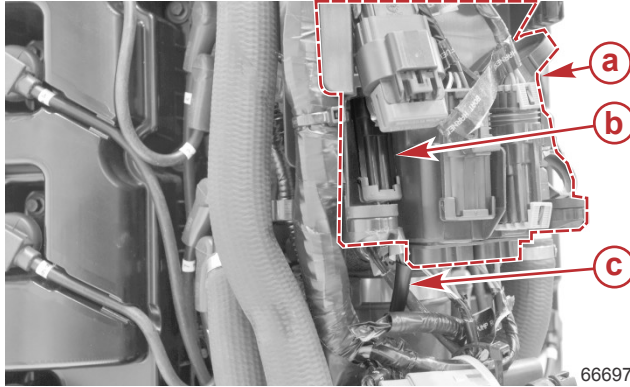

- a - Electrical bracket
- b - FSM harness connector
- c - FSM harness

12. Install the idle relief mufflers. Refer to **Idle Relief Muffler**.
13. Install the engine cowls. Refer to **Section 5C - Upper and Lower Cowls**.


Advanced Midsection (AMS) Disassembly

Preparation for AMS Disassembly

1. Remove the lower cowls. Refer to **Section 5C - Advanced Midsection (AMS) Lower Cowl Removal**.
2. Remove the powerhead. Refer to **Section 4A - Removing Powerhead Components as an Assembly**.
3. Remove the gearcase from the driveshaft housing. Refer to **Section 6A - Gear Housing Removal**.
IMPORTANT: The water pump indicator fitting is fragile. Remove the water pump indicator fitting before removing the starboard idle relief muffler.
4. Remove the idle relief components. Refer to **Idle Relief Muffler**.


Driveshaft Housing Removal

1. Remove the shift actuator:
 - a. Remove the shift actuator harness grommet from the chap plate.

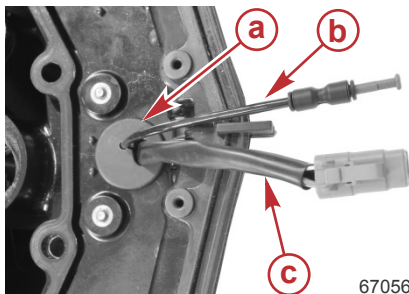

- a - Grommet in chap plate
- b - Speedometer water pickup tube
- c - Shift actuator harness


- b. Remove the four M6 x 20 T30 Torx® socket head screws securing the shift actuator.
NOTE: It may be helpful to tilt the midsection. Be certain to engage the tilt lock.

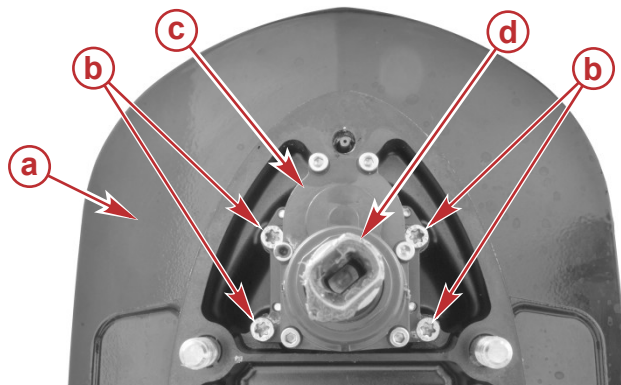

- a - Underside of driveshaft housing
- b - M6 x 20 T30 Torx® socket head screws (4)
- c - Shift actuator
- d - Shift shaft coupler

- c. Feed the shift actuator harness and speedometer water pickup tube down through the opening in the chap plate, and disengage them from the shift actuator harness bracket.


- d. Disconnect the speedometer water pickup tube from the Legris fitting in the antiventilation plate, and remove the tube.

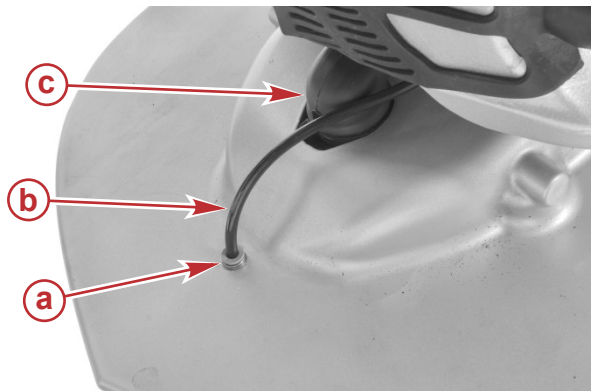

67377

- a - Legris fitting in antiventilation plate
- b - Speedometer water pickup tube
- c - Shift actuator harness boot

- e. Remove the shift actuator harness retention clip. Use a flat blade screwdriver to pry the clip from the driveshaft housing.

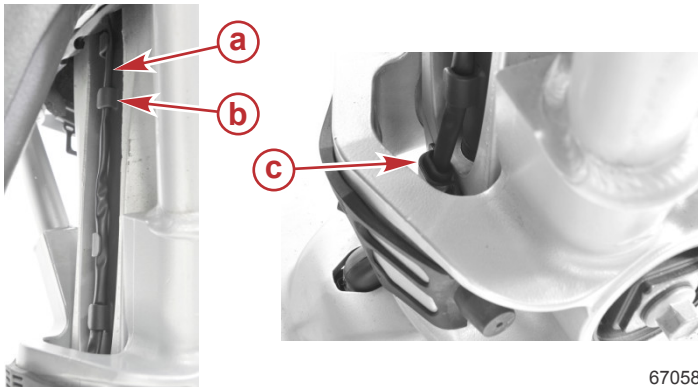

67058

- a - Shift actuator harness and speedometer water pickup tube
- b - Shift actuator harness bracket
- c - Retention clip

- f. Remove the harness and actuator assembly from the driveshaft housing.

2. Remove items from the chap plate:

- a. Disconnect and remove the block drain and flush hose assembly at the port quick-connect fitting.




67060

- a - Flush hose
- b - Port block drain hose
- c - Quick-connect


- b. Remove the Oetiker® clamp from the lower water supply hose, and remove the hose from the upper water supply hose assembly.

Pedestal/Mount Cradle and Driveshaft Housing

- c. Pull the upper water supply hose assembly up, to remove it from the grommet in the chap plate. Do not lose the strainer located in the top of the assembly.

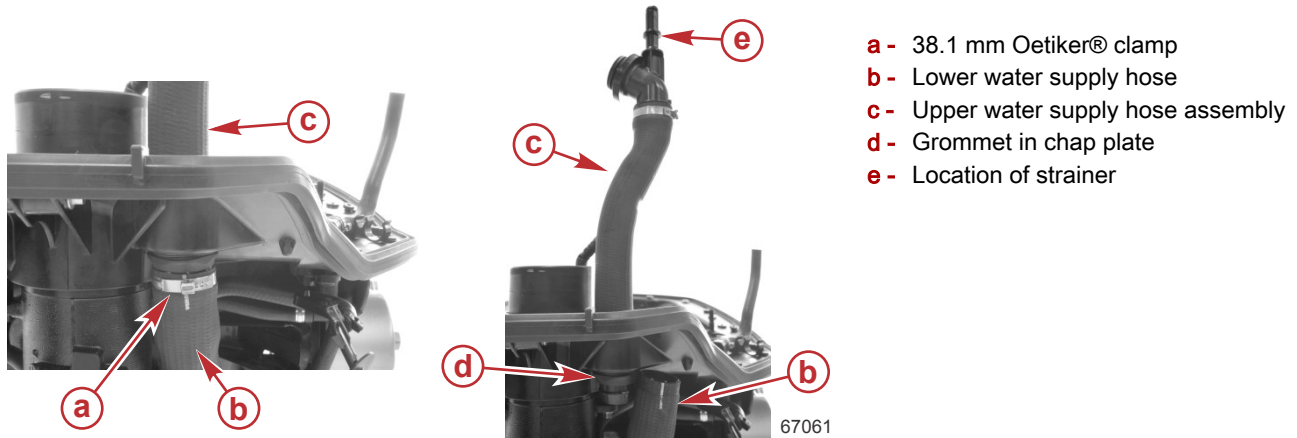


- d. Remove one M6 x 20 hex flange head screw from the elbow fitting for the water return hose, and remove the elbow (with hose attached) from the exhaust tube.

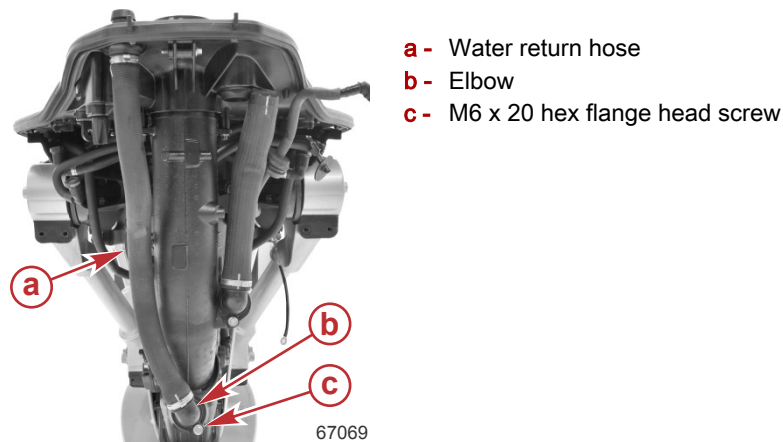

- e. Disconnect the quick-connect fittings for the port and starboard fuel rail supply hoses. Rotate each fitting 90 degrees, and remove the assemblies from the chap plate. Be certain to capture and dispose of fuel according to applicable regulations.


NOTE: The preformed fuel rail supply hoses have unique profiles.
Do not misplace the clip attached to the starboard hose.

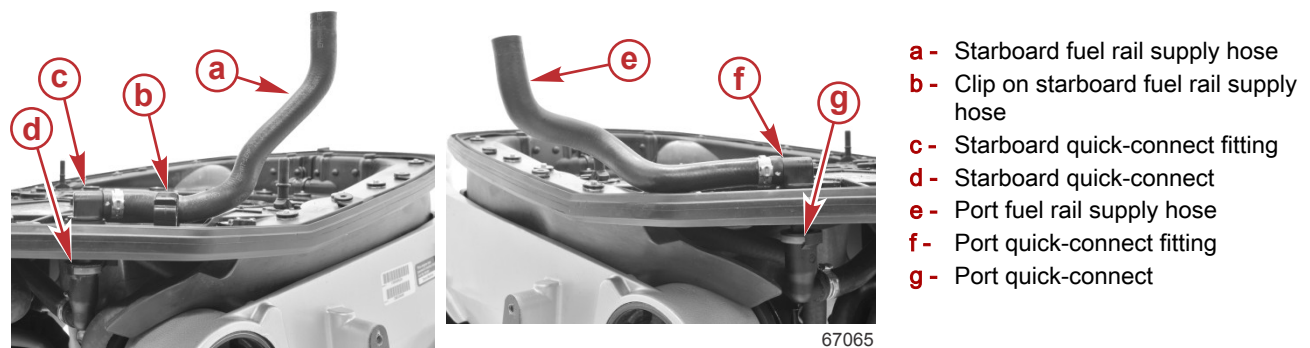

3. Remove the fuel supply module (FSM):

- Cut the cable tie that secures the FSM supply hose to the FSM bracket.
- Press the FSM supply hose grommet and hose down through the chap plate.
- Disconnect the hose from the FSM, and remove the hose from the midsection. Be certain to capture and dispose of fuel according to applicable regulations.


- d. Press the FSM harness grommet and harness down through the chap plate.

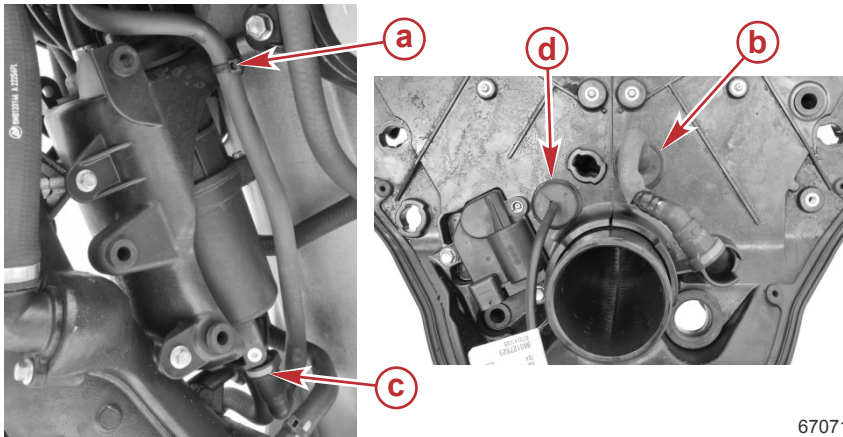

- a - Cable tie
- b - FSM supply hose grommet
- c - FSM supply hose quick-connect
- d - FSM harness grommet

67071


- e. Cut the cable tie that secures the sprayer hose assembly to the port side of the FSM bracket.
 f. Remove the clip from either the drain hose assembly or the sprayer hose assembly, to separate the two.

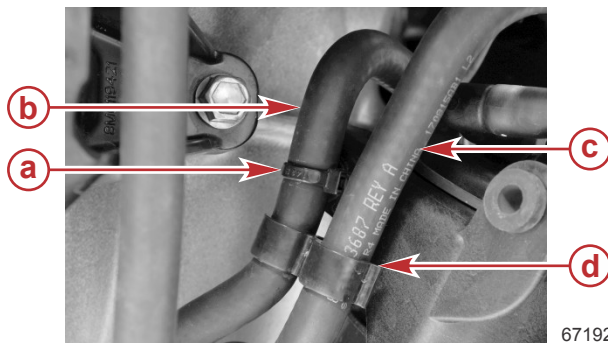

- a - Cable tie and anchor on port side of FSM bracket
- b - Sprayer hose assembly
- c - Drain hose assembly
- d - Clip

67192

- g. Cut the cable tie and remove the FSM water supply hose from the water strainer.
 h. Remove the M6 x 25 hex flange head screw that secures the bottom of the FSM to the exhaust tube.
 i. Remove the four M6 x 16 hex flange head screws (two each side) that secure the FSM to the exhaust tube.

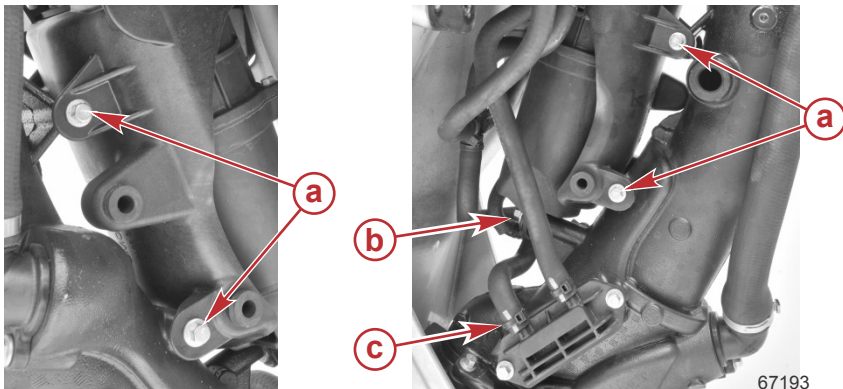


- a - M6 x 16 hex flange head screws (4)
- b - M6 x 25 hex flange head screw
- c - Cable tie on FSM water supply hose

67193

- j. Carefully remove the FSM assembly (including bracket and hoses) from the midsection.
NOTE: Lift the assembly up until the bracket clears the bosses on the exhaust tube. Some shifting of hoses may be required.



Pedestal/Mount Cradle and Driveshaft Housing

- Remove the four screws (one on each side and two in front) that secure the sound block to the cradle.

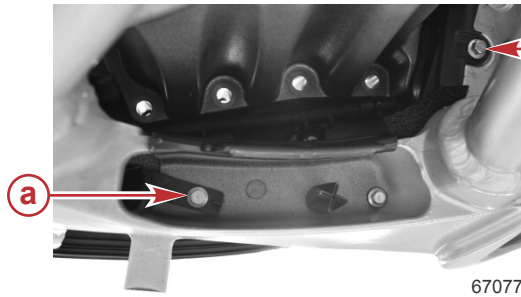

Underside of port side shown, starboard similar
a - Side screw, one each side
b - Front screws (2 total)

- Pull down on the handles to release the sound block from the cradle.

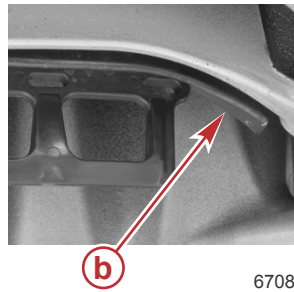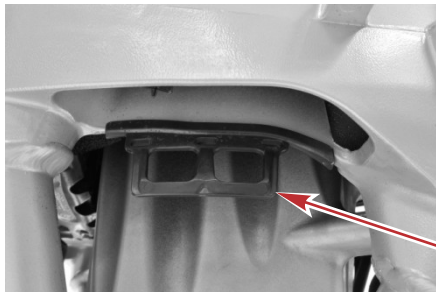


a - Sound block handle (engaged)
b - Handle disengaged from cradle

- Install lift hooks onto the driveshaft housing, and support the assembly with an appropriate hoist.




- Remove the engine mounts:
 - Remove the mount retainers from the mounts.
 - Remove the mount screws. Retain the special mount washers.
 - Remove the mounts from the cradle.

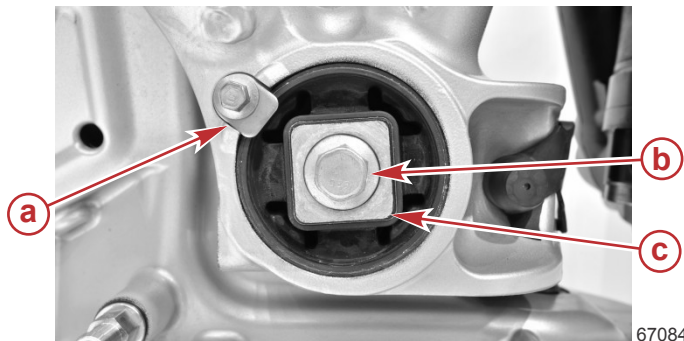


Starboard lower mount shown, others similar
a - Mount retainer
b - Mount screw and special washer
c - Engine mount


- d. Remove the mount dowels.

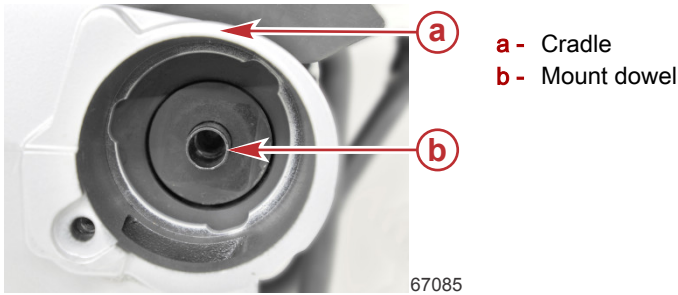

8. Lift the driveshaft housing slightly. Then remove the driveshaft housing from the cradle.
9. Remove the four snubber washers from the driveshaft housing.

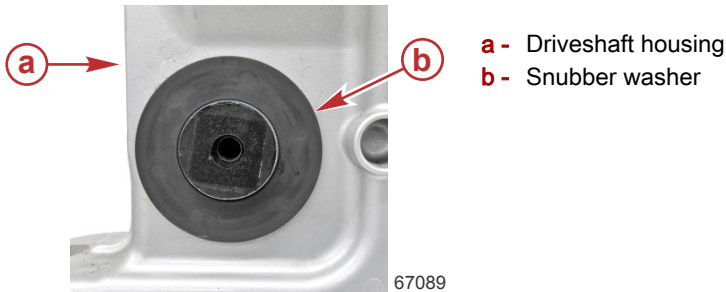


10. Remove the shift actuator harness retention bracket from the driveshaft housing.
a. Lift the top piece up out of the driveshaft housing.
b. Lift the lower piece up, pull it out, and then pull it down out of the driveshaft housing.

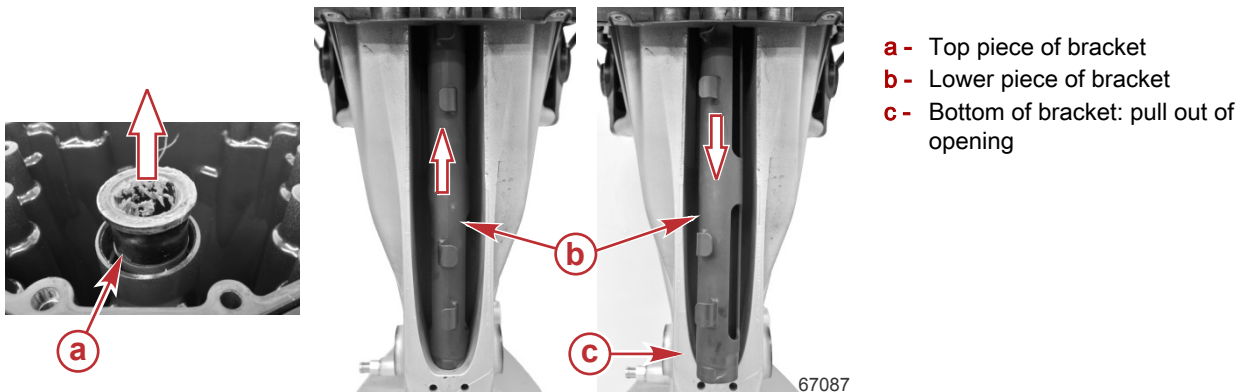


Driveshaft Housing Disassembly

1. Turn the driveshaft housing upside down.
2. Remove the single screw that secures the water strainer in the starboard side of the exhaust tube, and remove the strainer (with hose attached). This will allow the drain hose assembly to come free with the chap plate assembly.

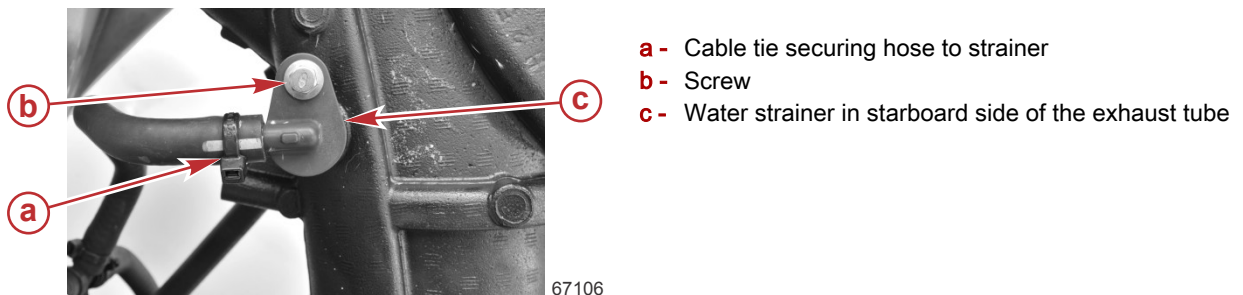

Pedestal/Mount Cradle and Driveshaft Housing


- Remove the screws securing the sprayers.

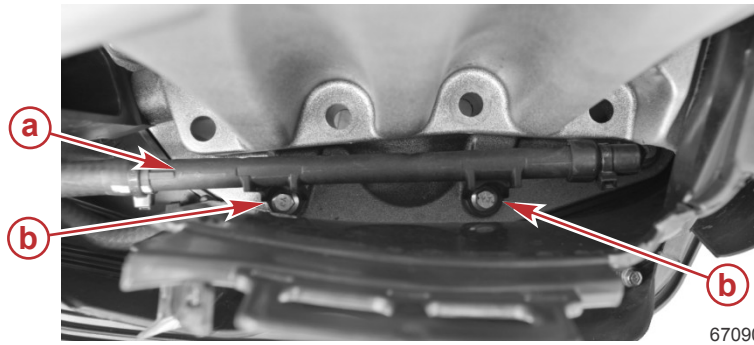

Port side shown, starboard similar

- a** - Sprayer assembly
- b** - M6 x 23 hex flange dog point screw (2 each side, 4 total)

- Remove the four front chap plate screws. Use a 1/4 in. drive 8 mm swivel socket to remove the two corner screws, as the driveshaft housing does not allow enough clearance for a standard socket.

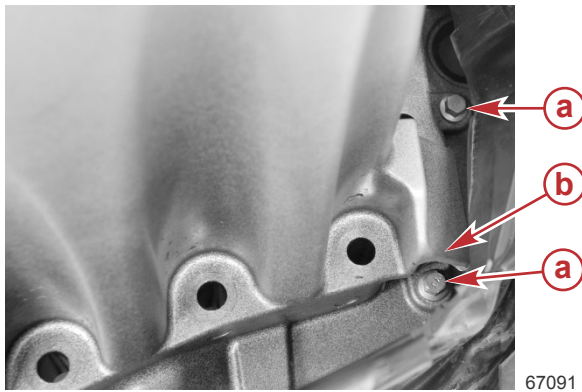


- a** - M6 x 23 hex flange dog point screw (four total at front of driveshaft housing)
- b** - Point of interference: use a 1/4 in. drive 8 mm swivel socket to remove the corner screws

1/4 in. Drive 8 mm Swivel Socket


Snap-on® TMUSM8A

- Remove six screws (three screws per bracket), and remove the upper mount brackets.

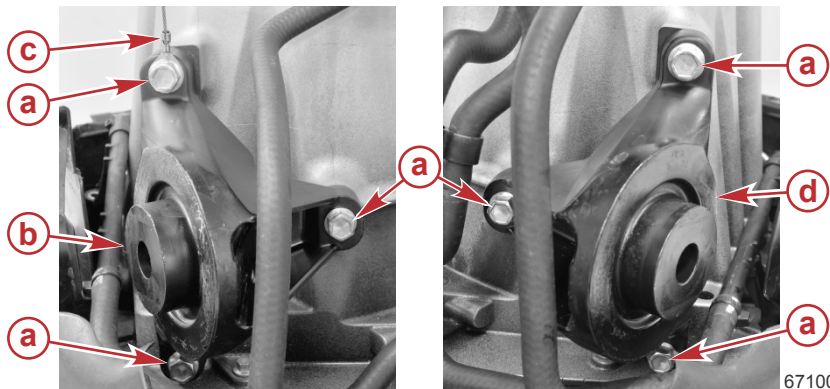

- a** - Screws (three each mount bracket, six total)
- b** - Upper mount bracket, starboard side
- c** - Ground continuity cable
- d** - Upper mount bracket, port side


- Remove the four remaining chap plate screws from the driveshaft housing.

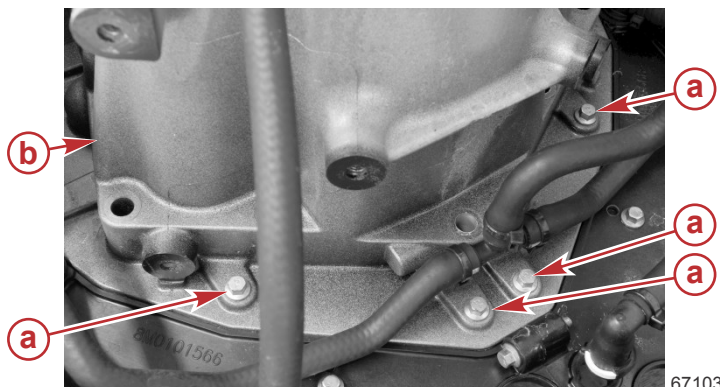

- a** - Screws (4)
- b** - Driveshaft housing

- Loosen, but do not remove the two screws that secure the two chap plate halves together.

8. Remove the two screws that secure the chap plate to the exhaust tube.

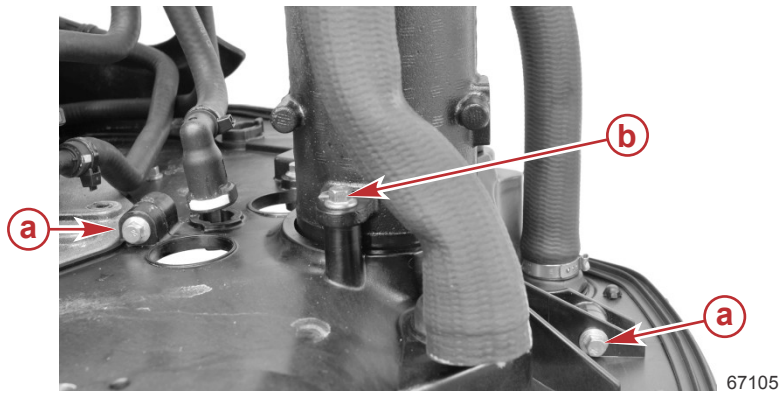


- a** - Screws securing the chap plate halves together (2)
- b** - Screws securing the chap plate to the exhaust tube (2 total, 1 each side)

9. Remove the chap plate from the driveshaft housing and exhaust tube. Exercise care to not damage the sound block.

10. Remove components from the chap plate, as required:

- a. Remove two cable ties to remove the drain hose assembly.
- b. Remove an Oetiker® clamp to remove the return hose from the fitting on the chap plate.
- c. Remove ten screws to remove the sound block from the chap plate.

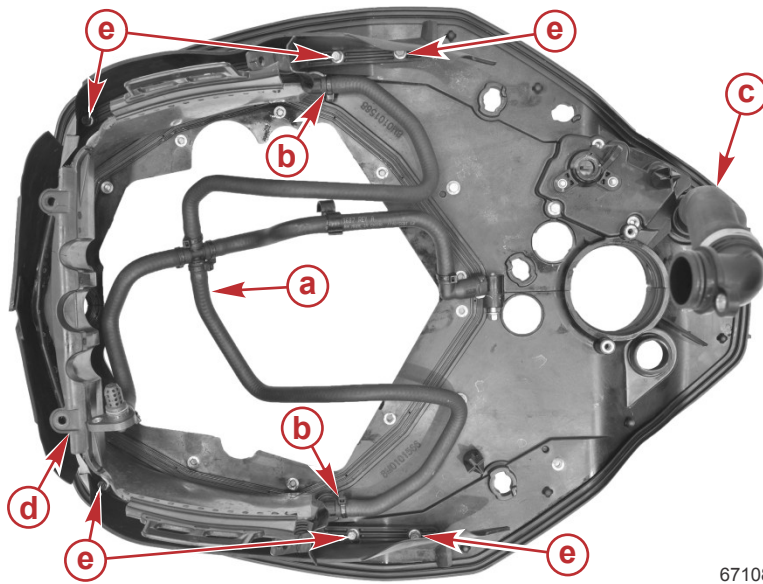


Bottom view of chap plate

- a** - Drain hose assembly
- b** - Cable tie (one at each block drain hose fitting)
- c** - Water return hose, secured to through-chap plate fitting by an Oetiker clamp
- d** - Sound block
- e** - Screws securing sound block to chap plate (6 shown, 10 total)

- d. Rotate the block drain hose fittings 90° to remove them from the chap plate.
- e. Remove two screws to remove the advanced sound control module from the chap plate.

Pedestal/Mount Cradle and Driveshaft Housing

- f. Pull the return hose fitting up and out of the grommet, to remove it from the chap plate.

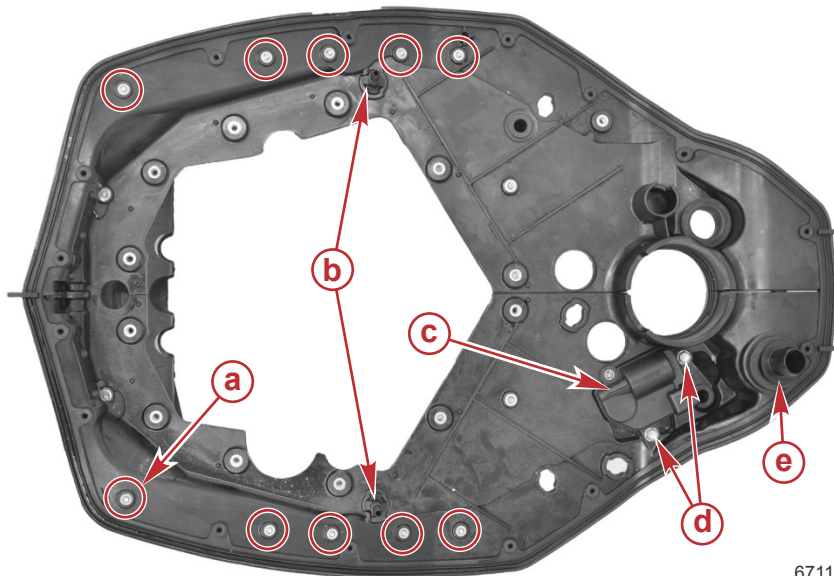


Top view of chap plate

- a** - Locations of ten screws securing sound block to underside of chap plate
- b** - Block drain hose fittings - rotate 90° to remove
- c** - Advanced sound control (ASC) module
- d** - Screws (2) securing the ASC module
- e** - Water return hose fitting

67112


11. Remove two screws to remove the water strainer (and attached hose) from the port side of the exhaust tube.

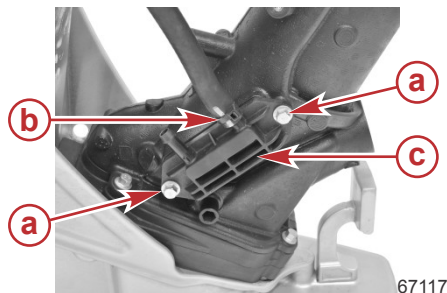

- a** - Screw (2)
- b** - Cable tie securing sprayer hose to strainer
- c** - Strainer

67117


12. Remove one screw that secures the water supply hose elbow to the exhaust tube. Remove the elbow and attached hose.

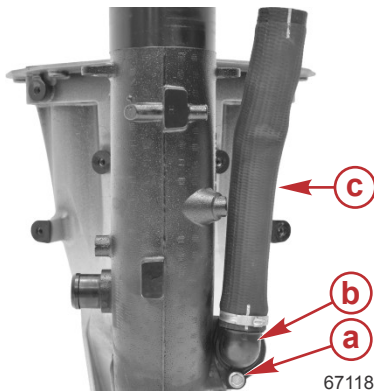


- a** - Screw
- b** - Water supply hose elbow
- c** - Water supply hose

67118

- Remove four screws to remove the exhaust tube from the driveshaft housing.

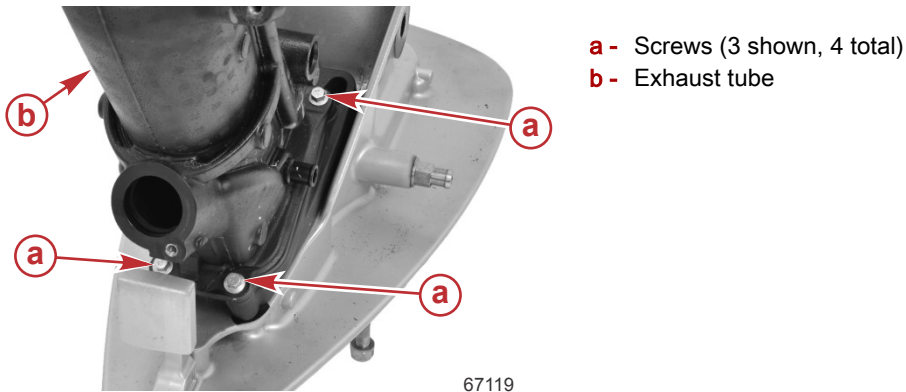


- Remove the water supply elbow from the driveshaft housing.

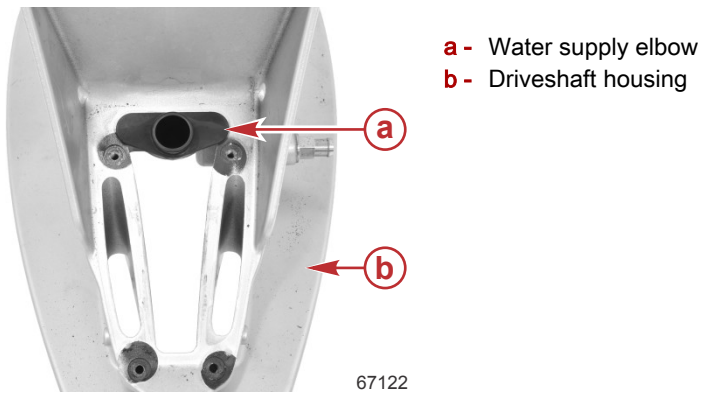

Mount Cradle Disassembly

Trim Position Sensor Removal


- Cut the cable tie from the wire bundle.

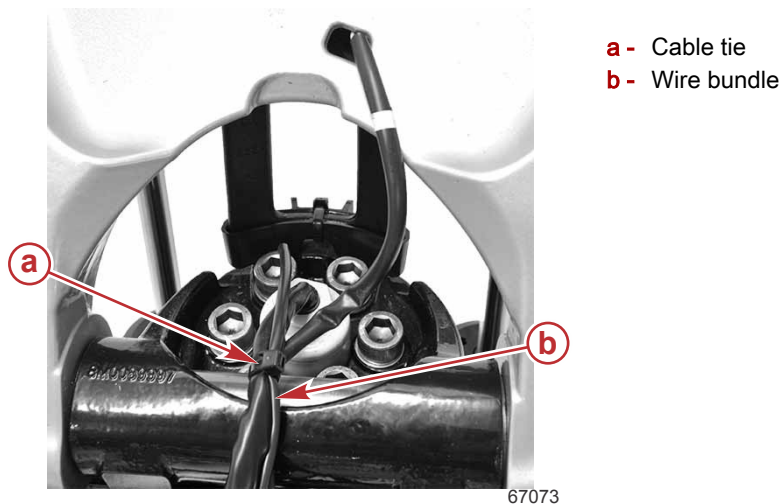

- Trim the mount cradle all the way up. Engage the tilt lock bracket.
- Remove the two screws and the trim position sensor from the mount cradle.



Pedestal/Mount Cradle and Driveshaft Housing

NOTE: The trim position sensor magnet is located on the starboard pivot pin.

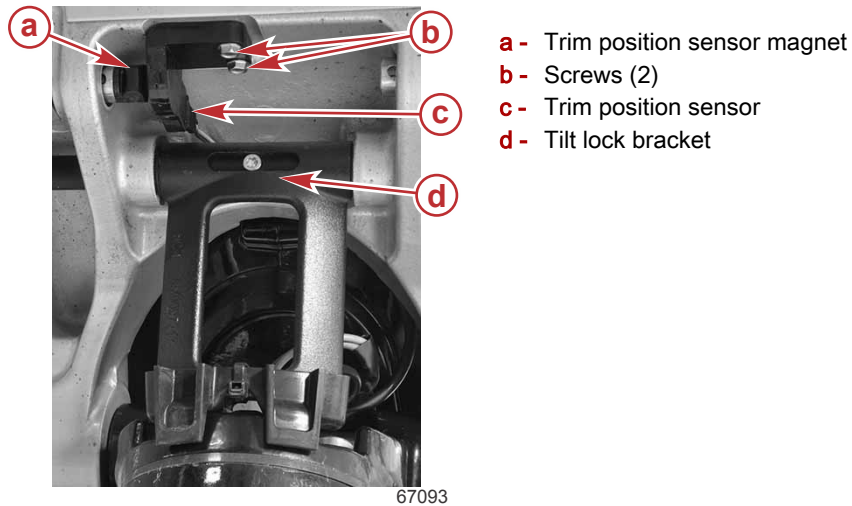

Remove the Mount Cradle from the Pedestal

1. Use Oetiker® crimp tool pliers to remove the two trilobe pins from the pivot pins. Discard the trilobe pins.

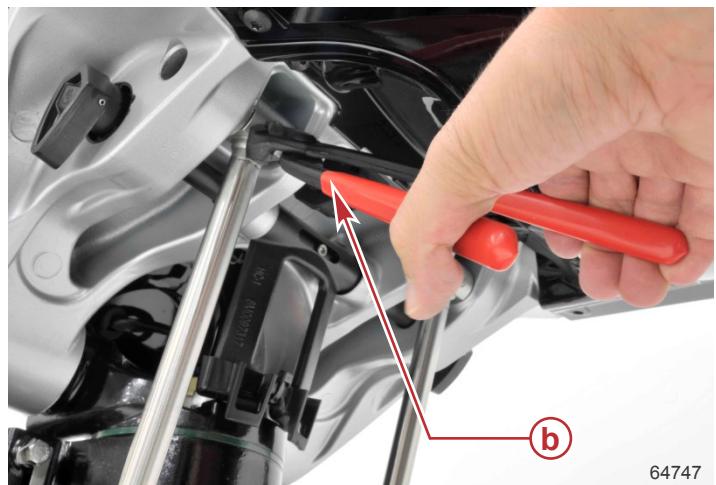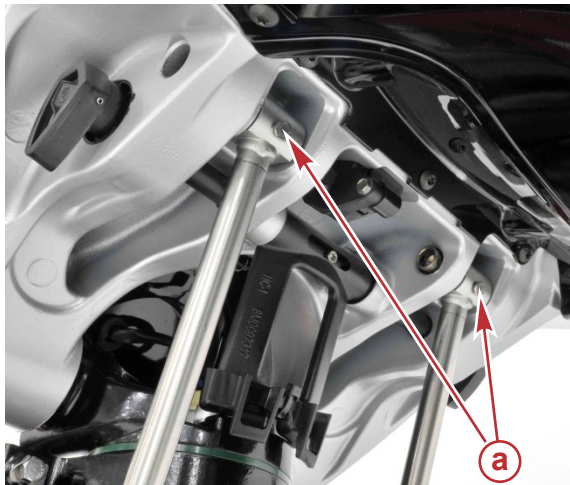

- a** - Trilobe pins
- b** - Oetiker® pliers

2. Remove the pivot pins with a brass drift and a hammer.




- a** - Starboard pivot pin

3. Disengage the tilt lock bracket and trim the mount cradle down.

⚠ CAUTION

Wear eye protection when performing the following procedure. Failure to do so may cause personal injury.

- Remove and discard the spiral lock securing the tilt tube into the mount cradle.

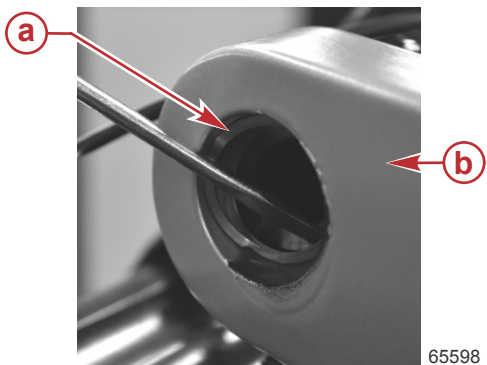


- a - Spiral lock
- b - Mount cradle

65598

⚠ CAUTION

To avoid the possibility of injury or component damage, use caution when lifting heavy objects. Use an appropriate lifting device or seek assistance.

- Support the mount cradle so it will not fall when the tilt tube is removed.
- Remove the tilt tube from the mount cradle.

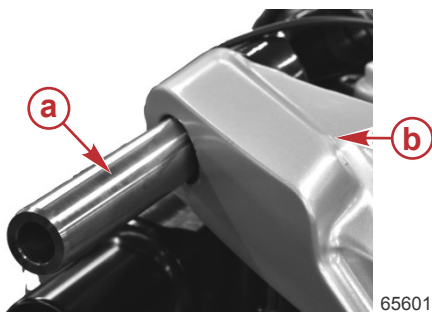


- a - Tilt tube
- b - Mount cradle

65601

- Remove the mount cradle from the pedestal.

Tilt Lock

- Remove the screw from the tilt lock bracket and tilt lock shaft.

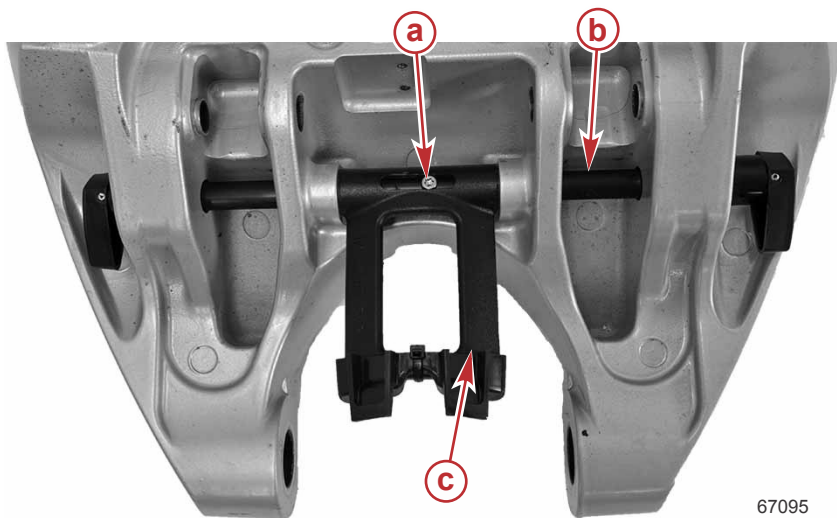


- a - Tilt lock bracket screw (T27 Torx®)
- b - Tilt lock shaft
- c - Tilt lock bracket

67095

Pedestal/Mount Cradle and Driveshaft Housing


- Using a drift pin and hammer, remove the roll pin from the tilt lock lever.

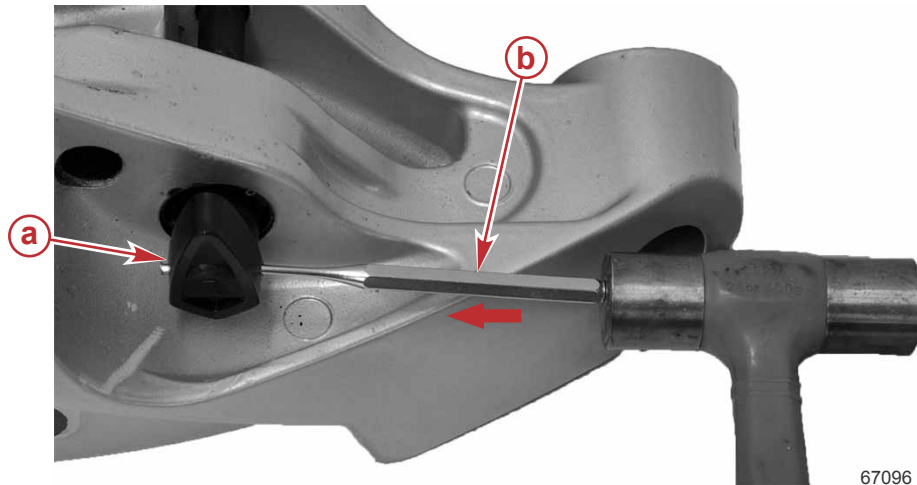

- a** - Tilt lock lever with roll pin
- b** - Drift pin

67096


- Remove the tilt lock lever and spring.
- Slide the tilt lock shaft out of the bore from the opposite side of the cradle mount.
- Remove the tilt lock bracket.

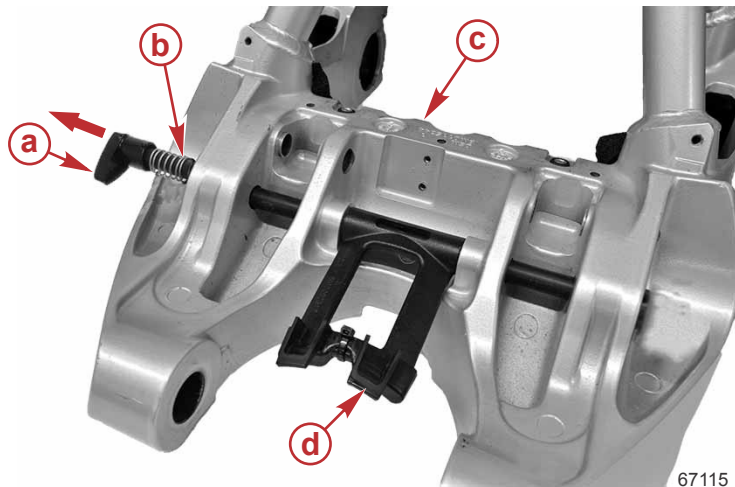

- a** - Tilt lock lever
- b** - Tilt lock shaft and spring
- c** - Mount cradle
- d** - Tilt lock bracket

67115


- Remove the two bearings from the tilt lock shaft bores.

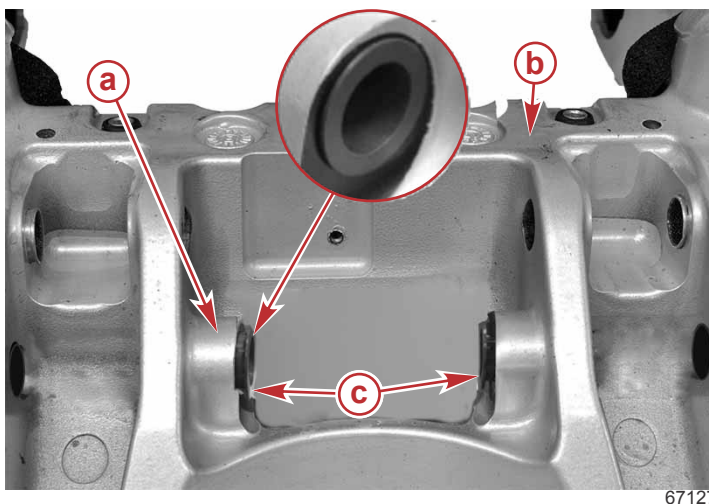

- a** - Tilt lock shaft bore
- b** - Mount cradle
- c** - Tilt lock bearing (2)

67127

- Use a slide hammer puller to remove the tilt lock clutch from the port and starboard side of the mount cradle.

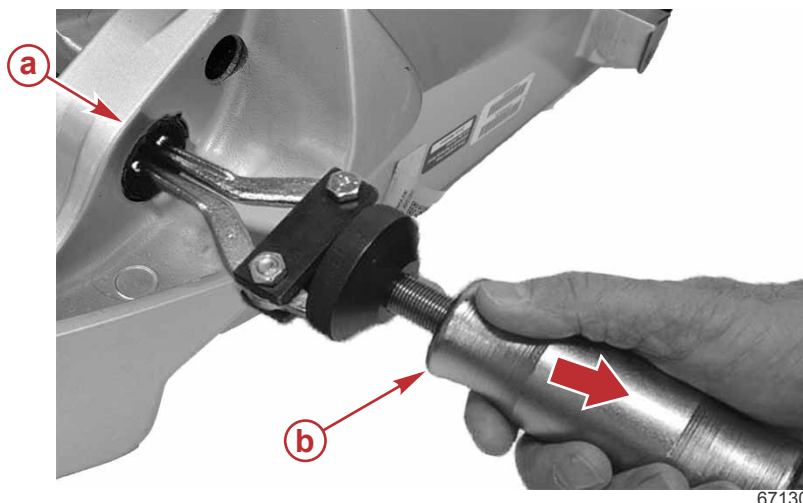

- a - Tilt lock clutch
- b - Slide hammer

67130

Slide Hammer	91-34569A 1
--------------	-------------


Pedestal Disassembly

Mount Cradle Removal

NOTE: The driveshaft housing must be removed before removing the mount cradle. Refer to **Driveshaft Housing Removal**.

Pedestal Bearings and Seals


- Remove the top outer bearing from the pedestal.

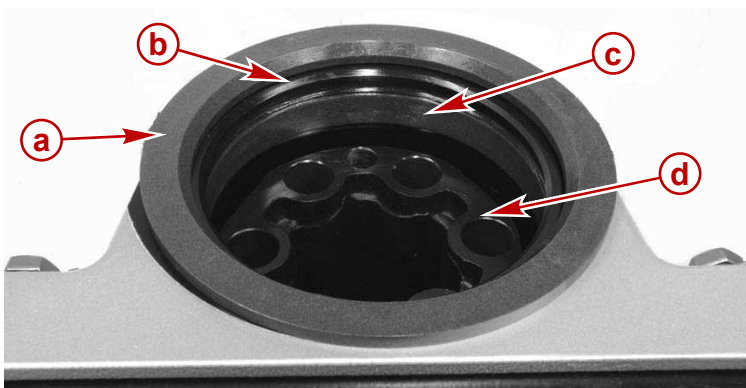

- a - Top outer bearing
- b - Seal
- c - Top inner bearing
- d - Steering arm

4055

- Place a wooden block on top of the pedestal to protect it during the seal removal. Use a flat blade screwdriver to remove the seal and the top inner bearing inside the pedestal.
- Remove the inner bearing and seal.

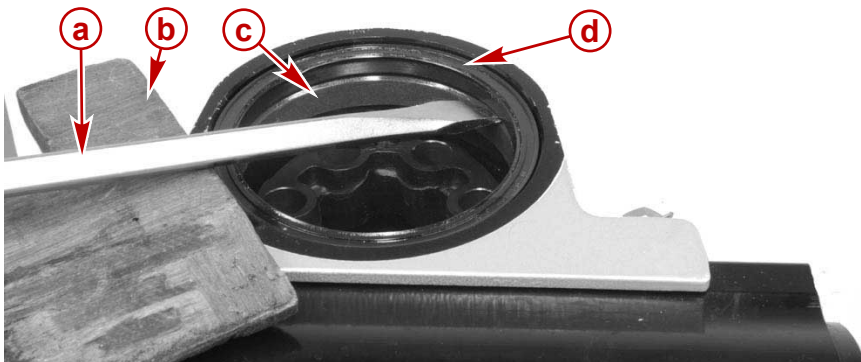


- a - Flat blade screwdriver
- b - Wooden block
- c - Top inner bearing
- d - Seal


4053

Pedestal/Mount Cradle and Driveshaft Housing

4. Remove the bottom outer bearing from the steering tube.

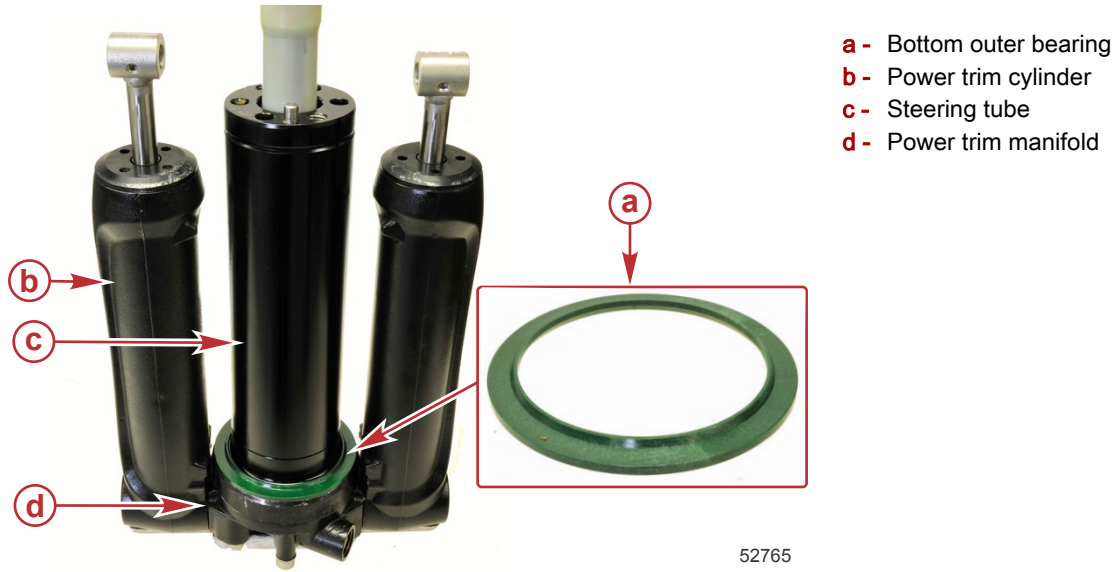


5. Remove the bottom seal using the same procedure as on the top seal.
6. Remove the bottom inner bearing.

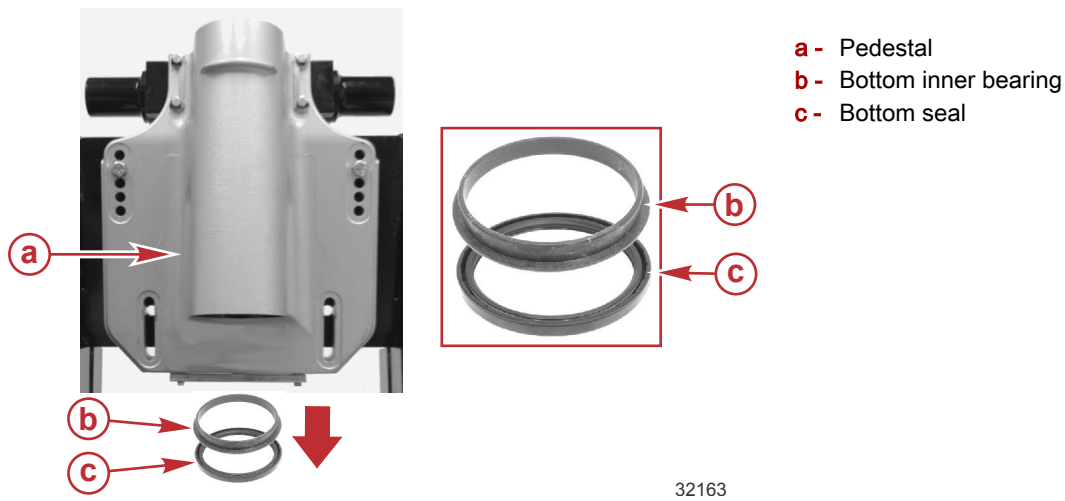

Steering Tube

1. Remove the six screws attaching the steering tube to the power trim system assembly.

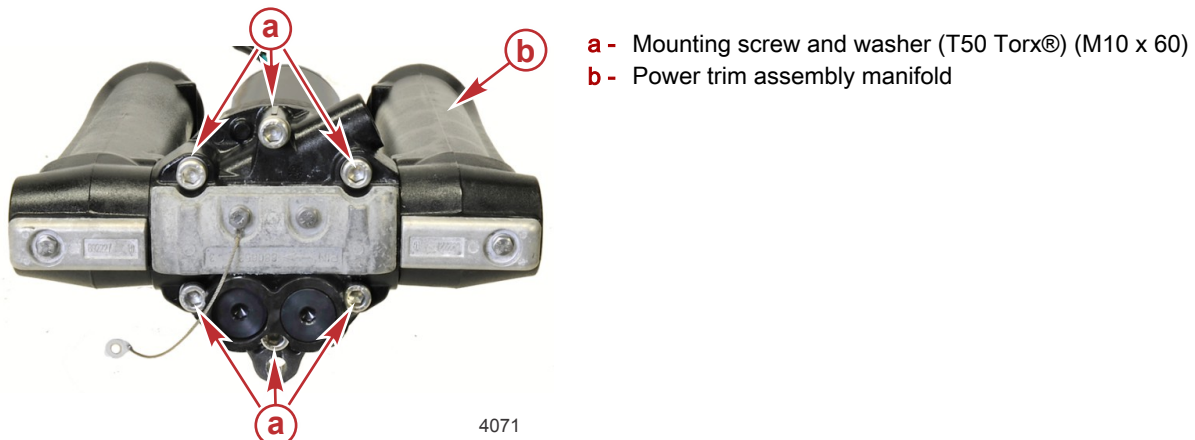


2. Remove the steering tube from the power trim system assembly.

Advanced Midsection (AMS) Assembly


Pedestal Assembly

Steering Tube

1. Install the steering tube onto the power trim assembly manifold.
2. Align the dowel pin as shown.

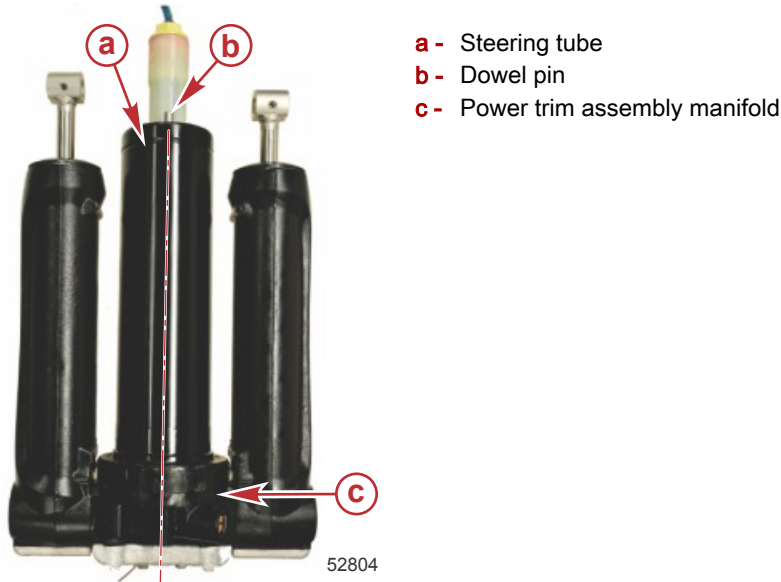

3. Install the six screws and washers securing the steering tube to the power trim assembly manifold.
4. Tighten the screws to the specified torque.

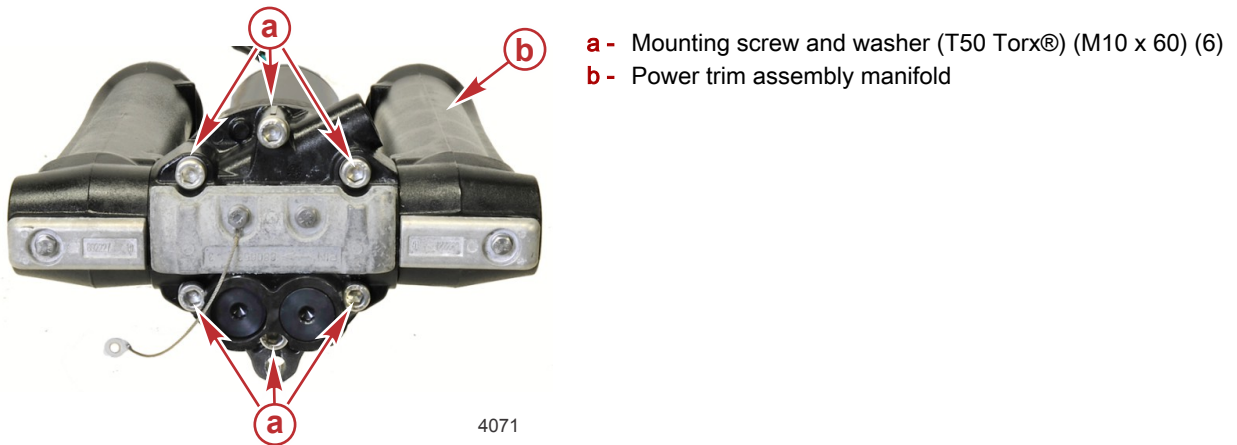


Description	Nm	lb-in.	lb-ft
Mounting screw (M10 x 60)	54.2	-	40

Bearings and Seals


1. Install the top inner bearing into the top of the pedestal.
2. Press the seal with the spring side up into the top of the pedestal.

Pedestal/Mount Cradle and Driveshaft Housing


3. Install the top outer bearing on the top of the pedestal.

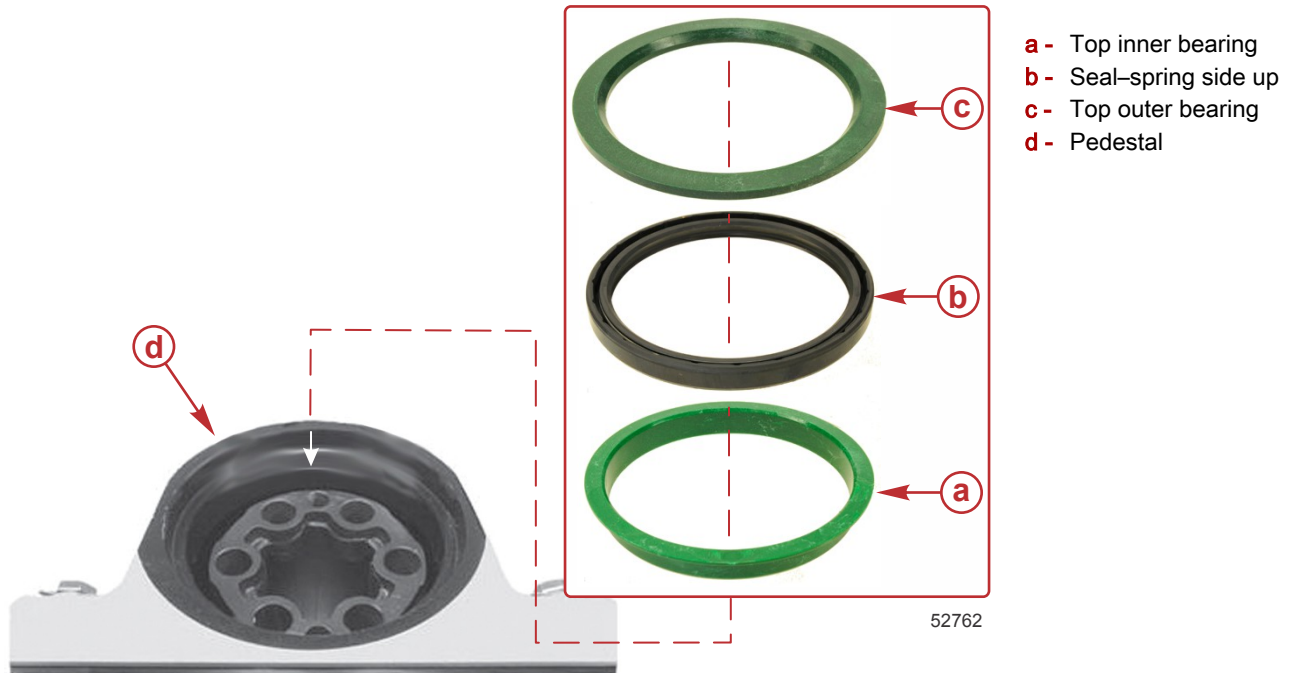


4. Install the bottom inner bearing into the bottom of the pedestal.
5. Press the seal with the spring side down into the bottom of the pedestal.

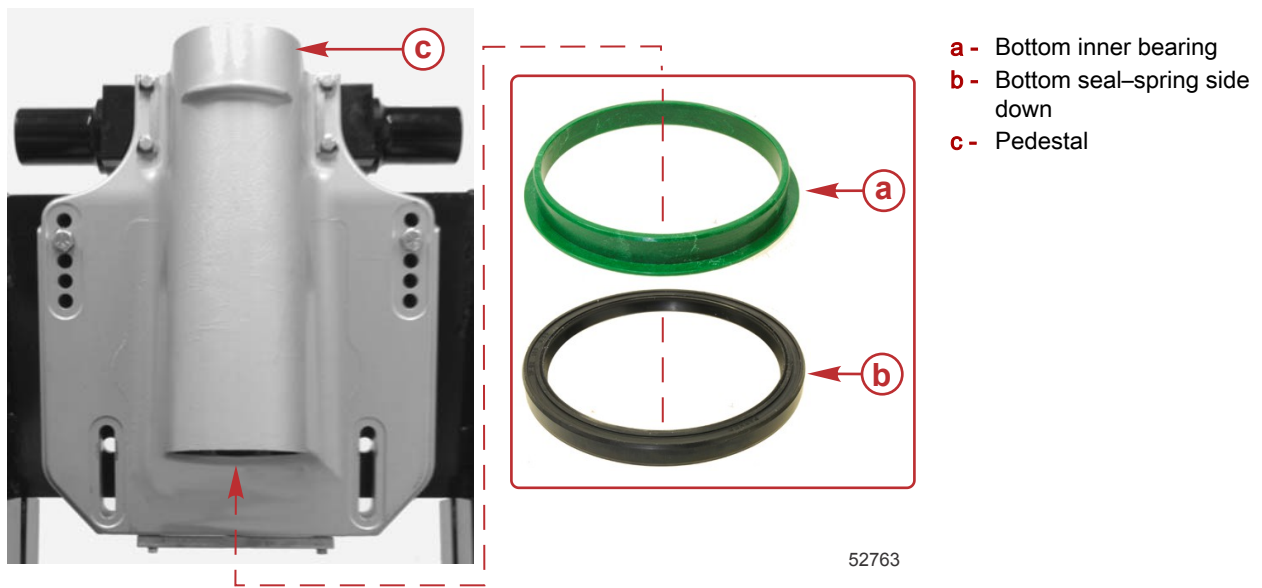


6. Install the bottom outer bearing over the steering tube on the power trim manifold.

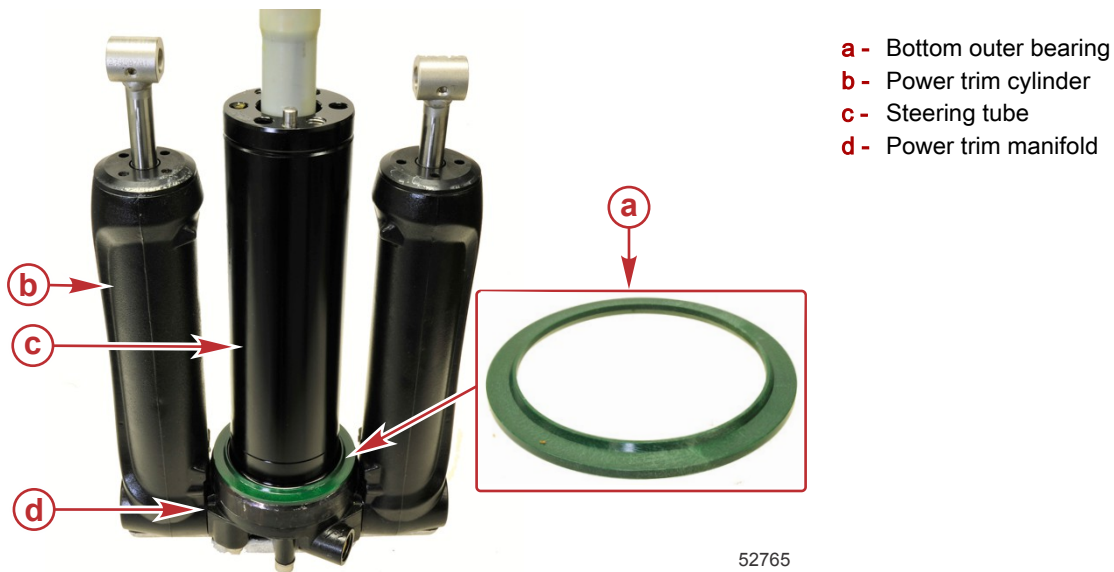

7. Remove and replace the two bearings and O-ring in the steering head if required.

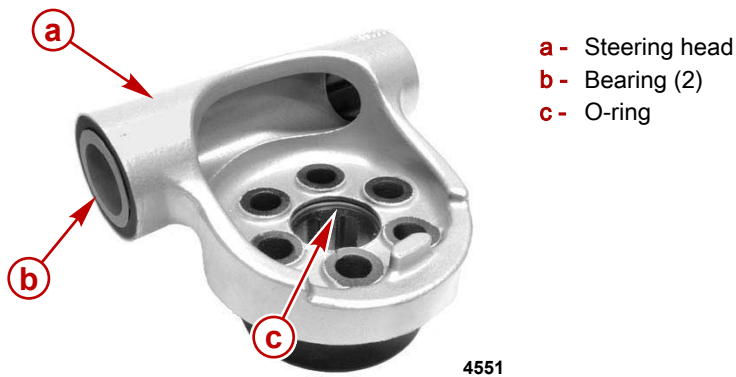

8. Install the steering head into the pedestal. Insert the dowel pins of the steering head into the holes of the steering arm.

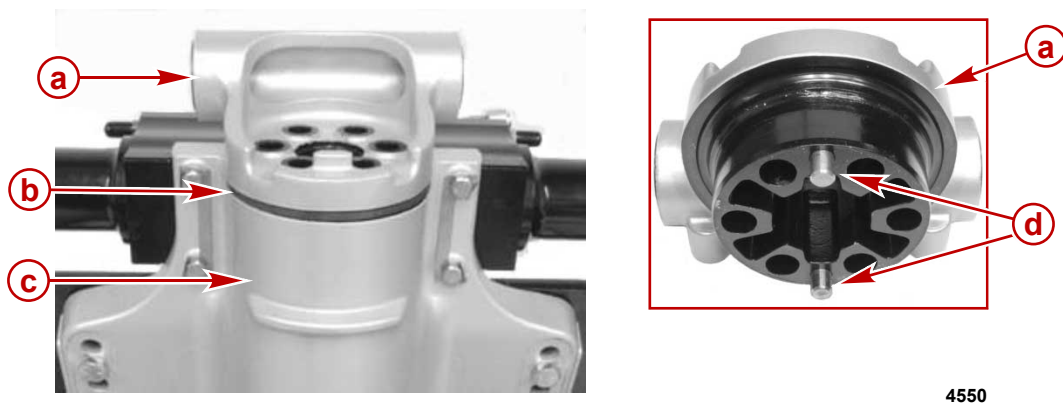


Power Trim System


1. Connect the power trim wires to a 12-volt power supply and extend the trim cylinder rods.

Pedestal/Mount Cradle and Driveshaft Housing

2. Insert the power trim harness through the bottom of the pedestal and out the top of the pedestal.

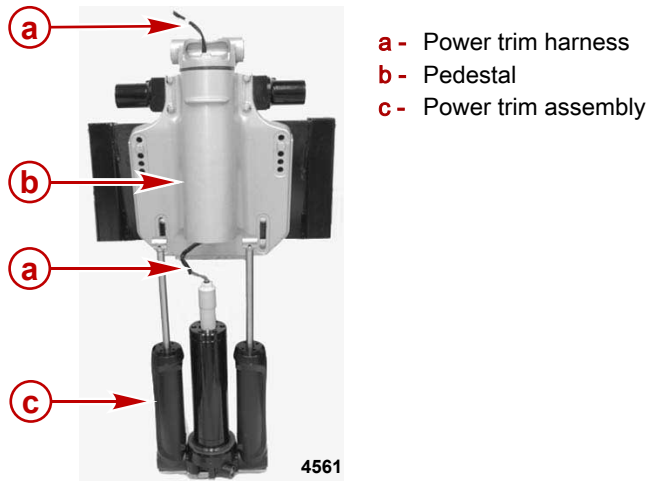


3. Install the power trim assembly into the pedestal.
4. Install the screw with the ground cable in the hole location shown.
5. Fasten the power trim assembly to the pedestal and the steering head with six screws. Tighten the screws to the specified torque.

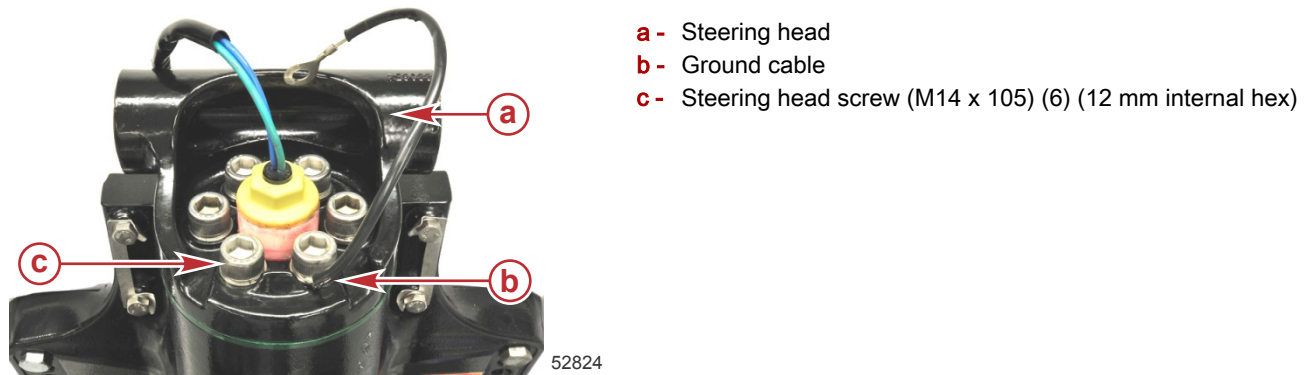

Description	Nm	lb-in.	lb-ft
Steering head screws (6)	122	-	90


6. Attach the two anodes and ground cable to the splash plate. Tighten the screws to the specified torque.

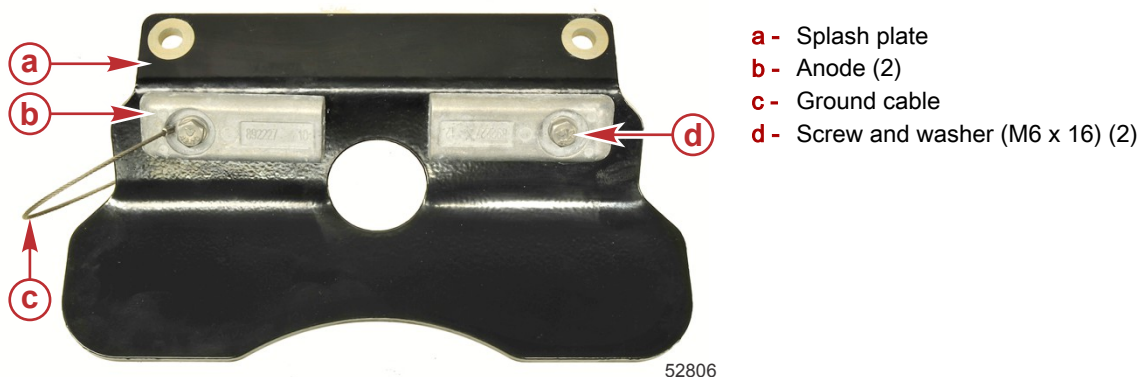

Description	Nm	lb-in.	lb-ft
Anode mounting screw (M6 x 16)	5.6	50	-

7. Attach the anodes and ground cable to the power trim assembly. Tighten the screws to the specified torque.

- Attach the splash plate to the pedestal. Secure the plate with two screws and washers. Tighten the screws to the specified torque.

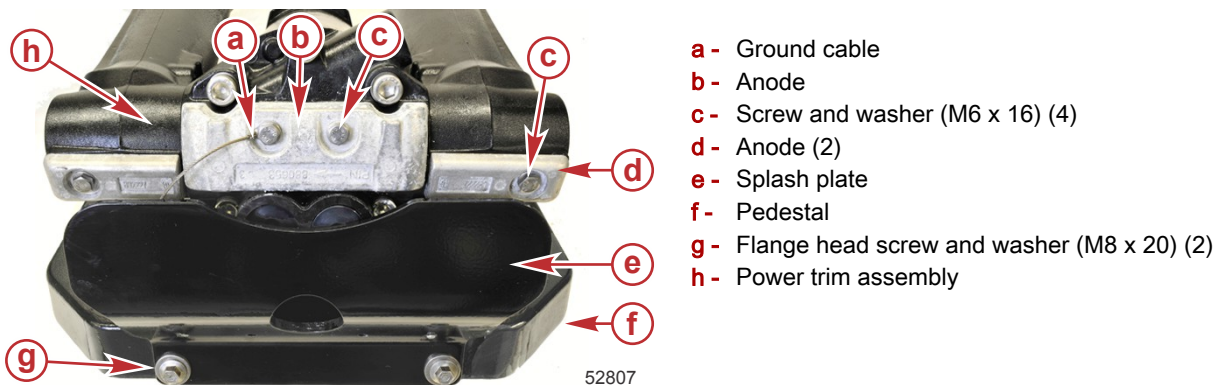


Description	Nm	lb-in.	lb-ft
Anode mounting screws (M6 x 16) (4)	5.6	50	-
Splash plate mounting screws (M8 x 20) (2)	14.1	125	-


Mount Cradle Assembly

Tilt Lock

- Install the tilt lock clutch in the port and starboard side of the mount cradle.

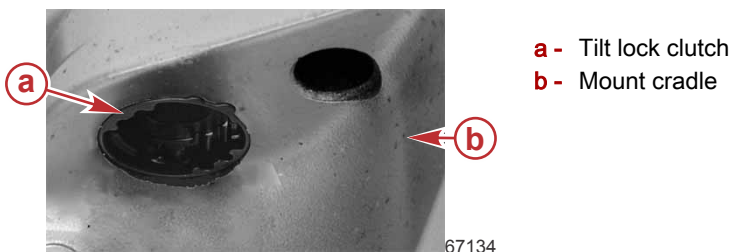


- Install one bearing into each tilt lock shaft bore.

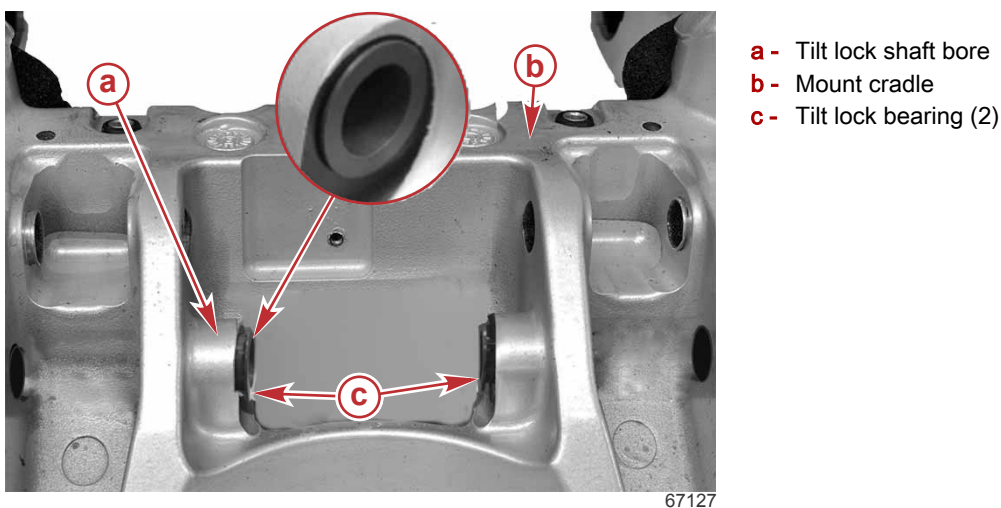


- Assemble the tilt lock lever onto the shaft. Install the roll pin.

Pedestal/Mount Cradle and Driveshaft Housing


- Install the spring onto the tilt lock shaft.

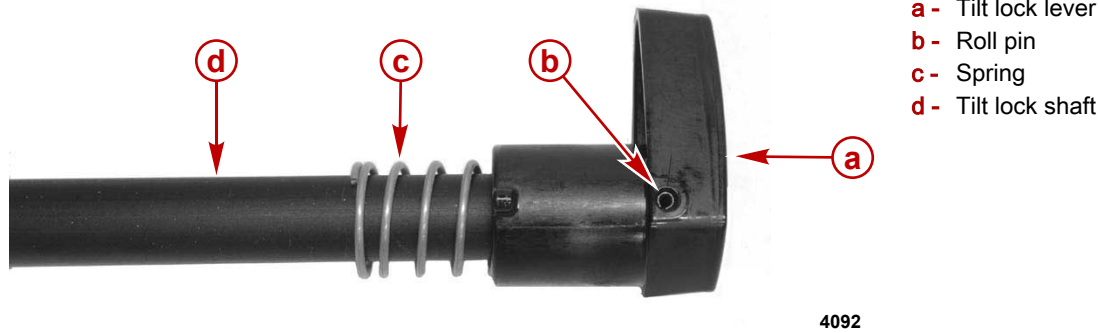

- Install the pad onto the tilt lock bracket. Secure the pad to the bracket with a cable tie.
- Slide the tilt lock shaft with the spring partially into the bore.
- Align the tilt lock lever with the tilt lock bracket.
- Slide the tilt lock shaft through the bracket into the opposite bore.

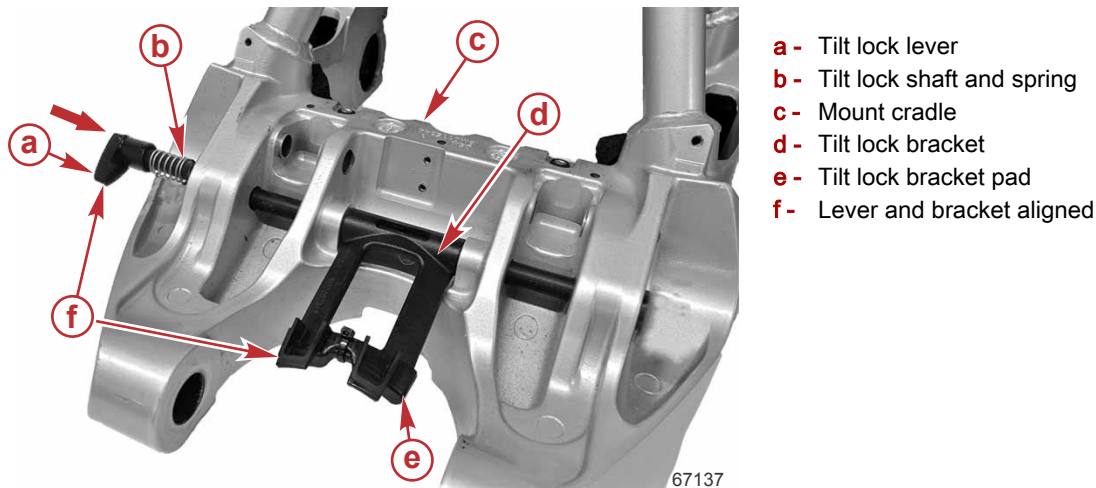

- Assemble the tilt lock lever and spring and install on the tilt lock shaft. Secure the lever with a roll pin.

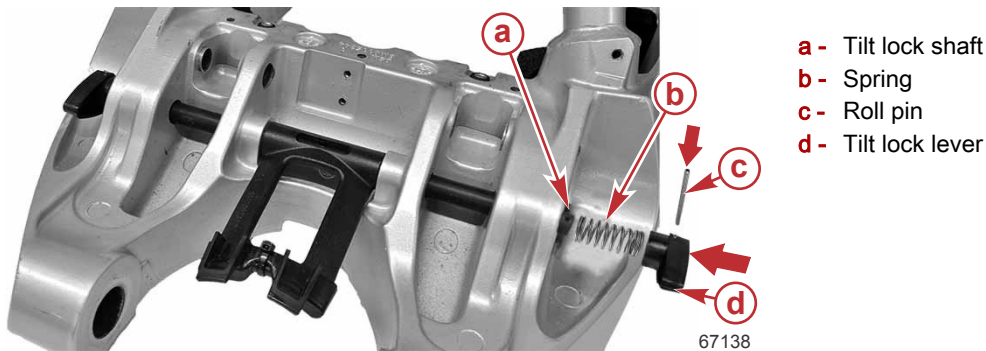


- Apply Loctite® 242 Threadlocker to the tilt lock bracket screw threads.

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	Tilt lock bracket screw threads	92-809821

- Align the hole in the tilt lock bracket with the threaded hole in the tilt lock shaft.

12. Install the screw through the tilt lock bracket into the tilt lock shaft. Tighten the screw to the specified torque.

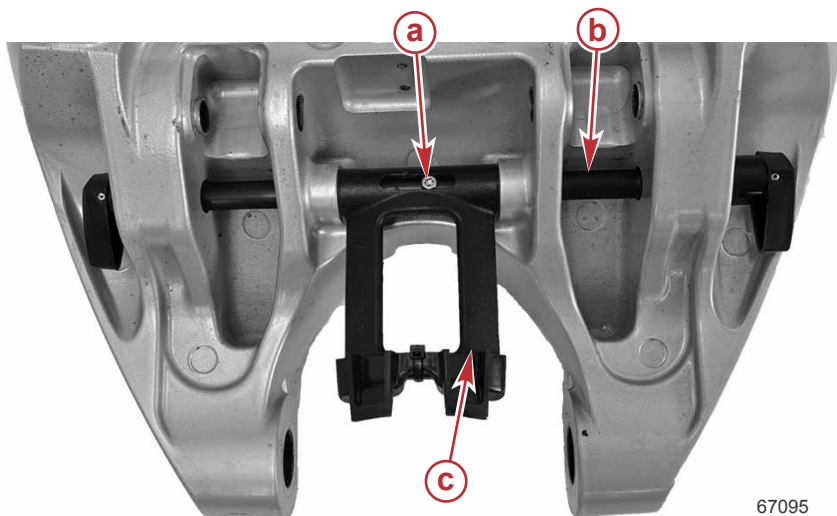


- a** - Tilt lock bracket screw (T27 Torx®) (M5 x 10)
- b** - Tilt lock shaft
- c** - Tilt lock bracket

67095

Description	Nm	lb-in.	lb-ft
Screw (M5 x 10)	4	35.4	-

Trim Position Sensor Installation

1. Install the trim position sensor on the mount cradle with two M5 x 16 hex washer head screws. Tighten the screws to the specified torque.

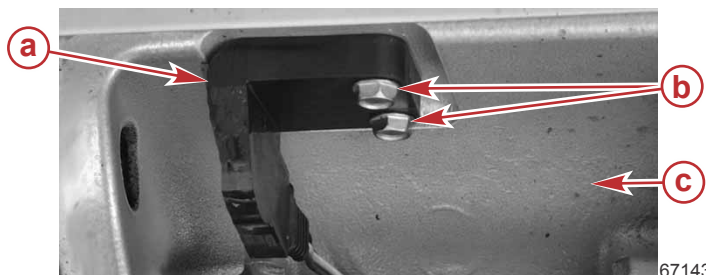


- a** - Trim position sensor
- b** - M5 x 16 hex washer head screws (2)
- c** - Mount cradle

67143

Description	Nm	lb-in.	lb-ft
M5 x 16 hex washer head screws	1.7	15	-

2. Route the wire bundle through the mount cradle.

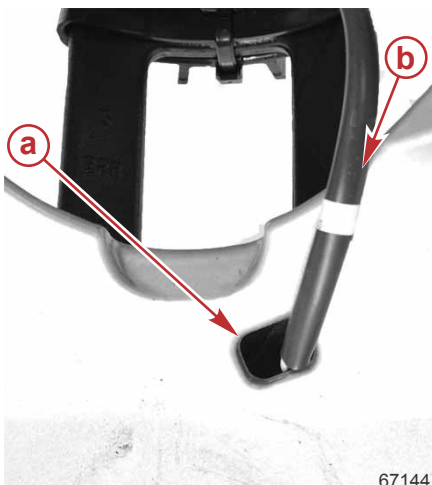

- a** - Mount cable
- b** - Wire bundle


67144

Install the Mount Cradle on the Pedestal

⚠ CAUTION

To avoid the possibility of injury or component damage, use caution when lifting heavy objects. Use an appropriate lifting device or seek assistance.

1. Support the mount cradle so it will not fall when the tilt tube is installed.
2. Install the mount cradle on the pedestal.
3. Install the tilt tube on the mount cradle.

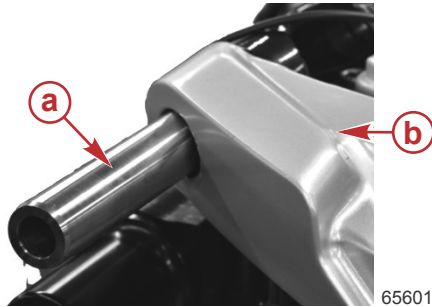


- a - Tilt tube
- b - Mount cradle

⚠ CAUTION

Wear eye protection when performing the following procedure. Failure to do so may cause personal injury.

4. Secure the tilt tube into the mount cradle with the new spiral lock.

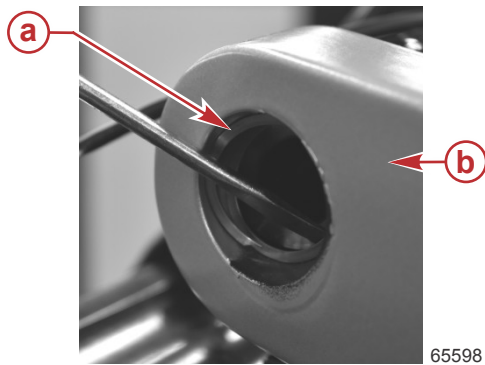


- a - Spiral lock
- b - Mount cradle

5. Trim the mount cradle all the way up. Engage the tilt lock bracket.
NOTE: The starboard pivot pin with the trim position sensor magnet will be installed on the starboard side.
6. Install the pivot pins with a brass drift and a hammer.




- a - Starboard pivot pin

7. Install the two new trilobe pins in the pivot pins.

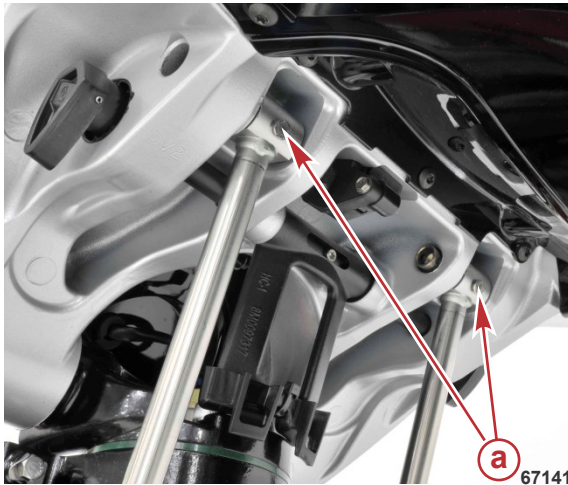

a - Trilobe pins

8. Secure the wire bundle with the cable tie.

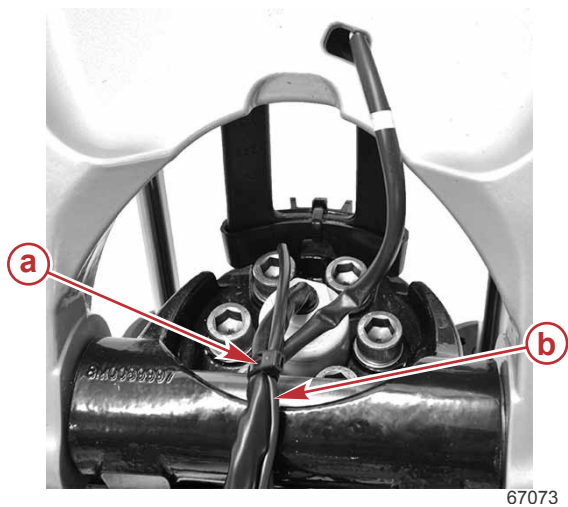


a - Cable tie
b - Wire bundle

9. Disengage the tilt lock bracket and trim the mount cradle down.

Exhaust Tube Assembly


1. Attach the exhaust tube to the driveshaft housing:
 - a. Install the exhaust grommet onto the exhaust tube. Use soapy water as lubricant, if necessary.

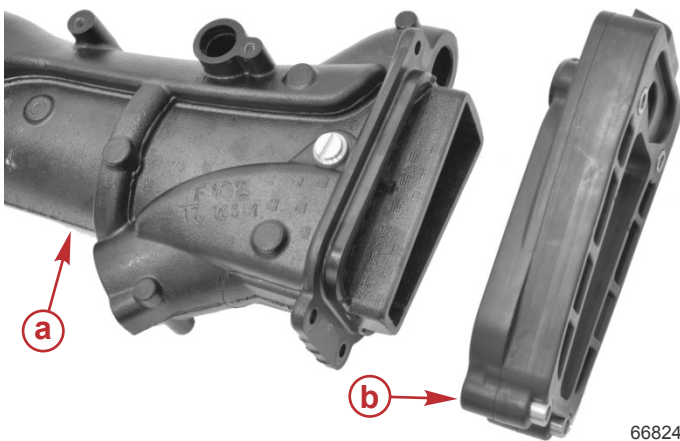

a - Exhaust tube
b - Exhaust grommet

Pedestal/Mount Cradle and Driveshaft Housing


- b. Install the water intake elbow fitting into the exhaust grommet. Use soapy water for lubrication.

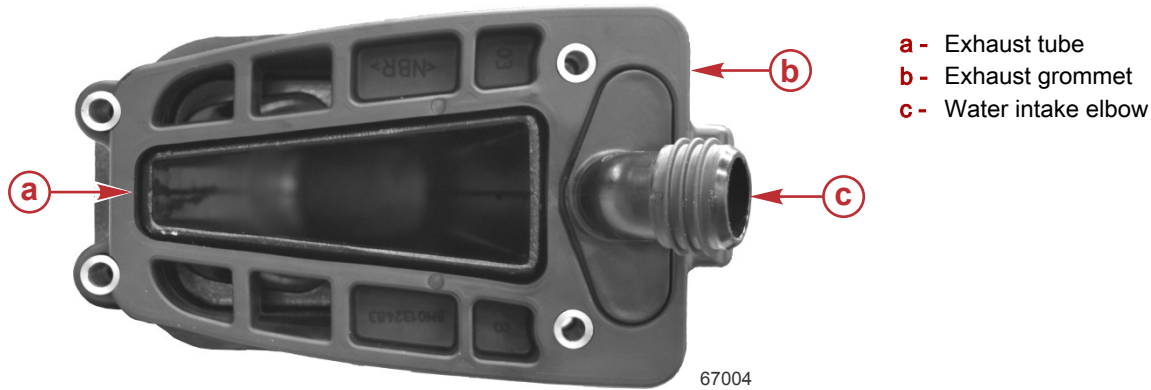

- c. Apply Loctite® 242 Threadlocker to four M6 x 55 hex flange head screws.


Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	M6 x 55 hex flange head screws	92-809821


- d. Install the exhaust tube onto the driveshaft housing. Use soapy water as lubricant, to help guide the water intake elbow into the hole in the driveshaft housing.
e. Tighten the four screws to the specified torque in a crossing pattern. Repeat the torque sequence a second time.

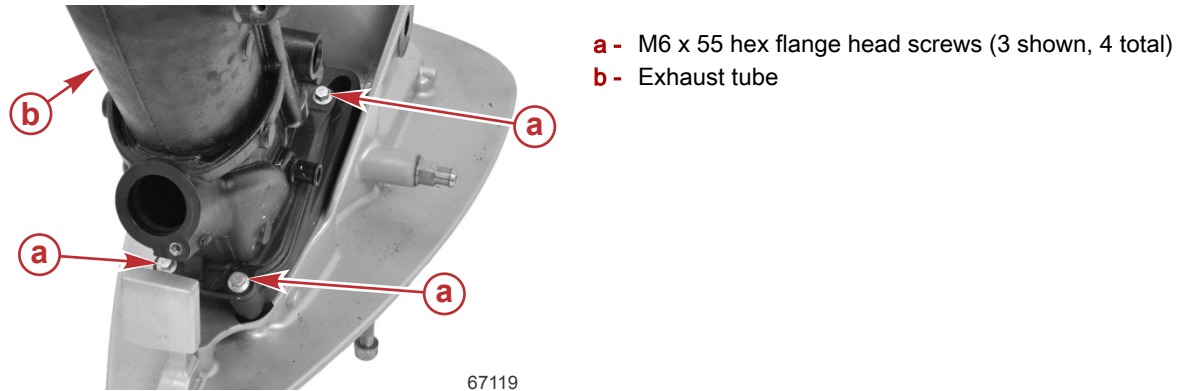

Description		Nm	lb-in.	lb-ft
M6 x 55 hex flange head screw (tighten in a crossing pattern)	First	15	132.8	–
	Final	15	132.8	–


2. Ensure that the O-ring is present on the water supply elbow fitting, and insert the fitting with attached hose into the exhaust tube. Lubricate the fitting with soapy water as required, to ease installation.
3. Apply Loctite® 242 Threadlocker to a M6 x 20 hex flange head screw. Secure the elbow fitting with the screw, and tighten the screw to the specified torque.

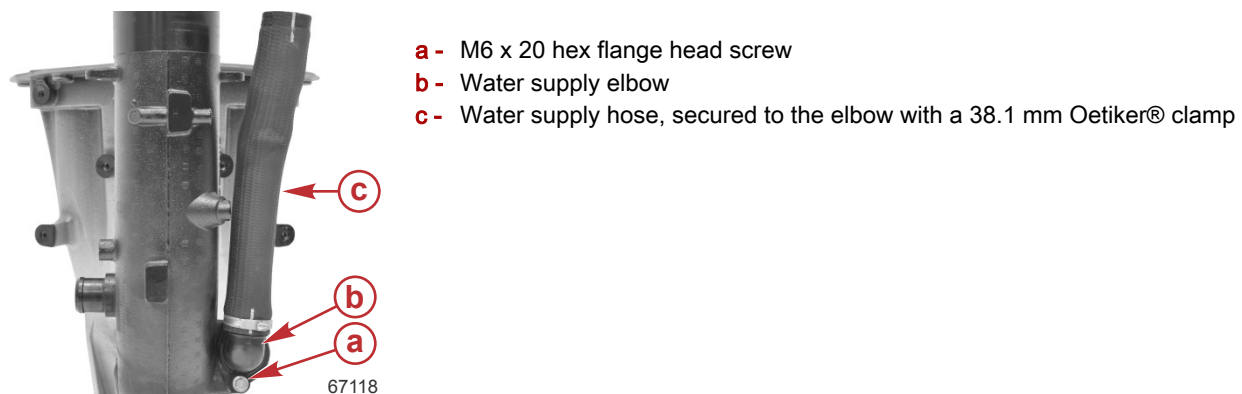


Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 20 hex flange head screw	92-809821


Description	Nm	lb-in.	lb-ft
M6 x 20 hex flange head screw	10	88.5	-

- Ensure that the O-ring is in the groove on the strainer assembly. Install the strainer into the port side of the exhaust tube.

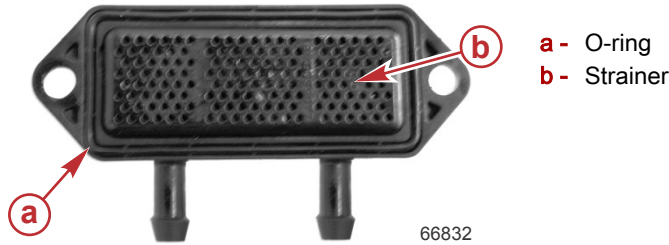

- Apply Loctite® 242 Threadlocker to two M6 x 16 hex flange head screws. Use the screws to secure the strainer to the exhaust tube, and tighten the screws to the specified torque.

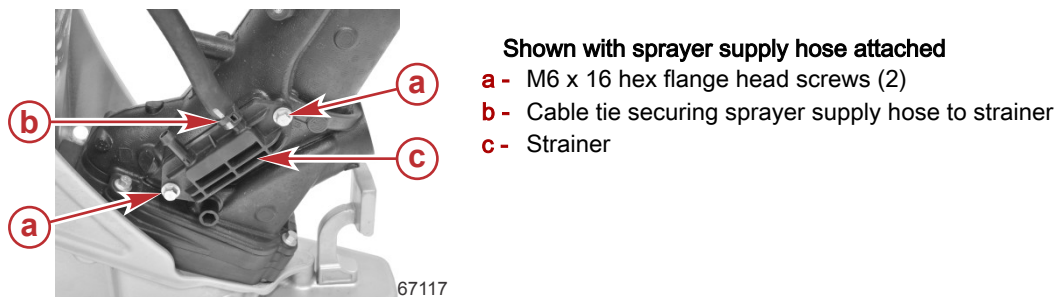


Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 16 hex flange head screws	92-809821

Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange head screws	10	88.5	-

Chap Plate Assembly

- Ensure that the drain hose assembly is complete and is connected to the starboard strainer. Assemble and secure with cable ties, as required.

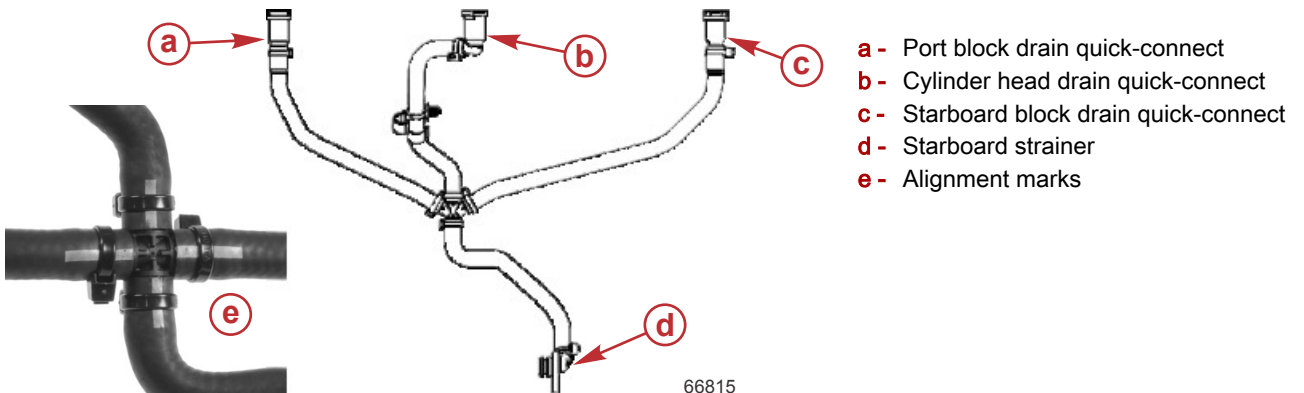


- Attach components to the chap plate (if removed):
 - Insert the block drain hose fittings into the chap plate, and rotate them 90° to lock them in place.
 - Install the advanced sound control (ASC) module:
 - Apply Loctite® 242 Threadlocker to two M6 x 16 hex flange head screws.
 - Secure the ASC module with the screws, and tighten them to the specified torque.

Pedestal/Mount Cradle and Driveshaft Housing

Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange head screws	5.5	48.7	-

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	M6 x 16 hex flange head screws	92-809821

- c. Press the return hose fitting down through the grommet in the chap plate.

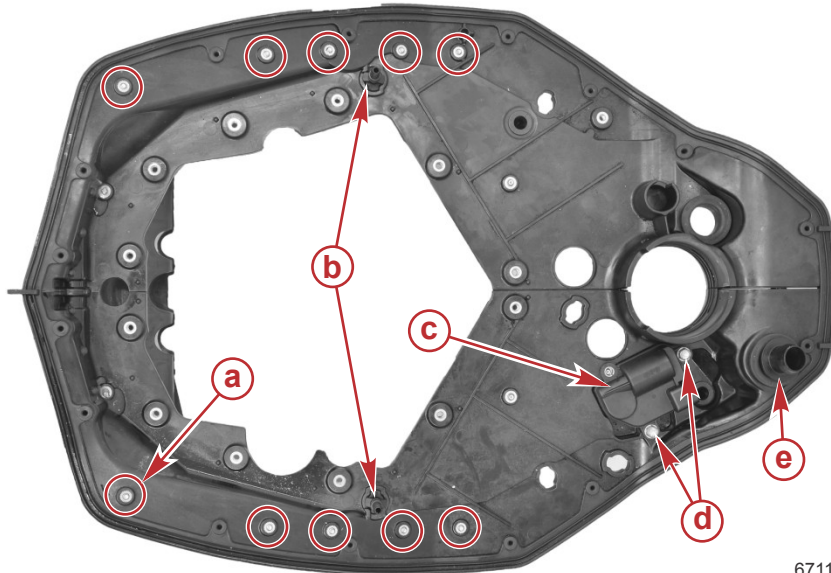

Top view of chap plate


- a - Locations of ten screws securing the sound block to the underside of the chap plate
- b - Block drain hose fittings - rotate 90° to remove
- c - Advanced sound control (ASC) module
- d - M6 x 16 hex flange head screws (2) securing the ASC module
- e - Return hose fitting

67112

- d. Attach the sound block to the chap plate, using 10 M5 x 20 hex flange head screws. Tighten the screws to the specified torque.

Description	Nm	lb-in.	lb-ft
M5 x 20 hex flange head screws	3.4	30.1	-

- e. Attach the drain hose assembly to the port and starboard drain hose fittings. Ensure that the strainer is near the starboard side of the chap plate. Secure the connections with cable ties.
- f. Attach the return hose to the fitting in the chap plate and secure it with a 38.1 mm Oetiker® clamp

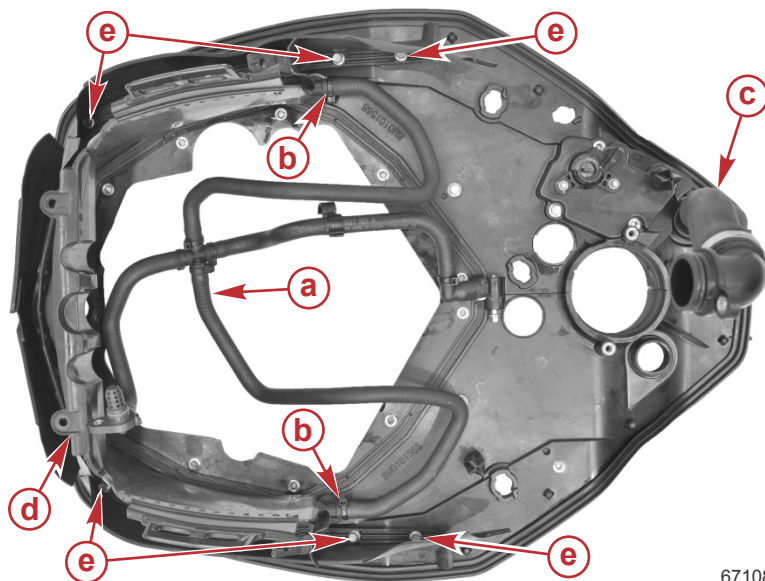


Bottom view of chap plate

- a - Drain hose assembly
- b - Cable tie (8 total, one at each drain hose assembly connection point)
- c - Return hose, secured to through-chap plate fitting by a 38.1 mm Oetiker clamp
- d - Sound block
- e - M5 x 20 hex flange head screws (secure sound block to chap plate; 6 shown, 10 total)

67108


3. Ensure that the chap plate seals are on the underside of the chap plate, and that the exhaust channel chap plate seals are in the opening for the exhaust tube.
4. Install the chap plate onto the driveshaft housing and exhaust tube.
- a. Use soapy water as lubricant to aid installation onto the exhaust tube, first.

- b. Carefully pull the sound block to allow it to slip around the driveshaft housing without folding or tearing.
- 5. Apply Loctite 242 Threadlocker to two M6 x 16 hex flange head screws, and use the screws to secure the chap plate to the exhaust tube. Tighten the screws to the specified torque.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 16 hex flange head screws	92-809821

Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange head screw	10	88.5	-


- 6. Carefully invert the entire assembly.
- 7. Tighten the two M6 x 30 hex flange head screws that hold the two chap plate halves together to the specified torque.

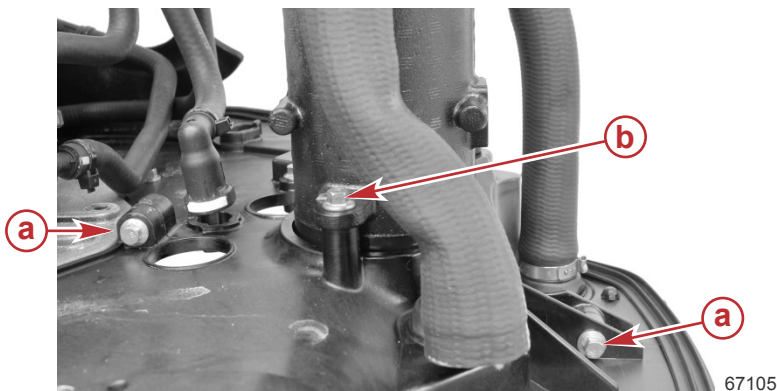

- a - Screws securing the chap plate halves together (2)
- b - Screws securing the chap plate to the exhaust tube (2 total, 1 each side)


Description	Nm	lb-in.	lb-ft
M6 x 30 hex flange head screw	10	88.5	-

- 8. Apply Loctite 242 Threadlocker to eight M6 x 23 hex flange dog point screws.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 23 hex flange dog point screws	92-809821

- 9. Install four of the screws at the rear of the driveshaft housing, and four at the front. Tighten the screws to the specified torque.


NOTE: Use a shallow 1/4 in. drive 8 mm swivel socket to install the two screws on the sides at the front. There is insufficient clearance for a standard socket.

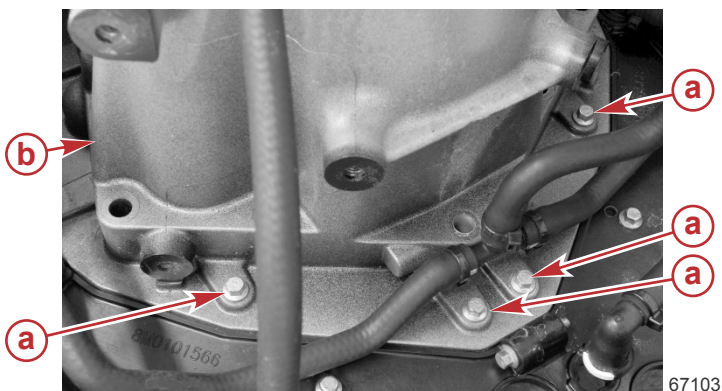

Rear of driveshaft housing

- a - M6 x 23 hex flange dog point screws (4)
- b - Driveshaft housing

Pedestal/Mount Cradle and Driveshaft Housing

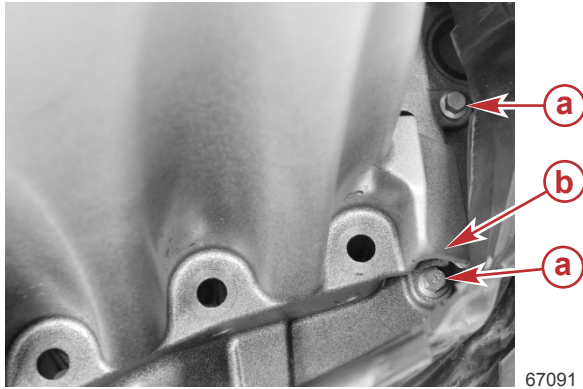

Front corner of driveshaft housing

- a - M6 x 23 hex flange dog point screws (4 total at front of driveshaft housing)
- b - Point of interference: use a shallow 1/4 in. drive 8 mm swivel socket to install the adjacent screw

Description	Nm	lb-in.	lb-ft
M6 x 23 hex flange dog point screws	10	88.5	-

1/4 in. Drive 8 mm Swivel Socket	Snap-on® TMUSM8A
----------------------------------	------------------

10. Install the upper mount brackets:


- a. Apply Loctite 242 Threadlocker to six M8 x 1.25 x 40 hex flange head screws.

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	M8 x 1.25 x 40 hex flange head screws	92-809821

- b. Use the screws to install the upper mount brackets onto the driveshaft housing.

NOTE: Ensure that the ground continuity cable is on the bottom screw of the starboard bracket (shown at top of the following photo), between the screw head and the bracket.


- c. Tighten the screws to the specified torque.

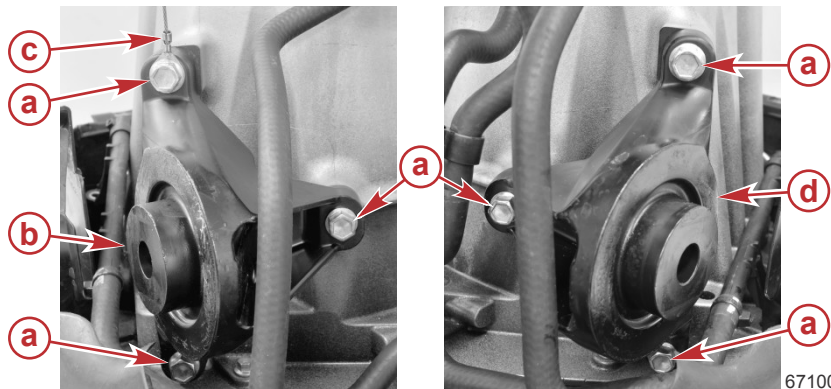

- a - M8 x 1.25 x 40 hex flange head screws (3 each mount bracket, 6 total)
- b - Upper mount bracket, starboard side
- c - Ground continuity cable on bottom screw of starboard bracket; note orientation of the cable
- d - Upper mount bracket, port side

Description	Nm	lb-in.	lb-ft
M8 x 1.25 x 40 hex flange head screws	45	-	33.2


11. Complete the sprayer assembly, and attach it to the strainer (previously installed), as required.

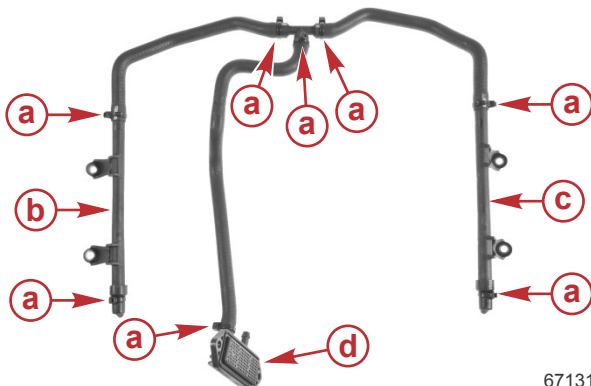


Shown with strainer attached and uninstalled

- a - Cable tie at each connection
- b - Port sprayer
- c - Starboard sprayer
- d - Strainer (previously installed in exhaust tube)

12. Apply Loctite 242 Threadlocker to four M6 x 23 hex flange dog point screws.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 23 hex flange dog point screws	92-809821

13. Attach the sprayers to the underside of the chap plate, using two screws, each. Tighten the screws to the specified torque.
NOTE: Route the hoses of the sprayer assembly such that the drain hose assembly is between them and the body of the driveshaft housing.

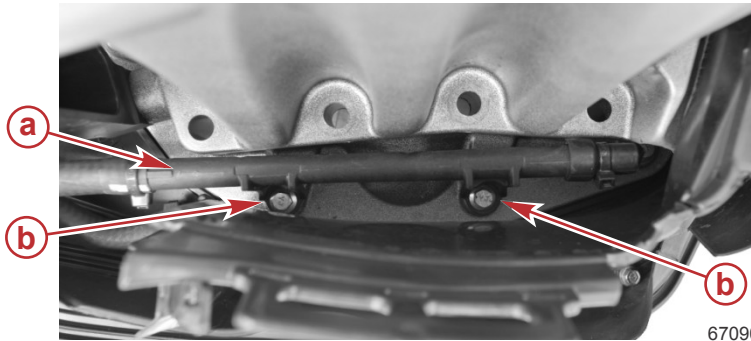


Port side shown, starboard similar


- a - Sprayer assembly
- b - M6 x 23 hex flange dog point screw (2 each side, 4 total)

Description	Nm	lb-in.	lb-ft
M6 x 23 hex flange dog point screw	10	88.5	-

14. Apply Loctite 242 Threadlocker to an M6 x 20 hex flange head screw, secure the starboard strainer with the screw, and tighten the screw to the specified torque.

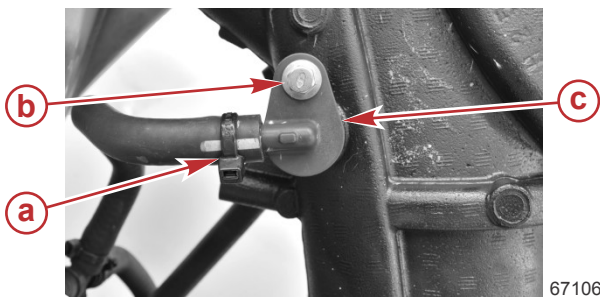

- a - Cable tie securing hose to strainer
- b - M6 x 20 hex flange head screw
- c - Water strainer in starboard side of the exhaust tube


Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 20 hex flange head screw	92-809821

Description	Nm	lb-in.	lb-ft
M6 x 20 hex flange head screw	10	88.5	-

15. Turn the driveshaft housing assembly right-side up.

Mount Installation

1. Install the shift actuator harness retention bracket into the driveshaft housing.
 - a. Insert the lower piece and lift it until it clears the bottom of the opening. Then lower the piece into the opening.
 - b. Insert the top piece into the bottom piece.

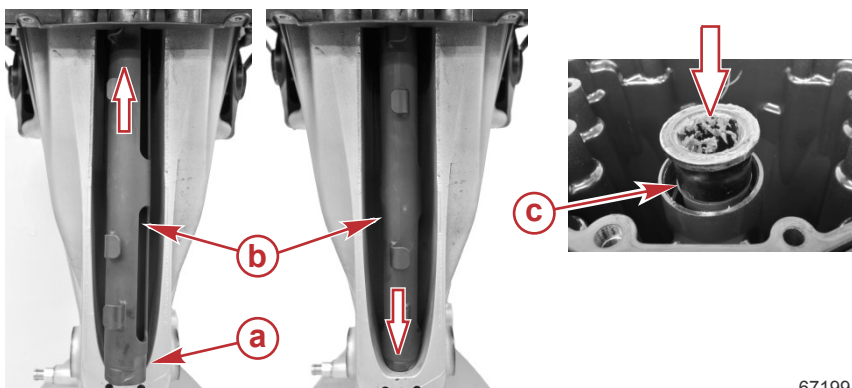


- a - Bottom of bracket; lift up and push into opening
- b - Lower piece of bracket
- c - Top piece of bracket


Pedestal/Mount Cradle and Driveshaft Housing

- Lubricate the back (contoured side) of the four snubber washers, with 2-4-C with PTFE.




Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Back of snubber washers	92-802859A 1

- Install the four snubber washers onto the mount bosses on the driveshaft housing. Ensure that the flat side is facing outward.

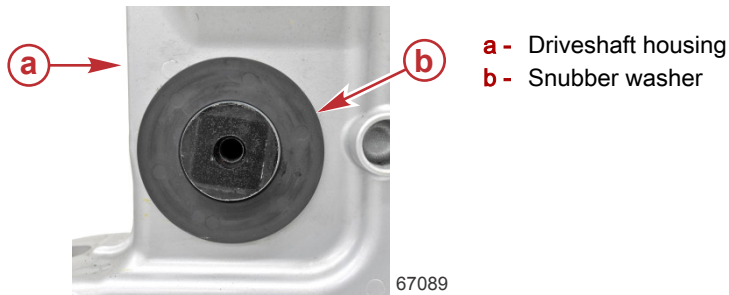



- Ensure that the bumper stops are seated in the cradle.
- Ensure that the foam pads are in place and in good condition.

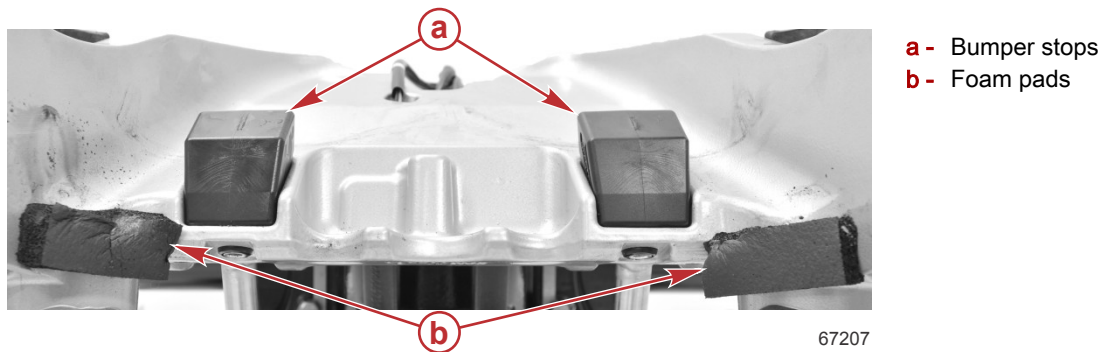

- Install lift hooks onto the driveshaft housing, and support it with an appropriate hoist.
- Maneuver the driveshaft housing into position in the cradle, and lower it so that the mount bosses on the driveshaft housing roughly align with the mount bores in the cradle.




IMPORTANT: Ensure that the sound block is positioned correctly onto the cradle. The front lip of the sound block must tuck under the cradle, as shown. The tabs at the rear edges of the sound block must protrude down through the cradle, as shown.

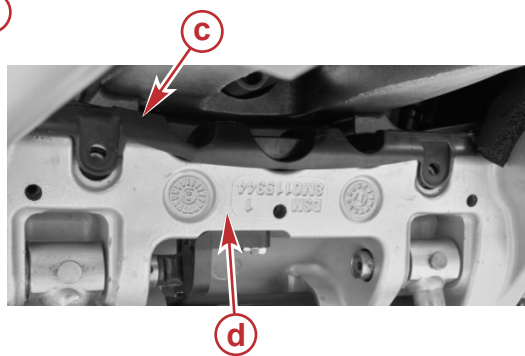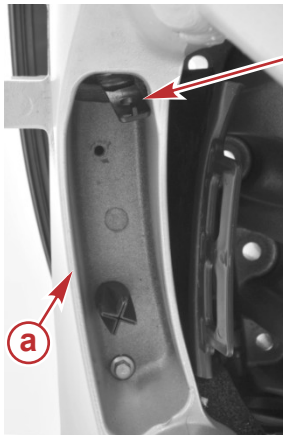

- a - Port underside of cradle, starboard side similar
- b - Tab at rear of sound block
- c - Lip on front of sound block
- d - Front underside of cradle

67279

8. Install the engine mounts:
 - a. Insert the four mount dowels into the driveshaft housing.

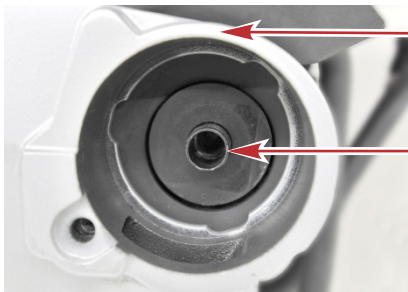


- a - Cradle
- b - Mount dowel

67085

- b. Insert the mounts into the cradle. Start with one of the lower mounts, carefully pressing it onto the mount dowel. Some adjustment to the cradle and driveshaft housing alignment will likely be necessary to fit all four mounts into the cradle.
- c. Hand-thread the M14 x 2.0 x 100 hex flange head screws with special washers into the driveshaft housing.
- d. Install the AMS mount tool over one of the mounts, using the mount retainer screw, as shown. Use a 6-point hex socket and torque wrench to tighten the mount screw to the specified torque.

NOTE: The mount tool should be square to the antivibration plate.

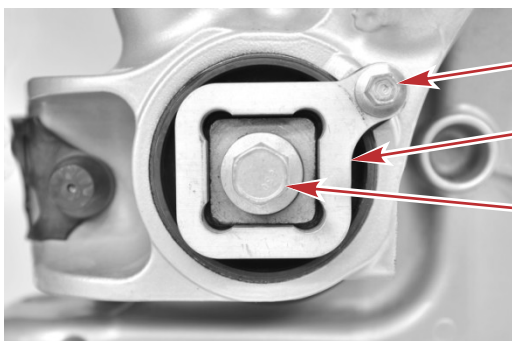

- Port lower mount shown, others similar**
- a - Mount retainer screw
 - b - AMS mount tool, square to the antivibration plate
 - c - M14 x 2.0 x 100 hex flange head screw

67190


Description	Nm	lb-in.	lb-ft
M14 x 2.0 x 100 hex flange head screw	185	-	136.5

AMS Mount Tool	8M0148868
----------------	-----------

- e. Remove the AMS mount tool.
- f. Repeat steps d and e for the remaining three engine mounts.

Pedestal/Mount Cradle and Driveshaft Housing

- g. Install the mount retainers, and secure each with an M8 x 35 hex flange head screw. Tighten the screws to the specified torque.

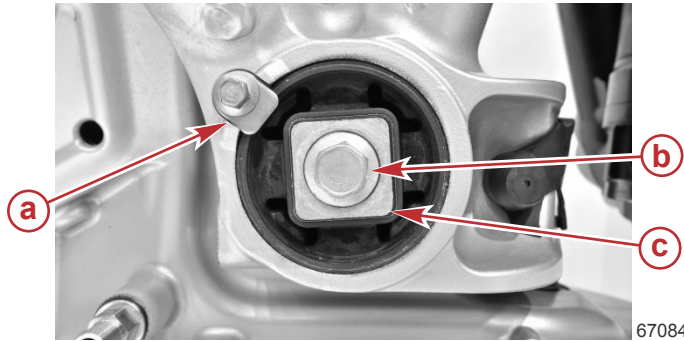


Starboard lower mount shown, others similar

- a** - Mount retainer and M8 x 35 hex flange head screw
- b** - Mount screw and special washer
- c** - Engine mount

Description	Nm	lb-in.	lb-ft
M8 x 35 hex flange head screw	24	-	17.7

9. Remove the assembly from the hoist, and remove the lift hooks.
 10. Pull down and then out on the handles on the sound block, to engage it with the cradle.

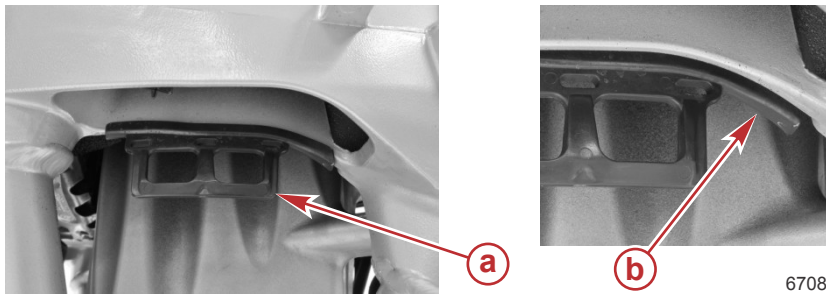


- a** - Sound block handle (engaged)
- b** - Handle disengaged from cradle: pull down and out to engage

11. Apply Loctite 242 Threadlocker to four M6 hex flange head screws. Install the four screws (one on each side and two in front) to secure the sound block to the cradle. Tighten the screws to the specified torque.



Underside of port side shown, starboard similar


- a** - Side screw, one each side; fold the sound block tab against the cradle, and insert the screw through the hole in the tab
- b** - M6 hex flange head screws (front, 2 total)

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 hex flange head screws	92-809821

Description	Nm	lb-in.	lb-ft
M6 hex flange head screws	8	70.8	-

Fuel Supply Module and Shift Actuator Installation

1. Ensure that the bracket and hoses are attached to the FSM.

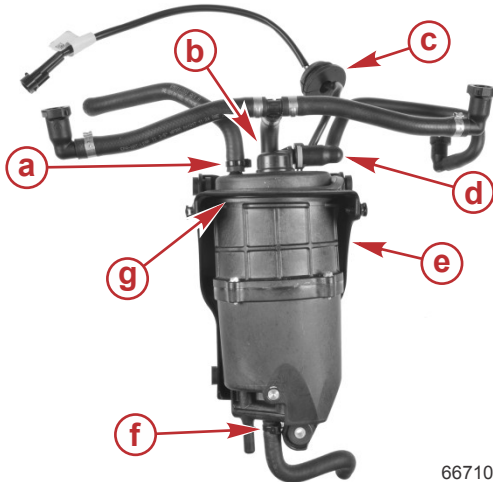


66710

FSM assembly, shown with bracket and hoses attached

- a - Cable tie used to secure the water outlet hose (to water pump indicator fitting, not shown)
- b - 16.2 mm Oetiker® clamp (not shown) used to secure the fuel rail supply hoses
- c - Grommet installed on the FSM harness
- d - Reference hose connected to quick-connect fitting
- e - FSM bracket (with grommet) installed by sliding down over FSM
- f - Cable tie used to secure the water inlet hose (from strainer)
- g - FSM bracket grommet securely in position

2. Position the FSM assembly in the driveshaft housing assembly, aligning the holes in the FSM bracket with the bosses on the exhaust tube.

NOTE: Ensure that the drain and sprayer hoses are routed as shown, prior to securing the FSM bracket to the exhaust tube.

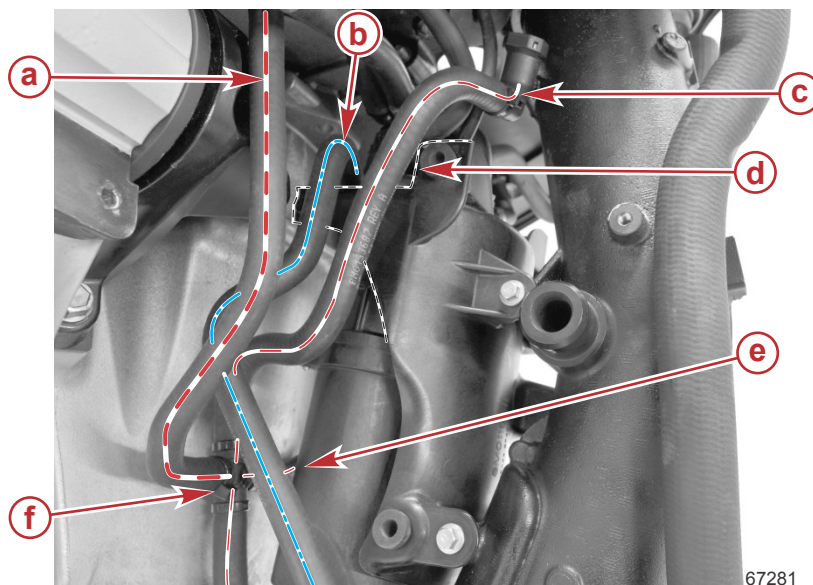

67281

Order of overlapping of hoses and FSM bracket

- a - From port block drain
- b - To sprayer hose assembly T-fitting
- c - From head drain Y-fitting
- d - Edge of FSM bracket
- e - From starboard block drain
- f - Drain hose assembly X-fitting



3. Apply Loctite® 242 Threadlocker to four M6 x 16 hex flange head screws and one M6 x 25 hex flange head screw. Use the four short screws to secure the FSM bracket to the exhaust tube and the single long screw to secure the FSM to the exhaust tube. Tighten all five screws to the specified torque.

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	M6 x 16 hex flange head screws	92-809821
66	Loctite 242 Threadlocker	M6 x 25 hex flange head screw	92-809821

Description	Nm	lb-in.	lb-ft
M6 x 16 hex flange head screw	10	88.5	–
M6 x 25 hex flange head screw	10	88.5	–

Pedestal/Mount Cradle and Driveshaft Housing


- Connect the FSM water supply hose to the water strainer. Secure the connection with a cable tie.

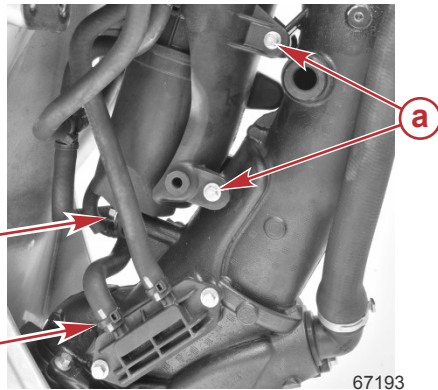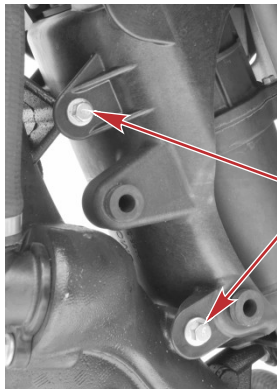

- a - M6 x 16 hex flange head screws (4)
- b - M6 x 25 hex flange head screw
- c - Cable tie on FSM water supply hose

67193



- Secure the sprayer hose assembly to the anchor on the FSM bracket with a cable tie.
- Use a clip to attach the sprayer hose assembly to the drain hose assembly, near the cable tie anchor.

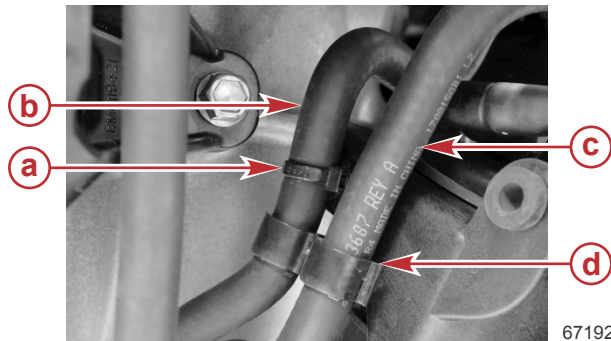

- a - Cable tie and anchor on port side of FSM bracket
- b - Sprayer hose assembly
- c - Drain hose assembly
- d - Clip

67192

- Feed the FSM harness up through the chap plate, and press the grommet into place. Use soapy water as lubricant.
- Install the FSM supply hose:
 - Feed the FSM supply hose up through the chap plate, and press the grommet into place. Use soapy water as lubricant.
 - Connect the FSM supply hose to the fitting on the bottom of the FSM.
 - Use a cable tie to secure the FSM supply hose to the anchor on the starboard side of the FSM bracket.

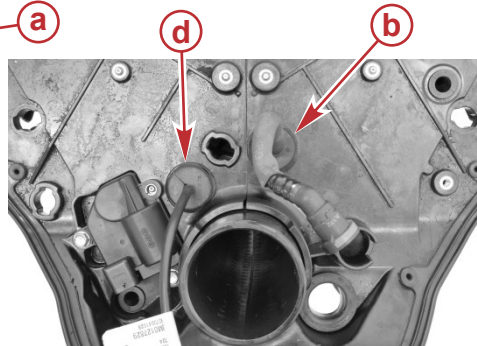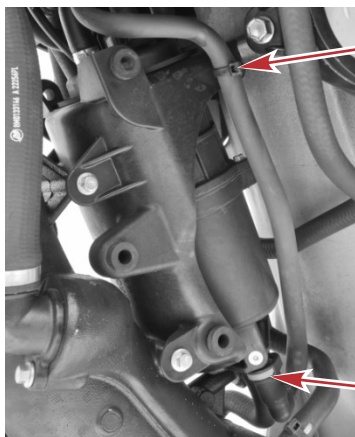


- a - Cable tie
- b - FSM supply hose grommet
- c - FSM supply hose quick-connect
- d - FSM harness grommet

67071

- Attach the fuel rail supply hoses to the FSM assembly:
 - Insert the fuel rail fittings (with attached fuel rail supply hoses) into the top side of the chap plate.
NOTE: The preformed fuel rail supply hoses have unique profiles. Compare to the following illustrations.
 - Rotate the fittings 90° to lock them in place.


- c. Connect the quick-connect fittings on the hoses from the FSM to the fittings on the underside of the chap plate.

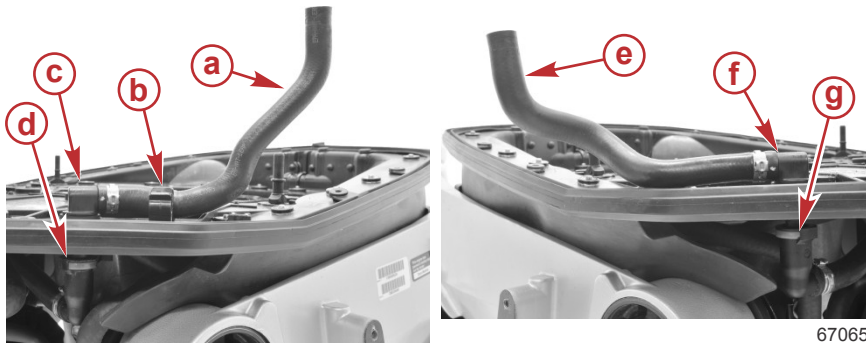

- a - Starboard fuel rail supply hose
- b - Clip on the starboard fuel rail supply hose
- c - Starboard quick-connect fitting
- d - Starboard quick-connect
- e - Port fuel rail supply hose
- f - Port quick-connect fitting
- g - Port quick-connect


- 10. Install the water return elbow and hose.

- a. Ensure that the O-ring is present on the water return elbow fitting, and insert the fitting into the exhaust tube. Lubricate the fitting with soapy water, to ease installation.
NOTE: The O-ring fits loosely; ensure that it does not roll up during installation.
- b. Apply Loctite® 242 Threadlocker to an M6 x 20 hex flange head screw. Secure the elbow fitting with the screw, and tighten the screw to the specified torque.

Tube Ref No.	Description	Where Used	Part No.
 66	Loctite 242 Threadlocker	M6 x 20 hex flange head screw	92-809821

Description	Nm	lb-in.	lb-ft
M6 x 20 hex flange head screw	10	88.5	-

- c. If the hose was removed from the elbow fitting, attach it using a 38.1 mm Oetiker clamp.

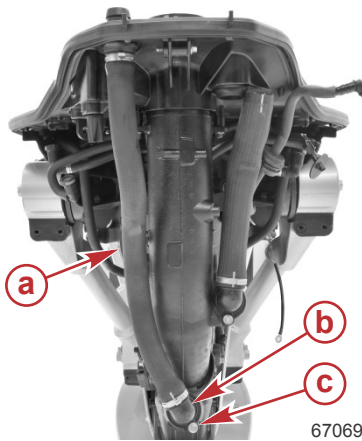


- a - Water return hose, secured with one 31.6 mm Oetiker clamp (top) and one 38.1 mm Oetiker clamp (bottom)
- b - Elbow
- c - M6 x 20 hex flange screw

- 11. Assemble the upper and lower water supply hoses:

- a. Ensure that the upper supply hose is secured to both fittings (upper and lower) with 38.1 mm Oetiker clamps.
- b. Press the upper supply hose down into the grommet in the chap plate. Use soapy water as lubricant.
- c. Attach the lower supply hose to the fitting at the bottom of the upper supply hose. Ensure that the white lines on the upper and lower hoses are aligned, and secure the connection with a 38.1 mm Oetiker clamp.


Pedestal/Mount Cradle and Driveshaft Housing

- d. Ensure that the strainer is inserted into the fitting at the top of the upper supply hose.

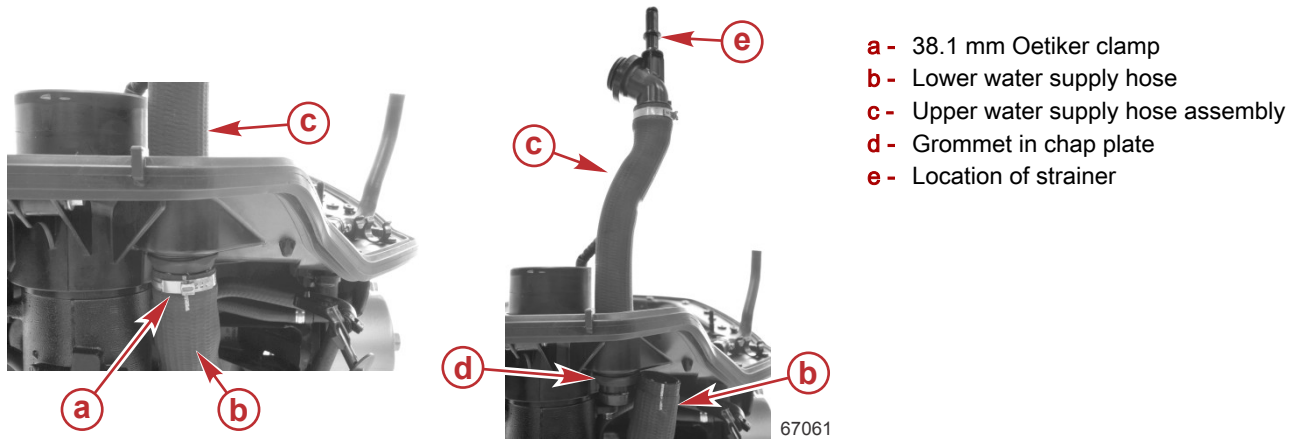

- a - 38.1 mm Oetiker clamp
- b - Lower water supply hose
- c - Upper water supply hose assembly
- d - Grommet in chap plate
- e - Location of strainer

12. Install the block drain and flush hose assembly at the port quick-connect fitting.

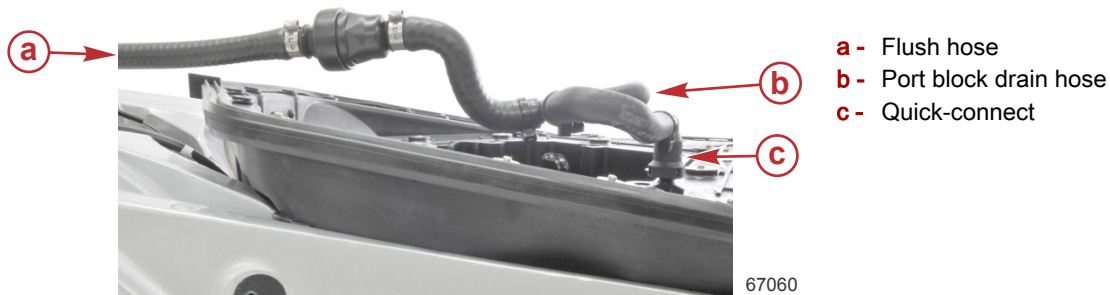

- a - Flush hose
- b - Port block drain hose
- c - Quick-connect


13. Install the shift actuator.

NOTE: It may be helpful to tilt the midsection. Be certain to engage the tilt lock.

- a. Inspect the seal on the top of the shift actuator. Replace, if necessary.
- b. Ensure that the boot is in place on the shift actuator, around the harness.
- c. Apply Loctite® 242 Threadlocker to four M6 x 20 Torx® socket head screws.

Tube Ref No.	Description	Where Used	Part No.
66	Loctite 242 Threadlocker	M6 x 20 Torx socket head screws	92-809821

- d. Feed the shift actuator harness and boot through the opening in the top of the antivibration plate, and position the shift actuator on the underside of the driveshaft housing.
- e. Install the shift actuator with the four M6 x 20 T30 Torx socket head screws. Tighten the four screws to the specified torque.

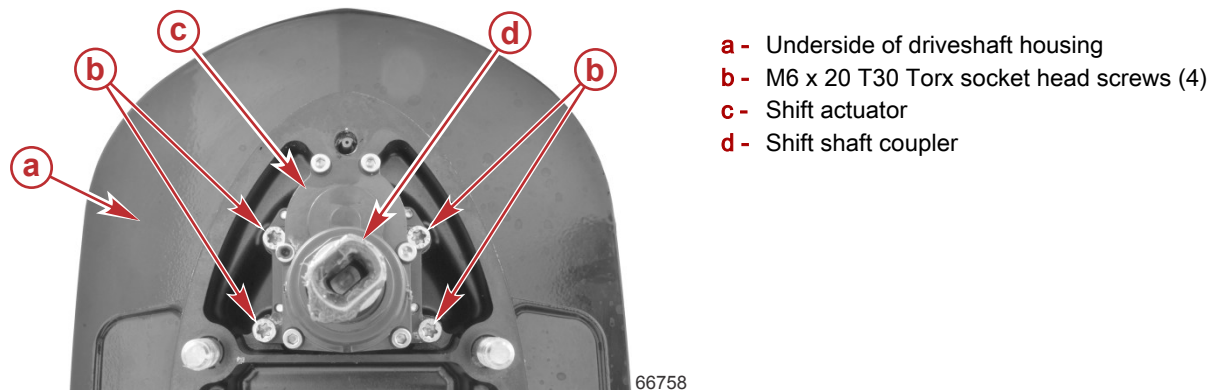


- a - Underside of driveshaft housing
- b - M6 x 20 T30 Torx socket head screws (4)
- c - Shift actuator
- d - Shift shaft coupler

Description	Nm	lb-in.	lb-ft
M6 x 20 T30 Torx socket head screw	11	97.4	-

14. Route the shift actuator harness and speedometer water pickup tube through the driveshaft housing.


- a. Feed the harness and pickup tube upward, between the driveshaft housing (by the shift actuator harness bracket) and the sound block, and up through the hole in the chap plate.

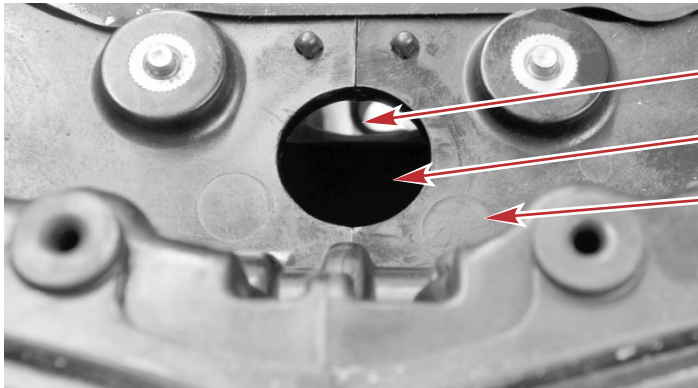

67282

- a** - Tab on shift actuator harness bracket, installed in the driveshaft housing
- b** - Sound block
- c** - Front end of chap plate


- b. Secure the harness and pickup tube with the tabs on the shift actuator harness bracket.
 c. Slide the retention clip around the boot on the harness, and press it into place in the driveshaft housing.

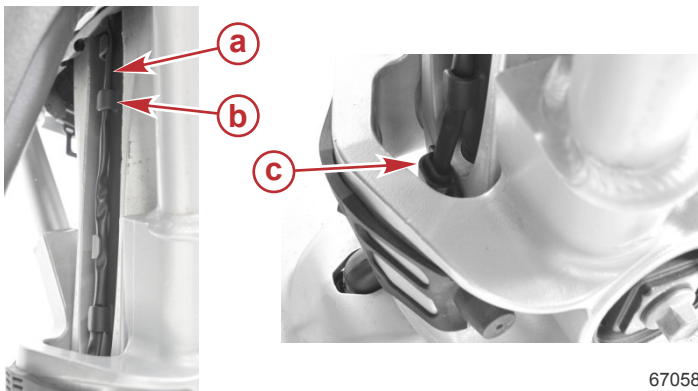

67058

- a** - Shift actuator harness and speedometer water pickup tube
- b** - Shift actuator harness bracket
- c** - Retention clip


- d. Connect the speedometer water pickup tube to the Legris fitting in the antiventilation plate.

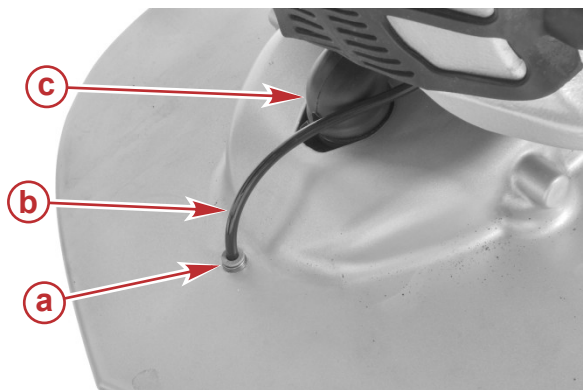

67377

- a** - Legris fitting in antiventilation plate
- b** - Speedometer water pickup tube
- c** - Shift actuator harness boot

- e. Install the grommet into the top of the chap plate, around the shift actuator harness and speedometer water pickup tube. Use soapy water as lubricant.

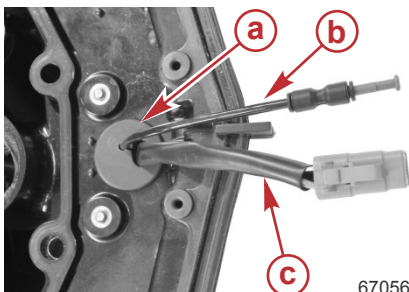

67056

- a** - Grommet in chap plate
- b** - Speedometer water pickup tube
- c** - Shift actuator harness

AMS Final Assembly

1. Install the idle relief components. Refer to **Idle Relief Muffler**.

NOTE: *After muffler installation:*

- *Be certain to connect the reference hose quick-connect to the fitting in the chap plate.*
 - *Be certain that the water pump indicator fitting is securely installed into the chap plate and is connected to the hose from the FSM.*
2. Install the gearcase. Refer to **Section 6A - Gear Housing Installation**.
IMPORTANT: Ensure that a new gasket is in place on the top of the driveshaft housing, for powerhead installation.
 3. Install the powerhead. Refer to **Section 4A - Powerhead Installation onto Advanced Midsection (AMS)**.
 4. Install the lower cowls. Refer to **Section 5C - Advanced Midsection (AMS) Lower Cowl Installation**.

Midsection

Section 5B - Advanced Midsection (AMS) Power Trim

Table of Contents

Advanced Midsection (AMS) Power Trim Specifications	5B-2	Power Trim System.....	5B-13
Trim Sensor Specifications.....	5B-2	Power Trim System Removal.....	5B-13
Trim Limit Activation RPM.....	5B-2	Power Trim System Installation.....	5B-16
AMS Power Trim Components.....	5B-4	Power Unit.....	5B-21
Theory of Operation.....	5B-6	Power Unit Disassembly.....	5B-21
Power Trim Hydraulic Diagram.....	5B-6	Power Unit Reassembly.....	5B-24
Power Trim System Operation.....	5B-7	Trim Cylinder and Pivot Pin.....	5B-27
Purging Power Trim System.....	5B-7	Trim Cylinder and Pivot Pin Removal.....	5B-27
Troubleshooting the Power Trim System.....	5B-7	Trim Cylinder Disassembly.....	5B-29
Preliminary.....	5B-7	Trim Cylinder Reassembly.....	5B-30
Hydraulic System Troubleshooting.....	5B-8	Trim Cylinder and Pivot Pin Installation.....	5B-32
Testing the Power Trim System.....	5B-8	Pressure-Operated Check Manifold	5B-35
Wire Color Code Abbreviations.....	5B-13	Manifold Disassembly.....	5B-35
		Manifold Reassembly.....	5B-37

Advanced Midsection (AMS) Power Trim Specifications

Power Trim Specifications	
Trim up relief valve—tilt extended relief pressure	17554 kPa (2546 psi) minimum
Trim down relief valve pressure	1758–2978 kPa (255–432 psi)
System fluid	Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) Type F, FA, Dexron II, or Dexron III





Trim Sensor Specifications

Description		Specification
Maximum trim down adaptable range		50–250 ADC
Maximum trim limit (factory preset)		238 ADC above trim down adapt number
Maximum trailer limit	Adaptable range	550–1018 ADC
	Factory preset	931 ADC



Trim Limit Activation RPM


Model	Trim Limit Activation
250 HP V8 with Advanced Mid-Section (AMS)	approximately 4300 RPM
300 HP V8 with Advanced Mid-Section (AMS)	approximately 4700 RPM

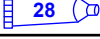Lubricants, Sealants, Adhesives


Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	Power trim sensor screws	92-809819
 25	Liquid Neoprene	Screw	92- 25711 3
 28	Dexron III Automatic	O-rings	Obtain Locally
 114	Power Trim and Steering Fluid	Power trim system	92-858074K01
		O-rings	
		Manual release valve O-rings and power trim system reservoir	
		Memory piston O-ring	
		Shock piston and end cap O-rings	
		Manifold wear bushings and O-rings	
		Pivot pin and trim cylinder O-rings	
Manifold O-rings and pivot pin			

Special Tools

Power Trim Adapter Fitting	91-822778004
 4415	Replaces power trim manual release valve when testing power trim circuits.
Power Trim Test Gauge Kit	91- 52915A 6
 3753	Tests circuit pressures for various trim pumps.

Trim Cylinder End Cap Tool	8M0105203
 <p>58147</p>	Allows easy removal of the trim cylinder end caps.

AMS Power Trim Components

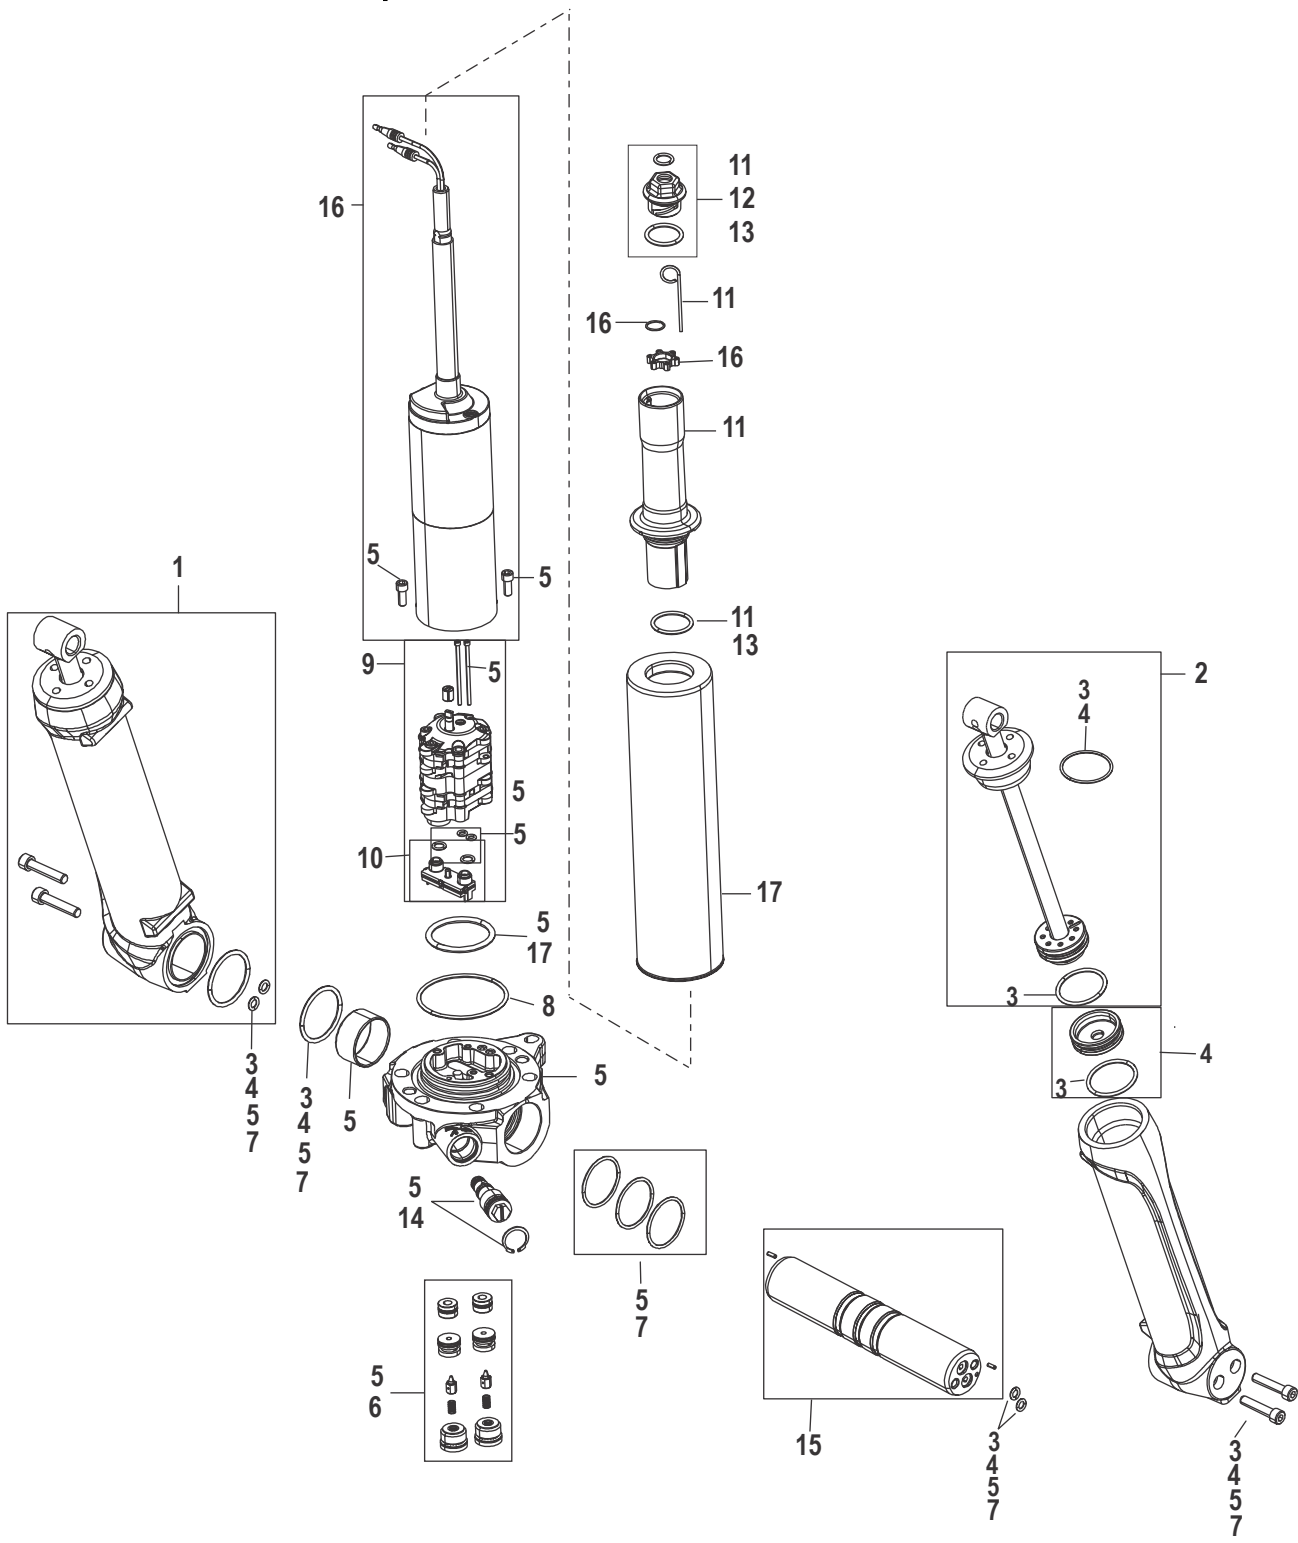


67198

AMS Power Trim Components

Ref. No.	Qty.	Description
1	1	Trim cylinder kit
2	1	Trim rod kit
3	1	O-ring kit
4	1	Piston kit
5	1	Trim manifold kit
6	1	Check valve kit
7	1	O-ring kit
8	1	O-ring
9	1	Trim pump kit
10	1	Trim pump kit
11	1	Trim neck kit
12	1	O-ring kit
13	1	Cap kit
14	1	Manual release kit
15	1	Trim pin kit
16	1	Trim motor kit
17	1	Reservoir kit

Theory of Operation

Power Trim Hydraulic Diagram

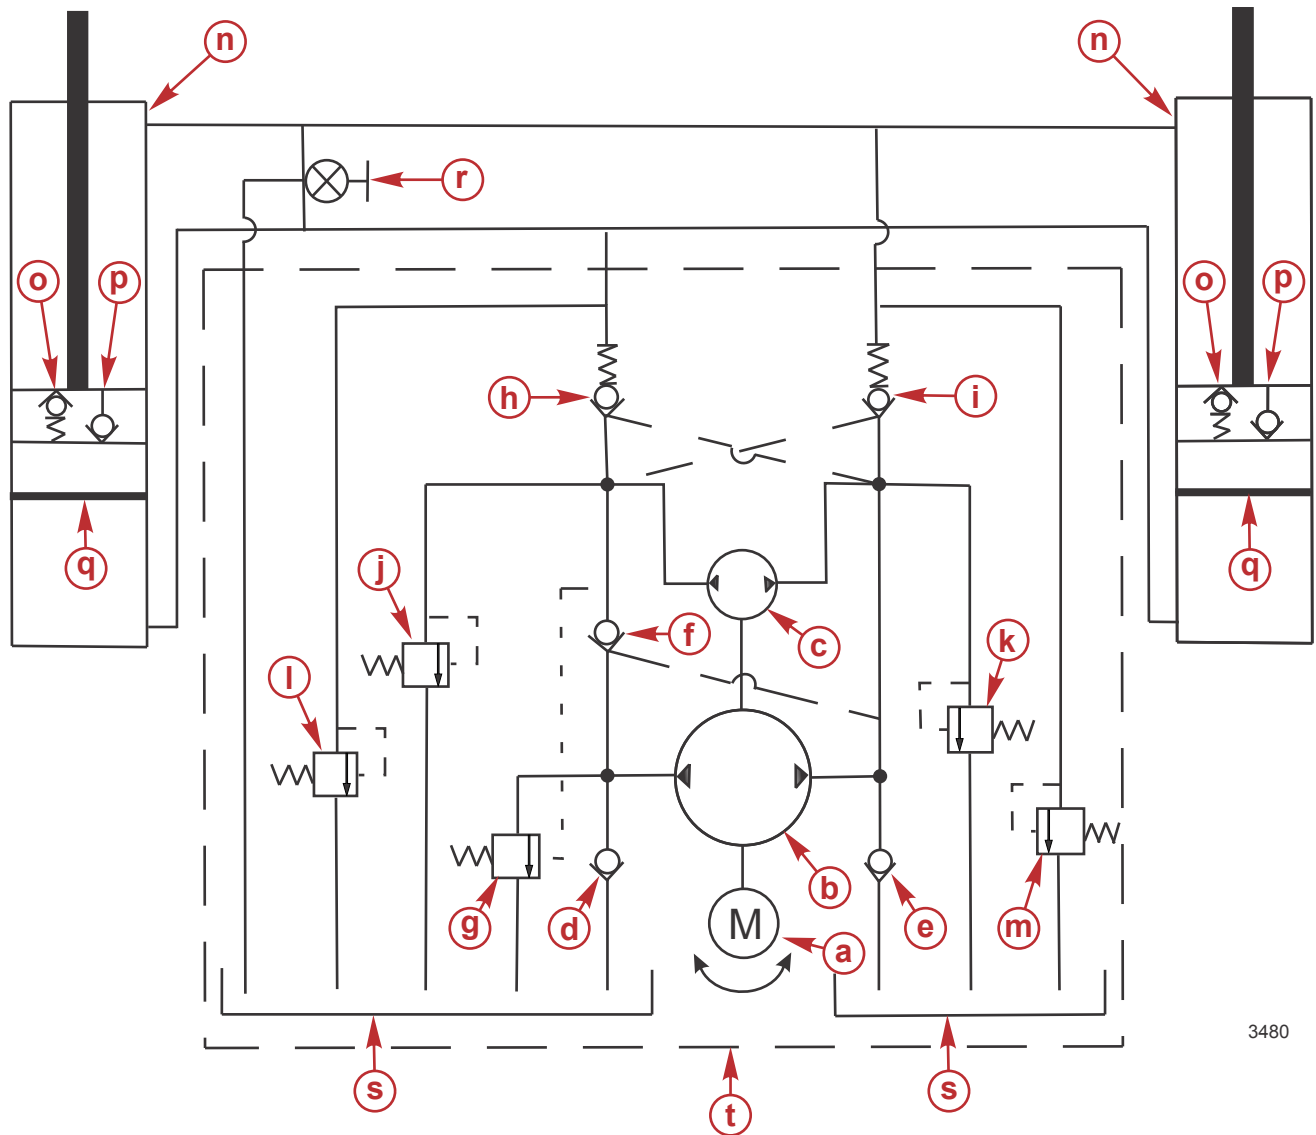

3480

- a** - Electric motor
- b** - Large displacement pump
- c** - Small displacement pump
- d** - Trim down inlet check valve
- e** - Trim up inlet check valve
- f** - Unloading circuit check valve
- g** - Unloading valve
- h** - Trim up pressure-operated check valve
- i** - Trim down pressure-operated check valve
- j** - Up circuit relief valve 17554 kPa (2546 psi) minimum
- k** - Down circuit relief valve 1758–2978 kPa (255–432 psi)
- l** - Up circuit thermal relief valve
- m** - Down circuit thermal relief valve
- n** - Trim cylinder
- o** - Impact relief valve
- p** - Return check valve
- q** - Memory piston

- r - Manual release valve
- s - Reservoir
- t - Power unit

Power Trim System Operation

The power trim system consists of an integral two stage pump, manifold, reservoir, and two trim cylinders. A two stage pump is used to increase cylinder extend speed during tilt operation. When the outboard is trimmed up at idle or slow running speed, the fluid output of both pumps are used to extend the trim cylinders. The combined output of the two pumps extend the cylinders at the same rate as one pump of the same displacement. When the pressure required to raise the outboard motor increases, the unloading valve diverts the large pump's flow back to the reservoir and the output of the small pump continues to extend the trim cylinders at a higher pressure. Using the small pump flow at high pressure requires less power than using a larger single pump. A high-pressure relief valve limits the pressure to 17554 kPa (2546 psi) in the up circuit. The system is protected from thermal expansion of trapped oil in the trim cylinders by two thermal relief valves, one for the up circuit and one for the down circuit.

Trim Circuit - Up

When the up circuit is activated, the electric motor rotates the two stage hydraulic pump. As the pump gears rotate, fluid is drawn through a check valve and into the inlet passages of the two pumps. The large pump's flow passes through a check valve and combines with the small pump's flow. The combined flow then passes through a pressure-operated check valve in the manifold and to the bottom of the trim cylinders. The fluid pushes the pistons out, trimming the engine up. When the pressure required to raise the outboard motor increases, a check valve and unloading valve divert the large pump's flow back to the reservoir and the output of the small pump continues to extend the cylinders. Oil, from the top side of the cylinder, returns through a passage in the cylinder wall into the manifold to the inlet side of each pump. When the engine is not running, the outboard may be tilted to the full up position by activating the cowl trim switch. In this mode, as the trim cylinders extend to their limit, up pressure increases to 17554 kPa (2546 psi) and opens the up pressure relief valve. When the engine is running above 4300 RPM, trim angle is limited to approximately 20 degrees by the trim angle sensor and the PCM.

Trim Circuit - Down

When the down circuit is activated, the electric motor rotates in the opposite direction. As the pump gears rotate, fluid is drawn through a check valve and into the inlet passages of the two pumps. The large pump and small pump flow is combined and passes through a pilot operated check valve and to the top of the trim cylinders. The fluid pushes the pistons down and trims the engine down. Oil, from the bottom side of the cylinder, returns through the manifold to the inlet side of each pump. As the trim cylinders retract fully, down pressure increases to 1758–2978 kPa (255–432 psi) and opens the down pressure relief valve.

Trail Over System

Should the outboard motor strike a submerged object while in forward motion, hydraulic pressure on the top side of the cylinder will increase to cause the impact relief valve in the trim cylinders to open. This allows the lower unit to trail over the obstruction. The fluid in the top side of the cylinder opens the impact relief valve and flows into the cavity between the memory piston and the cylinder piston. When the lower unit clears the submerged object, the thrust of the engine forces the engine back down. As the cylinder piston is lowered, fluid trapped between the memory piston and the cylinder piston escapes through a return check valve. Fluid below the memory piston is trapped in place, therefore, stopping the cylinder piston and returning the trim position to its previous position.

Purging Power Trim System

IMPORTANT: The fill cap with O-ring must be tightened securely before operating the power trim system.

IMPORTANT: Operate the power trim system in short intervals until the hydraulic pump is primed and the trim cylinders move.

- Cycle the outboard through the entire trim/tilt range four times.
- To check for presence of air in the system, extend the cylinders slightly and push down on the outboard. If the trim rams retract more than 3 mm (0.125 in.), air is present. Cycle the trim system again and repeat this step.
- Check the fluid level. Refer to **Section 1B - Checking Power Trim Fluid**.

Troubleshooting the Power Trim System

Preliminary

Determine if the problem is hydraulic or electrical related. Most often, if the electric motor operates, the problem is in the hydraulic system. If the electric motor does not operate, the problem is in the electrical system.

Advanced Midsection (AMS) Power Trim

IMPORTANT: Operate the power trim system after each check to see if the problem is corrected. If the problem has not been corrected, proceed with the next check.

1. Check that the manual release valve is tightened fully (clockwise).
2. Check the trim pump fluid level in the full up position. Fill if necessary. Refer to Section 1B - Checking Power Trim Fluid.
3. Check for external leakage in the power trim system. Replace or repair defective components if a leak is found. Maximum acceptable power trim cylinder leak down is 25 mm (1 in.) within a 24 hour period.

Hydraulic System Troubleshooting

Condition/Problem

Condition of Trim System	Problem
Trim motor runs; trim system does not move up or down	1, 2, 5, 7, 10
Does not trim full down. Up trim OK.	2, 3, 4, 6, 7
Does not trim full up. Down trim OK.	1, 4, 6, 7
Partial or jerky down/up	1, 3, 6
Thump noise when shifting	2, 3, 5
Does not trim under load	2, 5, 8, 9, 10, 12
Does not hold trim position under load	4, 5, 6, 7
Trail out when backing off from high speed	3, 4
Leaks down and does not hold trim	4, 5, 6, 7
Trim motor working hard and trims slow up and down	8, 9
Trims up very slow	1, 2, 8, 9
Starts to trim up from full down position when the down trim button is depressed	3, 4
Trim position will not hold in reverse	2, 3, 4, 5, 13

Problem/Solution

No.	Problem	Solution
1.	Low fluid level	Add Power Trim and Steering Fluid or ATF (Type Dexron III).
2.	Defective hydraulic pump	Pressure test pump. Refer to Testing the Power Trim System , following.
3.	Trim cylinder shock piston ball not seated	Inspect ball seat for nicks or contamination.
4.	Trim cylinder piston or memory piston O-rings leaking or cut	Inspect O-rings for cuts or abrasion.
5.	Manual release valve leaking (check condition of O-rings) (valve not fully closed)	Ensure that valve is fully closed. Inspect O-rings.
6.	Thermal relief valve not seated	Inspect seat for debris and damage.
7.	Debris in system	Inspect for debris. Refill system with clean fluid.
8.	Battery low	Check battery.
9.	Electric motor defective	Refer to Electrical System Troubleshooting in the Diagnostic Manual .
10.	Broken motor/pump driveshaft	Inspect for damage.
11.	Air pocket under pump	Purge system. Refer to Purging Power Trim System , preceding.
12.	Defective up relief valve	Replace power trim pump assembly.
13.	Defective down relief valve	Replace power trim pump assembly.

Testing the Power Trim System


Install the Test Gauge Adapter Fitting for the Up Pressure Test

CAUTION

Oil in the trim system is under pressure and could spray out causing possible injury. Ensure the outboard is in the full tilt position to relieve all pressure before opening the fill cap.

IMPORTANT: The power trim system is pressurized. Tilt the outboard to the full up position and engage the tilt lock lever before checking the fluid level. Completely extend the trim cylinder to depressurize the system.

1. Trim the engine up and engage the tilt lock lever.

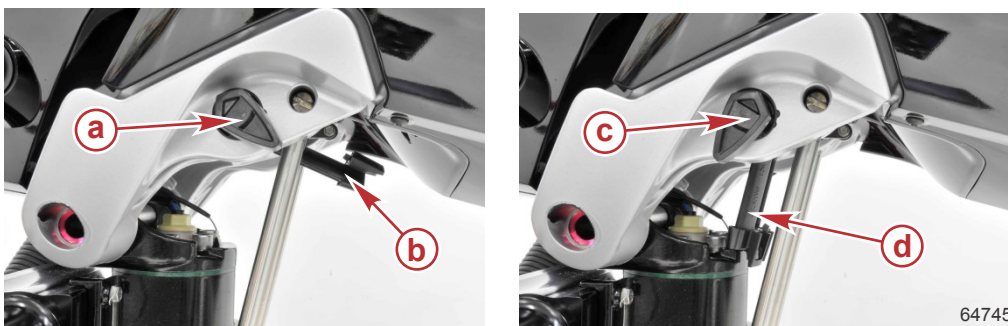


- a - Tilt lock lever disengaged
- b - Tilt lock bracket disengaged
- c - Tilt lock lever engaged
- d - Tilt lock bracket engaged

2. Momentarily actuate the trim switch in the opposite direction from the last operation to relieve the pressure in the system.
3. Check for external leaks.
4. Slowly remove the reservoir cap to relieve the pressure.

5. Remove the snap ring securing the manual release valve and remove the manual release valve.

NOTE: A small amount of fluid may drip from the manual release port. Place a container under the trim assembly to collect any leakage.


6. Install the power trim adapter fitting into the manual release port.

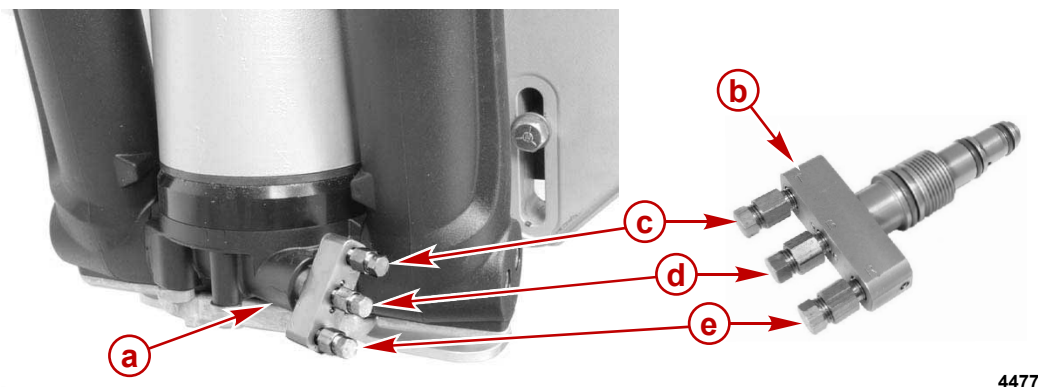

- a - Manual release port
- b - Adapter fitting
- c - Test port "T"
- d - Test port "R"
- e - Test port "B"

Power Trim Adapter Fitting	91-822778004
----------------------------	--------------

- Thread the hose at valve "C" from the test gauge kit into the adapter test port "B."

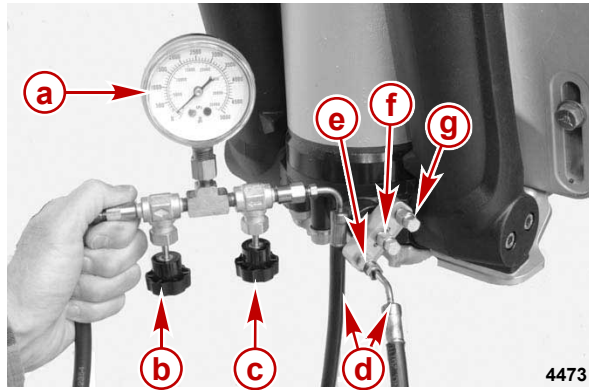

- a - Test gauge
- b - Valve "B"
- c - Valve "C"
- d - Test hose - adapter fitting to gauge
- e - Test port "B"
- f - Test port "R"
- g - Test port "T"

Power Trim Test Gauge Kit	91- 52915A 6
---------------------------	--------------

- Check the power trim fluid level. If necessary, add fluid to bring the level to 25 mm (1 in.) below the top of the reservoir neck.
- Install the reservoir cap.
IMPORTANT: The reservoir cap must be installed to ensure accurate test results.

Up Pressure Circuit Test

- Ensure that all fittings are tight prior to testing.
- Trim the engine up slightly and disengage the tilt lock lever.
- Open valve "C" on the power trim test gauge.
- Run the trim down.
- Run the trim up. Hold and observe the pressure for a few seconds. Release the trim button.

Up Pressure Relief Valve Specification	
Pressure	17554 kPa (2546 psi)
Current draw	130 amp maximum

NOTE: If the pressure is out of specification, the pump or up pressure relief valve is defective. Replace the trim pump assembly. Refer to **Power Unit Disassembly/Reassembly** for instructions.

NOTE: If testing the down circuit pressure, proceed to **Down Pressure Circuit Test**.

- Run the trim down to release the pressure.
- Place the outboard in the full up position and engage the tilt lock lever.
- Momentarily actuate the trim switch in the opposite direction from the last operation to relieve the pressure in the system.
- Momentarily open the reservoir cap to relieve the pressure, then tighten the cap.
- Remove the test gauge hose and adapter fitting.
- Install the manual release valve and snap ring. Ensure that the snap ring is fully seated in the groove.
- Check the power trim fluid level. Add Power Trim and Steering Fluid if necessary.

Tube Ref No.	Description	Where Used	Part No.
114	Power Trim and Steering Fluid	Power trim system	92-858074K01

- Install the reservoir cap.


Install the Test Gauge Adapter Fitting for the Down Pressure Test

⚠ CAUTION

Oil in the trim system is under pressure and could spray out causing possible injury. Ensure the outboard is in the full tilt position to relieve all pressure before opening the fill cap.

IMPORTANT: The power trim system is pressurized. Tilt the outboard to the full up position and engage the tilt lock lever before checking the fluid level. Completely extend the trim cylinder to depressurize the system.

1. Trim the engine up and engage the tilt lock lever.
2. Momentarily actuate the trim switch in the opposite direction from the last operation to relieve the pressure in the system.

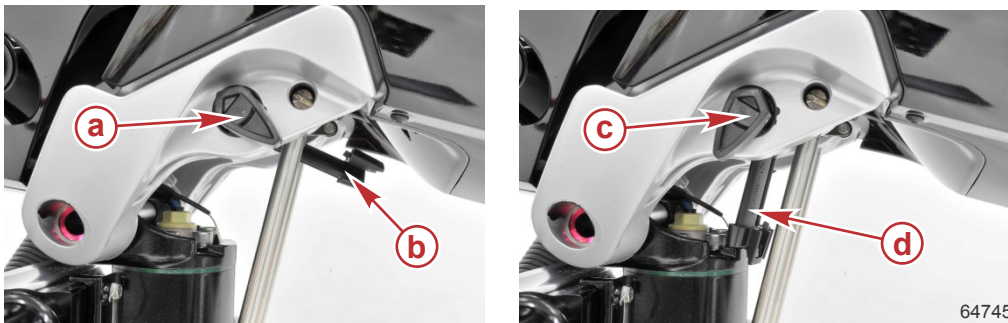


- a - Tilt lock lever disengaged
- b - Tilt lock bracket disengaged
- c - Tilt lock lever engaged
- d - Tilt lock bracket engaged

3. Check for external leaks.
4. Slowly remove the reservoir cap to relieve the pressure.
5. Remove the snap ring securing the manual release valve and remove the manual release valve.

NOTE: A small amount of fluid may drip from the manual release port. Place a container under the trim assembly to collect any leakage.

6. Install the power trim adapter fitting into the manual release port.

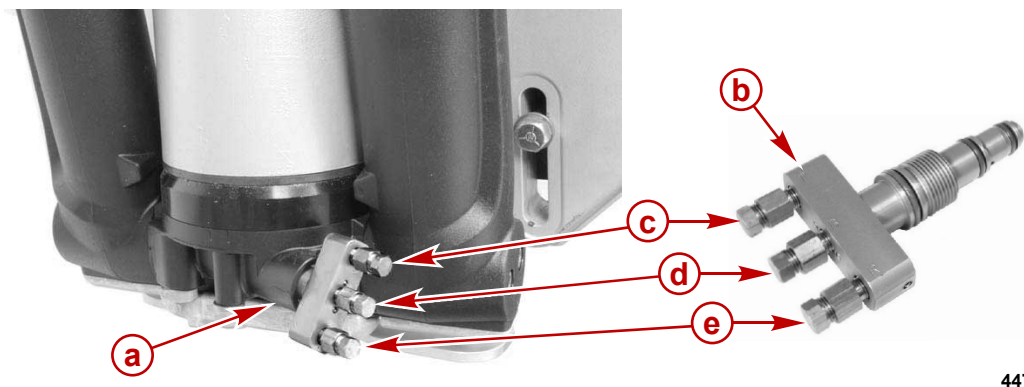


- a - Manual release port
- b - Adapter fitting
- c - Test port "T"
- d - Test port "R"
- e - Test port "B"

Power Trim Adapter Fitting	91-822778004
----------------------------	--------------

7. Ensure that test ports "B" and "R" are plugged.


- Thread the hose at valve "C" from the test gauge kit into the adapter test port "T."

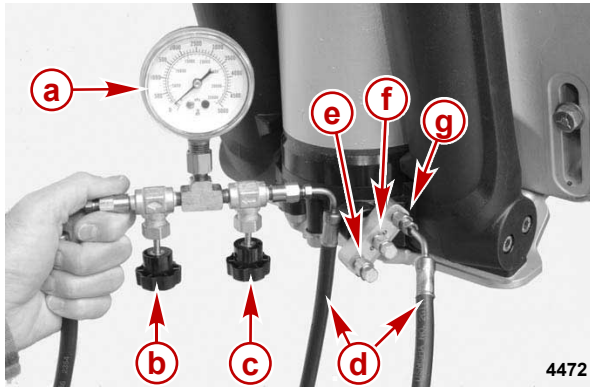

- a - Test gauge
- b - Valve "B"
- c - Valve "C"
- d - Test hose (adapter fitting to gauge)
- e - Test port "B"
- f - Test port "R"
- g - Test port "T"

Power Trim Test Gauge Kit	91- 52915A 6
---------------------------	--------------

- Check the power trim fluid level. If necessary, add Power Trim and Steering Fluid to bring the level to 25 mm (1 in.) below the top of the reservoir neck.

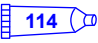Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Power trim system	92-858074K01

- Install the reservoir cap.

IMPORTANT: The reservoir cap must be installed to ensure accurate test results.

Down Pressure Circuit Test

- Ensure that all fittings are tight prior to testing.
- Trim the engine up slightly and disengage the tilt lock lever.
- Open valve "C" on the power trim test gauge.
- Cycle the trim down and up.
- Run the trim down. Hold and observe the pressure for a few seconds. Release the trim button.

Down Pressure Relief Valve Specification	
Pressure	1758–2978 kPa (255–432 psi)

NOTE: If the pressure is out of specification, the pump or down pressure relief valve is defective. Replace the trim pump assembly. Refer to **Power Unit Disassembly/Reassembly** for instructions.

- Run the trim down to release the pressure.
- Place the outboard in the full up position and engage the tilt lock lever.
- Momentarily actuate the trim switch in the opposite direction from the last operation to relieve the pressure in the system.
- Slowly remove the reservoir cap to relieve the pressure.
- Remove the test gauge hose and adapter fitting.
- Install the manual release valve and snap ring. Ensure that the snap ring is fully seated in the groove.
- Check the power trim fluid level. If necessary, add fluid to bring the level to 25 mm (1 in.) below the top of the reservoir neck.
- Install the reservoir cap.

Wire Color Code Abbreviations

Wire Color Abbreviations				
BLK	Black		BLU	Blue
BRN	Brown		GRY or GRA	Gray
GRN	Green		ORN or ORG	Orange
PNK	Pink		PPL or PUR	Purple
RED	Red		TAN	Tan
WHT	White		YEL	Yellow
LT or LIT	Light		DK or DRK	Dark


Power Trim System

Power Trim System Removal

⚠ WARNING

Servicing, removing, or installing the power trim system may result in a lack of pressure in the trim cylinders. If a loss of trim cylinder pressure should occur and the outboard is not in the full down position, the potential exists for pinching, crushing, or impact type personal injuries. To prevent such injuries, use the tilt lock lever to secure the outboard in the up position. Firmly attach a hoist to the gearcase to prevent the abrupt return of the outboard to the down position.


Trim the engine up and engage the tilt lock lever. Momentarily actuate the trim switch in the opposite direction from the last operation to relieve the pressure in the system.

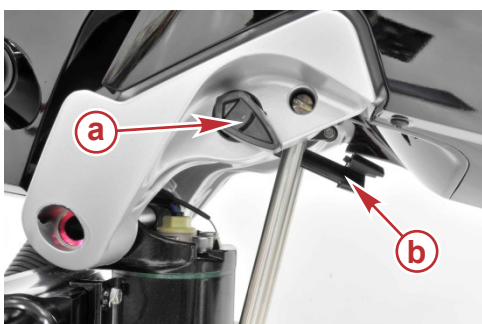

- a** - Tilt lock lever disengaged
- b** - Tilt lock bracket disengaged
- c** - Tilt lock lever engaged
- d** - Tilt lock bracket engaged

Power Trim Harness


1. Locate the trim motor harness under the intake plenum. Lift the harness from the lower cowl to access the connectors.

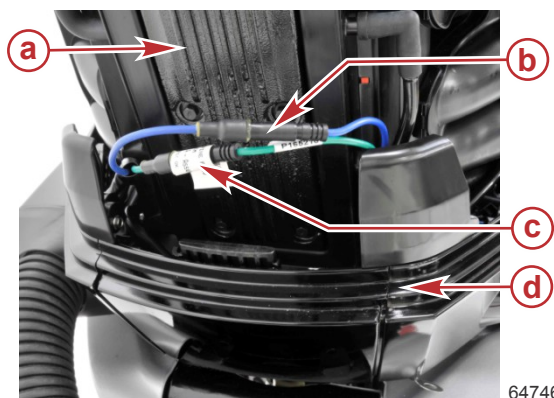


- a** - Intake plenum
- b** - Blue (up) trim motor bullet connector
- c** - Green (down) trim motor bullet connector
- d** - Lower cowl

2. Disconnect the trim motor harness (blue and green) bullet connectors.

3. Remove the screw securing the ground wire on the starboard side of the powerhead near the battery cables.

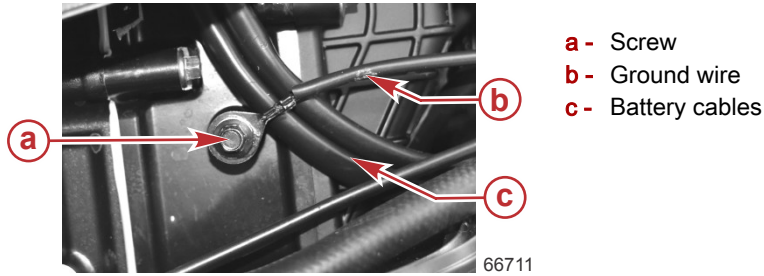


4. Disconnect the trim position sensor connector.

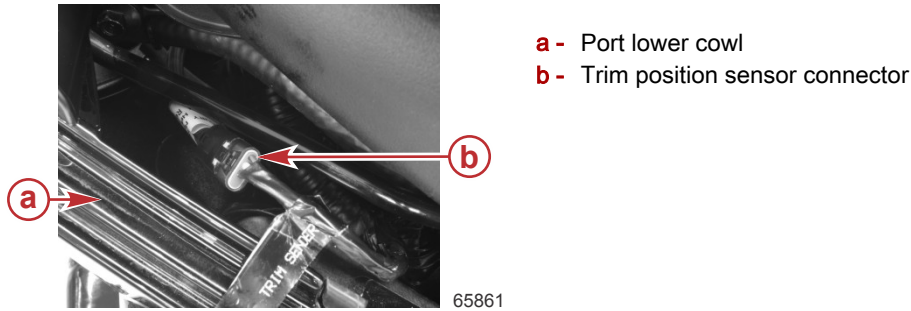

5. Remove the power trim harness grommet and harnesses from the lower cowl.

Trim Cylinder Rod Ends


1. Use Oetiker® crimp tool pliers to remove the two trilobe cross pins from the upper pivot pins.
NOTE: The lower chap may be removed to aid in the cross pin removal.

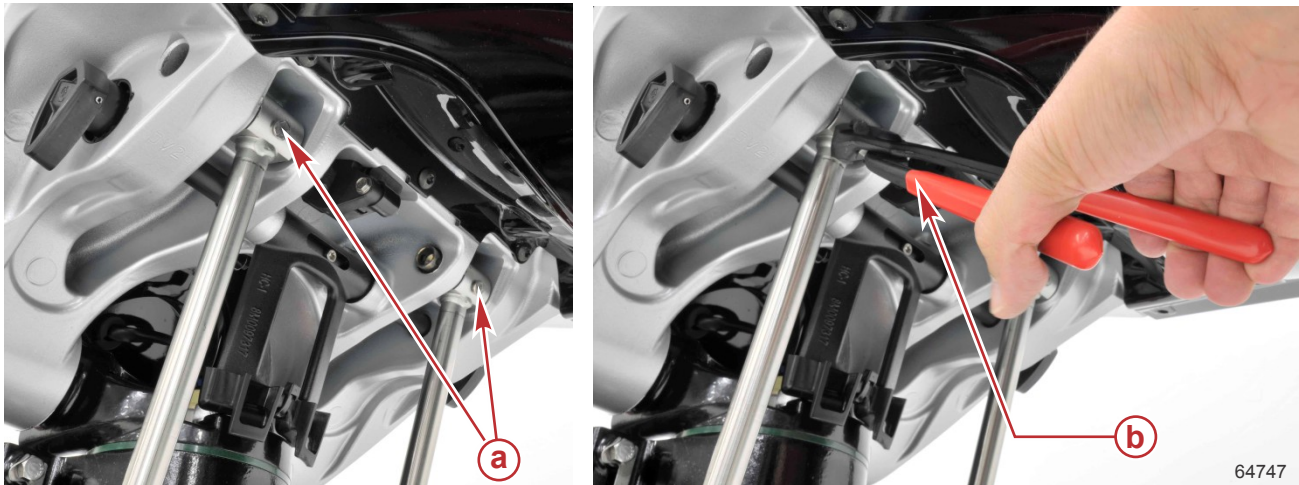

- a - Trilobe pin
- b - Oetiker® pliers

2. Remove the two screws securing the trim sensor to the mount cradle.

NOTE: The trim sensor wiring does not need to be removed unless the trim sensor is being replaced.

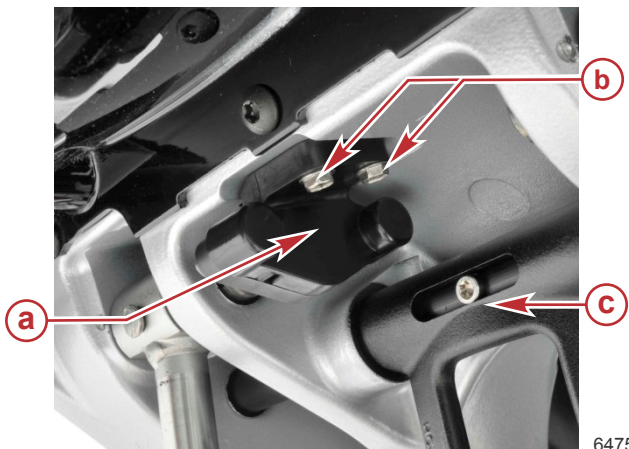

- a** - Trim sensor
- b** - Screws (2)
- c** - Tilt lock bracket

64750

3. Use a brass drift to drive the pivot pins out of the mount cradle.




- a** - Starboard pivot pin

64751

Power Trim Assembly

1. Remove the splash plate and ground cable.

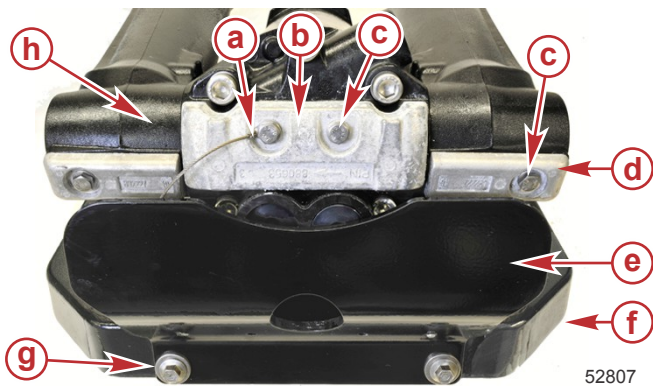


- a** - Ground cable
- b** - Anode
- c** - Screw and washer (M6 x 16) (4)
- d** - Anode (2)
- e** - Splash plate
- f** - Pedestal
- g** - Flange head screw and washer (M8 x 12) (2)
- h** - Power trim assembly

52807


Advanced Midsection (AMS) Power Trim

2. Remove five of the six mounting screws from the bottom of the power trim assembly. Leave one screw in place to prevent the power trim assembly from falling.

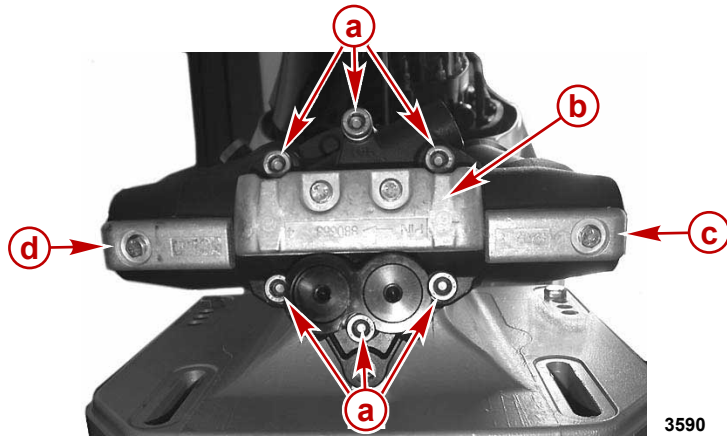

- a - Power trim mounting screws
- b - Power trim assembly
- c - Starboard trim cylinder
- d - Port trim cylinder


3. Support the power trim assembly while removing the remaining screw. Remove the power trim assembly from the pedestal.

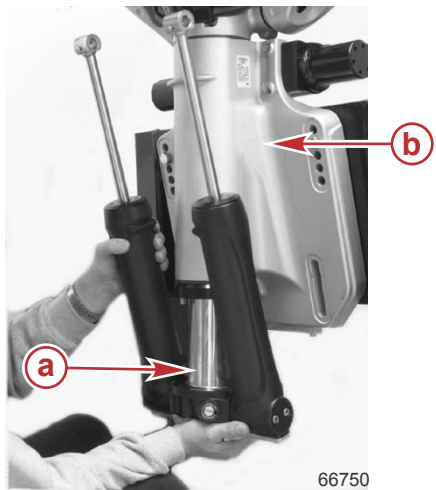

- a - Power trim assembly
- b - Pedestal


Power Trim System Installation

1. Ensure that the O-ring is in place in the steering head.
2. Ensure that the steering tube O-ring is in place on the manifold base.
3. Install the power trim assembly into the pedestal.

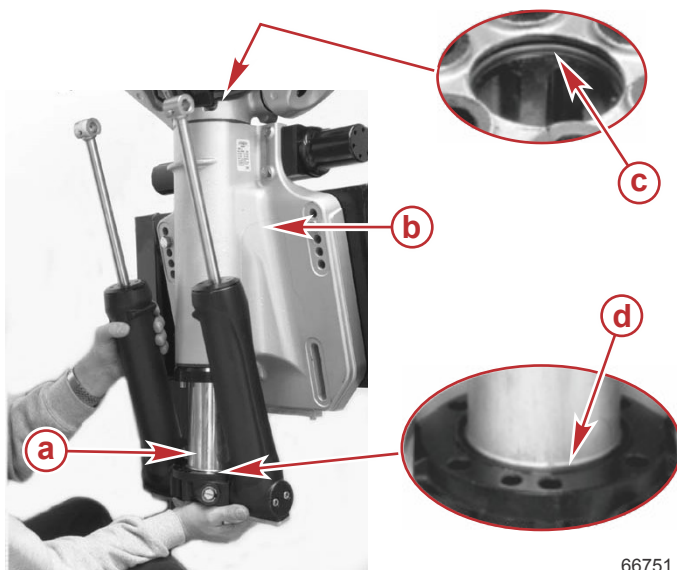


- a - Power trim assembly
- b - Pedestal
- c - Steering head O-ring
- d - Steering tube O-ring

- Install the six screws into the bottom of the power trim assembly. Tighten the screws to the specified torque.

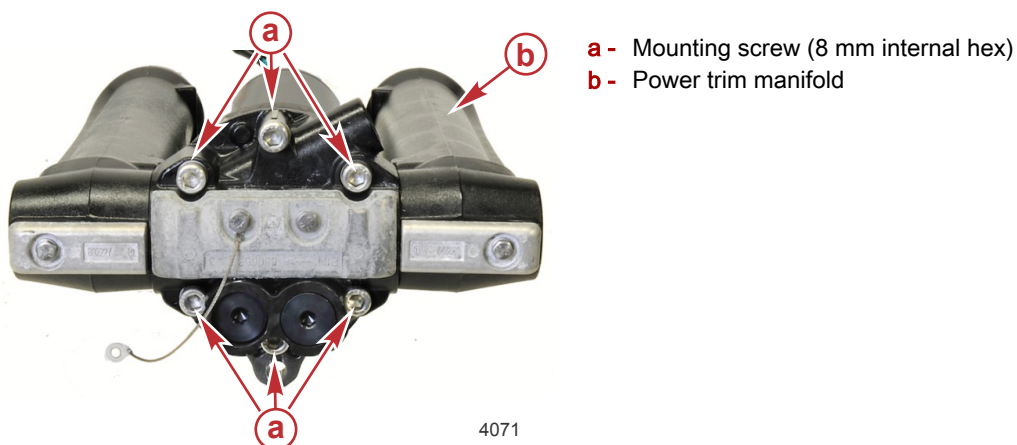


Description	Nm	lb-in.	lb-ft
Power trim assembly mounting screws	47.5	-	35

- Attach the two anodes and ground cable to the splash plate. Tighten the screws to the specified torque.

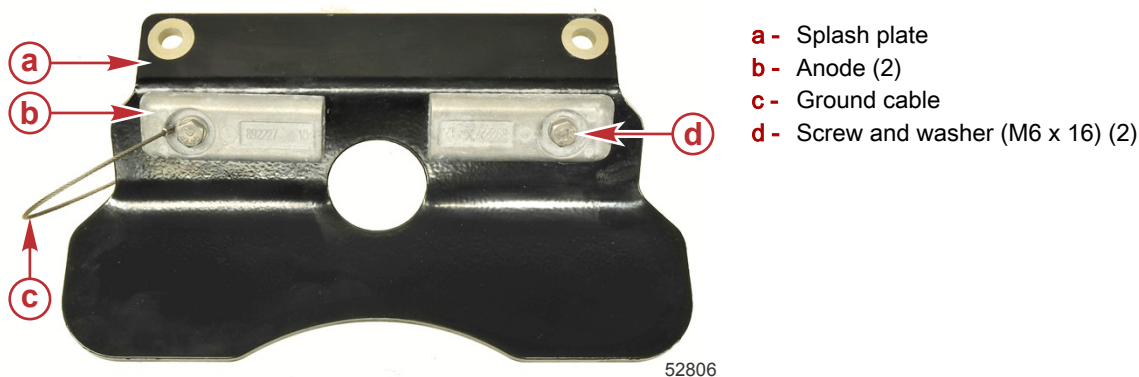

Description	Nm	lb-in.	lb-ft
Anode mounting screw (M6 x 16)	5.6	49.6	-


- Secure the ground cable to the power trim assembly. Tighten all four anode mounting screws to the specified torque.
- Attach the splash plate to the pedestal. Secure the plate with two screws and washers. Tighten the screws to the specified torque.

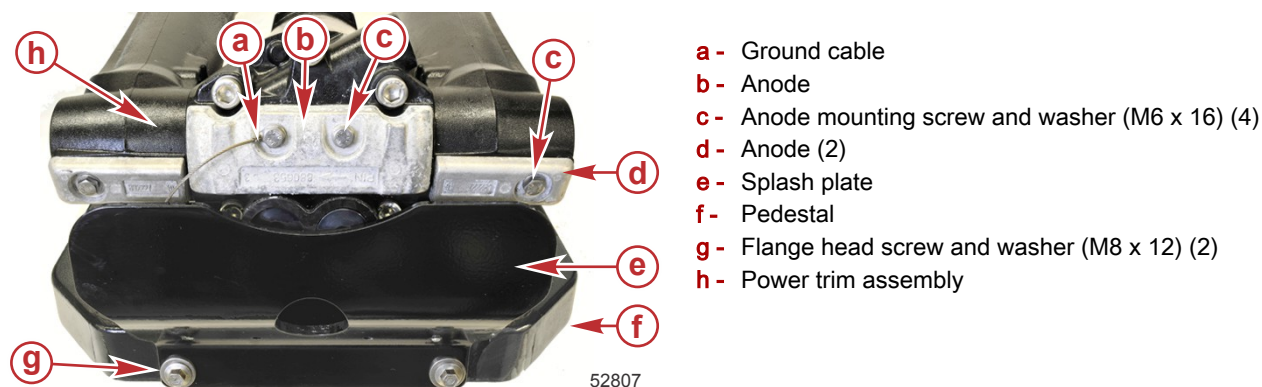

Description	Nm	lb-in.	lb-ft
Anode mounting screws (M6 x 16) (4)	5.6	49.6	-
Splash plate mounting screws (M8 x 12) (2)	14	123.9	-

Power Trim Harness


1. If it was removed, attach a cable tie to the harness a distance of 6.4 cm (2.5 in.) from the reservoir fill cap.
2. Install the power trim harness grommet onto the harness 17.8 cm (7.0 in.) from the reservoir fill cap. Replace the small cable ties if they were removed.

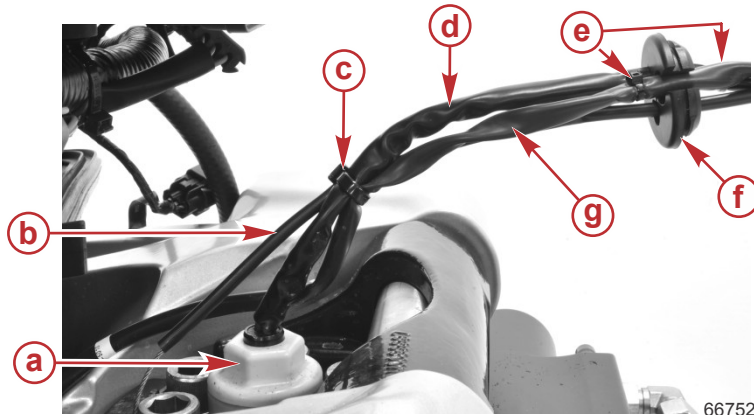

Lower cowl not shown for clarity


- a - Reservoir fill cap
- b - Ground wire
- c - Cable tie installed 6.4 cm (2.5 in.) from the reservoir fill cap
- d - Power trim motor wires
- e - Small cable ties
- f - Grommet installed 17.8 cm (7.0 in.) from the reservoir fill cap
- g - Trim position sensor harness

3. Push the grommet and harness into the lower cowl from below. Ensure that the grommet is fully seated.

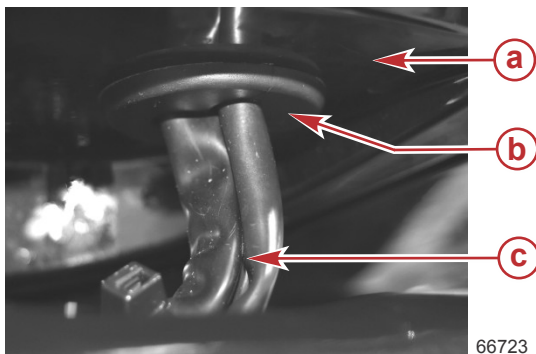


- a - Port lower cowl
- b - Grommet
- c - Harnesses

4. Connect the trim motor harness (blue and green) bullet connectors. Tuck the trim motor harness into the lower cowl below the intake plenum.

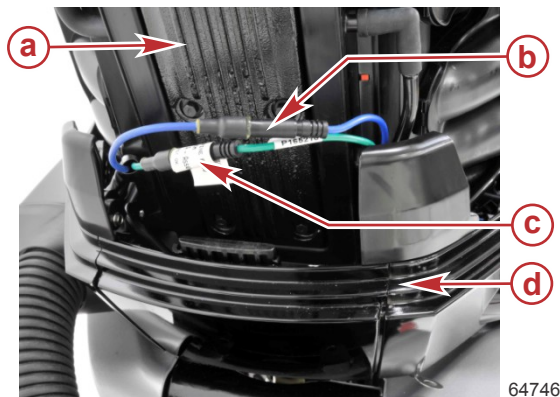


- a - Intake plenum
- b - Blue (up) trim motor bullet connector
- c - Green (down) trim motor bullet connector
- d - Lower cowl

5. Install and connect the ground wire. Tighten the screw to the specified torque. Apply Liquid Neoprene to the screw to protect the ground wire from corrosion.

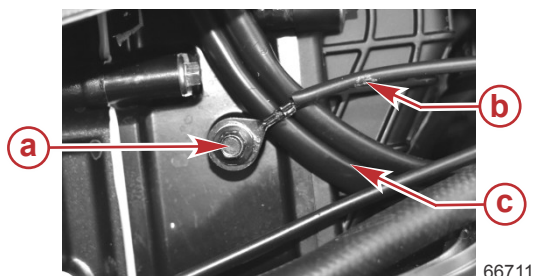


- a - Screw
- b - Ground wire
- c - Battery cables

Description	Nm	lb-in.	lb-ft
Screw	10	88.5	-

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Screw	92- 25711 3


- Connect the trim position sensor connector.

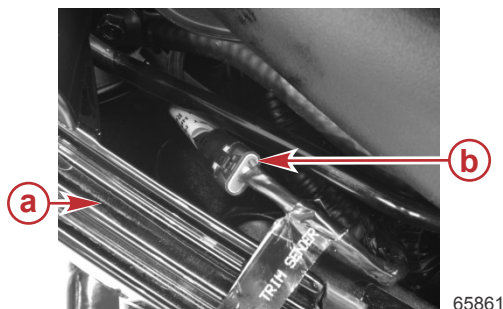

- a** - Port lower cowl
- b** - Trim position sensor connector


Trim Cylinder Rod Ends

- Ensure that the four rod end bearings are in place in the mount cradle.
- Position the port and starboard trim cylinder rod ends into the mount cradle.

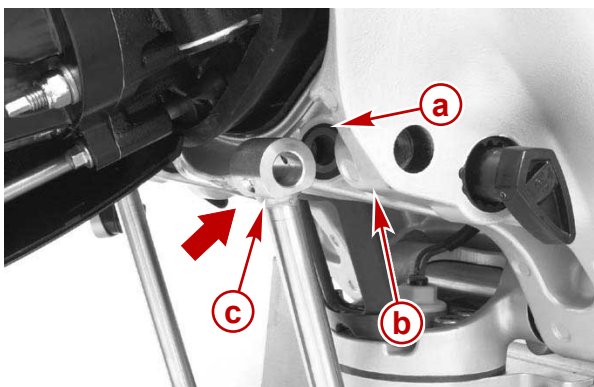

- a** - Trim cylinder rod end bearing (4)
- b** - Mount cradle
- c** - Trim cylinder rod end


- Install the port and starboard pivot pins.
- Use a screwdriver to align the hole in the pivot pin with the hole in the trim cylinder rod end.

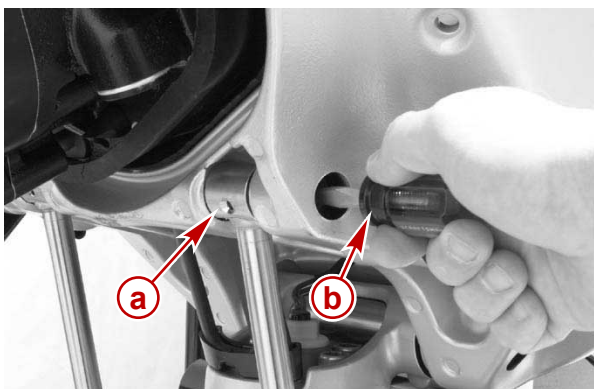

- a** - Trim cylinder rod end
- b** - Screwdriver

- Using a brass drift punch or soft metal hammer, install new trilobe pins fully into the trim cylinder rod ends and upper pivot pins.


NOTE: Do not use a steel drift punch to install the trilobe cross pins. It may cause corrosion to develop on the pins.

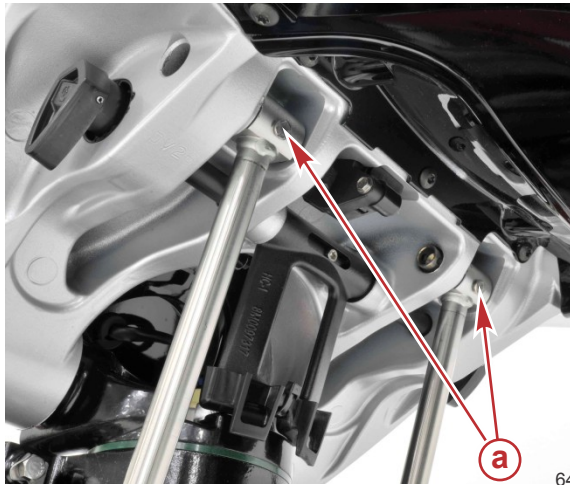

a - Trilobe cross pin


64760

6. Install the trim sensor onto the mount cradle.
7. Apply Loctite 271 Threadlocker to the sensor screws. Tighten the sensor screws to the specified torque.

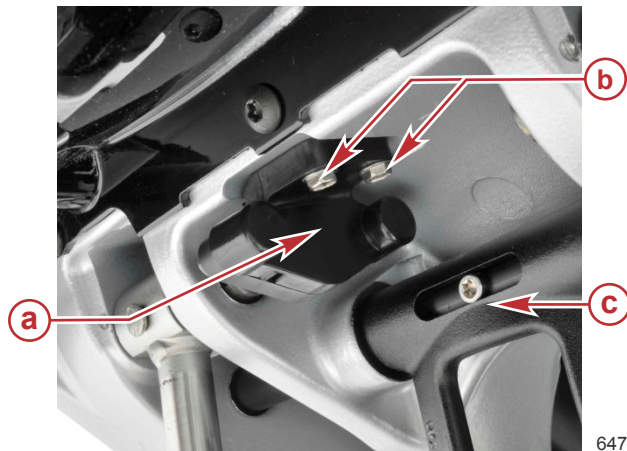

a - Trim sensor
b - Screws (2)
c - Tilt lock bracket


64750

Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	Power trim sensor screws	92-809819

Description	Nm	lb-in.	lb-ft
Power trim sensor screws	4	35.4	-

8. Install the lower cowls if removed during disassembly.

- Trim the engine up slightly and disengage the tilt lock lever.

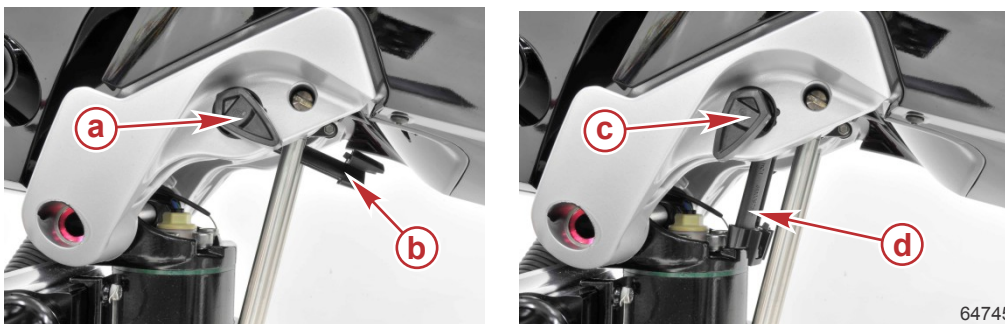

- a** - Tilt lock lever disengaged
- b** - Tilt lock bracket disengaged
- c** - Tilt lock lever engaged
- d** - Tilt lock bracket engaged

- Trim the outboard down.

Purging the Power Trim System

Purge air from the power trim system. Refer to **Purging Power Trim System**.


Power Unit

Power Unit Disassembly

Remove the power trim system from the outboard. Refer to **Power Trim System Removal**.

Draining the System

- Remove the reservoir cap from the reservoir neck. The reservoir cap only requires 1/4 turn to remove.

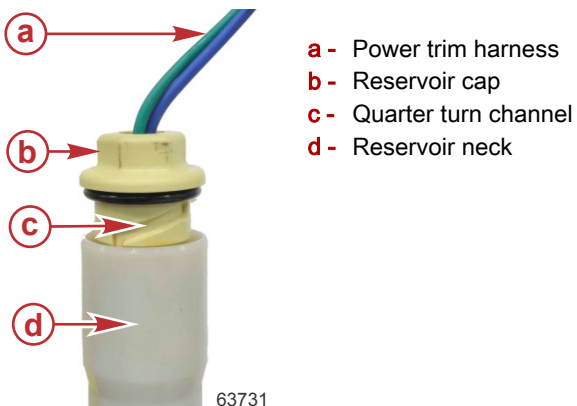

- Remove the reservoir cap from the harness.
- Drain the fluid from the reservoir.


4. Remove the snap ring and manual release valve. Allow additional fluid to drain from internal components.



- a - Power trim motor harness
- b - Reservoir neck
- c - Reservoir
- d - Manual release valve and snap ring



Reservoir

1. Remove the retaining pin from the reservoir neck.

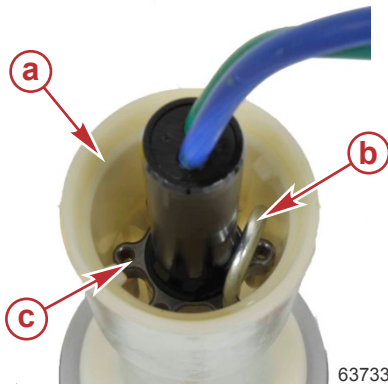

- a - Reservoir neck
- b - Retaining pin
- c - Retaining ring


2. Rotate the reservoir neck to align the slots in the reservoir neck to match the outline of the retaining ring.

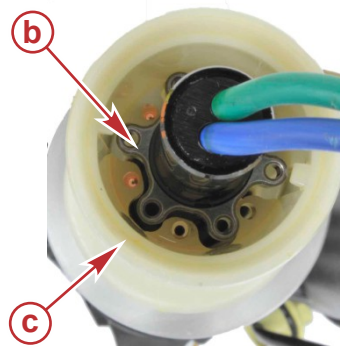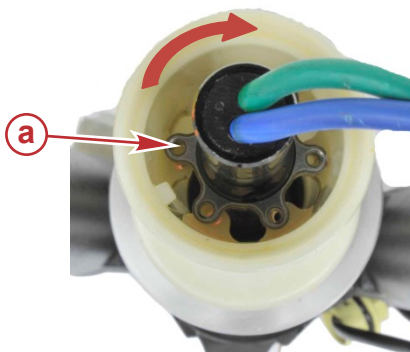


- a - Locking ring in locked position - not aligned with slots in reservoir neck
- b - Locking ring aligned with slots in reservoir neck
- c - Reservoir neck

3. Remove the reservoir neck. It may be necessary to wiggle the reservoir neck to break the seal.

- Remove the aluminum reservoir.

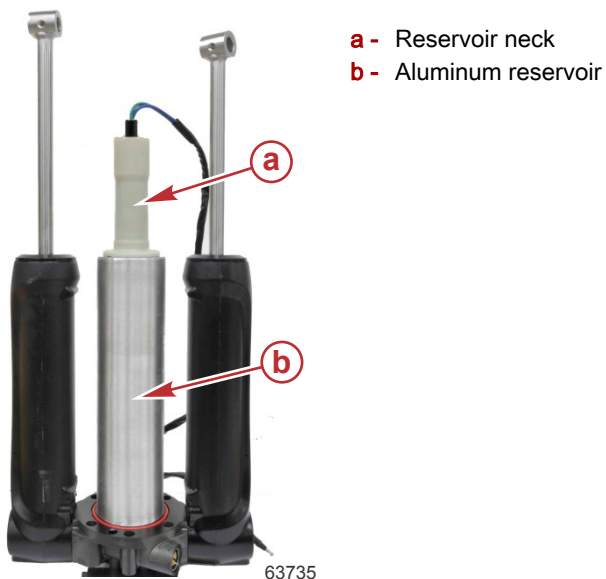


- Remove the two motor mounting screws securing the trim motor assembly. Remove the trim motor assembly.

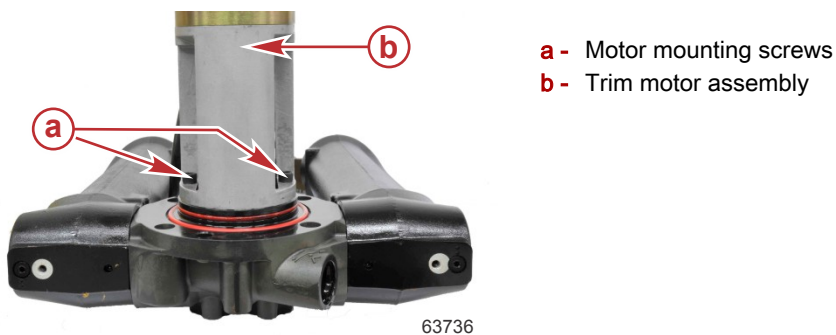


Pump and Filter


- Remove the driveshaft. Remove the two trim pump mounting screws securing the pump and remove the pump.

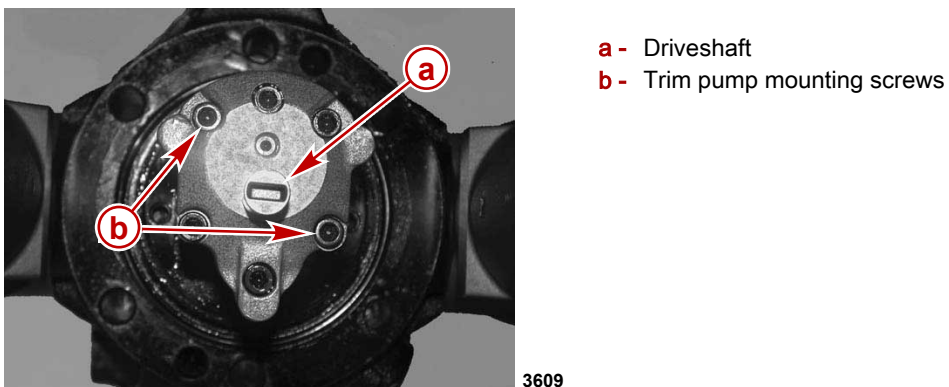

- Remove the filter assembly from the power trim pump.

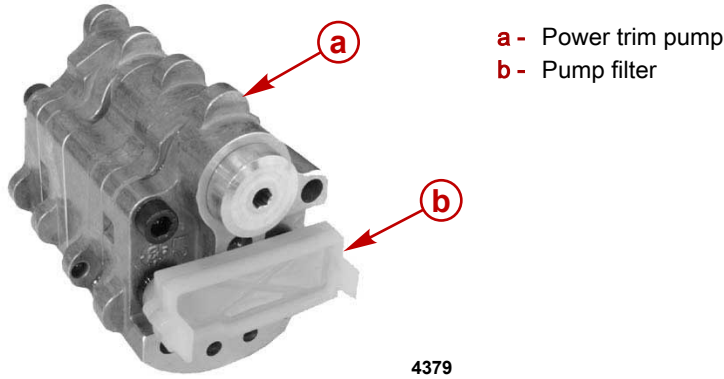

- Remove and discard the O-rings from the filter and manifold. Use new O-rings when assembling the power trim components.

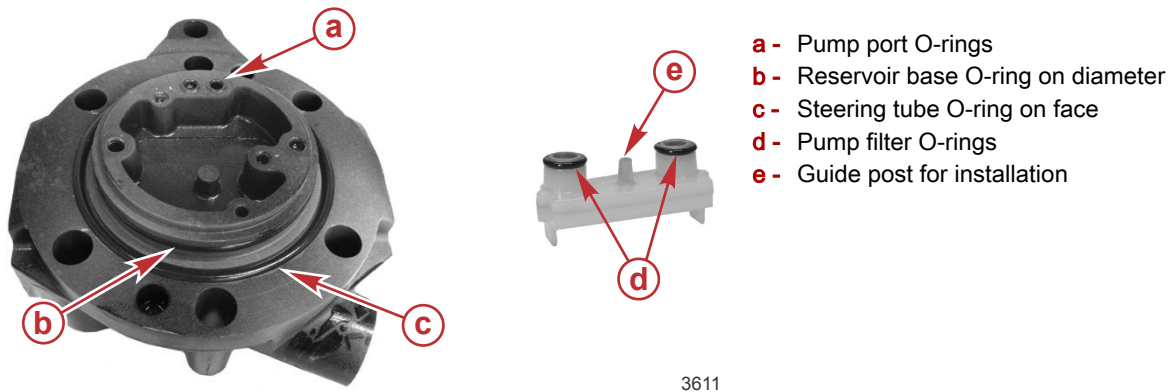

- Inspect the manifold and components for wear, corrosion, and contamination. Clean the components if necessary.


Power Unit Reassembly

NOTE: Replace all O-rings with new O-rings when reassembling the power unit. Lubricate O-rings with clean Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) (Type Dexron III Automatic) prior to installation.


Tube Ref No.	Description	Where Used	Part No.
114	Power Trim and Steering Fluid	O-rings	92-858074K01
28	Dexron III Automatic	O-rings	Obtain Locally

Pump and Filter

- Install lubricated O-rings onto the manifold base. Install lubricated O-rings onto the pump filter.

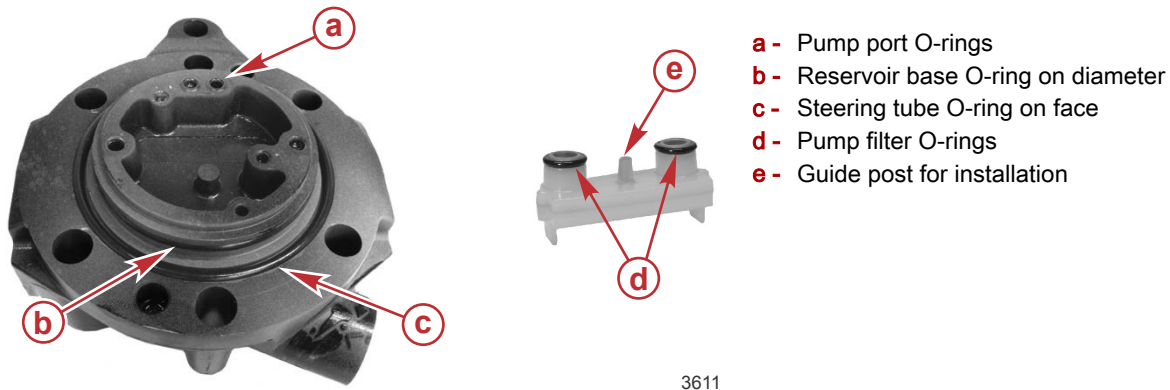

- Install the filter onto the power trim pump. Insert the guide post of the filter into the hole in the pump base.

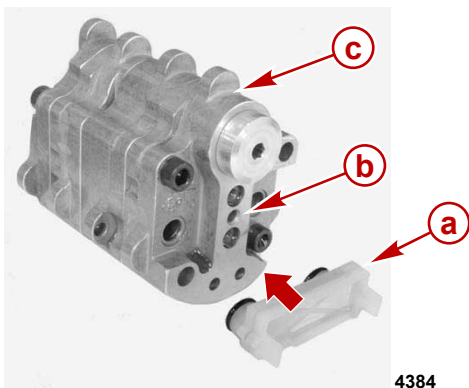


- a - Filter
- b - Hole in pump base for filter installation
- c - Power trim pump

4384

- Install the pump assembly onto the manifold. Secure the pump with two trim pump mounting screws. Tighten the screws to the specified torque.
- Place the driveshaft onto the trim pump input shaft.

NOTE: The driveshaft ends have different size slots. The small slot installs onto the pump shaft.

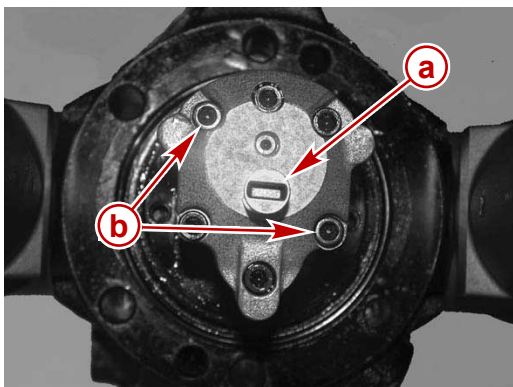


- a - Driveshaft
- b - Trim pump mounting screws

3609

Description	Nm	lb-in.	lb-ft
Trim pump mounting screws	8	70.8	-

Trim Motor

- Place the trim motor onto the trim pump and manifold while aligning the tang on the motor shaft with the slot in the driveshaft.
- Rotate the driveshaft by hand to ensure proper installation of the coupler.
- Secure the power trim motor with two motor mounting screws. Tighten the screws to the specified torque.

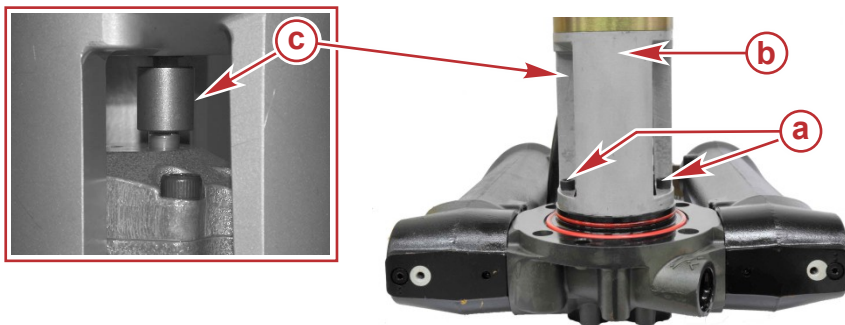

- a - Motor mounting screws
- b - Trim motor
- c - Driveshaft


63738

Description	Nm	lb-in.	lb-ft
Motor mounting screws	8.5	75.2	-


Reservoir

- Install the reservoir neck onto the reservoir. Ensure that the reservoir neck is fully seated on the reservoir.

2. Route the electric motor harness through the reservoir neck.

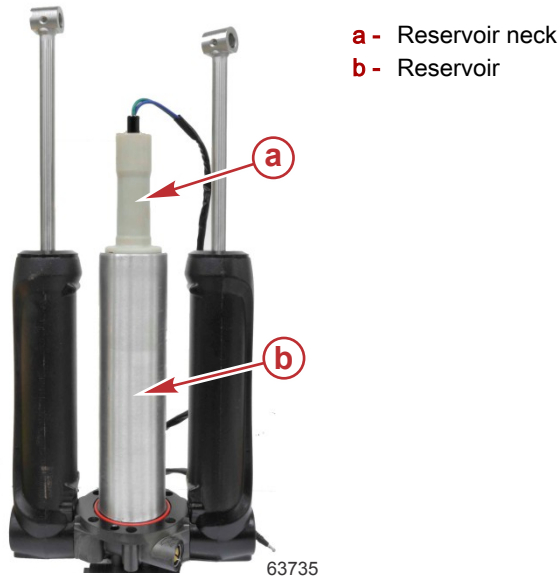


3. Align the reservoir neck with the locking ring and install the reservoir onto the manifold base.
4. Rotate the reservoir neck to align the locking pin hole with the hole in the reservoir neck.

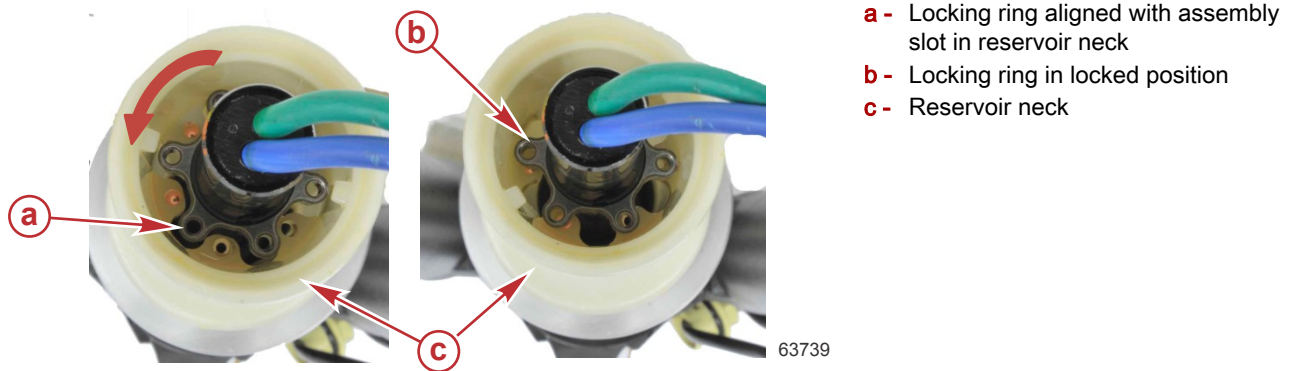

5. Install the locking pin through the locking ring and reservoir neck.


IMPORTANT: Check engagement of the locking pin, locking ring, and reservoir neck. Improper assembly of components may result in loss of system fluid.

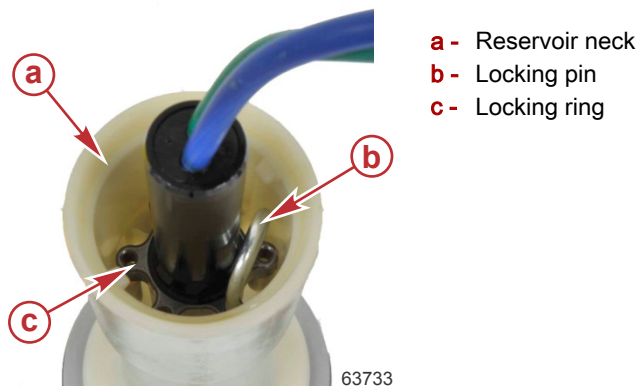


Filling and Purging System


1. Install new lubricated O-rings onto the manual release valve.
2. Install the manual release valve into the manifold.
3. Install the snap ring securing the manual release valve. Verify that the snap ring is fully seated in the groove.
4. Close the manual release valve.

- Fill the reservoir through the reservoir neck to 25 mm (1 in.) from the top of the reservoir neck. Use Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) (Type Dexron III).

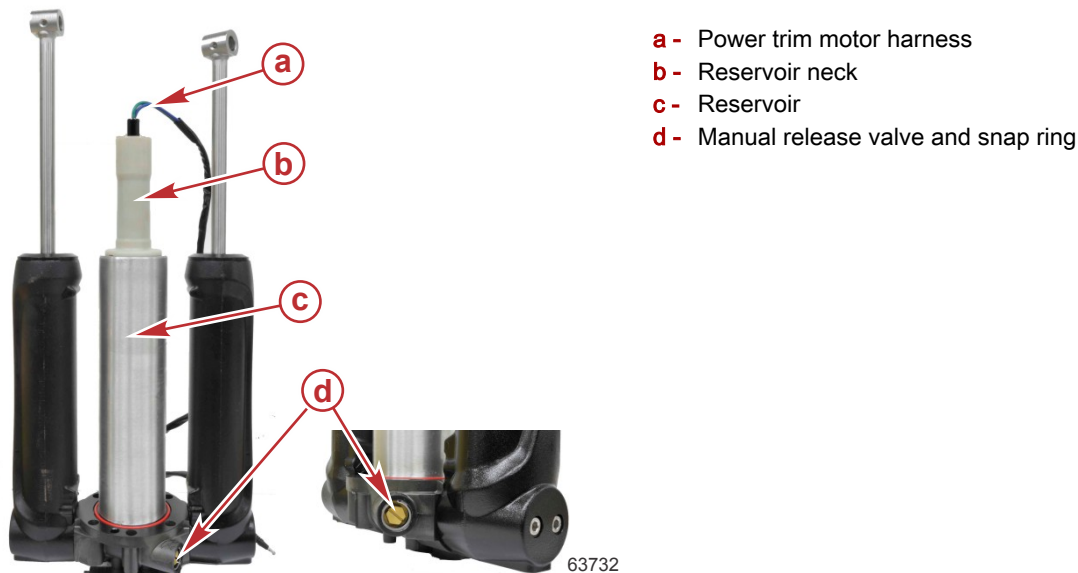

Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Manual release valve O-rings and power trim system reservoir	92-858074K01

- Route the electric motor harness through the reservoir cap.
- Tighten the reservoir cap 1/4 turn. The cap will snap into place. Do not tighten beyond this point.

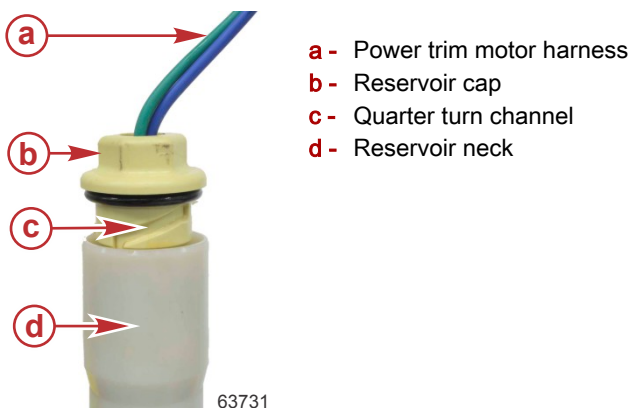

- Connect the trim motor harness (blue and green) bullet connectors to a 12-volt power supply.
- Operate the trim system. Cycle the trim rams up and down several times to remove air.
- Check for leaks.
- Check the fluid level. Add fluid if necessary to bring fluid to 25 mm (1 in.) from the top of the reservoir neck. Install the reservoir cap.
- Install the power trim system onto the outboard. Refer to **Power Trim System Installation** for instructions.


Trim Cylinder and Pivot Pin

Trim Cylinder and Pivot Pin Removal


- Remove the power trim system from the outboard. Refer to **Power Trim System Removal**.
- Drain the fluid from the power trim system. Refer to **Power Unit Disassembly**.

Disassembly


1. Remove the two 6 mm internal hex mounting screws securing the port trim cylinder to the pivot pin.

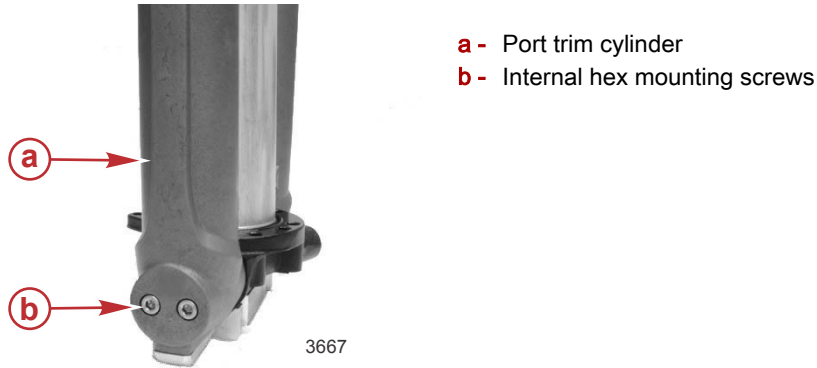


2. Remove the port trim cylinder assembly from the pivot pin.
3. Remove the pivot pin and starboard trim cylinder from the manifold.

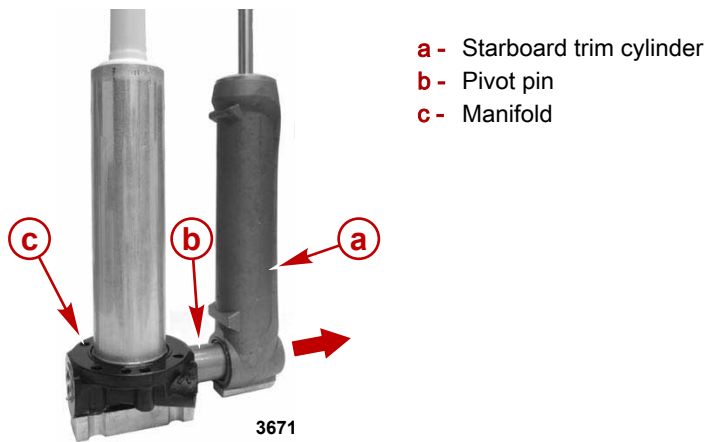

4. Remove the two 6 mm internal hex mounting screws securing the starboard trim cylinder to the pivot pin.
5. Remove the starboard trim cylinder assembly from the pivot pin.

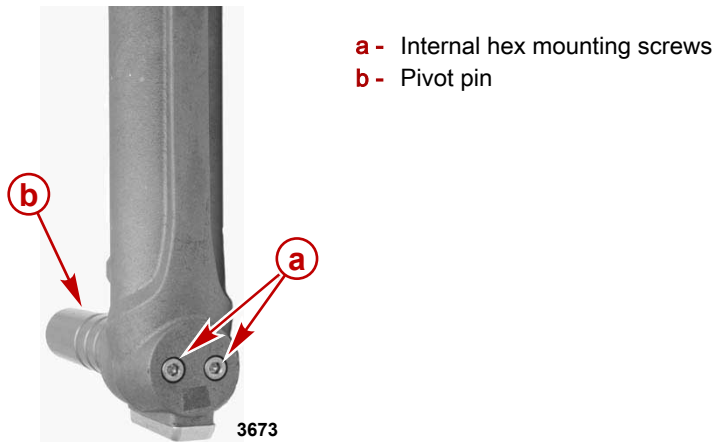


6. Remove and discard the O-rings from the pivot pin and trim cylinders.

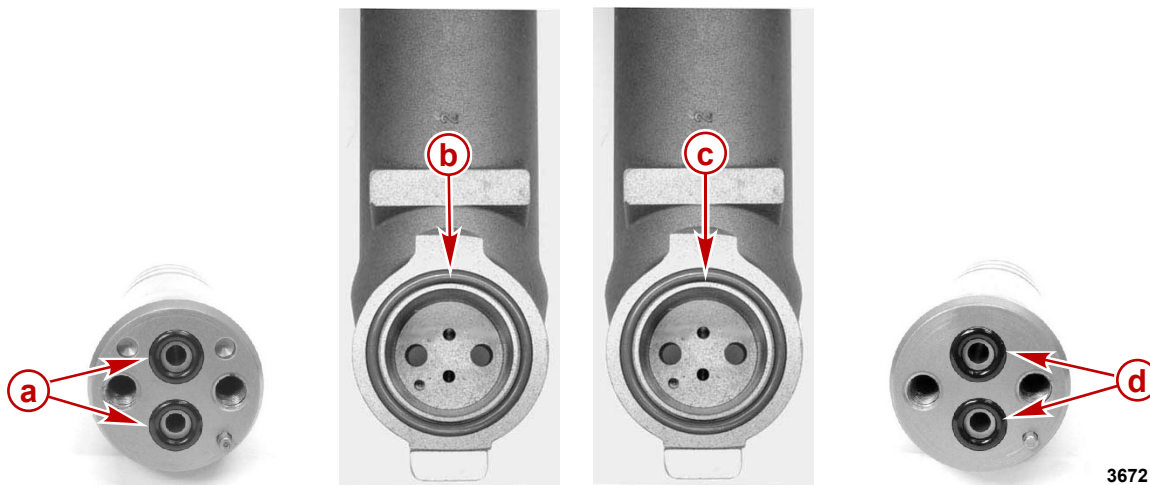

- a - Pivot pin port end O-rings
- b - Port trim cylinder O-ring
- c - Starboard trim cylinder O-ring
- d - Pivot pin starboard end O-rings

7. Remove and discard the internal O-rings from the pivot pin bore in the manifold.

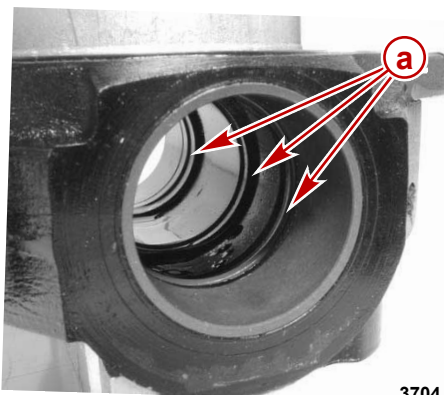

a - Manifold O-rings (3)


8. Inspect the pivot pin for wear.

Trim Cylinder Disassembly

Cylinder Rod, Shock Piston, and End Cap

1. Remove the end cap from the trim cylinder using the trim cylinder end cap tool.


NOTE: Do not use trim cylinder end cap tool, 821709T. Use only trim cylinder end cap tool, 8M0105203.

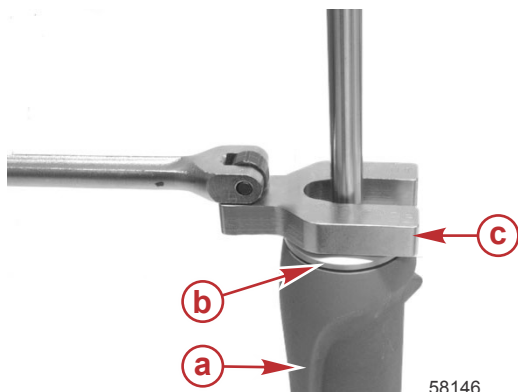

- a - Cylinder tube
- b - End cap
- c - Trim cylinder end cap tool

2. Remove the cylinder rod and shock piston from the cylinder tube.

NOTE: Use a suitable tool such as a drift punch to open one of the check valves in the shock piston to break the cylinder suction and ease piston removal.

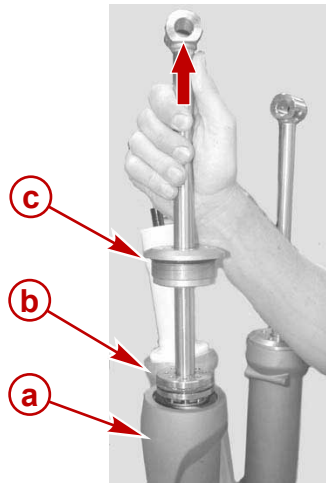


- a - Cylinder tube
- b - Shock piston
- c - End cap

3618

Memory Piston

1. Use locking pliers to remove the memory piston from the cylinder tube.

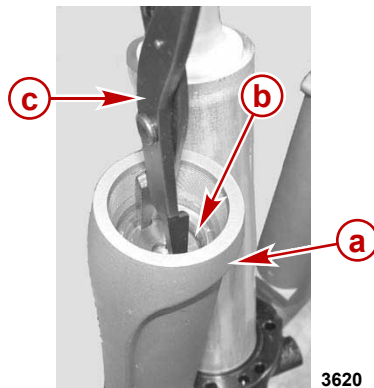

- a - Cylinder tube
- b - Memory piston
- c - Lockring pliers

3620

2. Remove and discard the O-ring from the memory piston.
3. Inspect the components for wear and damage. Replace as required.

Shock Piston

IMPORTANT: The shock piston is not a serviceable component. It must be replaced as an assembly with the cylinder rod and the end cap.

End Cap

IMPORTANT: The end cap is not a serviceable component. It must be replaced as an assembly with the cylinder rod and the shock piston.


Trim Cylinder Reassembly


NOTE: Replace all O-rings with new O-rings when reassembling the trim cylinders and pivot pin. Lubricate the O-rings with clean Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) (Type Dexron III) prior to installation.

Memory Piston

1. Lubricate the memory piston O-ring with Power Trim and Steering Fluid.
2. Install the O-ring onto the memory piston.


3. Install the memory piston into the cylinder tube.

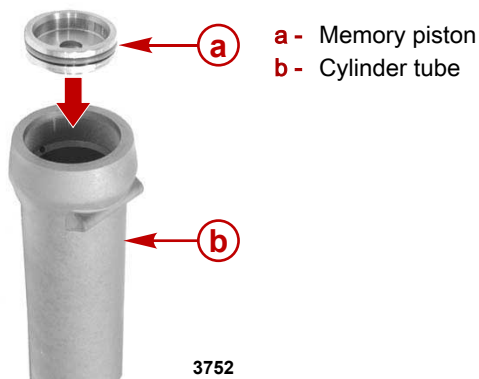


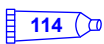Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Memory piston O-ring	92-858074K01

Shock Piston, Cylinder Rod, and End Cap

1. Lubricate the shock piston and end cap O-rings with Power Trim and Steering Fluid.
2. Install the assembled cylinder rod into the cylinder tube.

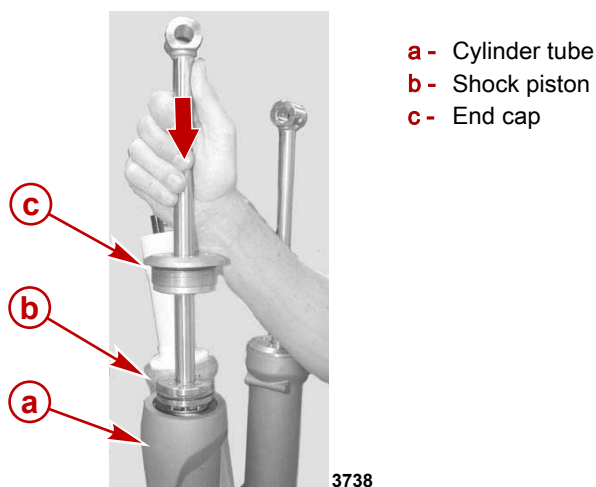


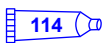Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Shock piston and end cap O-rings	92-858074K01

3. Thread the end cap into the cylinder tube. Tighten the end cap to the specified torque.

NOTE: Assemble a torque wrench and a trim cylinder end cap tool 90 degrees to each other to obtain the most accurate torque reading.



NOTE: Do not use trim cylinder end cap tool, 821709T. Use only trim cylinder end cap tool, 8M0105203.

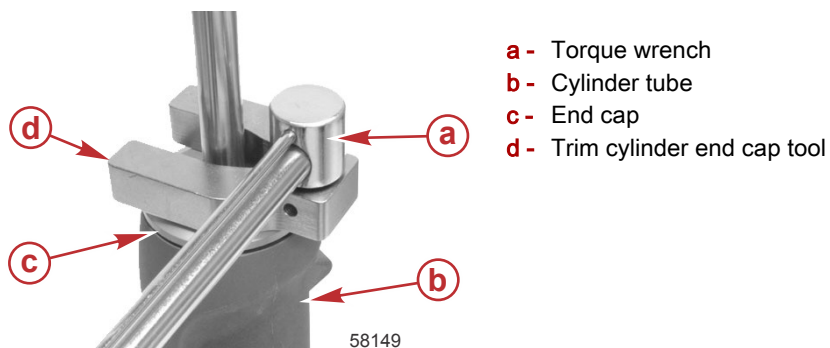


Trim Cylinder End Cap Tool	8M0105203		
Description	Nm	lb-in.	lb-ft
Cylinder end cap	61	-	45

Trim Cylinder and Pivot Pin Installation


NOTE: Replace all O-rings with new O-rings when reassembling the trim cylinders and pivot pin. Lubricate O-rings with clean Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) (Type Dexron III Automatic) prior to installation.

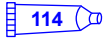Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	O-rings	92-858074K01
 28	Dexron III Automatic	O-rings	Obtain Locally


1. Lubricate the O-rings and wear bushings inside of the manifold.
2. Install lubricated O-rings and wear bushings into the pivot pin bore of the manifold.

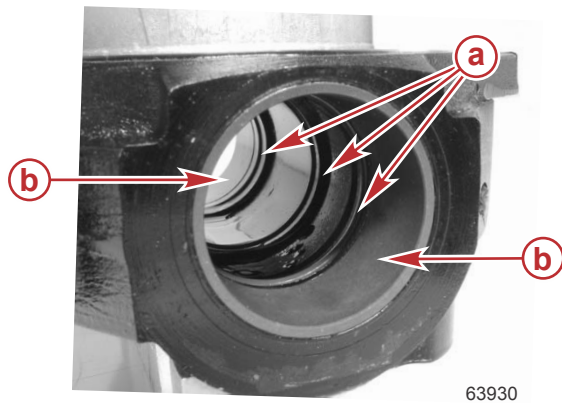


- a - Manifold O-rings (3)
- b - Wear bushings (2)

Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Manifold wear bushings and O-rings	92-858074K01


3. Install lubricated O-rings onto the pivot pin and trim cylinders.

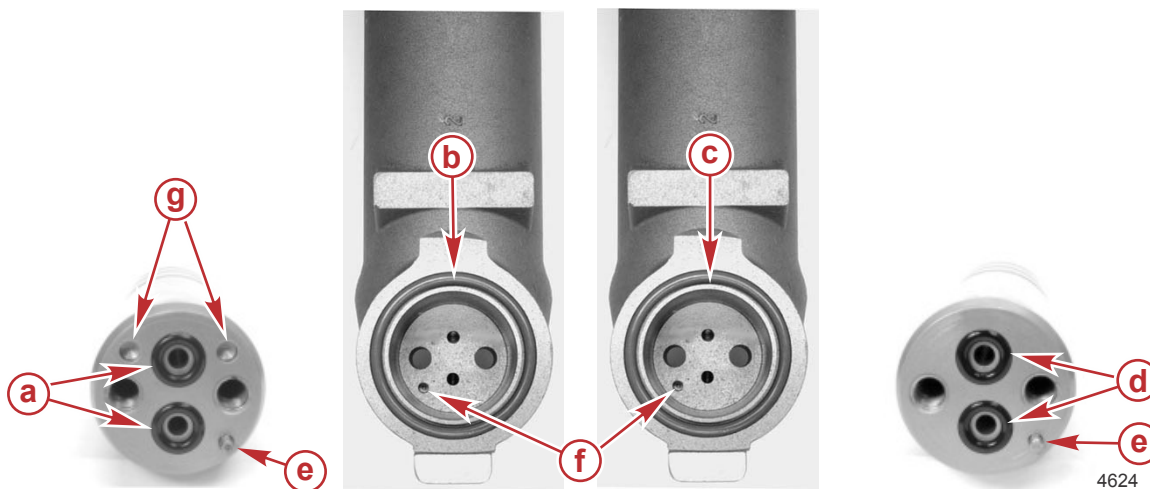


- a - Pivot pin port end O-ring
- b - Port trim cylinder O-ring
- c - Starboard trim cylinder O-ring
- d - Pivot pin starboard end O-ring
- e - Pivot pin locating pin
- f - Trim cylinder locating hole
- g - Identification marks on port end of pivot pin

Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	O-rings	92-858074K01

4. Lubricate the pivot pin with Power Trim and Steering Fluid.
5. Install the starboard end of the pivot pin into the starboard trim cylinder. Ensure that the locating pin on the end of the pivot pin engages the hole in the trim cylinder.

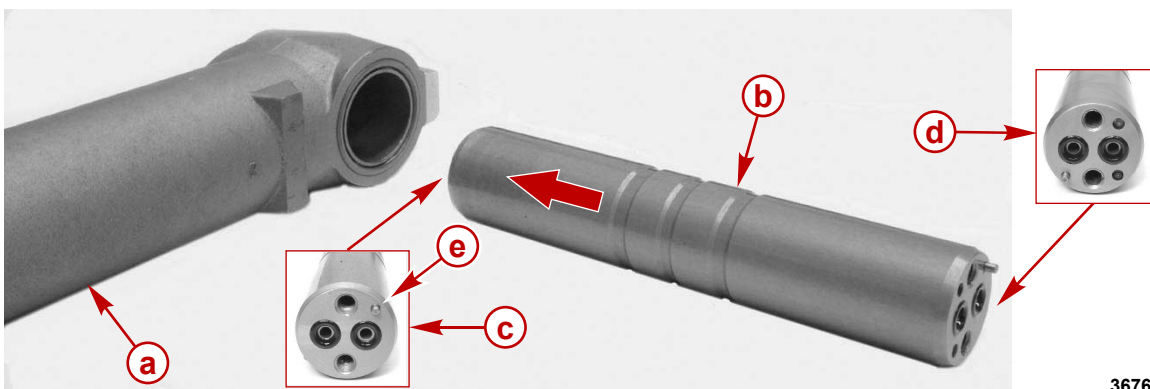


- a - Starboard trim cylinder
- b - Pivot pin
- c - Starboard end of pivot pin
- d - Port end of pivot pin
- e - Locating pin

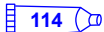Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Pivot pin and trim cylinder O-rings	92-858074K01


Advanced Midsection (AMS) Power Trim

- Secure the starboard trim cylinder to the pivot pin with two 6 mm internal hex screws. Tighten the screws to the specified torque.

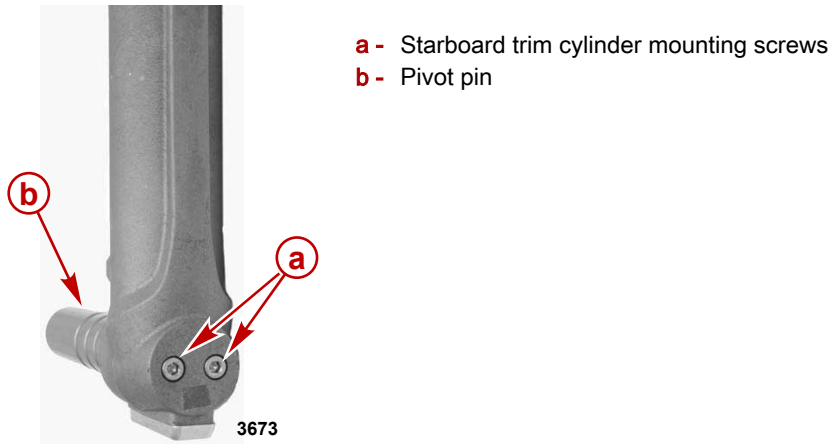


Description	Nm	lb-in.	lb-ft
Internal hex mounting screws	26	-	19.2

- Lubricate the O-rings in the pivot pin bore of the manifold and lubricate the pivot pin.

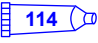
Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Manifold O-rings and pivot pin	92-858074K01

- Ensure that the three O-rings are installed in the manifold pivot pin bore.
- Install the pivot pin and starboard trim cylinder into the starboard end of the manifold.


NOTE: The manifold has an arrow indicating the direction of the pivot pin insertion.

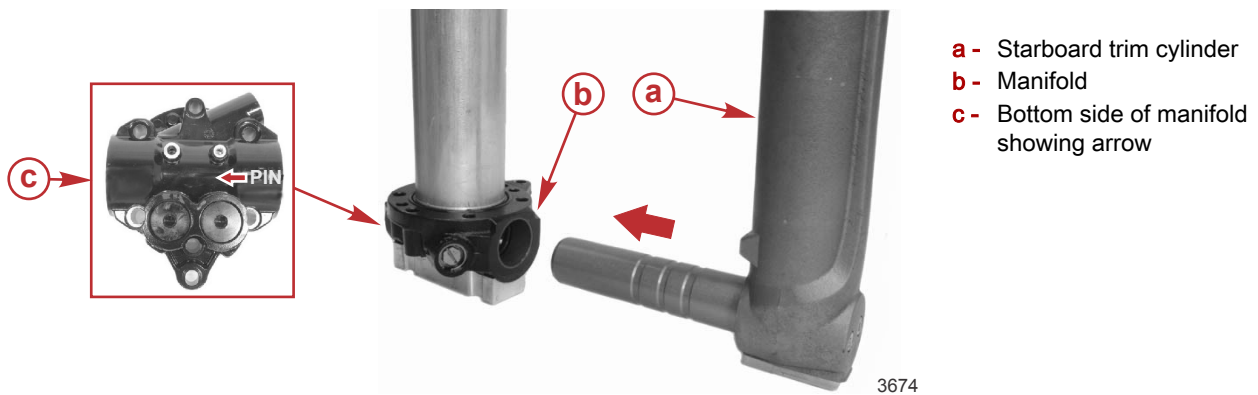

- Install the port trim cylinder assembly onto the pivot pin. Ensure that two O-rings are in place on the port end of the pivot pin. Ensure that the locating pin on the end of the pivot pin engages the hole in the trim cylinder.

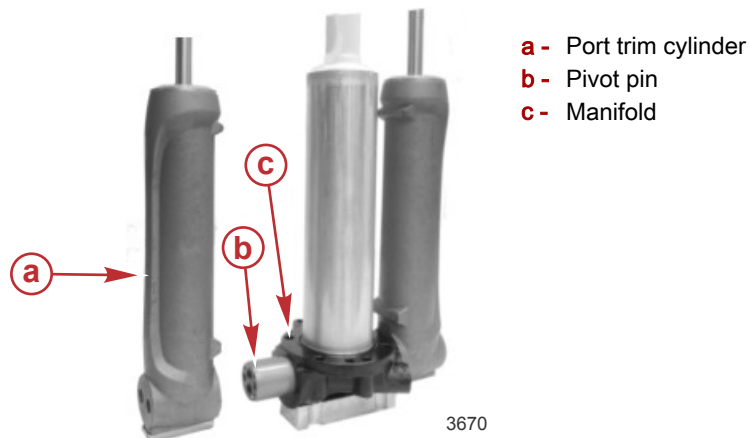


11. Secure the port trim cylinder to the pivot pin with two 6 mm internal hex bolts. Tighten the bolts to the specified torque.

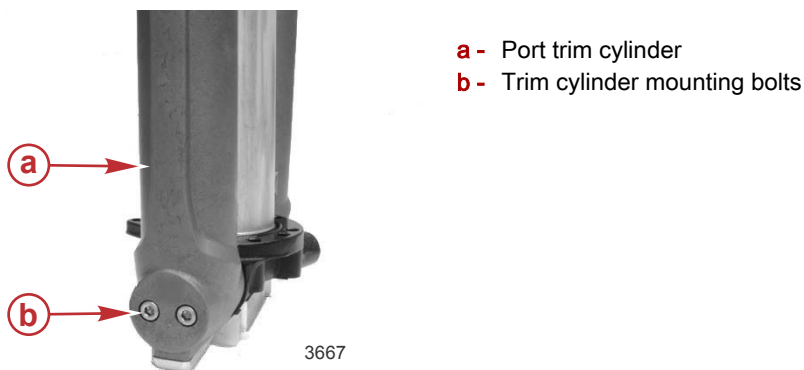

Description	Nm	lb-in.	lb-ft
Trim cylinder mounting bolt	26	-	19.2

12. Fill the power trim system with Power Trim and Steering Fluid or Dexron III Automatic Transmission Fluid. Refer to **Purging Power Trim System** for instructions.

Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Power trim system	92-858074K01

System Installation

Install the power trim system onto the outboard. Refer to **Power Trim System Installation** for instructions.

Pressure-Operated Check Manifold


Manifold Disassembly

Removing and Draining the Power Trim System

1. Remove the power trim system from the outboard. Refer to **Power Trim System Removal**.
2. Drain the fluid from the power trim system. Refer to **Power Unit Disassembly**.

Manual Release Valve


1. Remove the manual release snap ring from the manifold.
2. Remove the manual release valve from the manifold.
3. Remove and discard the three O-rings from the manual release valve.

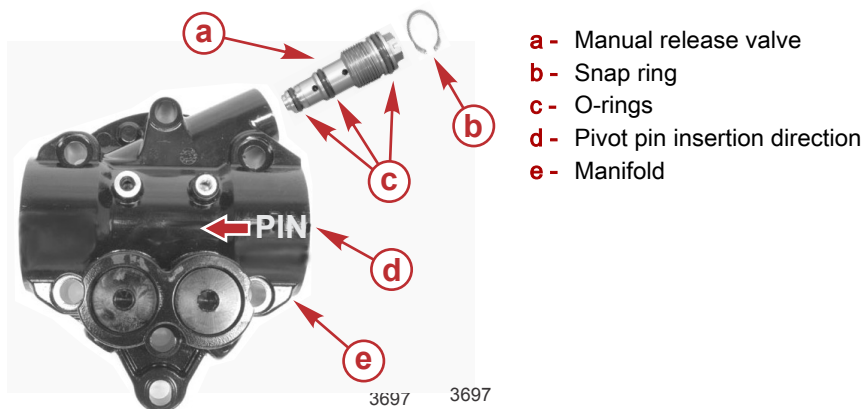

4. Inspect components for wear and contamination. Replace damaged components if required.


Pressure-Operated Check Valve

1. Remove the plugs from the manifold.

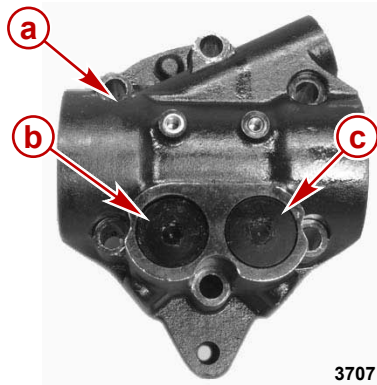


- a - Manifold
- b - Plug—trim up check valve assembly
- c - Plug—trim down check valve assembly

2. Remove the plugs and springs.

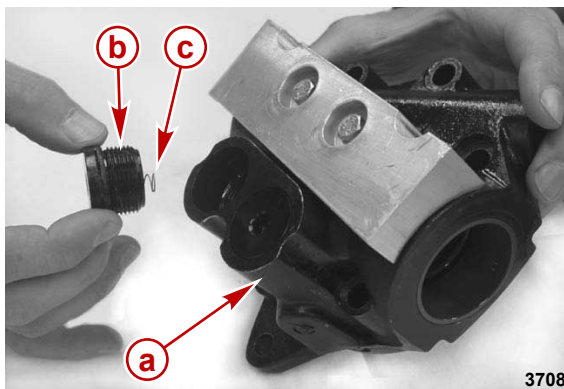


- a - Manifold
- b - Plug
- c - Spring

3. Use a needle-nose pliers to remove the poppets.

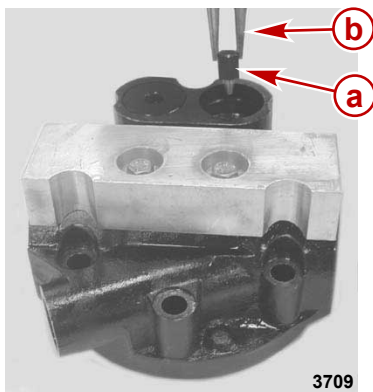


- a - Poppet
- b - Needle-nose pliers

4. Remove the hex check seats. Remove and discard the O-rings.

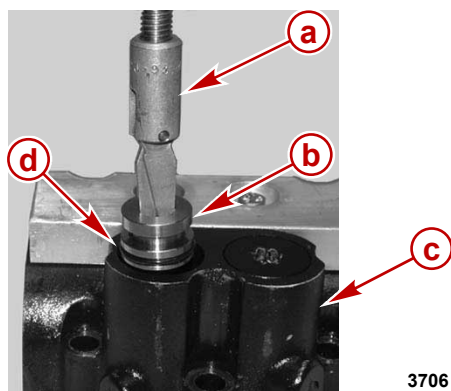

- a - Check seat removal tool (Snap-On p/n CJ-93-4)
- b - Check valve
- c - Manifold
- d - O-ring

- Remove the shuttle spools from the manifold. Remove and discard the O-rings.

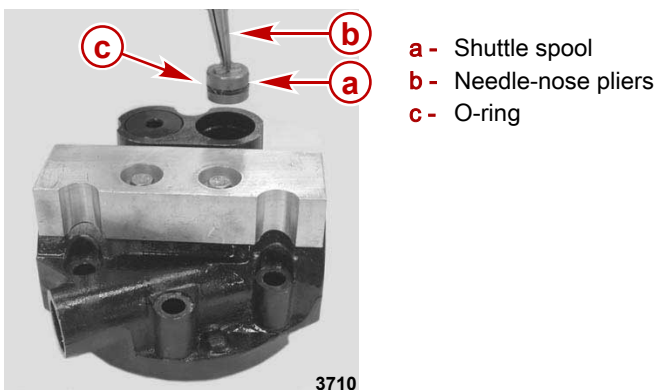


- a - Shuttle spool
- b - Needle-nose pliers
- c - O-ring

- Inspect components for wear and contamination. Replace damaged components if required.

Manifold Reassembly

NOTE: Replace all O-rings with new O-rings when reassembling the manifold pressure operated check components. Lubricate O-rings with clean Power Trim and Steering Fluid or Automatic Transmission Fluid (ATF) (Type Dexron III) prior to installation.

- Place a lubricated shuttle spool in each pressure-operated check cavity.
- Position the shuttle spool into place with needle-nose pliers.
- Place a lubricated check seat in each cavity.
- Press the check seats into place using Snap-On check seat tool (CJ-93-4).
- Place a poppet in each cavity.
- Dip the end of each spring into petroleum jelly and place in the counterbore of retainer plug.
- Install a retainer plug and spring into each cavity.
- Tighten the retainer plug to the specified torque.

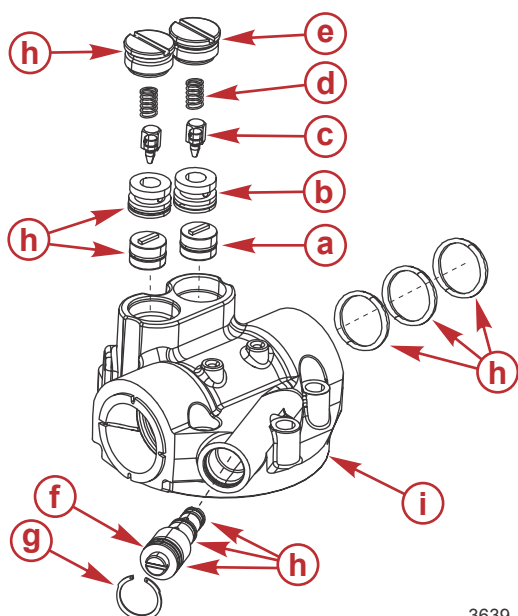


- a - Shuttle spool
- b - Check seat
- c - Poppet
- d - Spring
- e - Retainer plug
- f - Manual release valve
- g - Snap ring
- h - O-ring
- i - Manifold

3639

Description	Nm	lb-in.	lb-ft
Retainer plug	40.7	-	30

- Fill power trim system with Power Trim and Steering Fluid or Dexron III Automatic Transmission Fluid. Refer to **Check Fluid and Purge the Power Trim System** for instructions.

Tube Ref No.	Description	Where Used	Part No.
 114	Power Trim and Steering Fluid	Power trim system	92-858074K01

System Installation

Install power trim system in outboard. Refer to **Power Trim System Installation** for instructions.

Midsection


Section 5C - Upper and Lower Cowls

Table of Contents

V8 Top Cowl Components.....	5C-4	Installation.....	5C-9
AMS Lower Cowl Components.....	5C-6	Advanced Midsection (AMS) Lower Cowl Removal.....	5C-9
Top Cowl Removal and Installation.....	5C-8	Advanced Midsection (AMS) Lower Cowl Installation.....	5C-14
Removal.....	5C-8		


5
C

Lubricants, Sealants, Adhesives

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Screw	92- 25711 3

Notes:

V8 Top Cowl Components

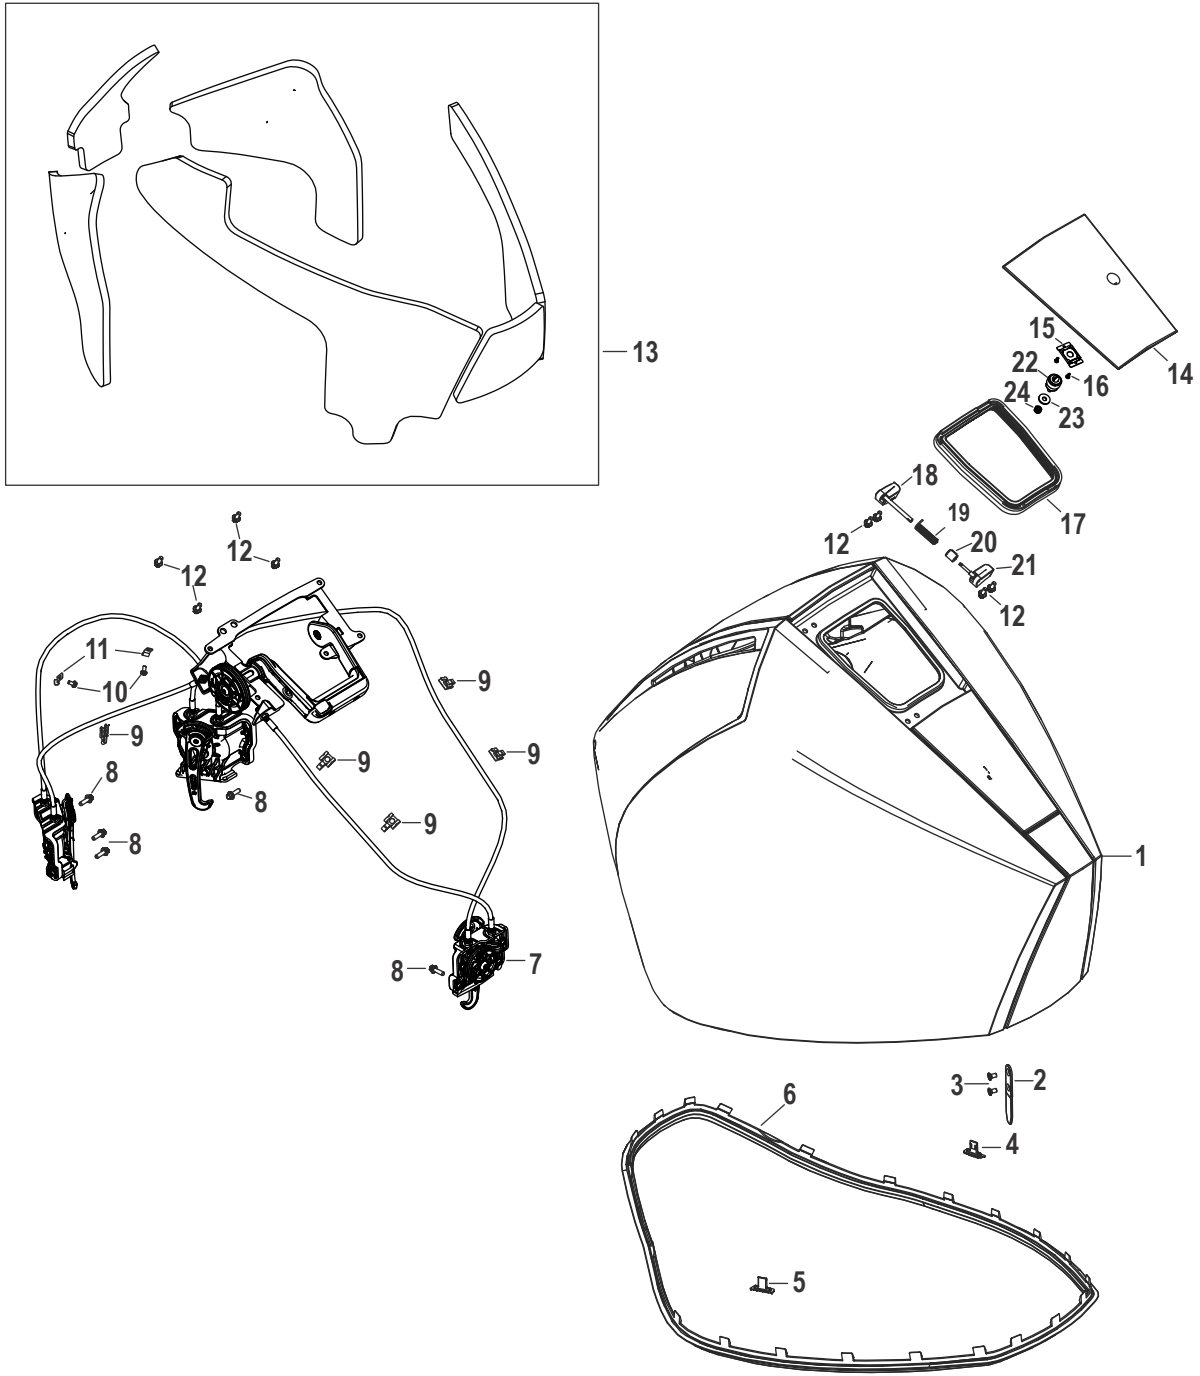


66877

V8 Top Cowl Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Top cowl assembly			
2	4	Alignment leg			
3	8	Screw	10	88.5	–
4	1	Port bumper			
5	1	Starboard bumper			
6	1	Top cowl seal			
7	1	Cowl latch assembly			
8	10	M6 x 20 stainless steel screw	10	88.5	–
9	8	Clip			
10	2	Screw	5.6	49.6	–
11	2	Clip			
12	8	M6 x 14 stainless steel screw	10	88.5	–
13	1	Sound blanket kit			
14	1	Door assembly			
15	1	Keeper assembly			
16	2	Screw	1	8.8	–
17	1	Door seal			
18	1	Hinge			
19	1	Spring			
20	1	Damper assembly			
21	1	Hinge			
22	1	Push lock			
23	1	Latch shim			
24	1	M6 stainless steel nut	5.6	49.6	–

AMS Lower Cowl Components

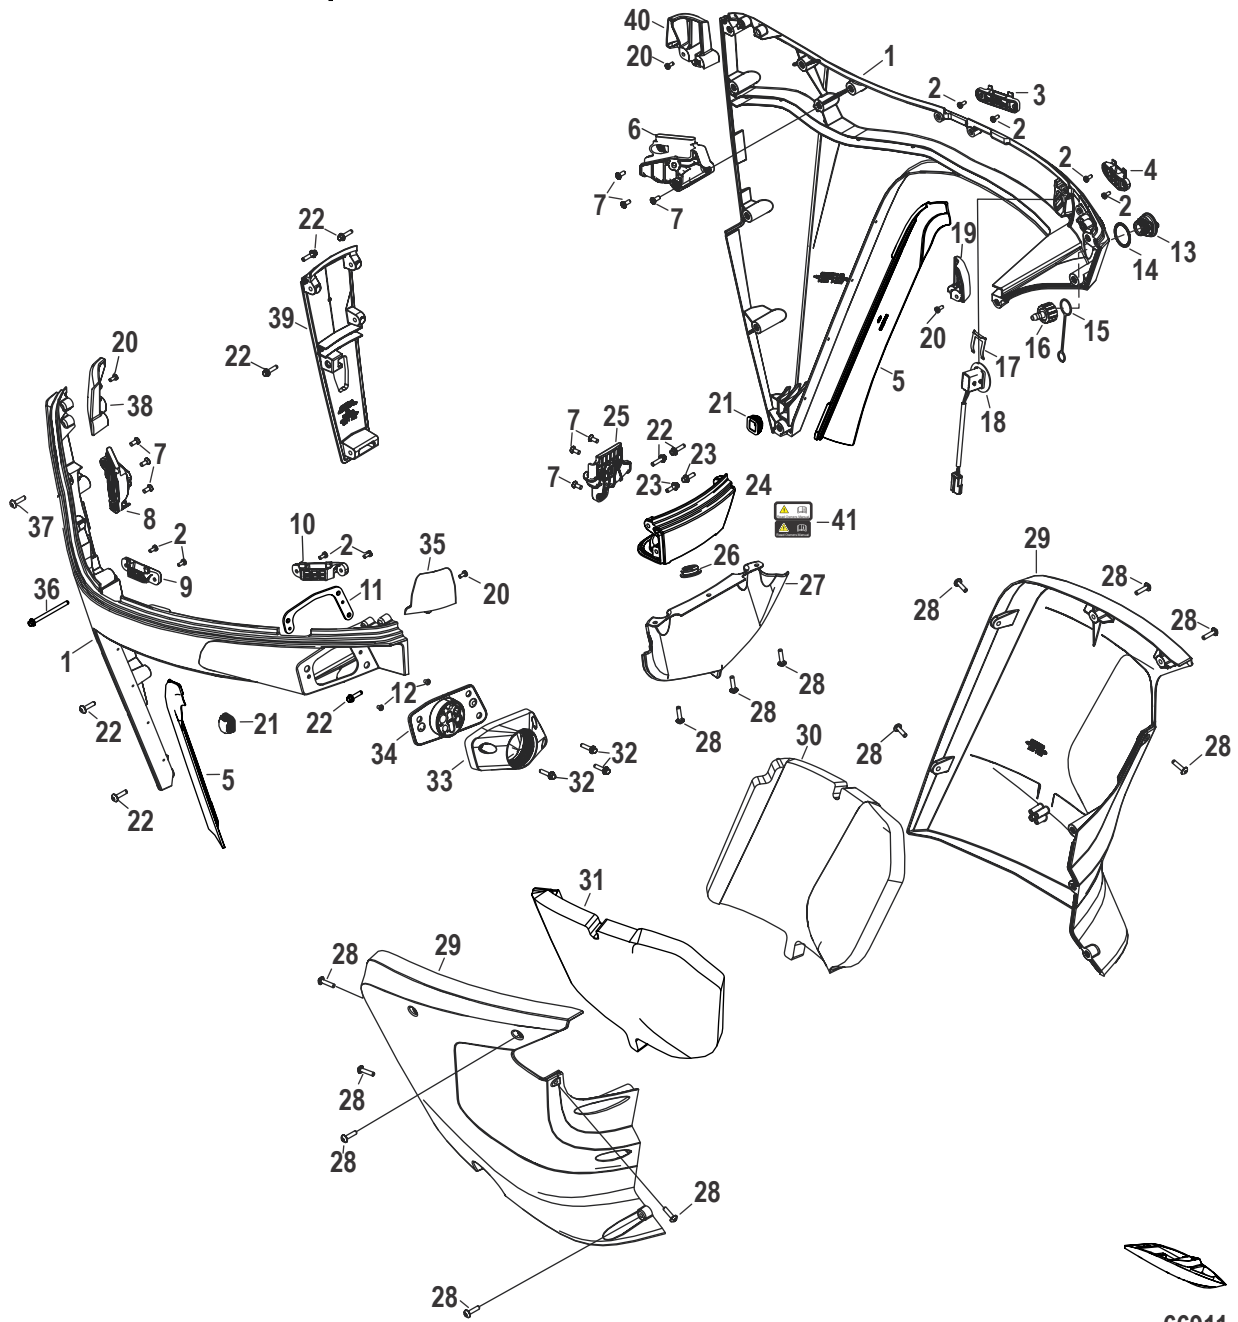

66911

AMS Lower Cowl Components


Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Port and starboard lower cowl assembly			
2	8	Screw	5.6	49.6	–
3	1	Port rear retainer			
4	1	Port front retainer			
5	2	Seal			
6	1	Port striker assembly			
7	9	Screw	10	88.5	–
8	1	Starboard striker assembly			
9	1	Starboard rear retainer			
10	1	Starboard front retainer			
11	1	Plate			
12	2	M5 x 8 screw	5.6	49.6	–
13	1	Plug			
14	1	Seal			
15	1	Tether			
16	1	Flush fitting assembly			
17	1	Switch retainer			
18	1	Trim switch			
19	1	Port front guide			
20	4	Screw	5.6	49.6	–
21	2	Bumper			
22	8	M6 x 25 screw	6	53.1	–
23	2	M6 x 20 screw	6	53.1	–
24	1	Front lower cowl assembly			
25	1	Front striker assembly			
26	1	Grommet			
27	1	Front cradle cover			
28	16	Screw	6	53.1	–
29	1	Port cradle cover			
30	1	Port sound blanket			
31	1	Starboard cradle cover			
32	1	Starboard sound blanket			
33	3	M6 x 30 hex flange screw	6	53.1	–
34	1	Adapter			
35	1	Grommet			
36	1	Starboard front guide			
37	1	M6 x 85 hex flange screw	6	53.1	–
38	1	Screw	6	53.1	–
39	1	Starboard rear guide			
40	1	Lower rear cowl panel			
41	1	Port rear guide			

Top Cowl Removal and Installation

NOTE: It is recommended to remove and install the cowl while standing inside the boat.


Removal

1. Tilt the outboard up so the top of the cowl is facing you.
2. Push down on the port side of the service access door to unlock and open the door.

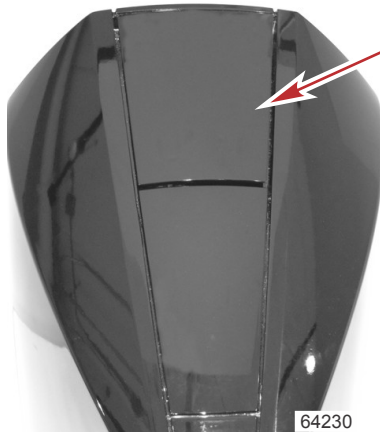

Push here to unlock

3. Press on the red lock button and lift the handle.

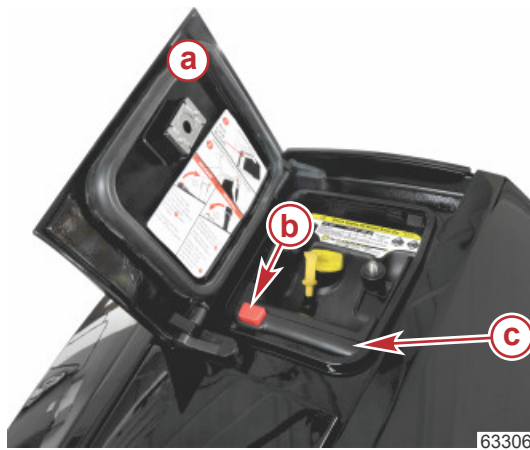

4. Push the handle towards the aft to lock the handle into the cowl lift position.



Handle locked in the lift position


5. With a firm grip on the handle, carefully lift the cowl off the engine.

Installation

1. With a firm grip on the handle, carefully lower the top cowl over the engine.
2. Verify the cowl is correctly aligned by checking the cowl alignment guides on the port and starboard side of the cowl. If there is misalignment, one side of the cowl will have a gap that is larger than the other side.
NOTE: It may be necessary to slightly lift the larger gap side of the cowl to correctly position the alignment guides.
3. Gently push down on the cowl.
4. Push the red lock button and pull the handle. Continue to push the handle down into the locked position.
5. Close the service access door.

Advanced Midsection (AMS) Lower Cowl Removal


1. Remove the top cowl. Refer to **Top Cowl Removal and Installation**.
2. Remove the electrical panel cover.

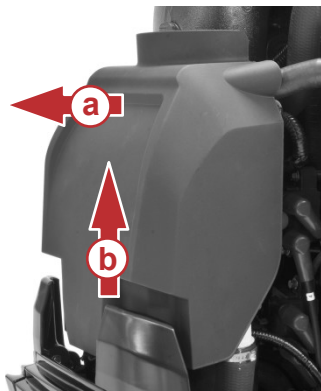

63580

- a** - Pull rearward
- b** - Lift up


3. Remove the rigging adapter, rigging grommet, and rigging tube (if equipped).

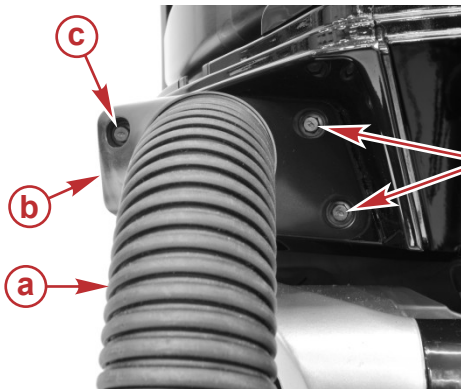

64395

- a** - Rigging tube (optional)
- b** - Rigging adapter
- c** - Screws (3)

4. Locate the power trim wires in the starboard lower cowl, then disconnect the two bullet connectors.

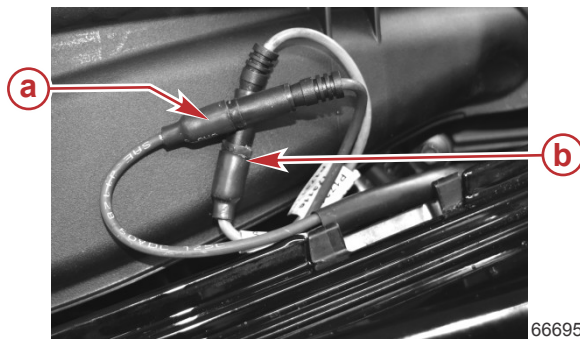


66695


- a** - Blue (up) trim motor bullet connector
- b** - Green (down) trim motor bullet connector

Upper and Lower Cowls


5. Remove the eight T30 Torx screws securing the starboard cradle cover, then remove the starboard cradle cover.

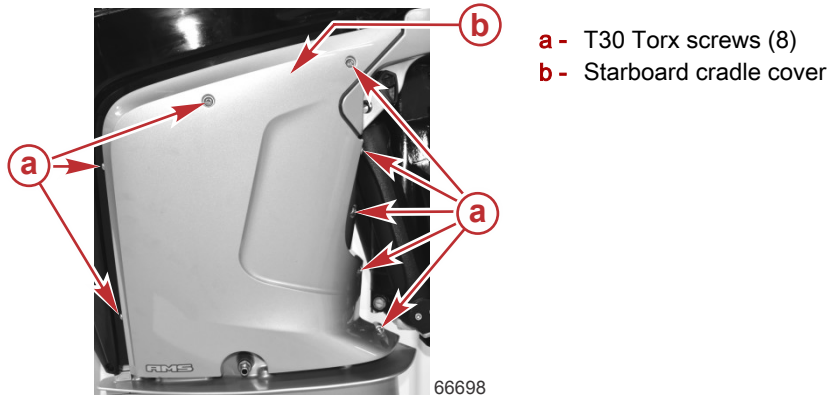


6. Remove the five T30 Torx screws securing the port cradle cover, then remove the port cradle cover.

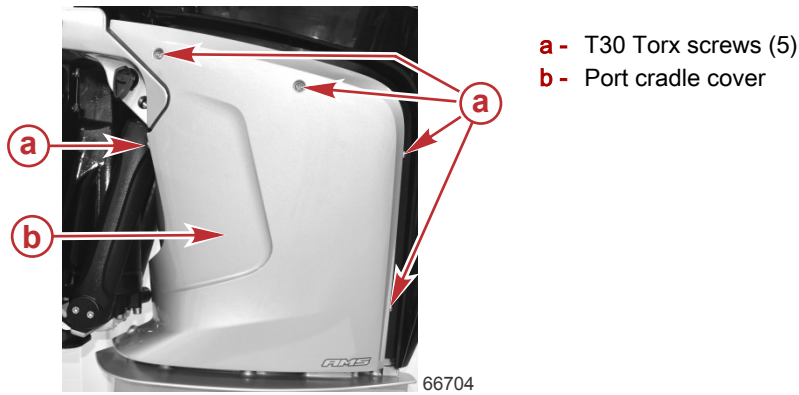


7. Remove the flush hose connector from the port lower cowl.

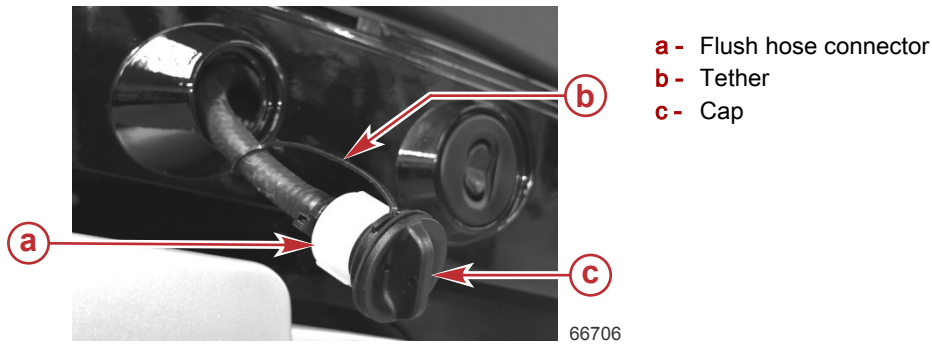


8. Remove the screw at front of the lower cowl from the starboard side.

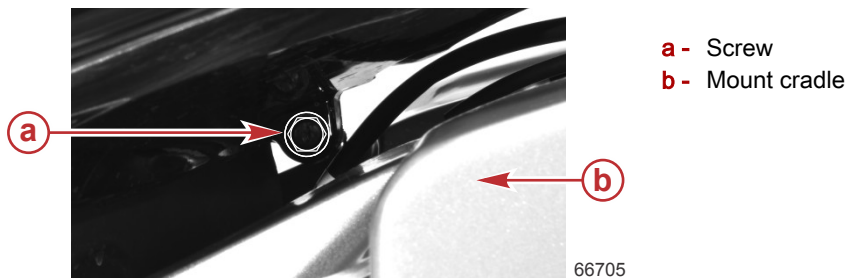


9. Remove the screws at the front of the lower cowl using an extension through the flush hose adapter hole.

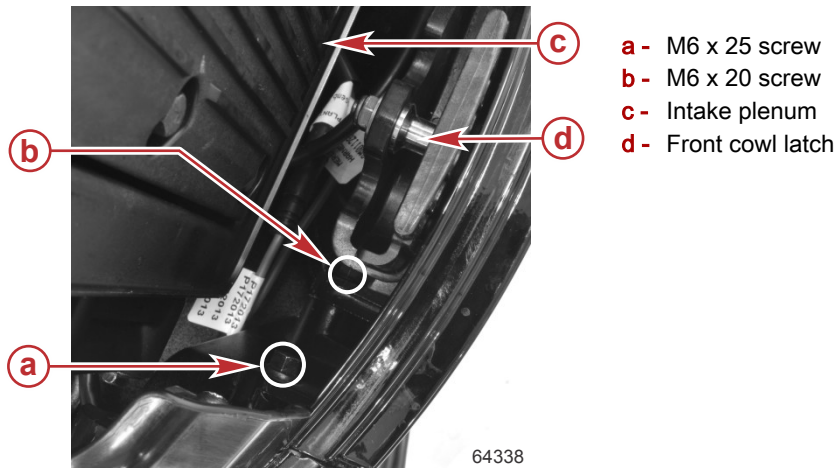


10. Remove the four screws from the rear of the starboard lower cowl.

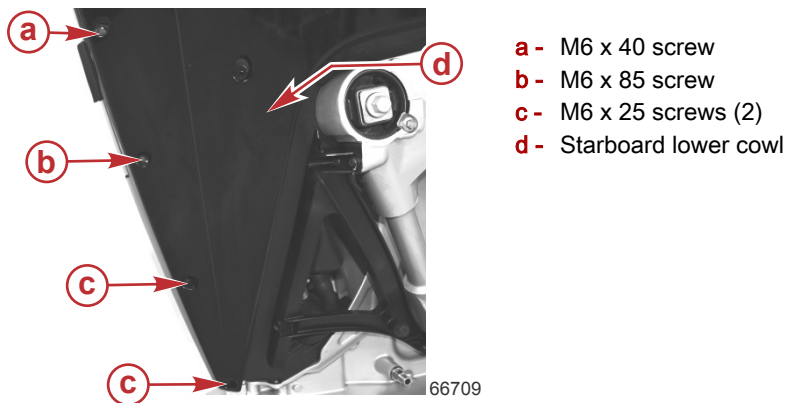

11. Remove the M6 x 25 screw at the top of the lower cowl rear panel securing the starboard lower cowl.

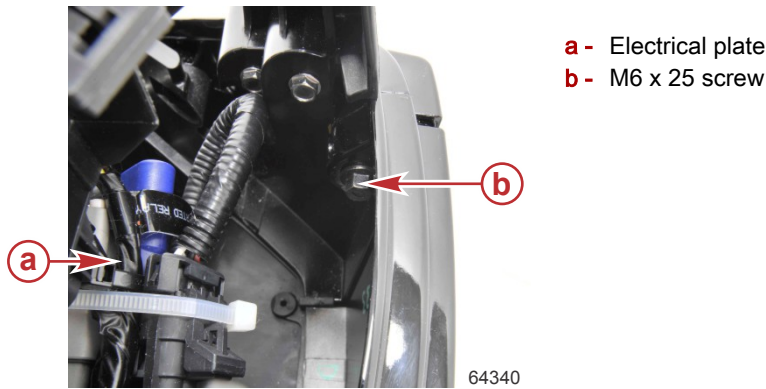


12. Remove the two M6 x 25 screws that secure the lower cowl rear panel to the port lower cowl.

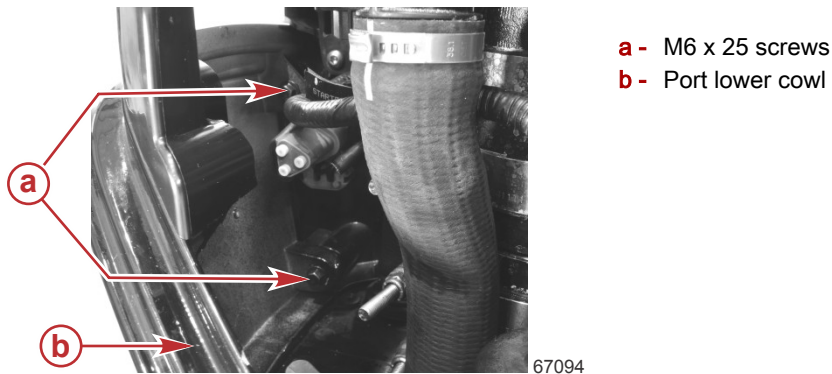


Upper and Lower Cowls


13. Remove the starboard lower cowl from the midsection.
14. Remove the rigging from the starboard lower cowl, if necessary.
15. Remove the screw securing the ground wire on the starboard side of the powerhead near the battery cables.

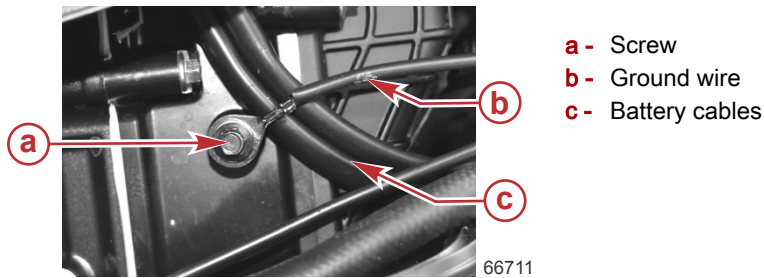


16. Disconnect the trim position sensor connector.

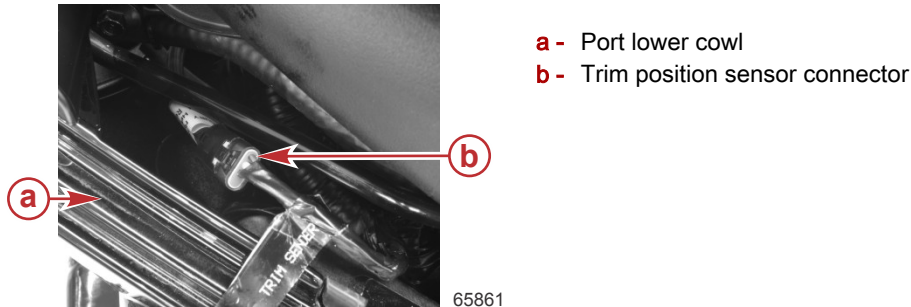

17. Disconnect the cowl trim switch harness connector.

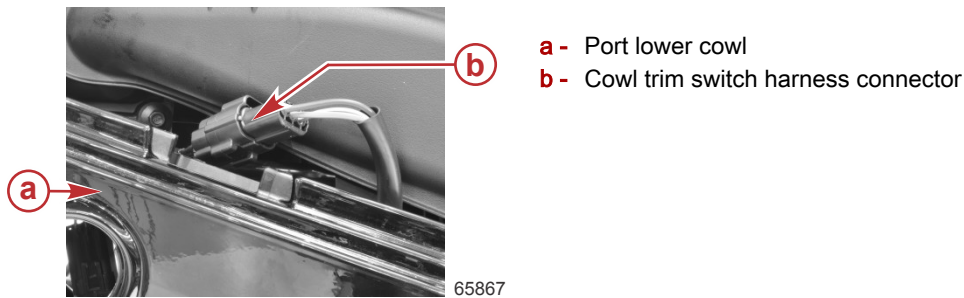


18. Unscrew the cap from the tether and push the flush hose connector through the hole in the port lower cowl.

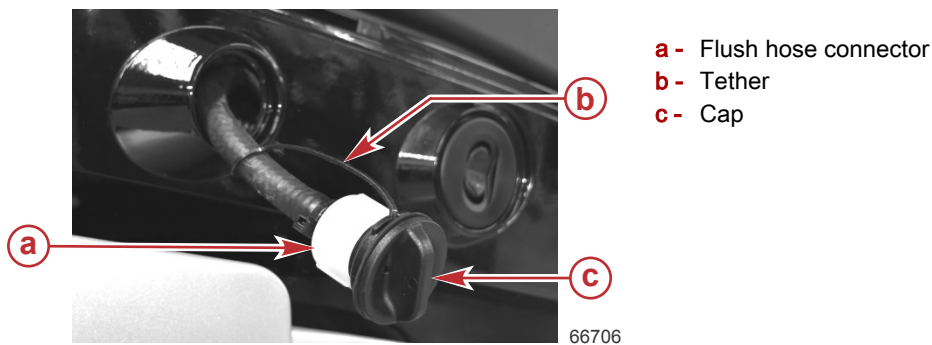

19. Remove the port lower cowl from the midsection.

20. Remove the three Torx screws securing the front splash plate. Remove the front splash plate.

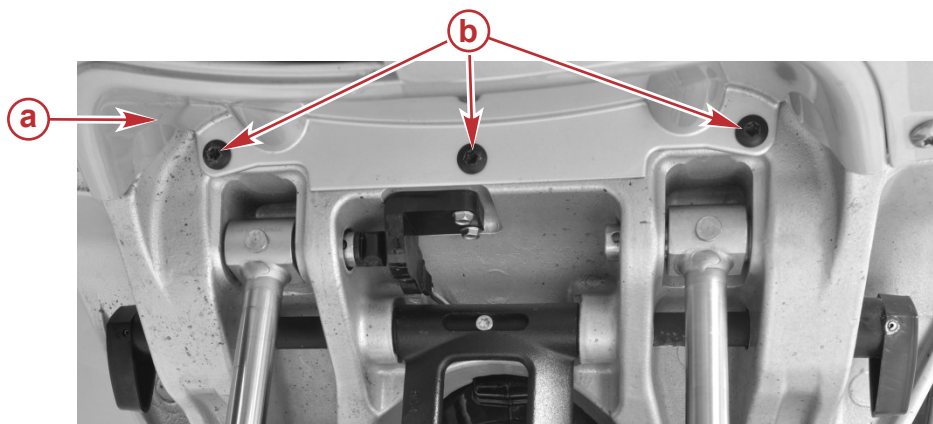


- a** - Front splash plate
- b** - Torx screws (3)

65874

21. If necessary, remove the lower cowl rear panel:


a. Remove the 50.5 mm Oetiker® clamp securing the idle exhaust hose to the advanced sound control muffler.

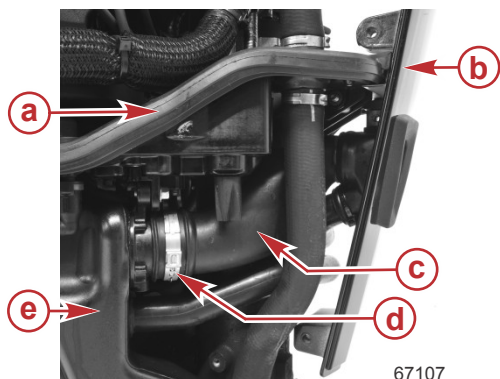

- a** - Chap plate seal
- b** - Lower cowl rear panel
- c** - Idle exhaust hose
- d** - 50.5 mm Oetiker clamp
- e** - Advanced sound control muffler

67107

b. Remove the cable tie securing the idle exhaust hose to the idle exhaust grommet.

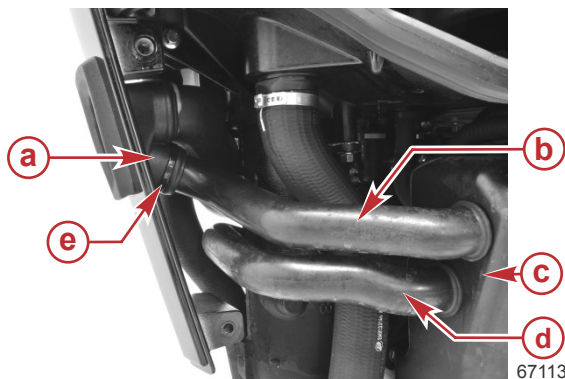


- a** - Idle exhaust grommet
- b** - Idle exhaust hose
- c** - Idle exhaust muffler
- d** - Crossover hose
- e** - Cable tie

67113

22. Remove the lower cowl rear panel.

Advanced Midsection (AMS) Lower Cowl Installation

1. Install the front cradle cover and secure it with three T30 Torx® screws. Tighten the screws to the specified torque.

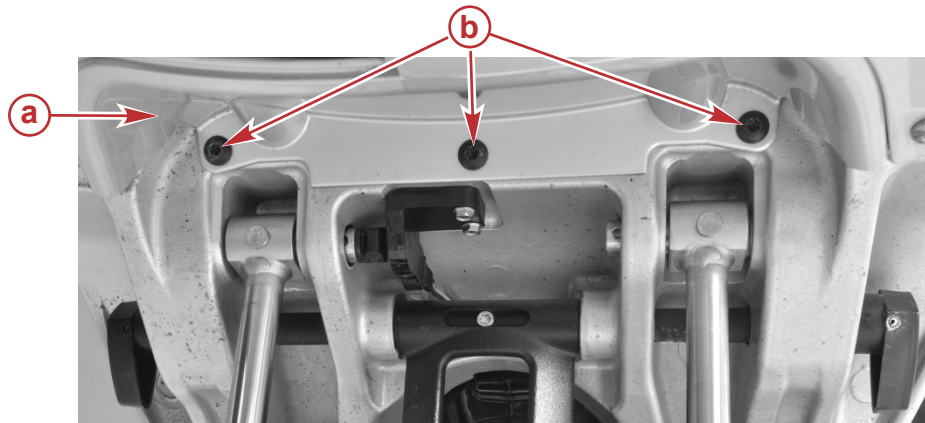


- a - Front cradle cover
- b - Torx screws (3)

65874

Description	Nm	lb-in.	lb-ft
T30 Torx screws	6	53.1	-


2. Ensure that the chap plate seal is installed.
3. If it was removed, install the lower cowl rear panel onto the outboard by pressing the panel onto the chap plate seal. Connect the idle exhaust hose to the advanced sound control muffler and secure the hose with a 50.5 mm Oetiker clamp.

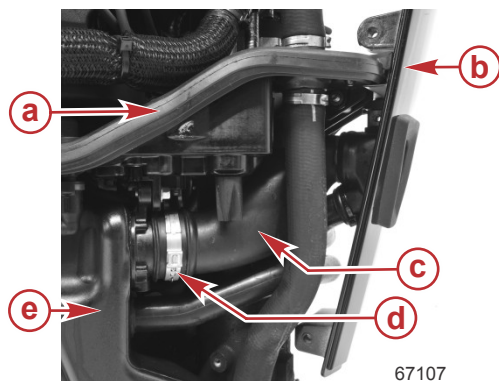

- a - Chap plate seal
- b - Lower cowl rear panel
- c - Idle exhaust hose
- d - 50.5 mm Oetiker clamp
- e - Advanced sound control muffler

67107

4. Install the idle exhaust hose into the idle exhaust grommet. Secure the idle exhaust hose to the idle exhaust grommet with a cable tie.

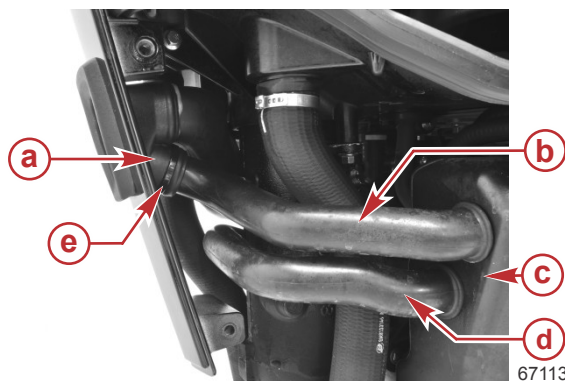


- a - Idle exhaust grommet
- b - Idle exhaust hose
- c - Idle exhaust muffler
- d - Crossover hose
- e - Cable tie


67113

5. Lubricate the chap plate seal with soapy water.


- Ensure that the power trim motor harness, trim position sensor harness, and ground wire are routed through the grommet. Ensure that the grommet is installed between the two cable ties.

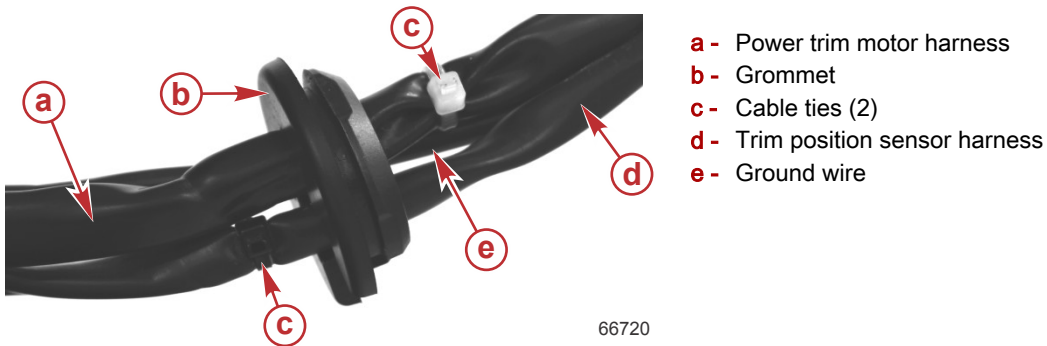


- Install the harnesses and grommet into the hole in the port lower cowl.

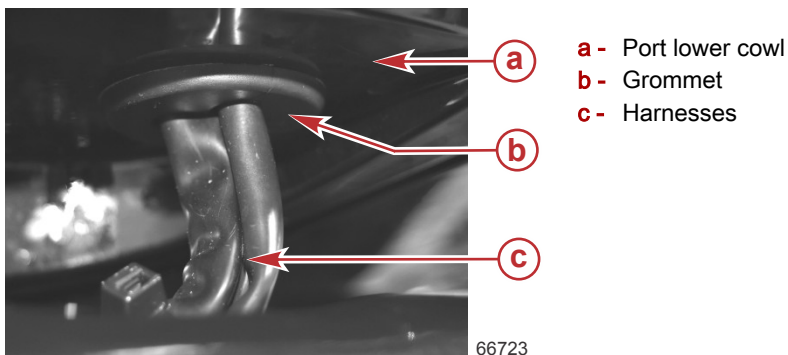

- Insert the flush hose connector through the port lower cowl. Screw the cap onto the tether.

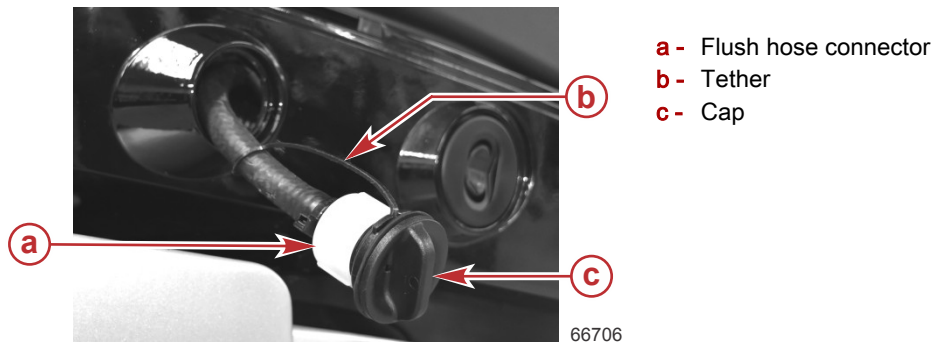


- Connect the cowl trim switch connector.

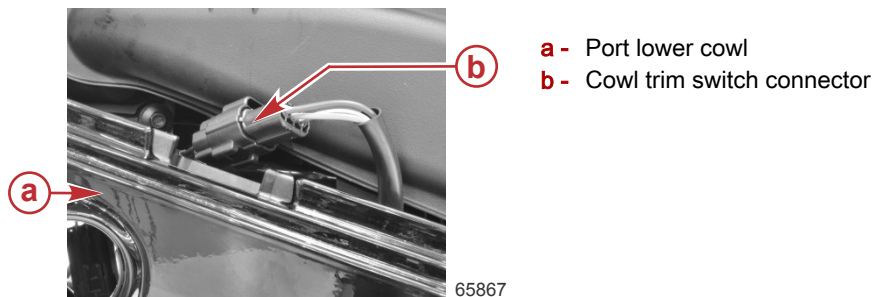


Upper and Lower Cowls

10. Install the port lower cowl onto the midsection. Ensure that the lower cowl bumper is seated.

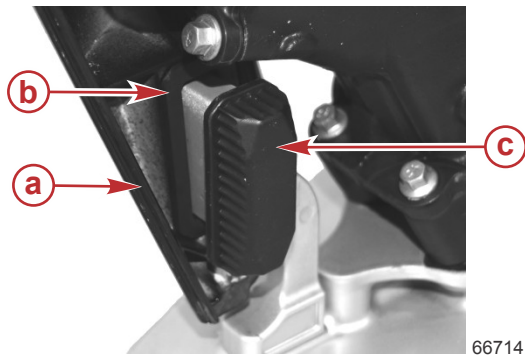

- a - Port lower cowl
- b - Bumper seated in port lower cowl
- c - Bumper for starboard lower cowl


11. Tuck the splash shield in behind the port cradle cover support bracket.

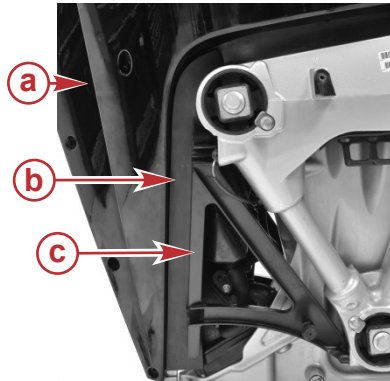

Starboard side shown—port side similar


- a - Lower cowl
- b - Splash shield
- c - Cradle cover support bracket

12. Connect the trim position sensor connector.

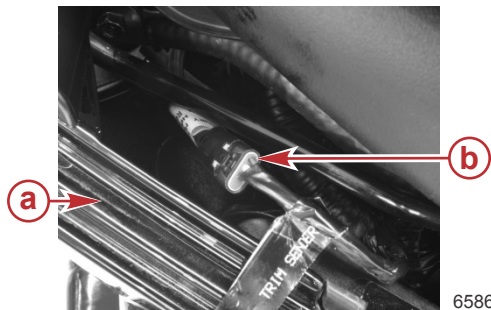


- a - Port lower cowl
- b - Trim position sensor connector

13. Install and connect the ground wire to the boss on the starboard side of the powerhead. Tighten the screw to the specified torque. Apply Liquid Neoprene to the screw to protect the ground wire from corrosion.

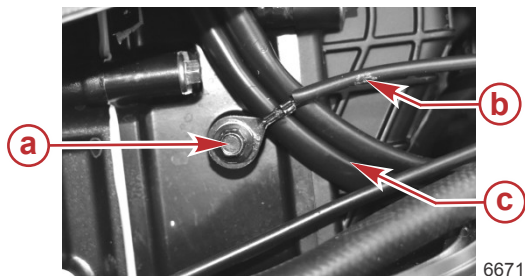

- a - Screw
- b - Ground wire
- c - Battery cables


Description	Nm	lb-in.	lb-ft
Ground wire screw	10	88.5	–

Tube Ref No.	Description	Where Used	Part No.
 25	Liquid Neoprene	Screw	92- 25711 3

14. Install the rigging through the starboard lower cowl.
 15. Lubricate the chap plate seal with soapy water.

16. Install the starboard lower cowl onto the midsection. Ensure that the lower cowl grommet is seated.


NOTE: Do not tighten the lower cowl screws until all of the screws have been started by hand.

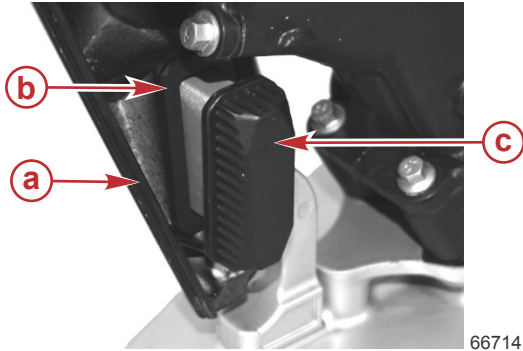

- a - Port lower cowl
- b - Grommet seated in port lower cowl
- c - Grommet for starboard lower cowl

66714


17. Tuck the splash shield in behind the starboard cradle cover support bracket.

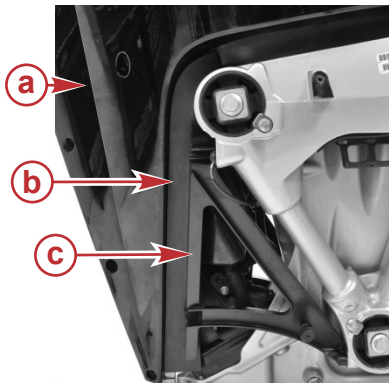

- a - Lower cowl
- b - Splash shield
- c - Cradle cover support bracket

67104

18. Install the M6 x 25 screw at the top of the rear panel securing the starboard lower cowl. Tighten the screw to the specified torque.

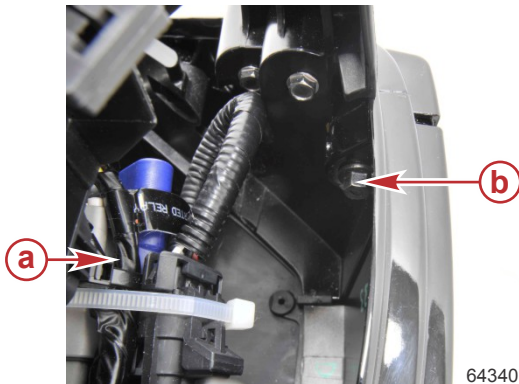


- a - Electrical plate
- b - M6 x 25 screw

64340

Description	Nm	lb-in.	lb-ft
M6 x 25 screw	6	53.1	–

Upper and Lower Cowls

19. Install the two M6 x 25 screws to secure the rear panel to the port lower cowl. Tighten the screws to the specified torque.

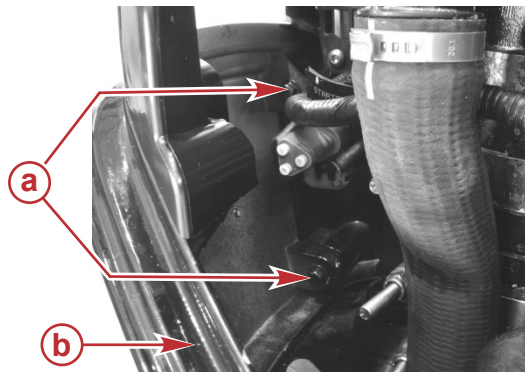


- a - M6 x 25 screws
- b - Port lower cowl

67094

Description	Nm	lb-in.	lb-ft
M6 x 25 screws	6	53.1	–

20. Install the screws at the rear of the starboard lower cowl.

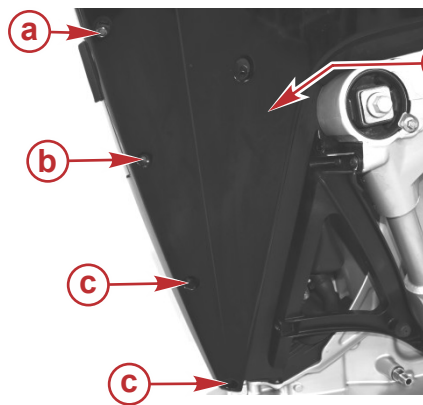


- a - M6 x 40 screw
- b - M6 x 85 screw
- c - M6 x 25 screws (2)

66709

Description	Nm	lb-in.	lb-ft
M6 x 40 screw	6	53.1	–
M6 x 85 screw	6	53.1	–
M6 x 25 screws	6	53.1	–

21. Install the screws at the front of the cowl using an extension through the flush hose adapter hole.

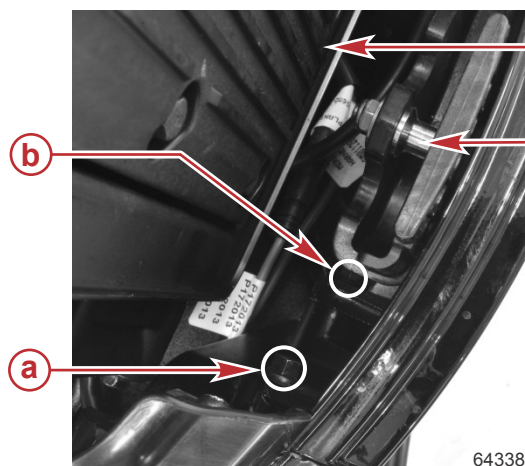


- a - M6 x 25 screw
- b - M6 x 20 screw
- c - Intake plenum
- d - Front cowl latch


64338

Description	Nm	lb-in.	lb-ft
M6 x 20 screw	6	53.1	–
M6 x 25 screw	6	53.1	–

22. Install the M6 x 25 screw at the front of the lower cowl from the starboard side.

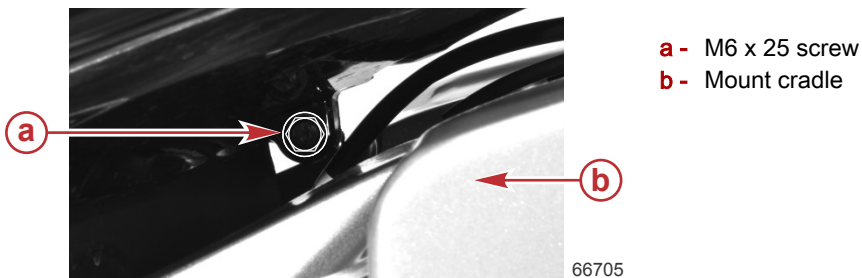


23. Install the port cradle cover. Secure it with five screws and tighten the screws to the specified torque.

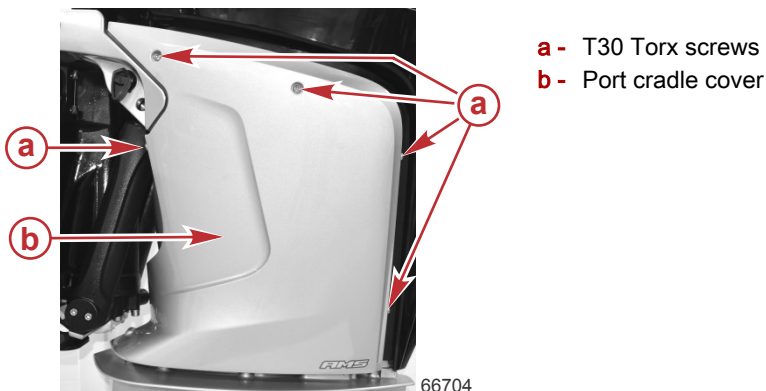


Description	Nm	lb-in.	lb-ft
T30 Torx screws	6	53.1	-

24. Install the starboard cradle cover. Secure it with eight screws and tighten the screws to the specified torque.

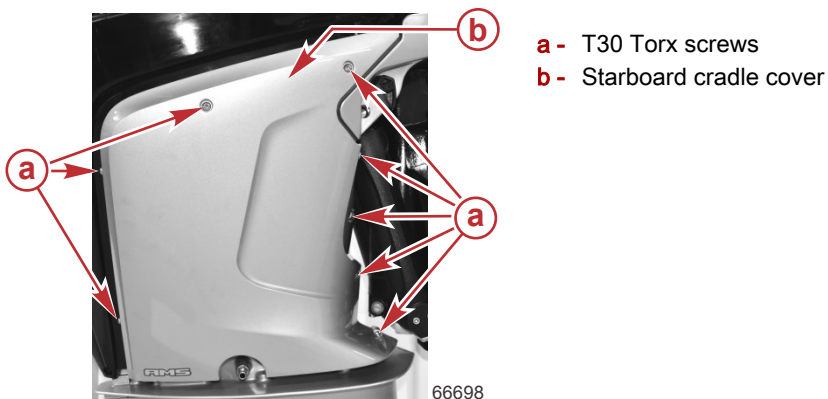


Description	Nm	lb-in.	lb-ft
T30 Torx screws	6	53.1	-

25. Connect the power trim wires and tuck them into the front of the lower cowl.

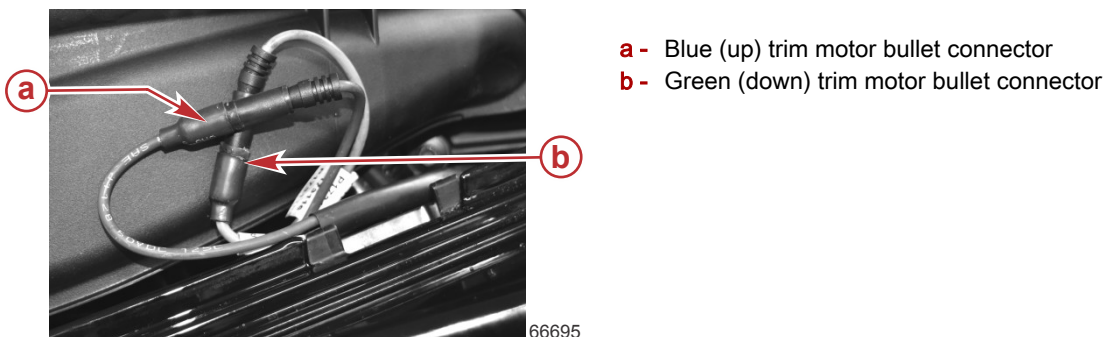


Upper and Lower Cowls

26. Install the rigging adapter, rigging grommet, and rigging tube (if equipped).

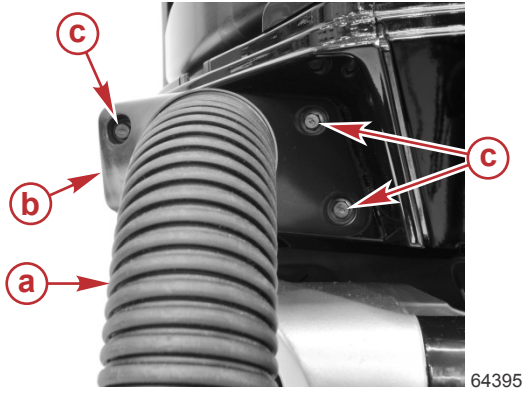

- a** - Rigging tube (optional)
- b** - Rigging adapter with rigging grommet installed
- c** - Screws (3)

27. Install the electrical panel cover.

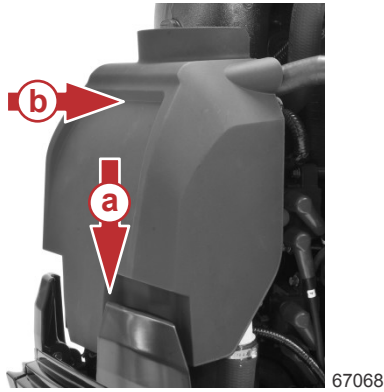

- a** - Push down
- b** - Push forward

Gear Housing

Section 6A - Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

Table of Contents





Gear Housing Specifications (5.44 in. Diameter).....	6A-2	Inspection.....	6A-54
Gear Housing Components.....	6A-10	Front Gear Assembly.....	6A-55
Gear Housing (5.44 in. Diameter)—Driveshaft.....	6A-10	Component Inspection.....	6A-55
Gear Housing (5.44 in. Diameter, Right-Hand		Disassembly.....	6A-55
Rotation)—Propeller Shaft.....	6A-12	Assembly.....	6A-56
Gear Housing (5.44 in. Diameter, Left-Hand Rotation)		Shift Spool Assembly.....	6A-57
—Propeller Shaft.....	6A-14	Inspection.....	6A-57
General Service Recommendations.....	6A-16	Disassembly.....	6A-57
Bearings.....	6A-16	Reassembly.....	6A-58
Shims.....	6A-16	Shift Shaft Removal and Assembly.....	6A-58
Seals.....	6A-16	Removal.....	6A-58
Gearcase Serviceability Inspection.....	6A-16	Disassembly and Inspection.....	6A-59
Draining and Inspecting Gear Housing Lubricant—		Assembly.....	6A-59
Non-SeaPro Models.....	6A-16	Pinion Bearing Removal.....	6A-60
Draining and Inspecting Gear Housing Lubricant—		Gear Housing Inspection.....	6A-61
SeaPro Models.....	6A-17	Front Gear Bearing Cup Installation.....	6A-62
Gear Housing Pressure Test.....	6A-17	Shift Shaft Installation.....	6A-63
Propeller Shaft Inspection.....	6A-18	Pinion Bearing Installation.....	6A-65
Gear Housing Removal.....	6A-19	Driveshaft Bearing Rolling Torque and Pinion Gear Height	
Water Pump.....	6A-21	6A-65
Removal and Disassembly.....	6A-21	Driveshaft and Pinion Gear Installation.....	6A-65
Cleaning and Inspection.....	6A-22	Driveshaft Bearing Rolling Torque.....	6A-67
Oil Seal Carrier.....	6A-23	Checking and Adjusting Pinion Gear Height with	
Removal.....	6A-23	Pinion Gear Locating Tool 91-8M0046443.....	6A-67
Disassembly.....	6A-24	Propeller Shaft Assembly.....	6A-68
Bearing Carrier.....	6A-24	Propeller Shaft Installation.....	6A-69
Bearing Carrier Removal.....	6A-24	Driveshaft and Pinion Gear Final Installation.....	6A-70
Right-Hand Rotation Bearing Carrier—Inspection,		Front Gear Backlash.....	6A-71
Disassembly, Assembly.....	6A-27	Rear Gear Backlash.....	6A-74
Left-Hand Rotation Bearing Carrier—Inspection,		Propeller Shaft Bearing Preload.....	6A-76
Disassembly, Assembly.....	6A-35	Bearing Carrier Final Installation.....	6A-80
Driveshaft Removal, Inspection, Disassembly, and		Oil Seal Carrier Installation.....	6A-83
Assembly.....	6A-48	Water Pump Installation.....	6A-84
Driveshaft Removal.....	6A-48	Checking Gear Housing Operation.....	6A-86
Driveshaft Inspection.....	6A-51	Right-Hand Rotation.....	6A-86
Driveshaft Disassembly.....	6A-51	Left-Hand Rotation.....	6A-87
Driveshaft Assembly.....	6A-51	Gear Housing Installation.....	6A-87
Propeller Shaft Assembly and Front Gear Bearing Cup..	6A-52	Gear Lubricant Filling Instructions—Non-SeaPro Models	
Removal.....	6A-52	6A-90
Component Disassembly.....	6A-53	Gear Lubricant Filling Instructions—SeaPro Models.....	6A-91


Gear Housing Specifications (5.44 in. Diameter)

Description	Specification
Propeller shaft	31.75 mm (1.25 in.) diameter, 19-spline
Propeller hub	
Option 1	Flo-Torq II HD solid hub kit
Option 2	Flo-Torq SSR HD hub kit
Gear ratio	
Standard	1.75:1
Optional	1.85:1
Gear teeth count pinion/forward	
1.75:1	12/21
1.85:1	13/24
Gear housing lubricant capacity	
Right-hand	720 ml (24.4 fl oz)
Left-hand	680 ml (23.0 fl oz)
Right-hand—SeaPro	980 ml (33.1 fl oz)
Left-hand—SeaPro	980 ml (33.1 fl oz)
Gear lubricant type	High Performance Gear Lubricant
Propeller shaft lubricant	2-4-C with PTFE
Propeller shaft runout limit (bent)	0.23 mm (0.009 in.)
Propeller shaft end play	No end play
Pinion height tool (optional)	91-8M0046443
Pinion height	0.635 mm (0.025 in.)
Backlash indicator tool	8M0053505
Align dial indicator pin with mark	5
Front gear backlash—right-hand rotation (forward gear)	0.508–0.609 mm (0.020–0.024 in.)
Front gear backlash—left-hand rotation (reverse gear)	0.787–0.965 mm (0.031–0.038 in.)
Rear gear backlash—right-hand rotation 1.75:1 (reverse gear)	0.787–0.940 mm (0.031–0.037 in.)
Rear gear backlash—right-hand rotation 1.85:1 (reverse gear)	1.067–1.219 mm (0.042–0.048 in.)
Rear gear backlash—left-hand rotation (forward gear)	0.457–0.584 mm (0.018–0.023 in.)
Water pressure	
At 600 RPM (idle)	10–20 kPa (1.5–2.9 psi)
At 6000 RPM (WOT)	60–260 kPa (8.7–37.7 psi)
Gear housing leak test pressure (without gear lubricant, 5 minutes without leakage)	103.4 kPa (15 psi)





IMPORTANT: Backlash values are as measured with the backlash indicator tool set at the "5" mark and are only valid if the pinion height is within specification.

Lubricants, Sealants, Adhesives


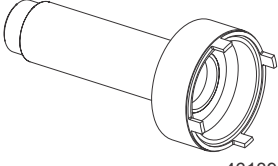


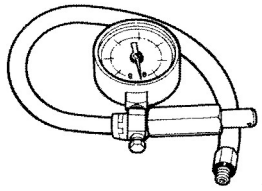


Tube Ref No.	Description	Where Used	Part No.
	Extreme Grease	Shift shaft splines and driveshaft splines	8M0071842
	Loctite 271 Threadlocker	Pinion gear nut threads	92-809819
		Threads of pinion nut	
		Water pump screws	
	Bellows Adhesive	Driveshaft pinion gear washer	92-86166Q1
	High Performance Gear Lubricant	Tapered bearing cup bore	92-858064K01
		Inside diameter of the driveshaft tapered bearings	
		Inside diameter of front gear	
		Front gear bearing cup bore	
		Gearcase pinion bearing bore	
		Gear housing	







Tube Ref No.	Description	Where Used	Part No.
	2-4-C with PTFE	Oil seal lips and between oil seals	92-802859A 1
		O-ring	
		O-ring and bearing carrier bores	
		Shift shaft bushing threads, O-ring, and oil seal lip	
		Retainer threads	
		Bearing carrier retainer nut threads	
		Bearing carrier O-ring, forward and aft outer diameters of bearing carrier, gearcase area where bearing carrier will seat, space between propeller shaft oil seals	
		Bearing carrier retainer nut threads and corresponding gear housing threads	
		Torpedo ring threads	
		Oil seal carrier oil seal lips, space between the seals, and the O-ring	
		Flat surface of impeller key	
		Inside of the water pump cover	
Water seal coupler O-ring			

Special Tools




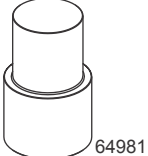

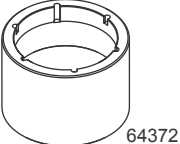
Leakage Tester Kit	FT8950
 <p>29497</p>	Used for pressure testing of closed systems (gearcase, fuel lines, cooling).
Dial Indicator	91- 58222A 1
 <p>9479</p>	Used to obtain a variety of measurements including gear backlash, pinion gear location, and TDC.
Dial Indicator Adapter	91-83155
 <p>2999</p>	Dial indicator holding fixture.
Dial Indicator Holding Tool	91- 89897
 <p>29496</p>	Secures the dial indicator to gear housing when checking backlash.



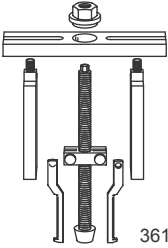


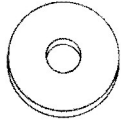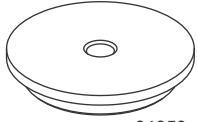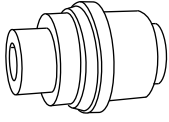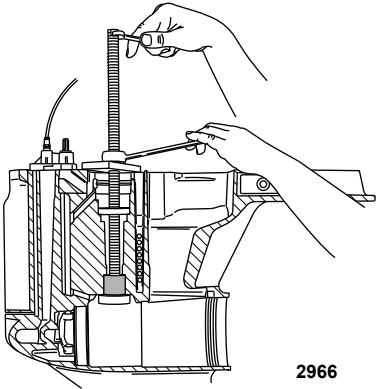

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

<p>Torpedo Ring Installation Tool</p>	<p>91-8M0039309</p>
 <p>39511</p>	<p>Installs torpedo ring</p>
<p>Bearing Carrier Retainer Nut Tool</p>	<p>91-8M0046632</p>
 <p>46139</p>	<p>Aids in the removal and installation of the bearing carrier retainer</p>
<p>Puller Jaws Assembly</p>	<p>91-46086A1</p>
 <p>9514</p>	<p>Removes bearing carrier and bearing races; use with Puller Bolt (91-85716)</p>
<p>Slide Hammer</p>	<p>91-34569A 1</p>
 <p>6761</p>	<p>Aids in the removal of various engine components. Use with puller jaws.</p>
<p>Universal Puller Plate</p>	<p>91-37241</p>
 <p>8505</p>	<p>Removes bearings from gears and the driveshaft</p>
<p>Torch Lamp</p>	<p>91- 63209</p>
 <p>8776</p>	<p>Heats surfaces to aid in the removal and installation of interference fit engine components.</p>
<p>Bearing Puller Assembly</p>	<p>91- 83165T</p>
 <p>3610</p>	<p>Removes bearings, races and bearing carriers</p>

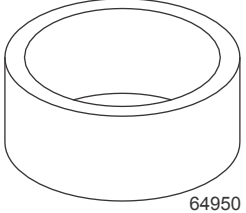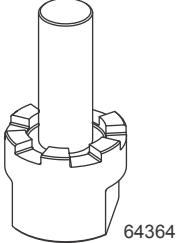






Pilot Washer	91-36571T
 <p>29490</p>	Used in pinion gear and pinion bearing installation
Bearing Carrier Guide Plate	8M0142624
 <p>64953</p>	Aids in the installation of bearing carrier seals and propeller shaft tapered bearing race. Tool ID number 8M0138782.
Bearing Cup Driver/Oil Seal Installer Tool	91-888414T01
 <p>6229</p>	Installs bearing carrier cup and seals.
Bearing Removal and Installation Kit	91- 31229A 7
 <p>2966</p>	<p>Installs and removes the bearings in all gearcases 91- 31229A 7 tool assembly includes the following components: 11- 24156 Hex Nut 12- 34961 Washer 91- 15755T Bearing Carrier 91- 29310 Plate 91- 30366T 1 Mandrel 91- 31229 Puller Shaft 91- 32325T Driver Head 91-32336 Driver Needle Bearing 91-36379 Puller/Head Gear 91- 36569T Driver Head 91- 36571T Pilot Washer 91-37292 Roller Bearing 91- 37311 Driver Head 91- 37312T Driver Head 91- 37323 Driver Head Rod 91- 37324T Pilot Washer 91- 37350T Pilot Mandrel 91- 38628T Puller/Driver Head 91-52393T Driver Needle Bearing 91-52394 Head Pull Rod</p>
Collet	Snap-On CG-45-7
 <p>64360</p>	Used to remove bearings or gears. Use with Snap-On Expanding Rod (CG-45-4).
Expanding Rod	Snap-On CG45-4
 <p>17771</p>	Aids in the removal of the bearings or gears. Use with Snap-On Collet.

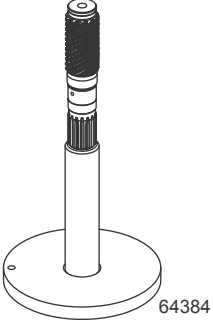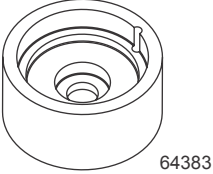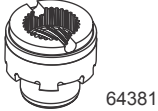
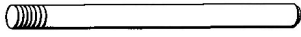
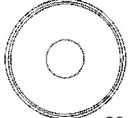


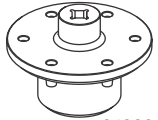


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

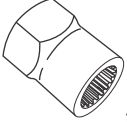Press Spacer Mandrel	8M0142615
	Used to hold bearing carrier and universal puller plate on a press. Tool ID number 8M0138781.
Gear Assembly Holding Fixture	8M0142559
	Insert into vise to hold forward (rear) gear. Tool ID number 8M0133013.
Retaining Nut Wrench	91-8M0070085
	Install locknut onto forward gear hub
Bearing Mandrel	8M0142636
	Used to press gear out of bearings and cone. Tool ID number 8M0139065.
Rear Gear Bearing Cone Mandrel	8M0142413
	Used to press in the rear gear bearing cones. Tool ID number 8M0138783.
Preload Driver Alignment Tool	8M0142970
	Aligns bearings and spacers during press and torque actions. Tool ID number 8M0125728.
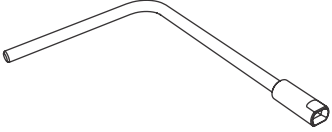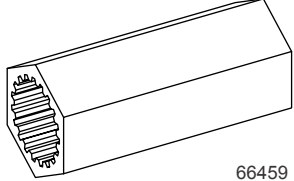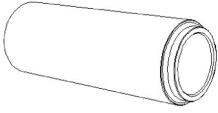
<p>Threaded Shaft Tool</p>	<p>8M0142983</p>
 <p>64384</p>	<p>Holds bearing carrier upright and aids in turning rear gear bearing assembly when pressing into the bearing carrier. Tool ID number 8M0132747.</p>
<p>Press Fixture Base Tool</p>	<p>8M0142976</p>
 <p>64383</p>	<p>Holds threaded shaft tool and secures bearing carrier to prevent movement when pressing rear gear bearing assembly into the bearing carrier. Tool ID number 8M0132742.</p>
<p>Threaded Clutch Assembly Tool</p>	<p>8M0145393</p>
 <p>64381</p>	<p>Engages with clutch jaws to rotate the gear as it is being pressed into the bearing carrier. Tool ID number 8M0132921.</p>
<p>Bearing Tool</p>	<p>31-861792</p>
 <p>64385</p>	<p>Allows the press fixture retainer tool to spin while pressing the gear into the bearing carrier.</p>
<p>Press Fixture Retainer Tool</p>	<p>8M0142974</p>
 <p>64382</p>	<p>Presses into bearing tool surface to aid in spinning while the gear is pressed into the bearing carrier. Tool ID number 8M0132707.</p>
<p>Gear Assembly Driver Tool</p>	<p>8M0142414</p>
 <p>64386</p>	<p>Used to check bearing carrier rolling torque. Tool ID number 8M0138814.</p>
<p>Driveshaft Bearing Retainer Wrench</p>	<p>91-43506T</p>
 <p>9520</p>	<p>Removes and installs the threaded bearing retainer</p>


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

Driveshaft Holding Tool	91-889958T
 <p>28677</p>	Holds driveshaft during pinion nut removal on the Verado models
Pinion Nut Holder	91-8M0036288
 <p>39509</p>	For torquing pinion nut.
Propeller Shaft Holder	91-8M0035594
 <p>39510</p>	Stabilizes propshaft
Shift Shaft Handle Tool	8M0142973
 <p>63932</p>	Used to rotate gear housing shift shaft. Tool ID number 8M0127025.
Propeller Shaft Adapter	8M0147118
 <p>66459</p>	Provides a hex surface to turn the propeller shaft. Tool ID number 8M0145218.
Driveshaft Bearing Installation Tool	91-8M0052590
 <p>47416</p>	Install upper and lower driveshaft bearings
Shift Shaft Tool	8M0142969
 <p>63663</p>	Aids in removal or installation of the shift shaft. Tool ID number 8M0120169.

Pinion Bearing Removal Tool	91-8M0046348
 <p>46152</p>	Removes pinion bearing
Driver Rod	91- 37323
 <p>25431</p>	Aids in the removal and installation of various bearings and bearing races
Bearing Cup Driver	91-885592T
 <p>29492</p>	Installs front gear bearing cup
Pinion Bearing Installation Tool	91-8M0046360
 <p>46153</p>	Installs pinion bearing
Pinion Gear Locating Tool	91-8M0046443
 <p>46157</p>	Sets pinion location
Bearing Carrier Installation Tool	91-8M0059911
 <p>9518</p>	Protects the seals when installing the bearing carrier on 19 spline (1-1/4 inch) propeller shaft. (Part of assembly 91-840393A1)
Backlash Indicator Tool	91-8M0053505
 <p>46158</p>	Aids in checking gear backlash
Driveshaft Seal Installation Tool	91-818769
 <p>47536</p>	Sets driveshaft seal height

Gear Housing Components

Gear Housing (5.44 in. Diameter)—Driveshaft

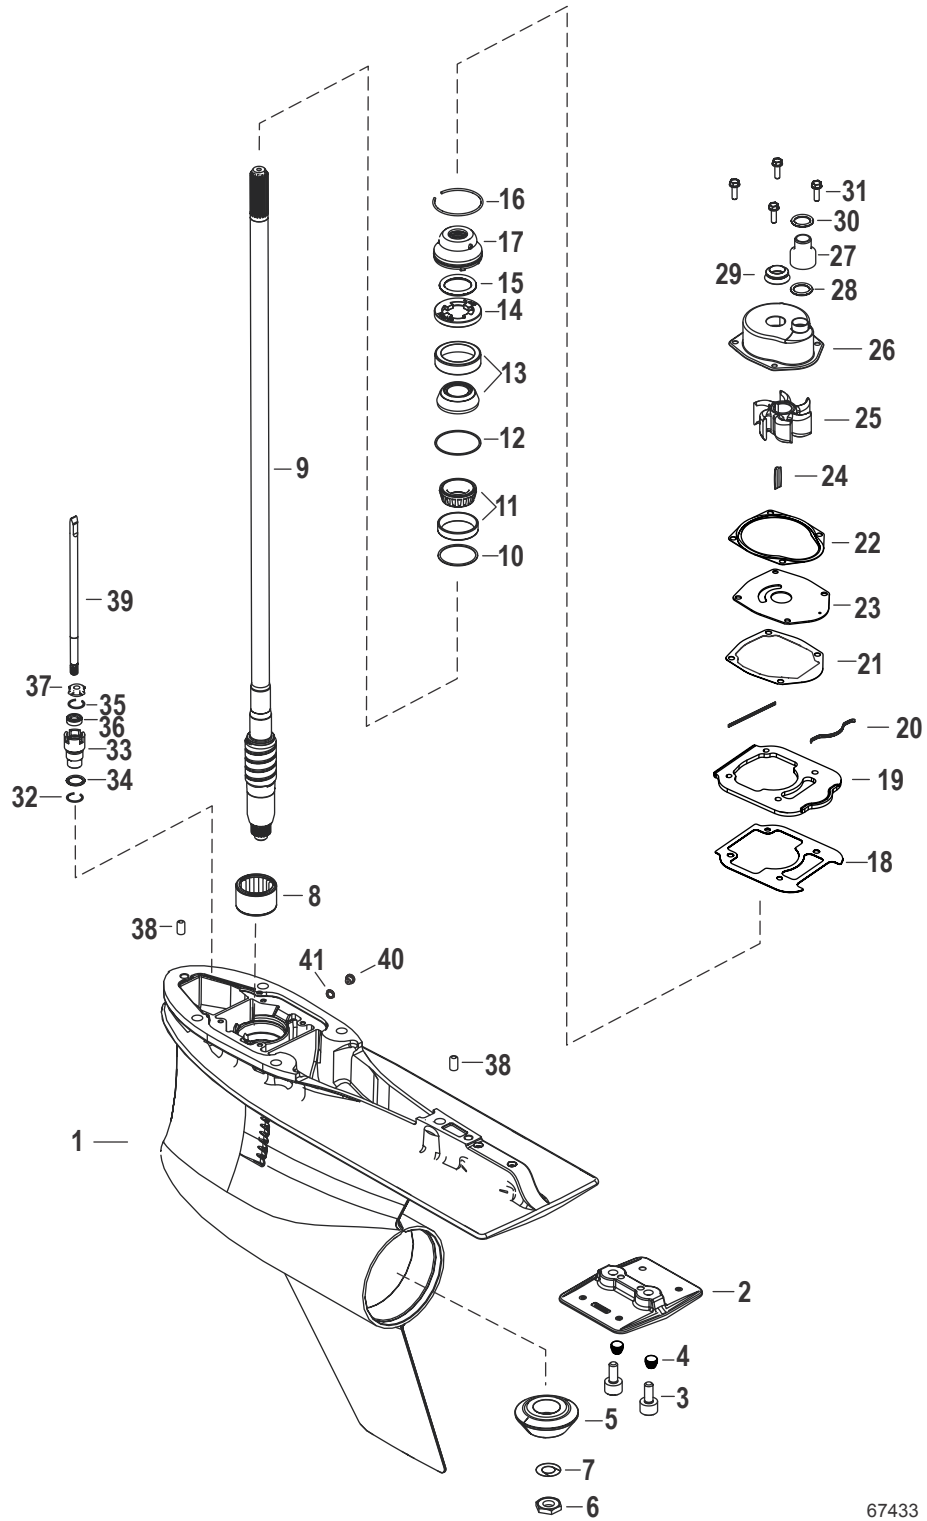


67433

Gear Housing (5.44 in. Diameter)—Driveshaft

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Gear housing assembly			
2	1	Anode			
3	2	Screw	54.2	–	40
4	2	Plug			
5	1	Pinion gear			
6	1	Pinion nut	169.5	–	125
7	1	Pinion washer			
8	1	Bearing assembly			
9	1	Driveshaft			
10	1	Shim			
11	1	Bearing assembly			
12	1	Shim			
13	1	Bearing assembly			
14	1	Retainer	135.5	–	100
15	1	O-ring			
16	1	Retaining ring			
17	1	Oil seal assembly			
18	1	Gasket			
19	1	Top cover			
20	2	Seal			
21	1	Rubber-coated stainless steel gasket			
22	1	Beaded gasket			
23	1	Faceplate			
24	1	Key			
25	1	Impeller			
26	1	Water pump housing			
27	1	Water pump coupler			
28	1	O-ring			
29	1	Face seal			
30	1	O-ring			
31	4	Screw	6.8	60	–
32	1	Retaining ring			
33	1	Shift shaft bushing	54.2	–	40
34	1	O-ring			
35	1	Retaining ring			
36	1	Oil seal			
37	1	Rubber grommet			
38	2	Dowel pin			
39	1	Shift shaft—XL shown			
40	2	Plug	11.3	100	–
41	2	Seal			

Gear Housing (5.44 in. Diameter, Right-Hand Rotation)—Propeller Shaft

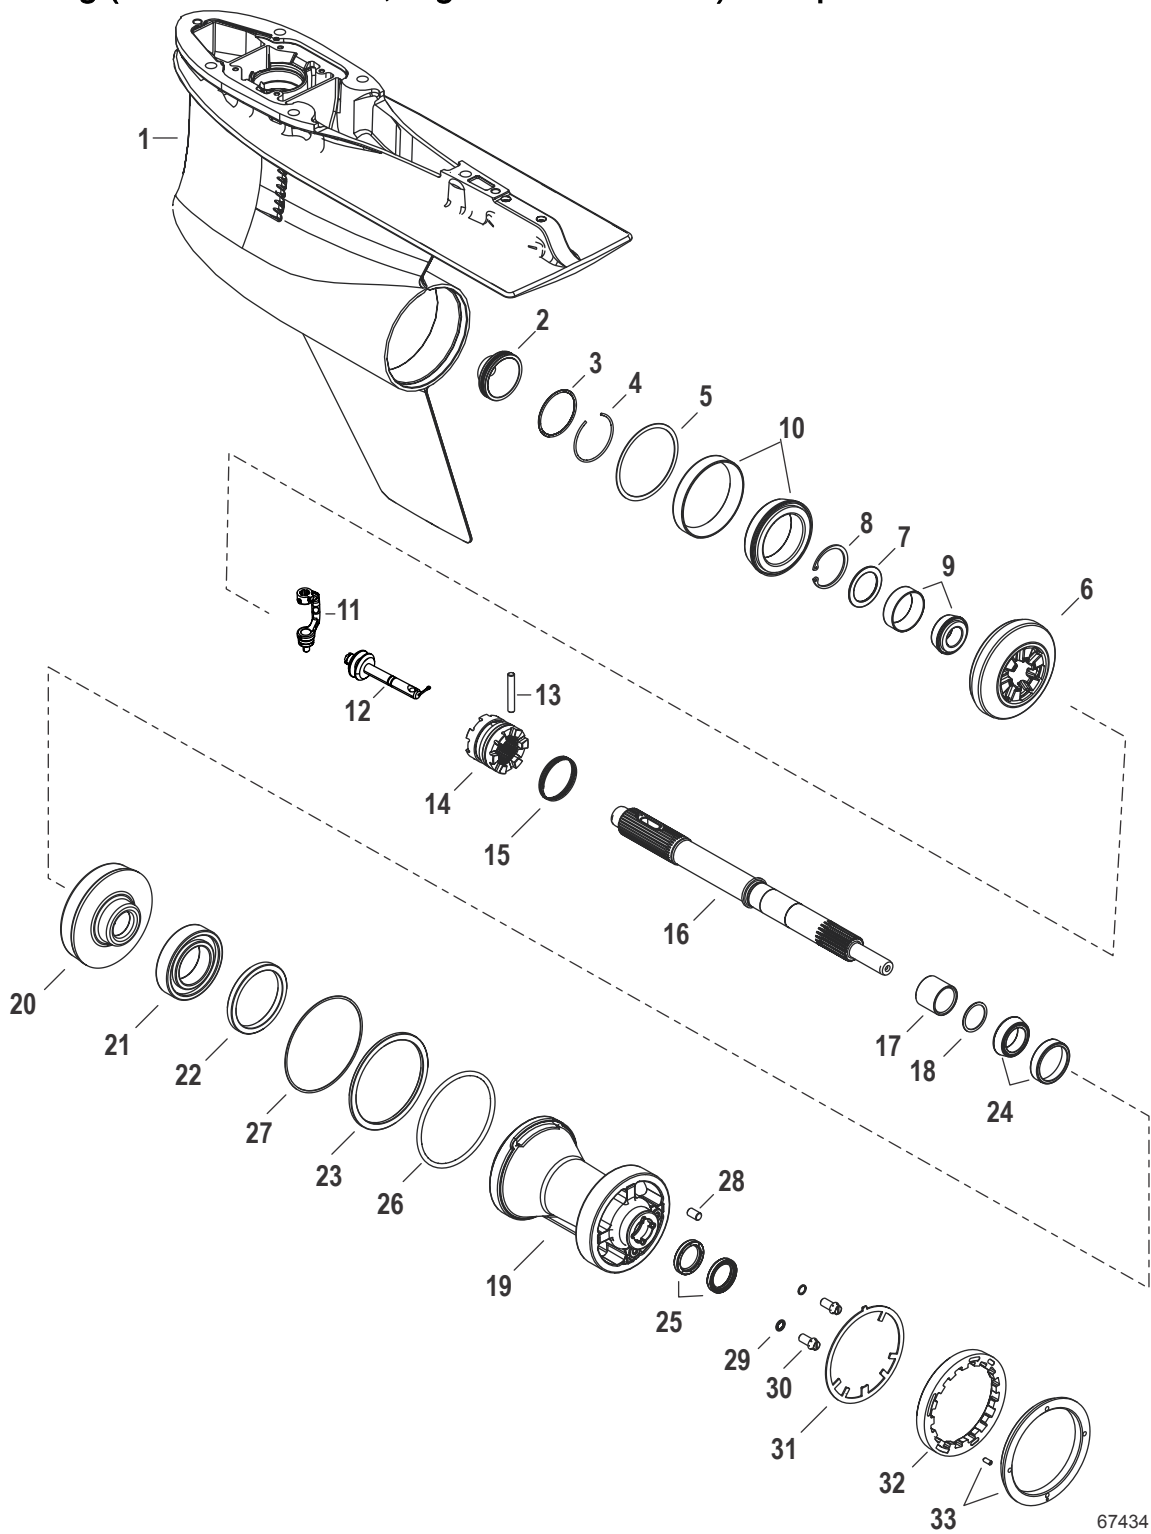


Gear Housing (5.44 in. Diameter, Right-Hand Rotation)—Propeller Shaft

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Gear housing assembly			
2	1	Torpedo plug			
3	1	O-ring			
4	1	Retaining ring			
5	1	Shim			
6	1	Front (forward) gear			
7	1	Thrust washer			
8	1	Retaining ring			
9	1	Tapered roller bearing			
10	1	Tapered roller bearing			
11	1	Shift crank			
12	1	Spool			
13	1	Pin			
14	1	Clutch			
15	1	Spring			
16	1	Propeller shaft			
17	1	Spacer			
18	1	Washer			
19	1	Bearing carrier			
20	1	Rear (reverse) gear			
21	1	Bearing			
22	1	Spacer			
23	1	Thrust ring			
24	1	Bearing assembly			
25	2	Oil seal			
26	1	O-ring			
27	1	Shim			
28	1	Pin			
29	2	Seal			
30	2	Fill and vent plugs	11.3	100	–
31	1	Tab washer			
32	1	Bearing carrier retainer	285 ¹	–	210 ¹
33	1	Cover kit			
		Torpedo ring	68	–	50
		Set screw	2.8	25	–

1. Tighten retainer to 135.5 Nm (100 lb-ft), then check rolling torque on propeller shaft. If torque is within specification, tighten retainer to 285 Nm (210 lb-ft). Rotate the retainer an additional 3.8 cm (1.5 in.) per the instructions in the **Bearing Carrier Final Installation** procedure.

Gear Housing (5.44 in. Diameter, Left-Hand Rotation)—Propeller Shaft

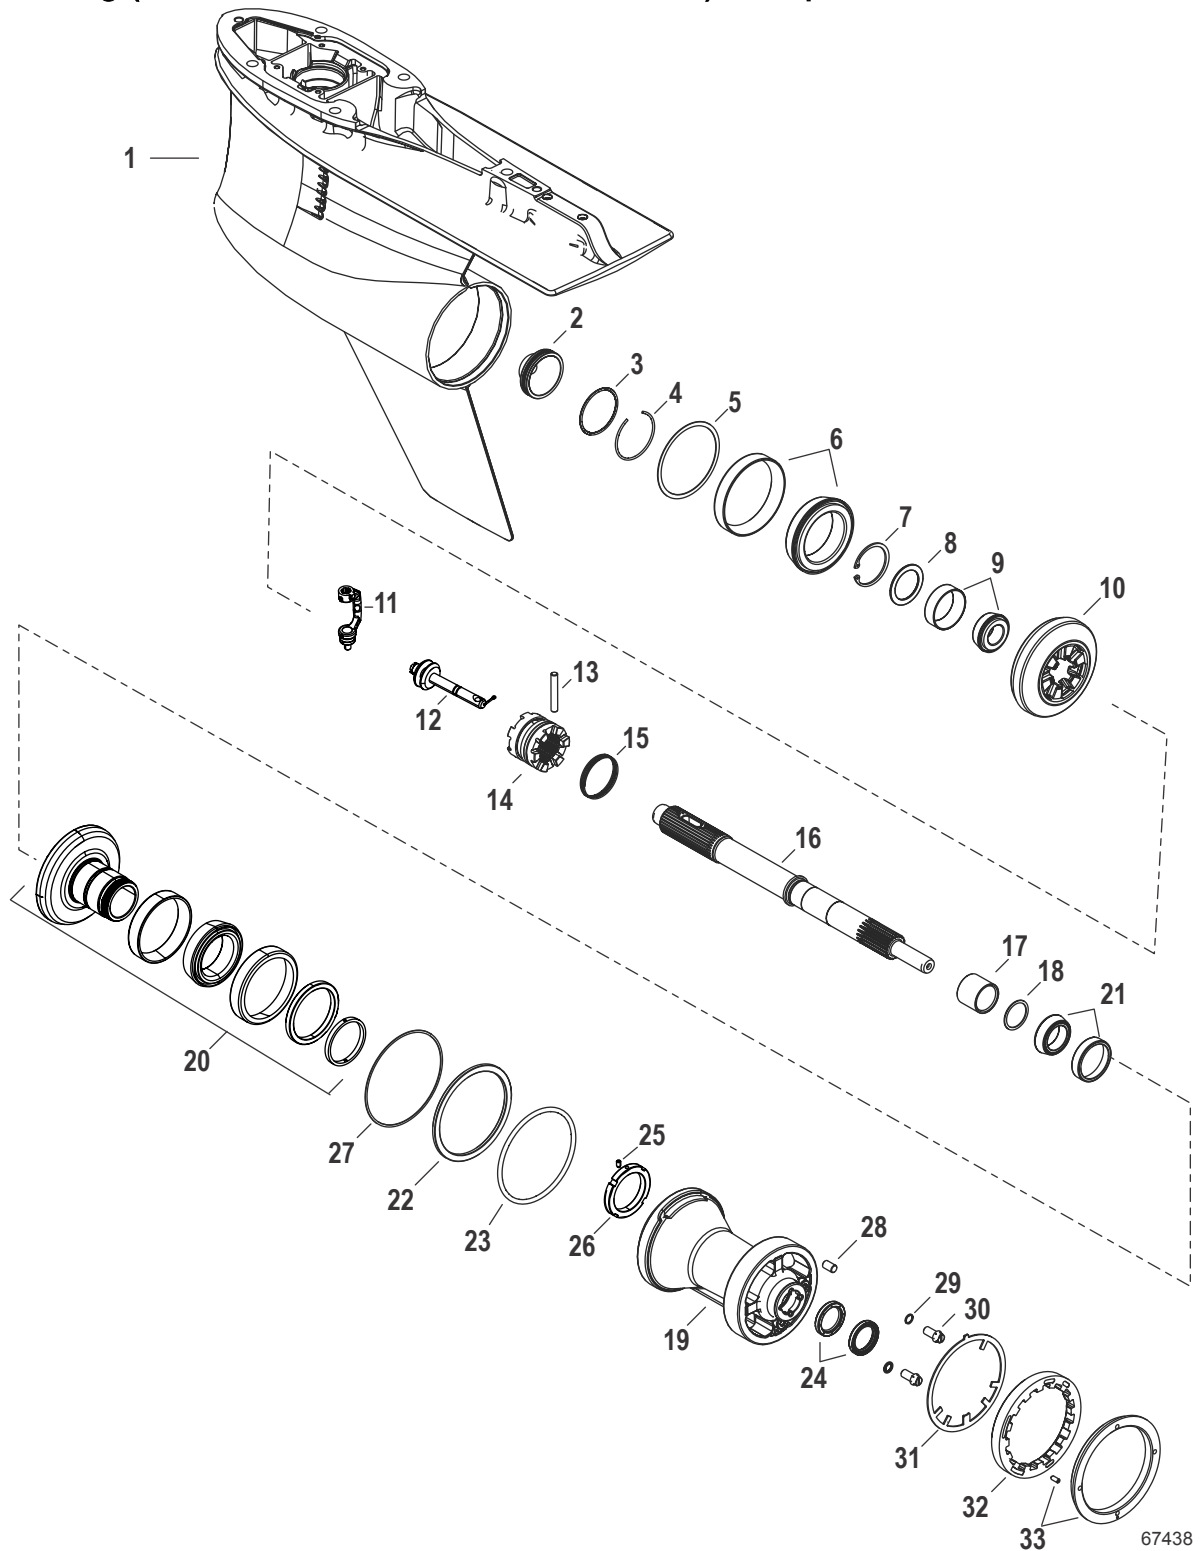

Gear Housing (544 in. Diameter, Left-Hand Rotation)—Propeller Shaft

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	1	Gear housing assembly			
2	1	Torpedo plug			
3	1	O-ring			
4	1	Retaining ring			
5	1	Shim			
6	1	Tapered roller bearing assembly			
7	1	Retaining ring			
8	1	Thrust washer			
9	1	Tapered roller bearing assembly			
10	1	Front (reverse) gear			
11	1	Shift crank			
12	1	Spool			
13	1	Pin			
14	1	Clutch			
15	1	Spring			
16	1	Propeller shaft			
17	1	Spacer			
18	1	Washer			
19	1	Bearing carrier			
20	1	Rear (forward) gear			
21	1	Bearing assembly			
22	1	Thrust ring			
23	1	O-ring			
24	2	Oil seal			
25	1	Screw			
26	1	Locknut			
27	1	Shim			
28	1	Pin			
29	2	Seal			
30	2	Fill and vent plugs	11.3	100	–
31	1	Tab washer			
32	1	Bearing carrier retainer	285 ¹	–	210 ¹
33	1	Cover kit			
		Torpedo ring	68	–	50
		Set screw	2.8	25	–

1. Tighten retainer to 135.5 Nm (100 lb-ft), then check rolling torque on propeller shaft. If torque is within specification, tighten retainer to 285 Nm (210 lb-ft). Rotate the retainer an additional 3.8 cm (1.5 in.) per the instructions in the **Bearing Carrier Final Installation** procedure.

General Service Recommendations

There may be more than one way to disassemble or reassemble a particular part. It is recommended that the entire procedure be read prior to repair.

IMPORTANT: Read the following before attempting any repairs.

Disassembly of a subassembly may not be necessary until cleaning and inspection reveals that disassembly is required for replacement of one or more components.

Service procedure order in this section is a normal disassembly/reassembly sequence. It is suggested that the sequence be followed without deviation to assure proper repairs. When performing partial repairs, follow the instructions to the point where the desired component can be replaced, then proceed to reassembly and installation of that component in the reassembly part of this section. Use the **Table of Contents** to find the correct page number.

Threaded parts are right-hand (RH), unless otherwise indicated.

When holding, pressing, or driving is required, use soft metal vise jaw protectors or wood for protection of parts. Use a suitable mandrel that will contact only the bearing race when pressing or driving bearings.

Whenever compressed air is used to dry a part, verify that no water is present in the air line.

Bearings

Upon disassembly of the gear housing, all bearings must be cleaned and inspected. Clean the bearings with solvent and dry with compressed air. Air should be directed at the bearing so that it passes through the bearing. Do not spin the bearing with compressed air, as this may cause the bearing to score from lack of lubrication. After cleaning, lubricate the bearings with High Performance Gear Lubricant. Do not lubricate the tapered bearing cups until after inspection.

Inspect all bearings for roughness, catches, and bearing race side wear. Work the inner bearing race in and out, while holding the outer race, to check for side wear.

When inspecting the tapered bearings, determine the condition of the rollers and the inner bearing race by inspecting the bearing cup for pits, scoring, grooves, uneven wear, imbedded particles, and/or discoloration from overheating. Always replace the tapered bearing and race as a set.

Inspect the gear housing for bearing races that have spun in their respective bores. If the race has spun, the gear housing must be replaced.

Roller bearing condition is determined by inspecting the bearing surface of the shaft that the roller bearing supports. Check the shaft surface for pits, scoring, grooves, embedded particles, uneven wear, and/or discoloration from overheating. The shaft and bearing must be replaced if the conditions described are found.

Shims

Keep a record of all shim amounts and their location during disassembly to aid in reassembly. Be sure to follow the shimming instructions during reassembly, as gears must be installed to the correct depth and have the correct amount of backlash to avoid noisy operation and premature gear failure.

Seals


As a normal procedure, all O-rings and oil seals should be replaced without regard to appearance. To prevent leakage around oil seals, apply Loctite 271 Threadlocker to the outer diameter of all metal case oil seals. When using Loctite on seals or threads, the surfaces must be clean and dry. To ease installation, apply 2-4-C with PTFE on all O-rings. To prevent wear, apply 2-4-C with PTFE on the I.D. of oil seals.

Gearcase Serviceability Inspection

Draining and Inspecting Gear Housing Lubricant—Non-SeaPro Models

1. Place the gear housing in a suitable holding fixture or vise with the driveshaft in a vertical position.

- Position a clean drain pan under the gear housing and remove the plugs from the gear housing with a 10 mm socket or slot screwdriver.

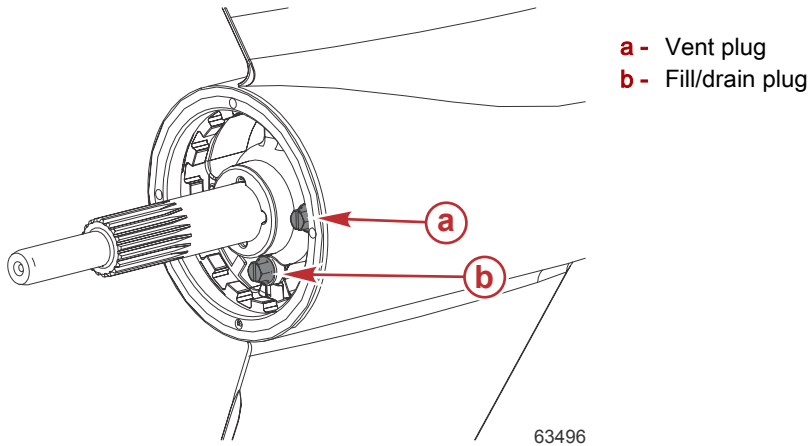


- Inspect the gear lubricant for metal particles. Presence of a small amount of fine metal particles (resembling powder) indicates normal wear. Presence of larger particles, or a large quantity of fine particles, indicates the need for gear housing disassembly and component inspection.
- Check the color of the gear lubricant. White or cream color indicates the presence of water in the lubricant. Check the drain pan for water separation from the lubricant. Presence of water in the gear lubricant indicates the need for disassembly and inspection of oil seals, seal surfaces, O-rings, and gear housing components.

Draining and Inspecting Gear Housing Lubricant—SeaPro Models

All SeaPro FourStroke Outboards include a gearcase lubricant drain located at the front of the torpede. Gearcase lubricant changes can be completed while the outboard is tilted up.

- Place the outboard in the tilted up position.
- Remove the upper vent plug.
- Position a clean drain pan under the gear housing.
- Remove the front drain/fill plug from the torpede and drain the lubricant.

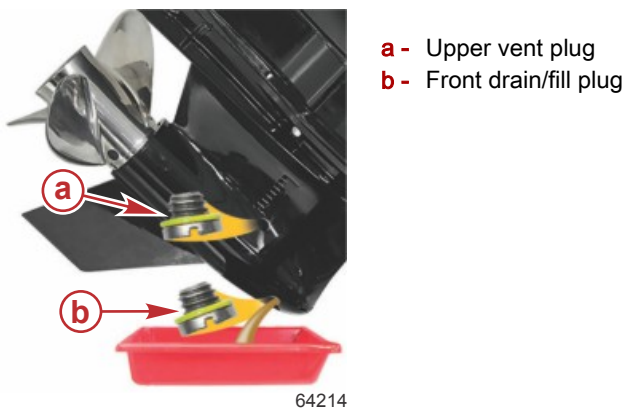


- Inspect the gear lubricant for metal particles. Presence of a small amount of fine metal particles resembling powder indicates normal wear. Presence of larger particles, or a large quantity of fine particles, indicates the gear housing should be disassembled and inspected.
- Note the color of the gear lubricant. White or cream color indicates the presence of water in the lubricant. Check the drain pan for water separation from the lubricant. Presence of water in the gear lubricant indicates the gear housing should be disassembled and inspected.

Gear Housing Pressure Test

- Tilt the engine up approximately 20° to prevent residual oil from coming out of the vent hole.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

2. Remove the vent plug and install the pressure test gauge.

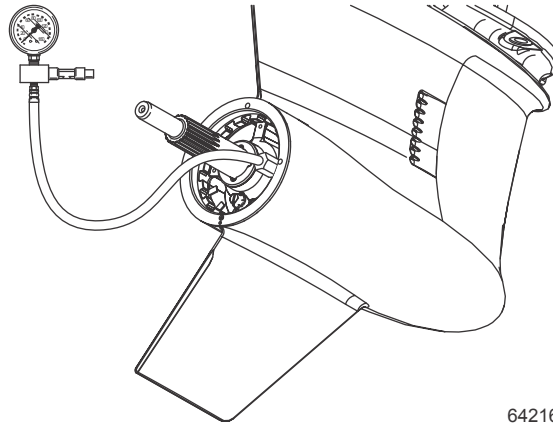

64216

3. Pressurize the housing and observe the gauge for 15 minutes.
4. Rotate the driveshaft, propeller shaft, and shift shaft while the housing is pressurized to check for leaks.
5. If pressure drop is noted, immerse the housing in water.
6. Repressurize and check for air bubbles.
7. Replace the leaking seals, as necessary. Retest the housing after seal replacement.

Gear Housing Test Pressure	
Applied air pressure	103.4 kPa (15 psi)
Length of time	15 minutes

Leakage Tester Kit	FT8950
--------------------	--------

8. If air bubbles are noticed from the water inlet holes at the front of the torpedo, the gear housing must be replaced.
9. Remove the tester from the housing and install the vent plug and sealing washer.


Propeller Shaft Inspection

1. Inspect the propeller shaft for up and down movement, as follows:
 - a. Position the dial indicator on the propeller shaft, just forward of the splines, as shown in the following illustration.
 - b. Push the propeller shaft down and zero the dial indicator.
 - c. Move the propeller shaft up while observing the dial indicator.
 - d. A shaft deflection of more than 0.08 mm (0.003 in.) indicates a worn propeller shaft bearing.

Dial Indicator	91- 58222A 1
Dial Indicator Adapter	91-83155
Dial Indicator Holding Tool	91- 89897

2. Check for a bent propeller shaft as follows:
 - a. Reposition the dial indicator to the threaded end of the propeller shaft. Rotate the propeller shaft while observing the dial indicator.
 - b. If the deflection is more than 0.23 mm (0.009 in.), the propeller shaft is bent and should be replaced.

3. Check for propeller shaft end play. There should be no end play. If end play exists, excessive wear has occurred and the gear housing must be disassembled for inspection.

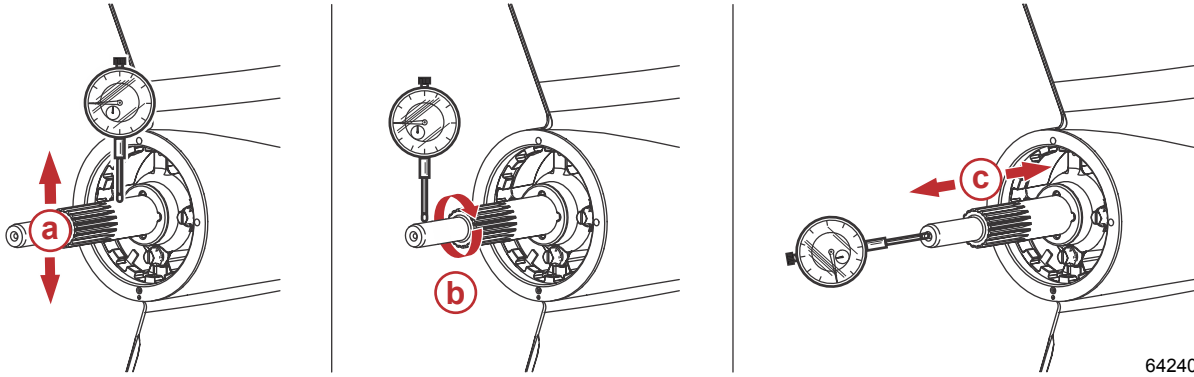

64240

- a - Check propeller shaft deflection
- b - Check for bent propeller shaft
- c - Check propeller shaft end play


Gear Housing Removal

⚠ WARNING

Performing service or maintenance without first disconnecting the battery can cause product damage, personal injury, or death due to fire, explosion, electrical shock, or unexpected engine starting. Always disconnect the battery cables from the battery before maintaining, servicing, installing, or removing engine or drive components.

NOTE: It is not necessary to drain the oil sump when removing the gear housing.

1. Tilt the outboard to the trailer full up position and engage the tilt lock lever.
2. Bend the tabs of the propeller tab washer away from the rear thrust hub. Remove the propeller locknut, tab washer, rear thrust hub, propeller, and forward thrust washer from the propeller shaft.

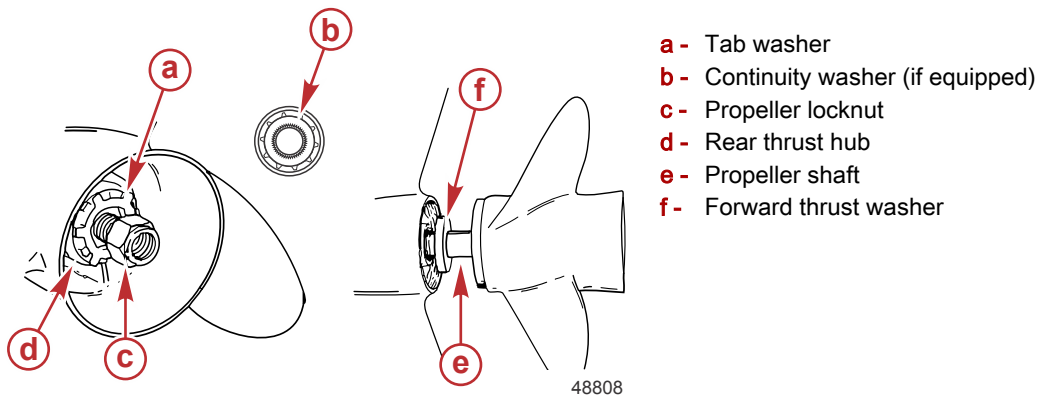


48808


3. Remove the nut and washer from the underside of the anti-ventilation plate, just forward of the anode plate.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

NOTE: It is not necessary to remove the anode plate on these gearcases.

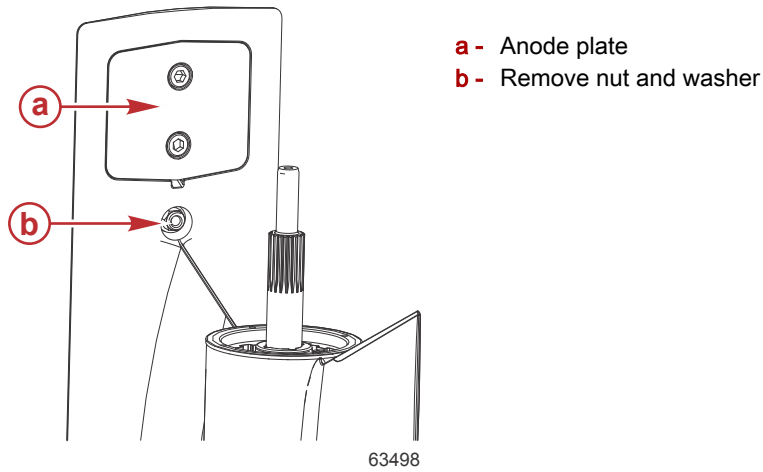


4. Loosen the side mounting locknuts; two on each side. Do not attempt to remove one locknut before the opposite side is loosened sufficiently or the gear housing could be damaged.

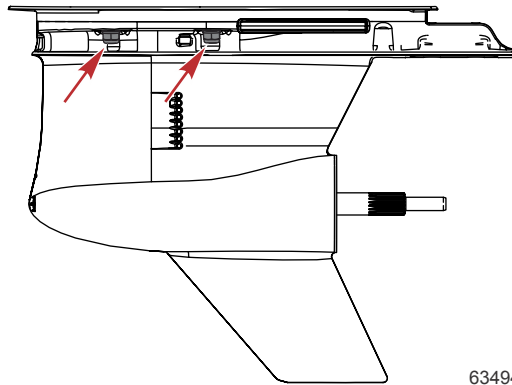


IMPORTANT: The long shaft model is shown. The XL and XXL models use a driveshaft housing spacer which will come off with the gear housing. Be careful not to drop or lose the driveshaft housing spacer on these models.

5. Pull the gear housing away from the driveshaft housing as far as the loosened locknuts will allow, then remove the loosened locknuts. Do not allow the gear housing to fall, as it is now free.
6. Pull the gear housing from the driveshaft housing.
7. On AMS models, remove, clean, and inspect the lower exhaust relief muffler. Replace the muffler if it is deteriorated or damaged. On CMS models, remove, clean, and inspect the lower relief muffler plug. Replace the plug if it is deteriorated or damaged.

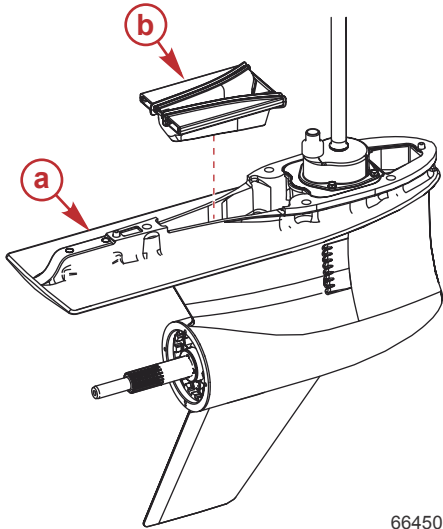

66450

- AMS models**
a - Gear housing
b - Lower exhaust relief muffler

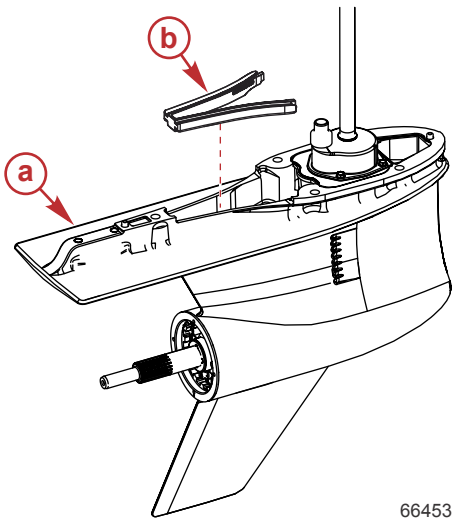


66453

- CMS models**
a - Gear housing
b - Lower relief muffler plug

Water Pump


Removal and Disassembly

1. Remove the driveshaft seal, water pump screws, and the water seal coupler.

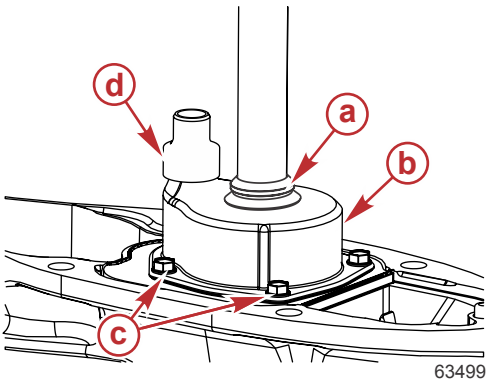

63499


2. Lift the water pump cover straight up and off the driveshaft.
3. Remove the impeller and impeller key.

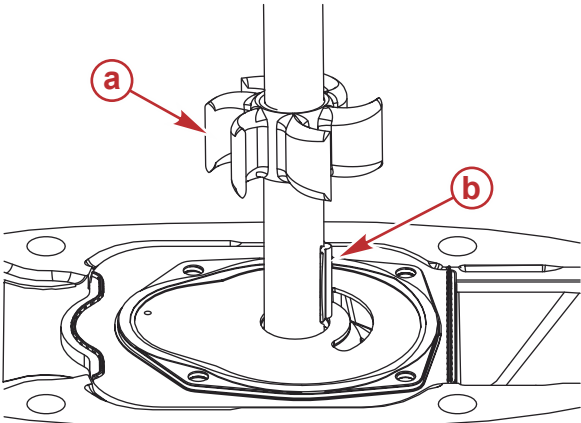

63500

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

4. Remove the top beaded gasket, faceplate, rubber-coated stainless steel gasket, top cover, and the lower gasket by lifting straight up and off of the driveshaft.

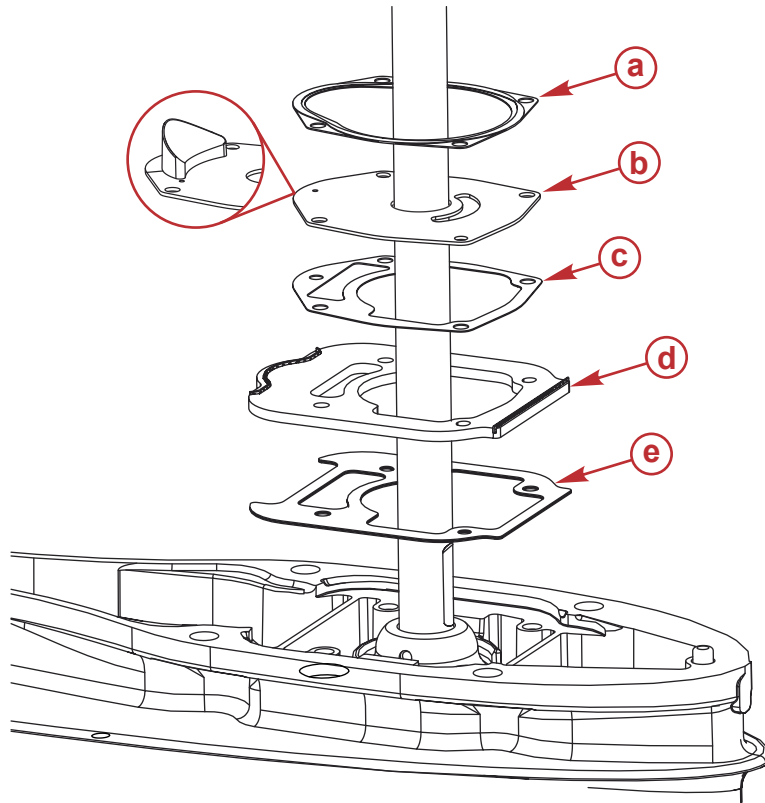

a - Beaded gasket

b - Faceplate

NOTE: Early models were equipped with a faceplate deflector. The deflector is no longer required.

c - Rubber-coated stainless steel gasket



d - Top cover

e - Gasket

63501

Cleaning and Inspection

1. With the gear housing removed, inspect the water tube O-ring inside the driveshaft housing for wear or damage. On XL and XXL gearcases, be sure to check the O-ring in the water tube extension. Replace worn or damaged components.

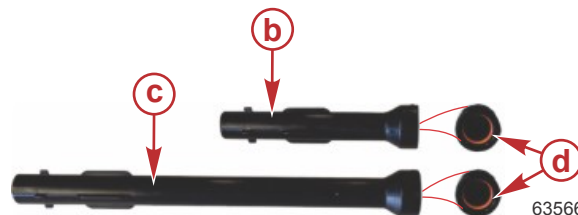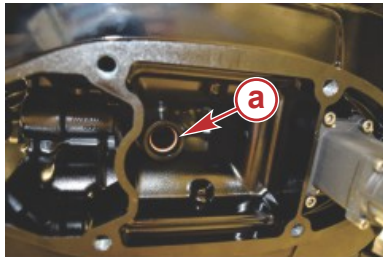

a - Water tube

b - XL water tube extension

c - XXL water tube extension

d - O-ring inside extensions

63566

2. Inspect the water seal coupler and O-ring for wear or damage. Replace worn or damaged parts.



a - Water seal coupler


b - O-ring

66039


3. Inspect the faceplate and water pump liner for grooves or rough surfaces.

IMPORTANT: The circular groove on the faceplate, formed by the impeller, will not affect water pump output.


- Inspect all gaskets for damage and replace as required. Inspect the coated surface on the stainless steel gasket for scratches or damage. If the coating is scratched or damaged, replace the stainless steel gasket.

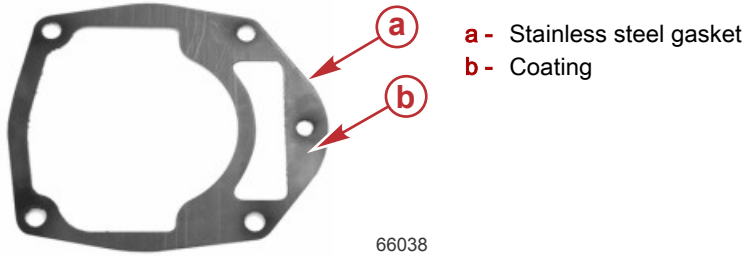

- Inspect the top cover seals. Replace worn, damaged, or missing seals.

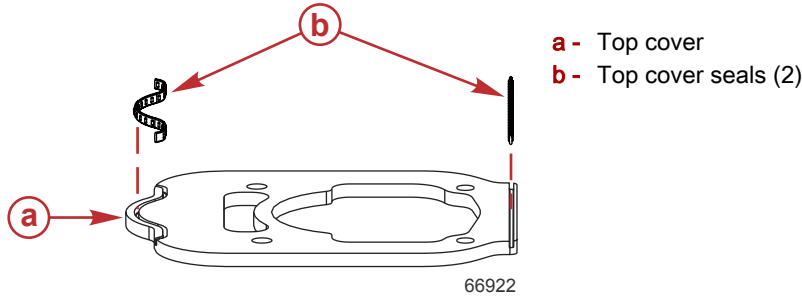

- Inspect the impeller seal surfaces and ends of the impeller blades for cracks, tears, and wear. Replace the impeller if any of these conditions are found.
- Inspect the impeller hub for cracks, and ensure that the impeller is bonded to the hub.

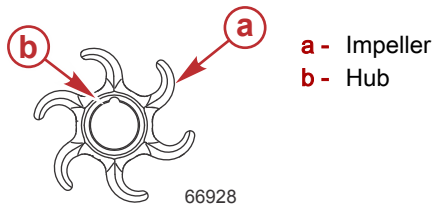

- Inspect the impeller for a glazed or melted appearance, caused by operation without sufficient water supply. Replace the impeller if any of these conditions exist.


IMPORTANT: When completing gear housing repairs that require removal of the water pump impeller, it is recommended the impeller be replaced. However, if the impeller must be used, do not install in reverse to original rotation; premature impeller failure will occur.

Oil Seal Carrier

Removal

NOTE: Push down on the oil seal carrier to aid in the removal of the retaining ring above the oil seal carrier.


- While pushing down on the oil seal carrier, use a flat tip screwdriver to aid in the removal of the retaining ring above the oil seal carrier.

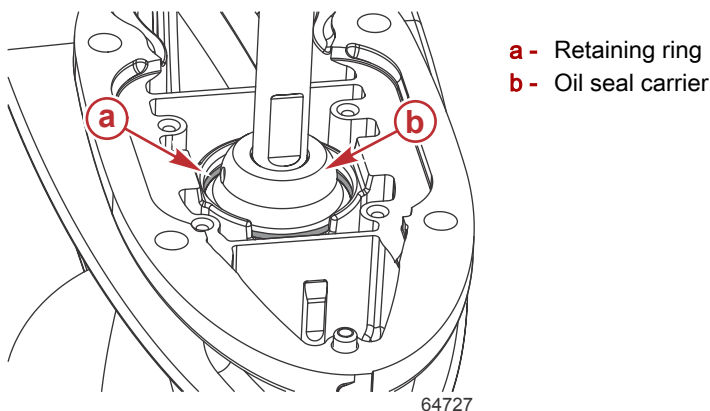

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

2. Remove the oil seal carrier from the gear housing. It may be necessary to gently pry up on it with two screwdrivers.

NOTE: When prying the oil seal carrier up, avoid contact with the painted surface of the gear housing, or protect the painted surface where the tools may contact the gear housing. This will prevent paint damage that could result in future corrosion.

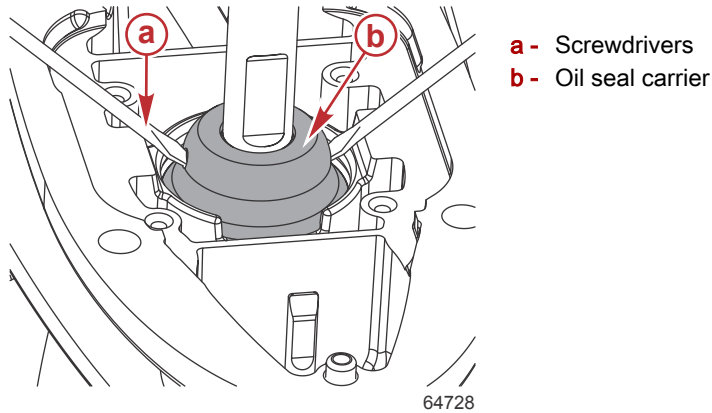


Disassembly

NOTE: The oil seals within the oil seal carrier are not individually replaceable. If the oil seals require replacement, the oil seal carrier must be replaced as an assembly.


Bearing Carrier

Bearing Carrier Removal

1. Remove the set screw from the torpedo ring using a 3/32 in. Allen wrench.

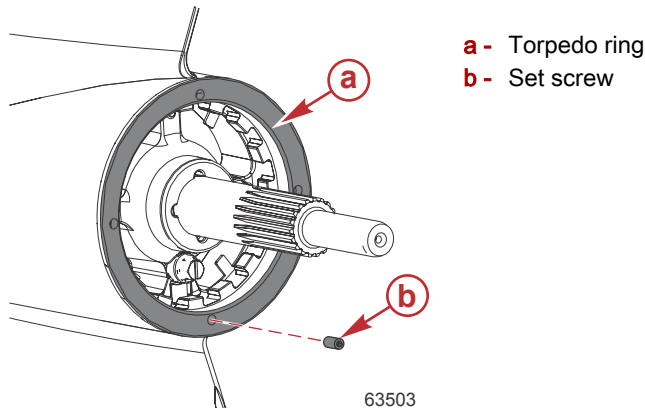

2. Remove the torpedo ring using a torpedo ring installation tool.

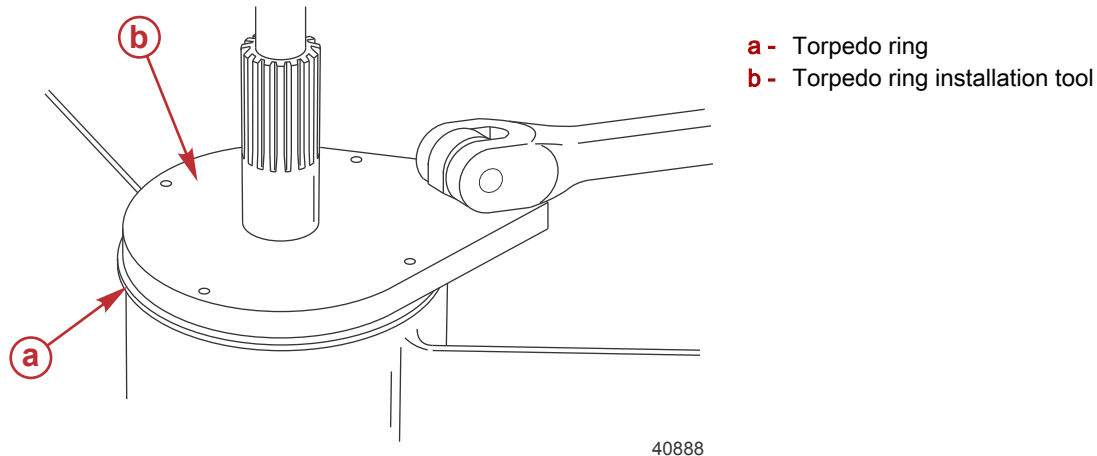


Torpedo Ring Installation Tool

91-8M0039309

3. Straighten the tab on the tab washer that is bent into the bearing carrier retainer.


NOTE: The vent and fill/drain plugs in the bearing carrier may have to be removed before using the bearing carrier retainer nut tool to remove the bearing carrier retainer.

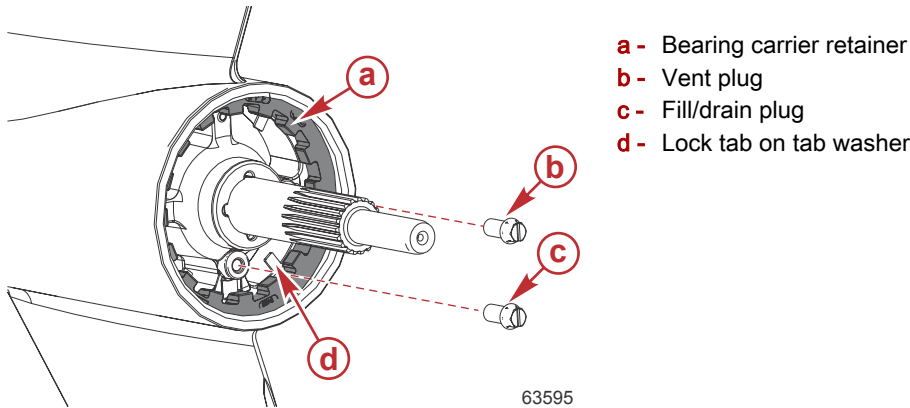

- a - Bearing carrier retainer
- b - Vent plug
- c - Fill/drain plug
- d - Lock tab on tab washer

63595

4. Remove the bearing carrier retainer following step "a" or "b," as follows:
 - a. Use a bearing carrier retainer nut tool to remove the bearing carrier retainer by turning the retainer counterclockwise.

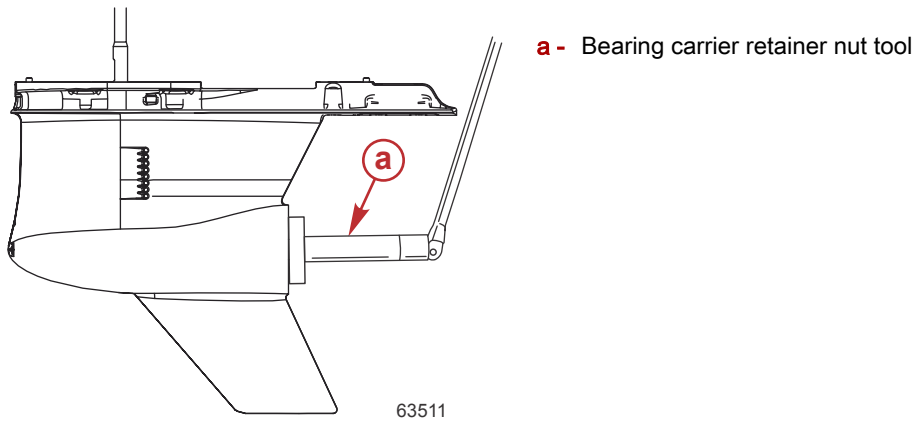


- a - Bearing carrier retainer nut tool

63511

Bearing Carrier Retainer Nut Tool	91-8M0046632
-----------------------------------	--------------

IMPORTANT: Drilling into the bearing carrier retainer can potentially damage the gearcase. Ensure that you do not drill into the gearcase when removing a seized retainer.

- b. If the retainer is corroded in place, drill four holes in the retainer and fracture the retainer with a chisel. Pry the remaining segments out.

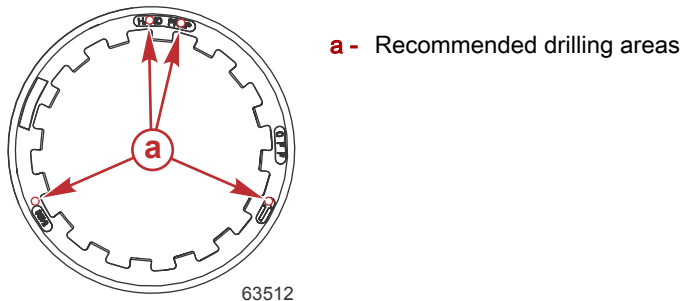


- a - Recommended drilling areas

63512


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

5. Remove the tab washer.

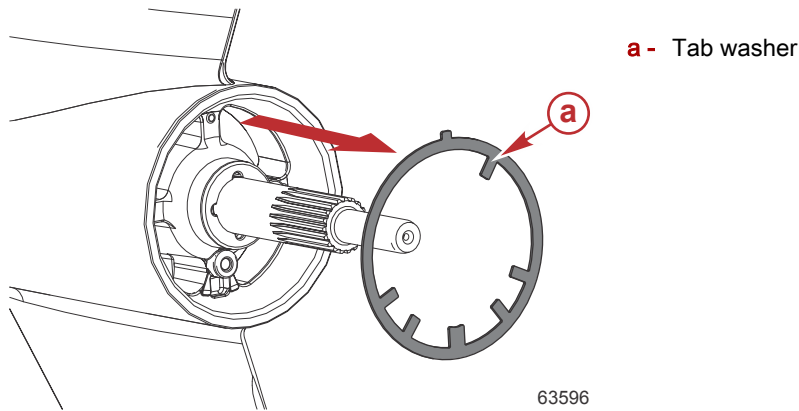

6. Pull the bearing carrier from the gear housing by pulling on the outer ring of the bearing carrier. Position the puller jaws close to the bosses in the carrier. The locating pin will likely come out with the bearing carrier. Be careful not to lose the locating pin.


NOTE: If the bearing carrier is seized in the gear housing, it may be necessary to use heat to loosen the carrier.

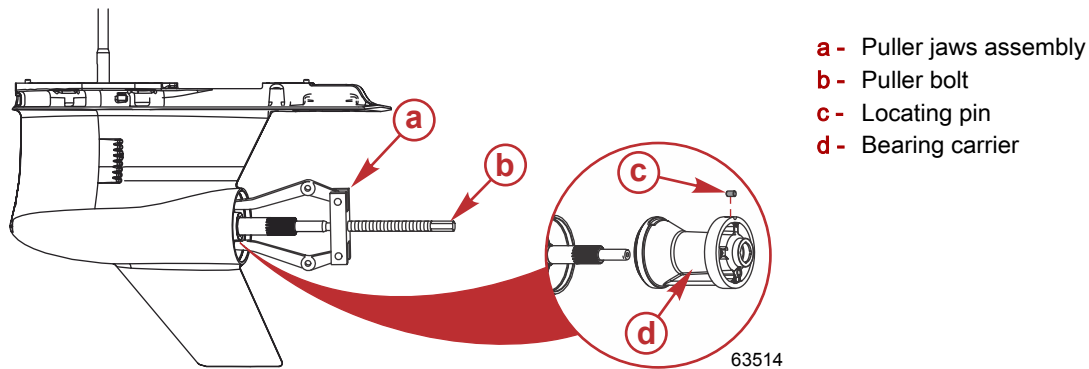

Puller Jaws Assembly	91-46086A1
----------------------	------------


7. Remove the bearing carrier shims from the gear housing.

NOTE: The shims may stick to the thrust ring when pulling out the bearing carrier. Check the bearing carrier if no shims are found in the gear housing.

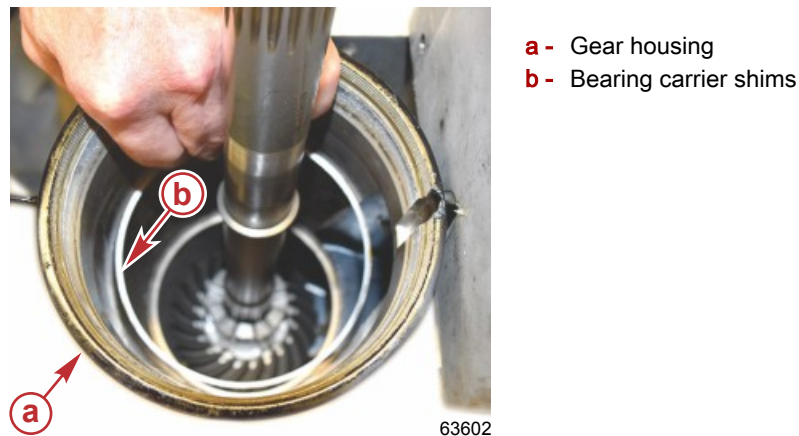

8. Remove the propeller shaft spacer and shims.

NOTE: The shims may stick to the bearing carrier when pulling it out. Check the bearing carrier if no shims are found on the propeller shaft.

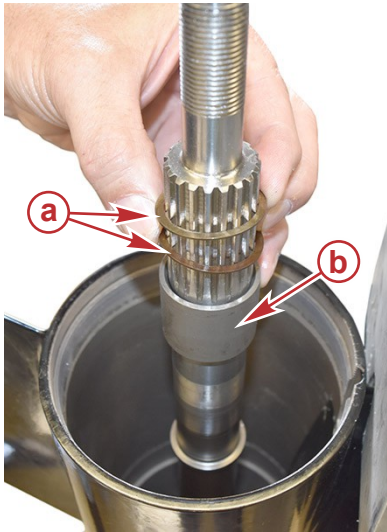

- a - Propeller shaft shims
- b - Propeller shaft spacer

63655

Right-Hand Rotation Bearing Carrier—Inspection, Disassembly, Assembly


Inspection

IMPORTANT: All seals and O-rings should be replaced to assure effective repair.

⚠ WARNING

Spin-drying bearings with compressed air can cause serious injury or death. The bearings can explode, even if spun at very slow speeds. Do not allow the bearings to spin when drying with compressed air.

1. Clean the bearing carrier with solvent and dry with compressed air.
2. Inspect the bearing carrier for signs of excessive corrosion, especially in the area where the bearing carrier touches the gear housing. If excessive corrosion is evident, replace the carrier.

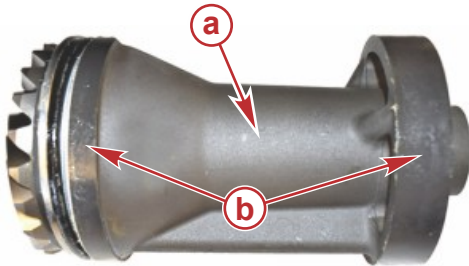


- a - Bearing carrier
- b - Inspect for corrosion

63603

3. Secure the bearing carrier assembly in a vise and use a slide hammer with puller jaws to remove the rear gear.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

NOTE: The rear gear ball bearing may come out while removing the rear gear. Do not separate the gear from the bearing at this time.

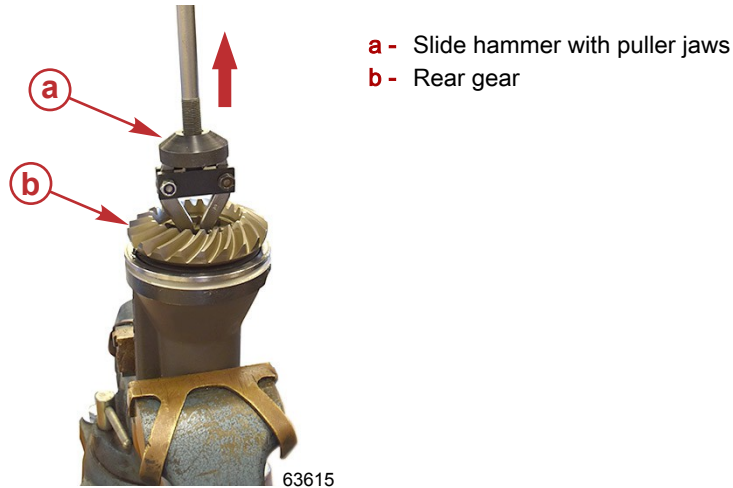


Slide Hammer	91-34569A 1
--------------	-------------

4. Inspect the remaining bearing carrier components as follows.


- a. Inspect the rear gear ball bearing. Rotate the bearing while checking for rough spots or catches. Push in and pull out on the rear gear to check for bearing side wear. Replace the bearing if any of these conditions exist.

NOTE: The ball bearing may have come out with the rear gear when removed in the previous step.

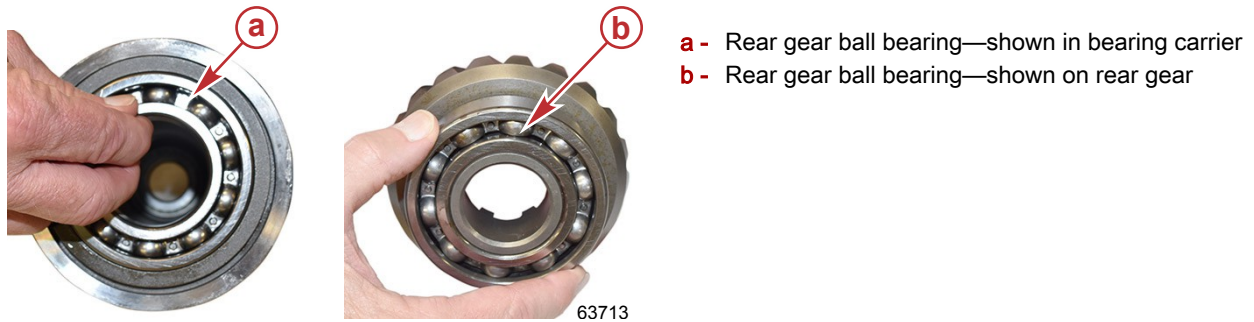

- b. Inspect the aft propeller shaft tapered bearing cone and cup for pits, scoring, discoloration, or excessive looseness.


NOTE: The tapered bearing cone can be removed from the bearing carrier for inspection. Refer to **Disassembly** for removal of the bearing cup.

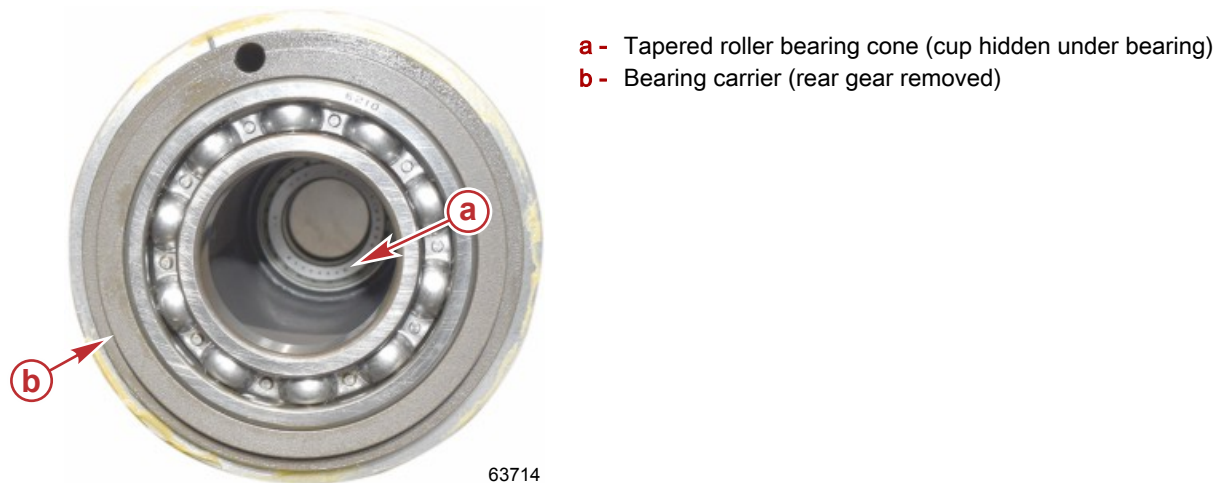

- c. Inspect the bearing carrier oil seals.

5. Inspect the rear gear to pinion gear wear pattern. It should be even and smooth. If not, replace the rear gear, pinion gear, and front gear.

- Inspect the rear gear for hairline fractures. Replace the rear gear and the pinion gear if any fractures are found. If extensive damage is observed, such as chips, spalling, or broken teeth, replace all gears.
- Check the clutch jaws on the rear gear for damage. Replace the rear gear if damage is found on the clutch jaws.

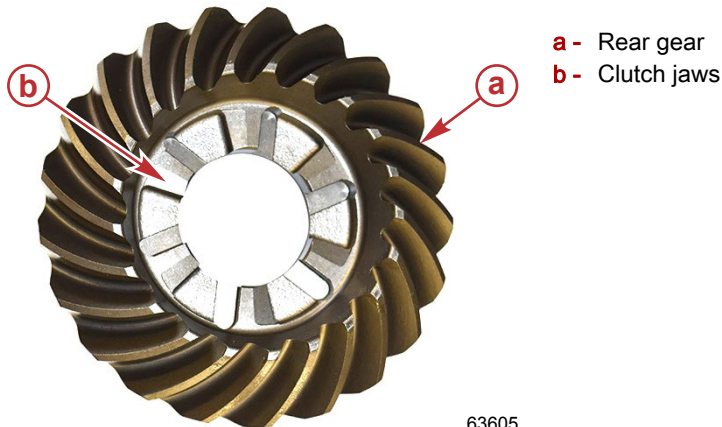


- a - Rear gear
- b - Clutch jaws

63605

- Do not proceed with disassembly unless the inspected parts require replacement.

Disassembly

- If the rear gear ball bearing is still attached to the rear gear, use a suitable mandrel and universal puller plate to support the bearing, then press the bearing from the rear gear as shown.

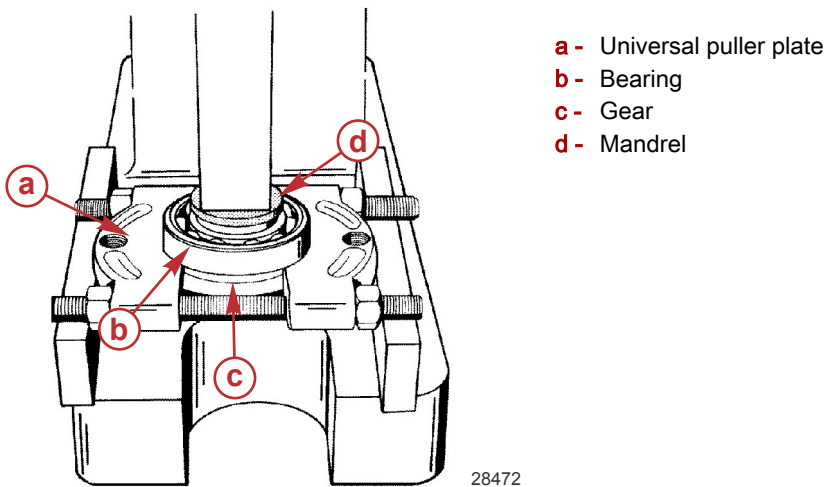


- a - Universal puller plate
- b - Bearing
- c - Gear
- d - Mandrel

28472

Universal Puller Plate	91-37241
------------------------	----------

- Remove the thrust ring. Remove and discard the O-ring.

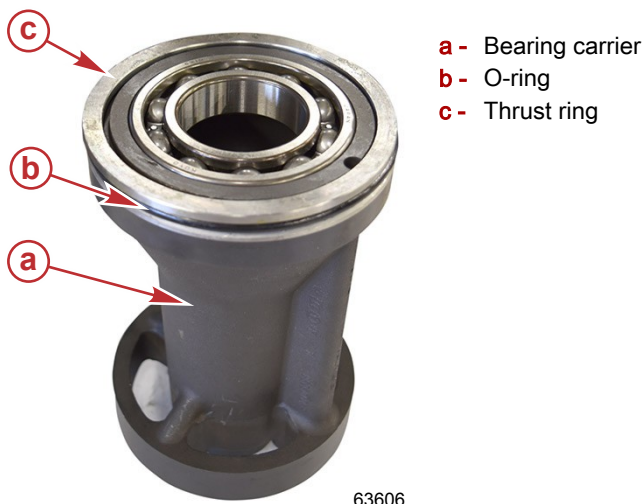

- a - Bearing carrier
- b - O-ring
- c - Thrust ring


63606

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

NOTE: If the rear gear ball bearing is already removed from the bearing carrier, proceed to step 5.


3. Use the slide hammer with puller jaws to remove the ball bearing from the bearing carrier.

NOTE: It may be necessary to use a torch lamp to heat the bearing carrier area surrounding the ball bearing.

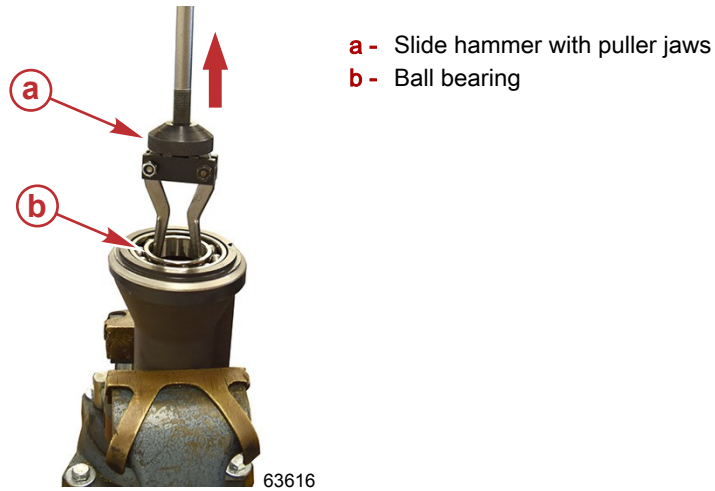


Torch Lamp	91- 63209
Slide Hammer	91-34569A 1

4. Inspect the ball bearing after removal from the bearing carrier.
5. Remove the spacer from the bearing carrier.

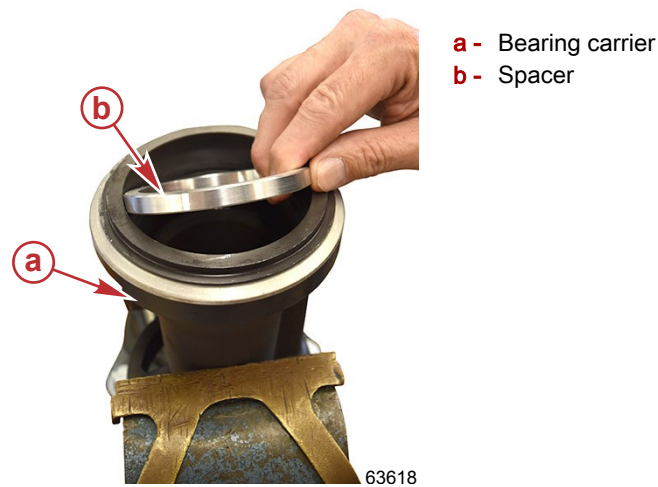


6. Replace the tapered bearing cone and bearing cup inside of the bearing carrier, if required.

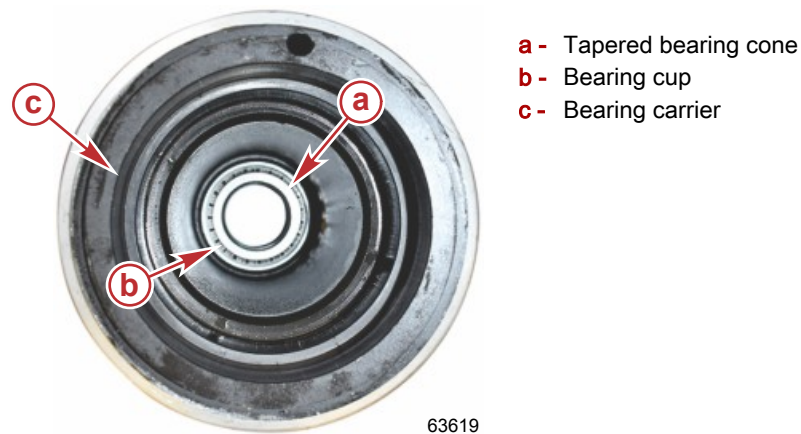


7. If damaged, replace the tapered bearing cup and seals as follows:

- a. **If replacing the seals only:** Remove the oil seals with a suitable punch, being careful not to damage the bore of the bearing carrier. Discard the seals.

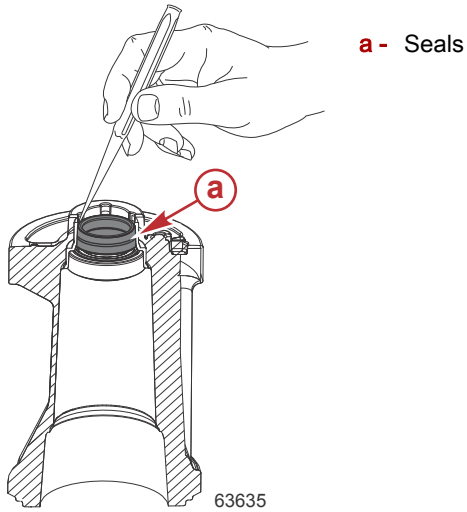


- b. **If replacing the tapered roller bearing cup and seals:** Remove the seals with a punch as noted above. There are slots cast into the bearing carrier to aid in the removal of the bearing cup with puller jaws.

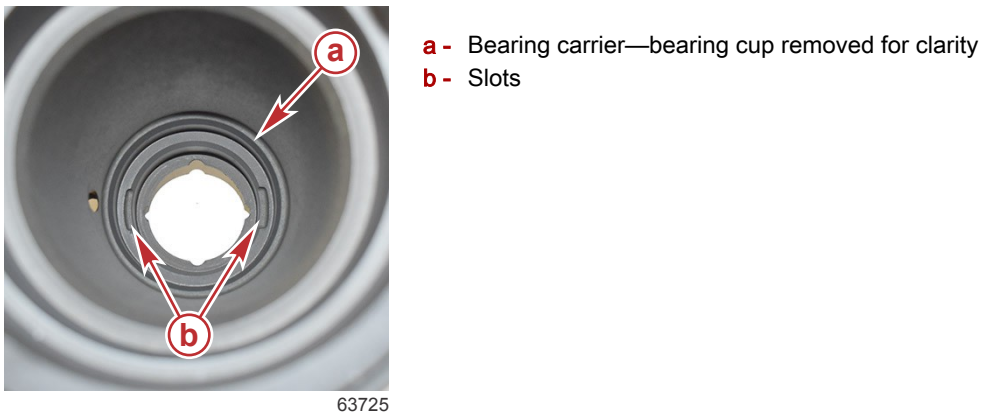

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- c. Remove the tapered bearing cup from the carrier using a bearing puller assembly, pilot washer, and bearing carrier guide plate. Fabricate an M14-1.5 x 25.4 cm (10 in.) threaded rod to use with the puller jaws. Also obtain two M14-1.50 hex nuts, and one M14-1.50 acorn nut. Remove the 17.8 cm (7 in.) rod supplied with the bearing puller assembly and substitute it with the 25.4 cm (10 in.) rod, acorn nut, and two hex nuts, as shown. Remove the bearing cup. Discard the bearing, cup, and seals.

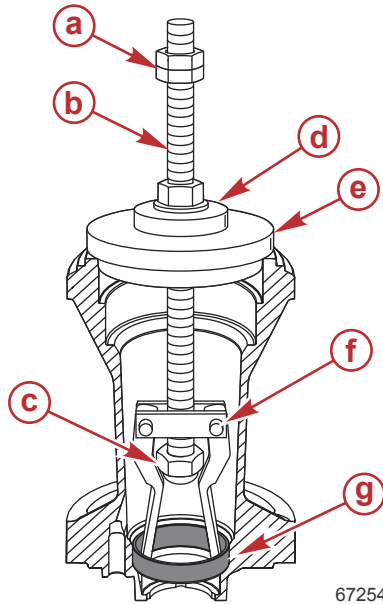


- a - M14-1.50 hex nuts (2), locked against each other and secured to threaded rod
- b - 25.4 cm (10 in.) threaded rod
- c - M14-1.50 acorn nut
- d - Pilot washer
- e - Bearing carrier guide plate
- f - Bearing puller assembly
- g - Tapered bearing cup

67254


Bearing Puller Assembly	91- 83165T
Pilot Washer	91-36571T
Bearing Carrier Guide Plate	8M0142624

Assembly

1. Clean the components with a suitable solvent and dry the parts with compressed air.
2. Lubricate the tapered bearing cup bore with High Performance Gear Lubricant.

Tube Ref No.	Description	Where Used	Part No.
 87	High Performance Gear Lubricant	Tapered bearing cup bore	92-858064K01

3. Assemble the bearing cup onto the driver.
4. Press the bearing cup into the bearing carrier until the cup bottoms out in the bearing carrier.

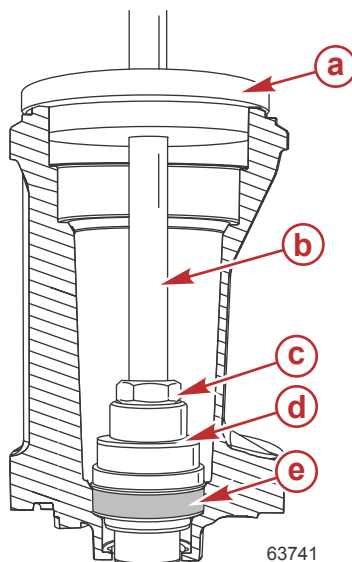


- a - Bearing carrier guide plate
- b - Driver rod
- c - Hex nut
- d - Bearing cup driver/oil seal installer
- e - Tapered bearing cup

63741

Bearing Cup Driver/Oil Seal Installer Tool	91-888414T01
Bearing Carrier Guide Plate	8M0142624
Bearing Removal and Installation Kit	91- 31229A 7


5. Thoroughly clean the bore in which the first seal is to be pressed.
6. Assemble the first seal, with the lips of the seal facing away from the driver shoulder, onto the long end of the oil seal driver.
7. Press on the oil seal with the driver until the driver bottoms out on the bearing cup.

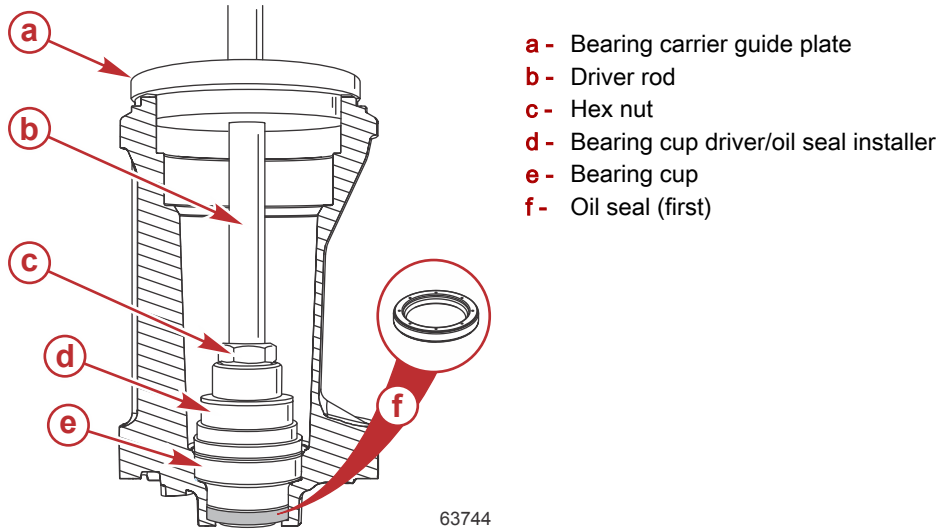

- a - Bearing carrier guide plate
- b - Driver rod
- c - Hex nut
- d - Bearing cup driver/oil seal installer
- e - Bearing cup
- f - Oil seal (first)

Bearing Cup Driver/Oil Seal Installer Tool	91-888414T01
Bearing Carrier Guide Plate	8M0142624
Bearing Removal and Installation Kit	91- 31229A 7

8. Assemble the second seal, with the lips of the seal facing the driver shoulder, onto the short end of the oil seal driver.
9. Press on the oil seal with the driver until the driver bottoms out on the bearing cup.

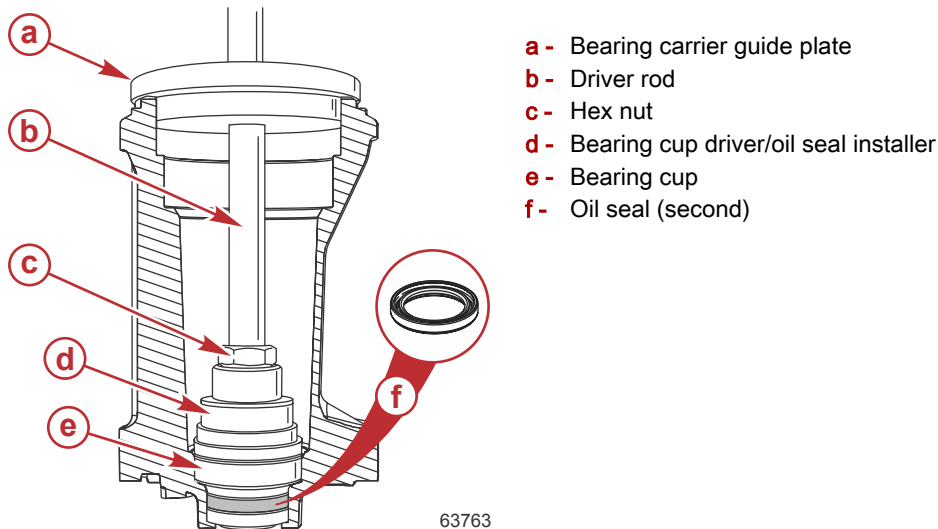


- a - Bearing carrier guide plate
- b - Driver rod
- c - Hex nut
- d - Bearing cup driver/oil seal installer
- e - Bearing cup
- f - Oil seal (second)


Bearing Carrier Guide Plate	8M0142624
Bearing Cup Driver/Oil Seal Installer Tool	91-888414T01
Bearing Removal and Installation Kit	91- 31229A 7

10. Lubricate the seal lips and fill the area between the seals with 2-4-C with PTFE.


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Oil seal lips and between oil seals	92-802859A 1

11. Install the propeller shaft tapered bearing cone into the bearing carrier.

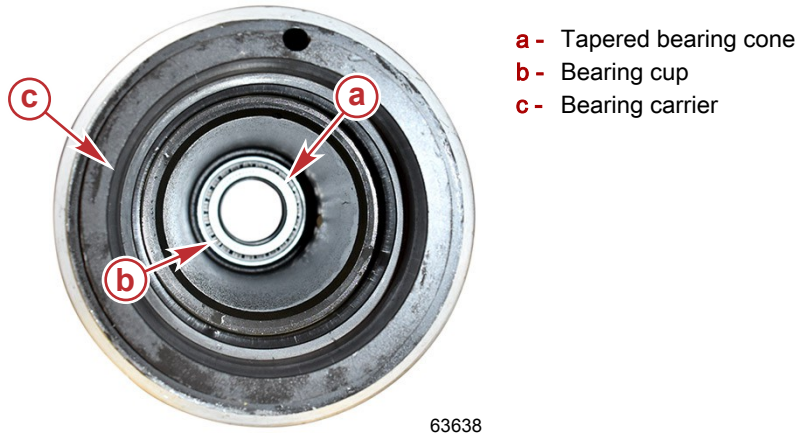


12. Install the spacer into the bearing carrier.

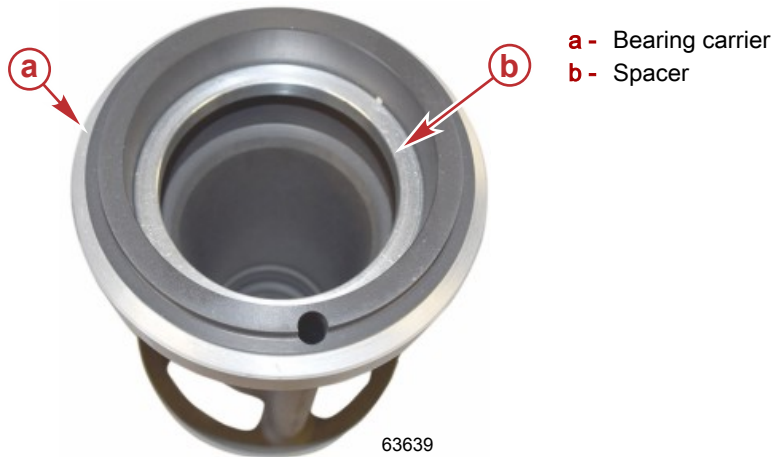

13. Press the new ball bearing into the bearing carrier using a suitable mandrel. Make sure to press on the outer race of the bearing.


NOTE: If the ball bearing is still attached to the rear gear, skip this step.

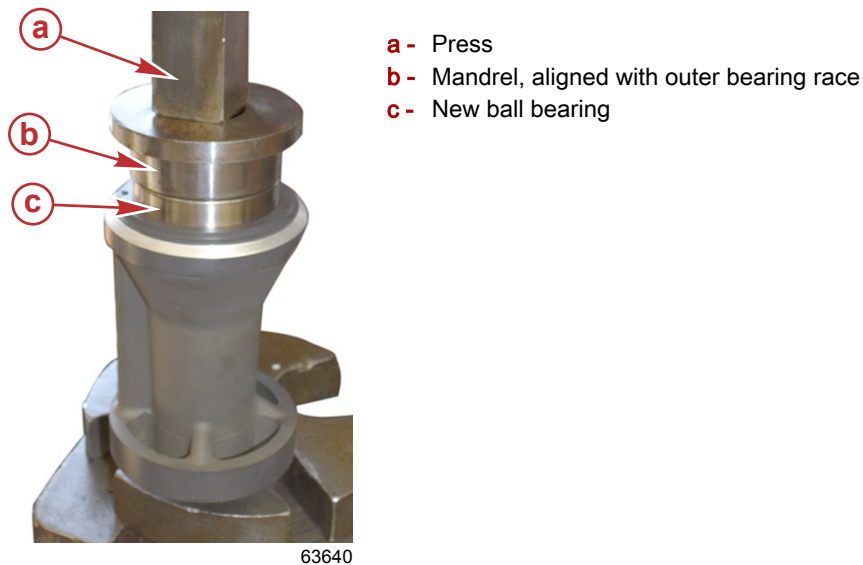

14. Lubricate the O-ring with 2-4-C with PTFE.

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	O-ring	92-802859A 1


15. Install the O-ring and thrust ring onto the bearing carrier.

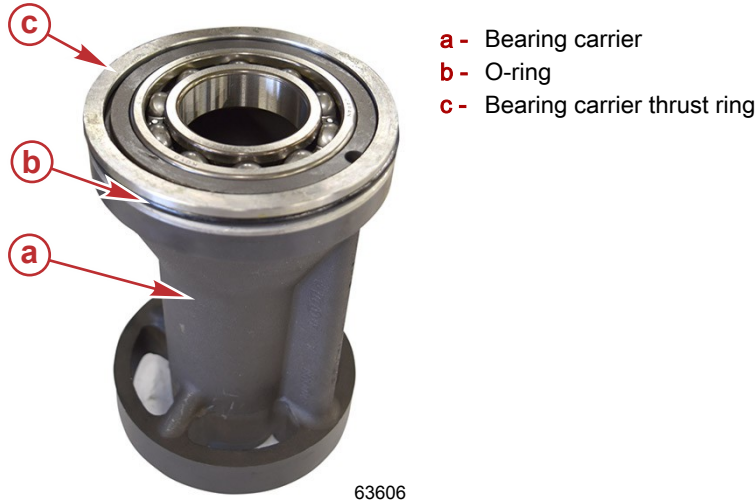

63606

16. Using a suitable mandrel that presses on the clutch teeth, press the rear gear into the new ball bearing in the bearing carrier.

NOTE: If the ball bearing is still attached to the rear gear, press the gear and bearing into the bearing carrier as an assembly.

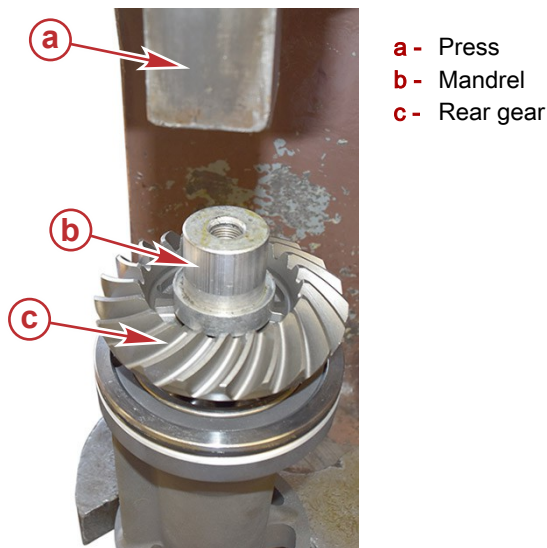

63641

Left-Hand Rotation Bearing Carrier—Inspection, Disassembly, Assembly

Inspection and Disassembly

IMPORTANT: All seals and O-rings should be replaced to assure effective repair.


WARNING

Spin-drying bearings with compressed air can cause serious injury or death. The bearings can explode, even if spun at very slow speeds. Do not allow the bearings to spin when drying with compressed air.

1. Clean the bearing carrier with solvent and dry with compressed air.


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

2. Inspect the bearing carrier for signs of excessive corrosion, especially in the area where the bearing carrier touches the gear housing. If excessive corrosion is evident, replace the carrier.

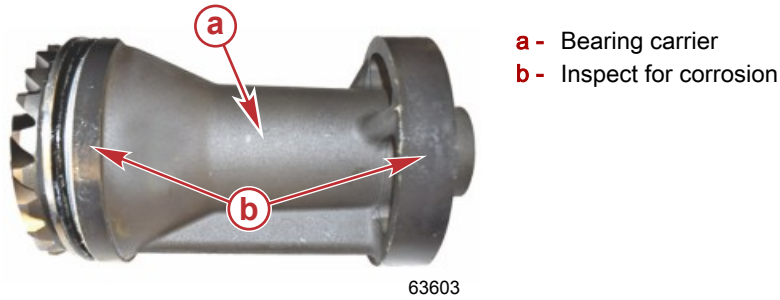

63603

3. Remove the rear gear bearing assembly as follows.
 - a. Install bearing puller collet and expanding rod, and tighten until it locks into the inside diameter of the gear bearing.
 - b. Install a universal puller plate on top of the thrust ring.

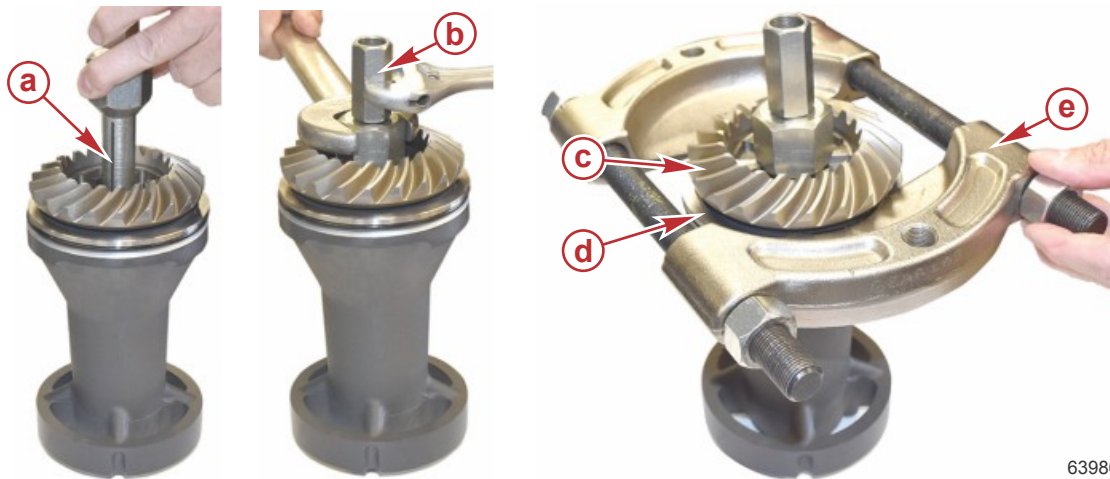



63986

- a - Collet
- b - Expanding rod
- c - Rear gear
- d - Thrust ring
- e - Universal puller plate

Collet	Snap-On CG-45-7
Expanding Rod	Snap-On CG45-4
Universal Puller Plate	91-37241

4. Press out the rear gear bearing assembly as follows.
 - a. Place the bearing carrier and universal puller plate assembly on a press upside down, resting on top of the press spacer mandrel.
 - b. Insert an appropriate rod.
 - c. Press out the gear assembly.

NOTE: It may be necessary to use a torch lamp to apply heat to loosen the rear gear bearing.

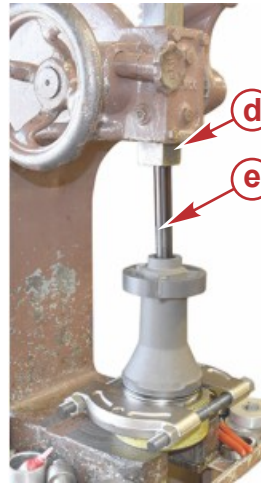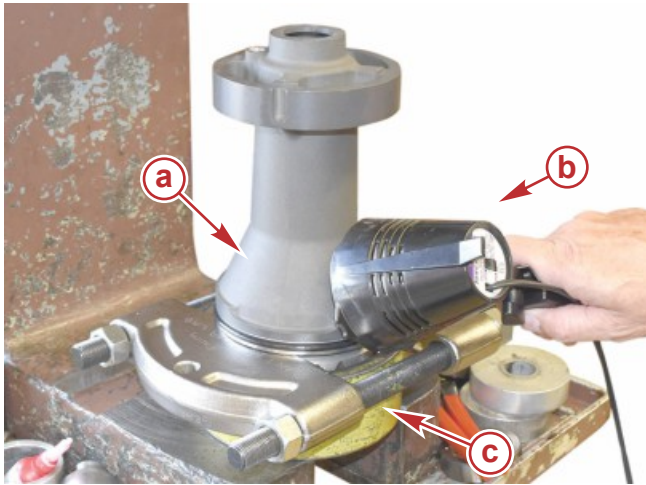


- a - Bearing carrier and vise assembly
- b - Torch lamp
- c - Press spacer mandrel
- d - Press
- e - Rod

63987

Torch Lamp	91- 63209
Press Spacer Mandrel	8M0142615

5. Remove the bearing carrier, gear assembly, bearing, and thrust ring from the press. Remove the O-ring from the bearing carrier.
6. Remove the expanding rod, collet tool, and universal puller plate.
7. Inspect the bearing carrier components as follows.
 - a. Inspect the rear gear roller bearing. Rotate the bearing while checking for rough spots or catches. Push in and pull out on the rear gear to check for bearing side wear. Replace the bearing if any of these conditions exist.
 - b. Inspect the aft propeller shaft tapered bearing cone and cup for pits, scoring, discoloration, or excessive looseness. Replace the bearing if any of these conditions exist.
 - c. Inspect the O-ring and thrust ring for cracks or damage.

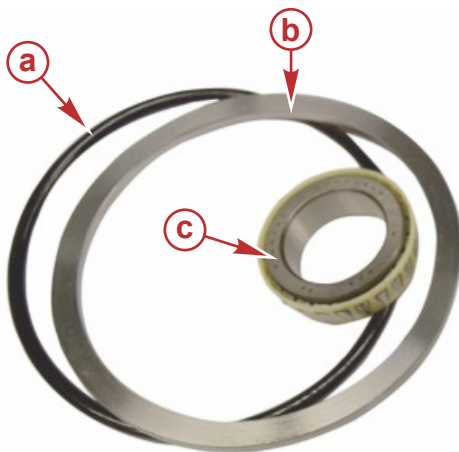


- a - O-ring
- b - Thrust ring
- c - Tapered bearing cone
- d - Gear assembly

63988

8. Inspect the rear gear to pinion gear wear pattern. It should be even and smooth. If not, replace the rear gear, pinion gear, and front gear.
9. Inspect the rear gear for hairline fractures. Replace the rear gear and the pinion gear if any fractures are found. If extensive damage is observed, such as chips, spalling, or broken teeth, replace all gears.


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

10. Check the clutch jaws on the rear gear for damage. Replace the rear gear if damage is found on the clutch jaws.

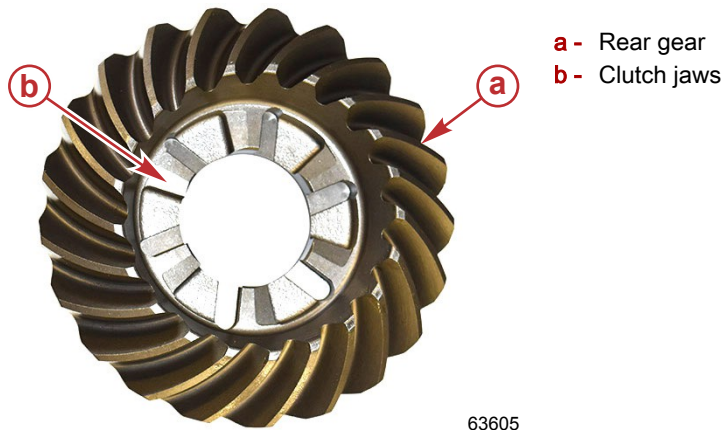

63605


11. Do not proceed with disassembly unless the inspected parts require replacement.
IMPORTANT: All bearings must be replaced if disassembled.
12. To disassemble the rear gear assembly, secure the gear assembly holding fixture in a vise and set the gear assembly onto the holding fixture. Use a 3/32 inch Allen wrench to remove the set screw from the retaining nut.
IMPORTANT: Dispose of the set screw once removed. It cannot be reused.

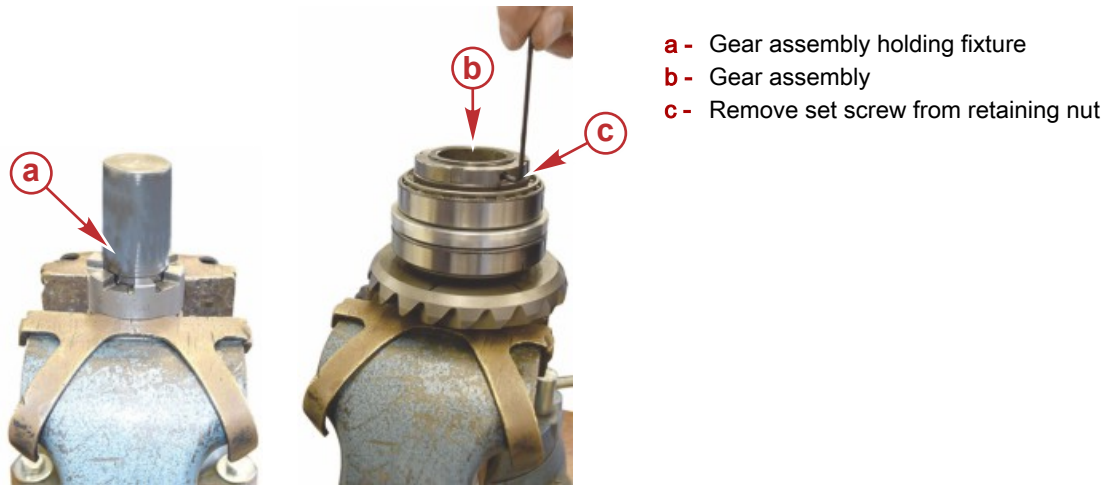

63989

Gear Assembly Holding Fixture	8M0142559
-------------------------------	-----------

13. Remove the retaining nut from the gear assembly as follows.
- Install the retaining nut wrench.
 - Loosen the retaining nut with the wrench.
 - Remove the retaining nut from the gear assembly.

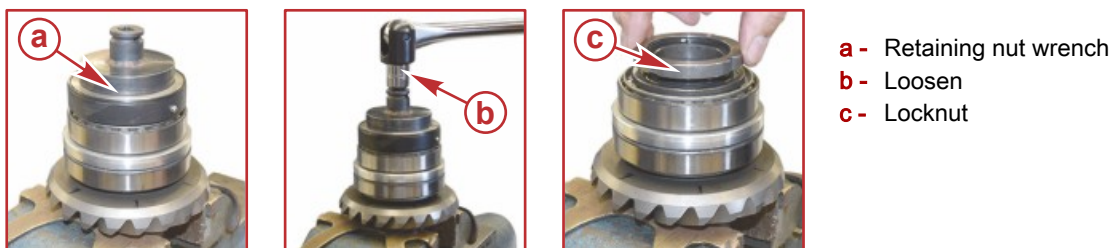


63990

Retaining Nut Wrench	91-8M0070085
----------------------	--------------

14. Remove the tapered roller bearings and spacer from the gear assembly as follows.
- Install a universal puller plate between the gear and the large tapered bearing cup.

- b. Place the gear assembly on the press, resting on top of the press spacer mandrel.
- c. Use a bearing mandrel to press the gear out of the bearings.
- d. The small tapered roller bearing and cup, outer spacer, inner spacer, and large bearing cup are now free to remove.

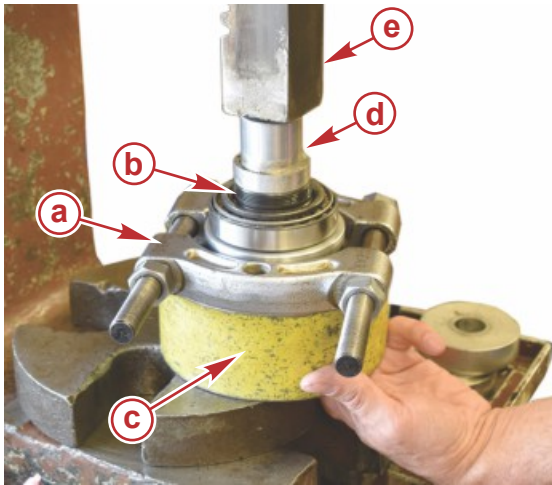


- a - Universal puller plate
- b - Gear assembly
- c - Press spacer mandrel
- d - Bearing mandrel
- e - Press

64262

Universal Puller Plate	91-37241
Press Spacer Mandrel	8M0142615
Bearing Mandrel	8M0142636

15. Remove the large tapered roller bearing cone from the gear as follows.
 - a. Install a universal puller plate between the large tapered roller bearing cone and the gear.
 - b. Place the gear assembly on the press, resting on top of the press spacer mandrel.
 - c. Use a bearing mandrel to press the gear out of the tapered roller bearing cone.

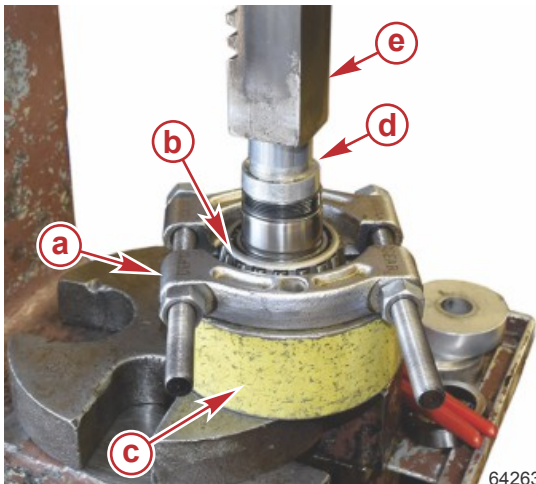


- a - Universal puller plate
- b - Large tapered roller bearing cone
- c - Press spacer mandrel
- d - Bearing mandrel
- e - Press

64263


Universal Puller Plate	91-37241
Bearing Mandrel	8M0142636

16. Inspect the bearing cup and seals inside the bearing carrier.

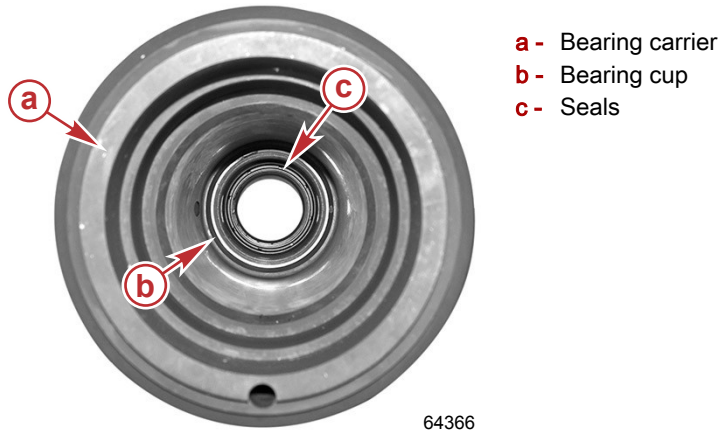


17. If damaged, replace the tapered bearing cup and seals as follows:


- a. **If replacing the seals only:** Remove the oil seals with a suitable punch, being careful not to damage the bore of the bearing carrier. Discard the seals.

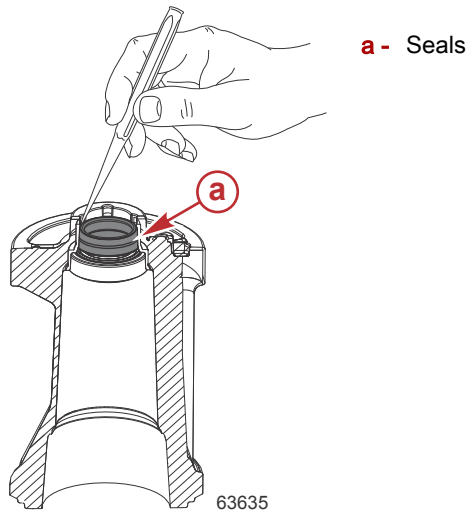

- b. **If replacing the tapered roller bearing cup and seals:** Remove the seals with a punch as noted above. Discard the seals. There are slots cast into the bearing carrier to aid in the removal of the bearing cup with puller jaws.

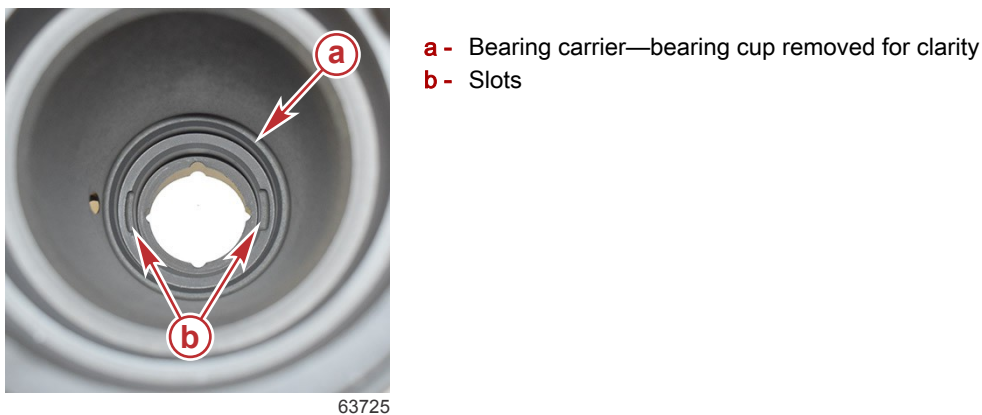

- c. Remove the tapered bearing cup from the carrier using a bearing puller assembly, pilot washer, and bearing carrier guide plate. Fabricate an M14-1.5 x 25.4 cm (10 in.) threaded rod to use with the puller jaws. Also obtain two M14-1.50 hex nuts, and one M14-1.50 acorn nut. Remove the 17.8 cm (7 in.) rod supplied with the bearing puller assembly and substitute it with the 25.4 cm (10 in.) rod, acorn nut, and two hex nuts, as shown. Remove the bearing cup. Discard the bearing, cup, and seals.

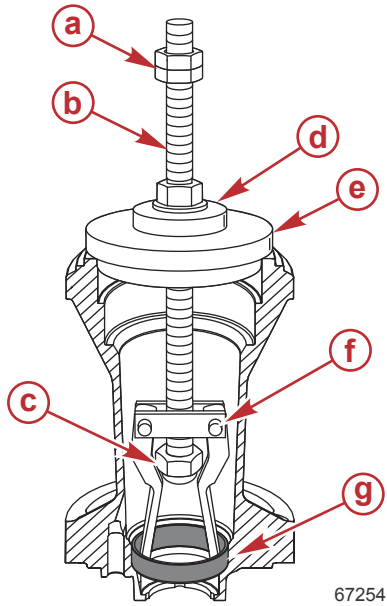

- a - M14-1.50 hex nuts (2), locked against each other and secured to threaded rod
- b - 25.4 cm (10 in.) threaded rod
- c - M14-1.50 acorn nut
- d - Pilot washer
- e - Bearing carrier guide plate
- f - Bearing puller assembly
- g - Tapered bearing cup


Bearing Puller Assembly	91- 83165T
Pilot Washer	91-36571T
Bearing Carrier Guide Plate	8M0142624

Assembly

1. Clean the components with a suitable solvent and dry the parts thoroughly using compressed air.
2. Lubricate the tapered bearing cup bore with High Performance Gear Lubricant.

Tube Ref No.	Description	Where Used	Part No.
87	High Performance Gear Lubricant	Tapered bearing cup bore	92-858064K01

3. Assemble the bearing cup onto the driver.
4. Press the bearing cup into the bearing carrier until the cup bottoms out in the bearing carrier.

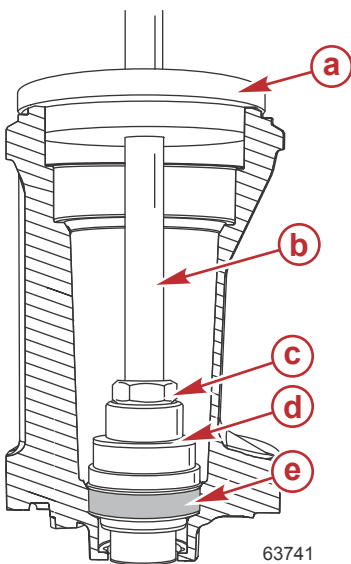


- a - Bearing carrier guide plate
- b - Driver rod
- c - Hex nut
- d - Bearing cup driver/oil seal installer
- e - Tapered bearing cup

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

Bearing Cup Driver/Oil Seal Installer Tool	91-888414T01
Bearing Carrier Guide Plate	8M0142624
Bearing Removal and Installation Kit	91- 31229A 7


5. Thoroughly clean the bore in which the first seal is to be pressed.
6. Assemble the first seal, with the lips of the seal facing away from the driver shoulder, onto the long end of the oil seal driver.
7. Press on the oil seal with the driver until the driver bottoms out on the bearing cup.

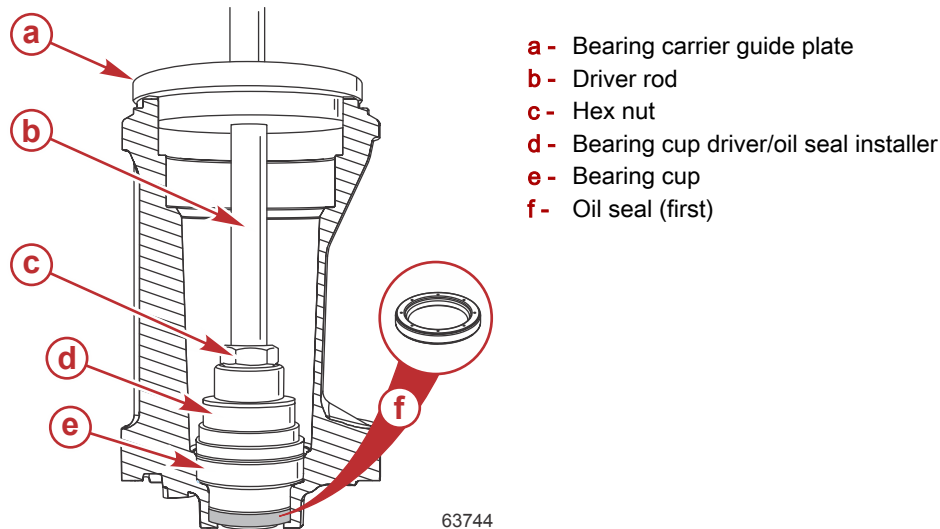

- a - Bearing carrier guide plate
- b - Driver rod
- c - Hex nut
- d - Bearing cup driver/oil seal installer
- e - Bearing cup
- f - Oil seal (first)

Bearing Cup Driver/Oil Seal Installer Tool	91-888414T01
Bearing Carrier Guide Plate	8M0142624
Bearing Removal and Installation Kit	91- 31229A 7


8. Assemble the second seal, with the lips of the seal facing the driver shoulder, onto the short end of the oil seal driver.
9. Press on the oil seal with the driver until the driver bottoms out on the bearing cup.

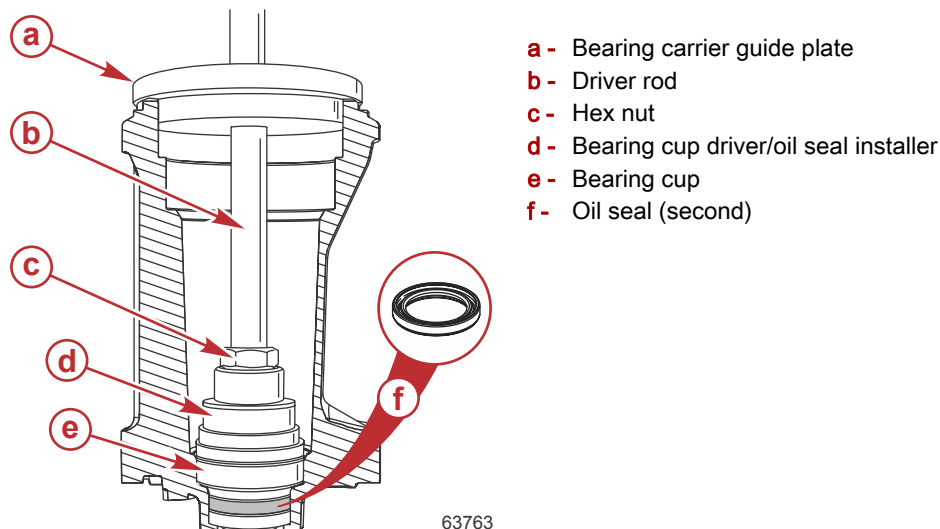


- a - Bearing carrier guide plate
- b - Driver rod
- c - Hex nut
- d - Bearing cup driver/oil seal installer
- e - Bearing cup
- f - Oil seal (second)

Bearing Carrier Guide Plate	8M0142624
Bearing Cup Driver/Oil Seal Installer Tool	91-888414T01
Bearing Removal and Installation Kit	91- 31229A 7

10. Lubricate the seal lips and fill the area between the seals with 2-4-C with PTFE.

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Oil seal lips and between oil seals	92-802859A 1


11. Install the propeller shaft tapered bearing cone into the bearing carrier.

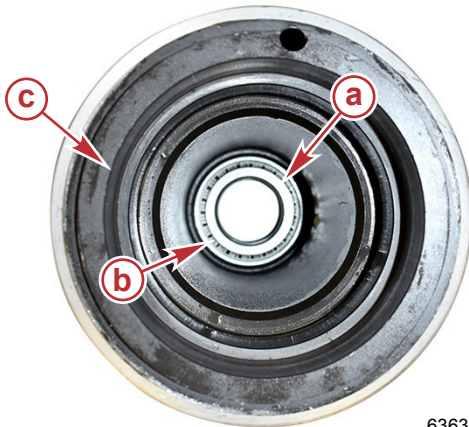

- a - Tapered bearing cone
- b - Bearing cup
- c - Bearing carrier

63638

12. Lubricate the bearing carrier bores and the O-ring with 2-4-C with PTFE.

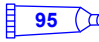Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	O-ring and bearing carrier bores	92-802859A 1

13. Install the O-ring and thrust ring onto the bearing carrier.



- a - Bearing carrier bores
- b - O-ring
- c - Thrust ring


63997

14. If the rear gear bearing assembly is intact, proceed to step 16. If the rear gear bearing assembly was disassembled, reassemble as follows.

- a. Press the large tapered roller bearing cone onto the gear with the rear gear bearing cone mandrel.
- b. Install the large tapered roller bearing cup over the cone.
- c. Install the outer spacer.
- d. Install the small tapered roller bearing cup.
- e. Install the preload driver alignment tool over the rear gear bearings.
- f. Install the internal spacer.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- g. Install the small tapered roller bearing cone and press in using the rear gear bearing cone mandrel.

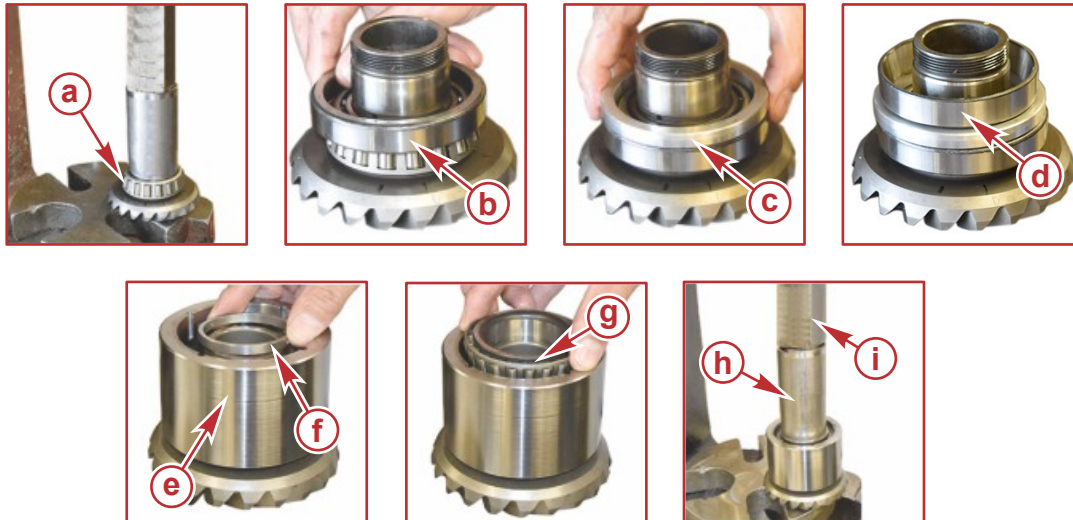

63993

- a - Large tapered roller bearing cone
- b - Large tapered roller bearing cup
- c - Outer spacer
- d - Small tapered roller bearing cup
- e - Preload driver alignment tool
- f - Internal spacer
- g - Small tapered roller bearing cone
- h - Rear gear bearing cone mandrel
- i - Press

Rear Gear Bearing Cone Mandrel	8M0142413
Preload Driver Alignment Tool	8M0142970

15. Install the retaining nut as follows.
- a. Secure the gear assembly holding fixture in a vise and set the gear assembly with the preload driver alignment tool onto the holding fixture.
 - b. Install the retaining nut.
 - c. Install the retaining nut wrench into the deep set of slots on the preload driver alignment tool. Tighten the retaining nut to the specified torque. Remove the retaining nut wrench.

Description	Nm	lb-in.	lb-ft
Retaining nut	135.6	-	100



63996

- a - Gear assembly holding fixture
- b - Retaining nut
- c - Retaining nut wrench
- d - Torque wrench

Gear Assembly Holding Fixture	8M0142559
Retaining Nut Wrench	91-8M0070085

16. Check the rolling torque as follows.

- a. Insert the retaining nut wrench into the shallow set of slots on the preload driver alignment tool and measure the rolling torque.

Description	Nm	lb-in.	lb-ft
Rolling torque	0-4.07	0-36	-

- b. If the rolling torque is within specification, remove the retaining nut wrench and preload driver alignment tool.
NOTE: It may be necessary to gently tap the preload driver alignment tool with a soft jaw hammer to release it from the gear assembly.
- c. Install a new set screw to secure the retaining nut. Tighten the set screw to the specified torque using a 3/32 inch Allen wrench.

Description	Nm	lb-in.	lb-ft
Set screw	1.7	15	-

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- d. If the rolling torque is not within specification, verify that the bearing parts were assembled correctly.




64387

- a - Retaining nut wrench
- b - Torque wrench
- c - Remove preload driver alignment tool
- d - New set screw

17. Prepare the bearing carrier and rear gear bearing assembly for installation as follows.

- a. Place the threaded shaft tool on a press, then situate the press fixture base tool over the threaded shaft tool.
- b. Insert the bearing carrier alignment pin.
- c. Locate the alignment pin slot on the bearing carrier and place the bearing carrier over the threaded shaft tool so it is secured in the press fixture base tool.
- d. Set the rear gear bearing assembly onto the bearing carrier.

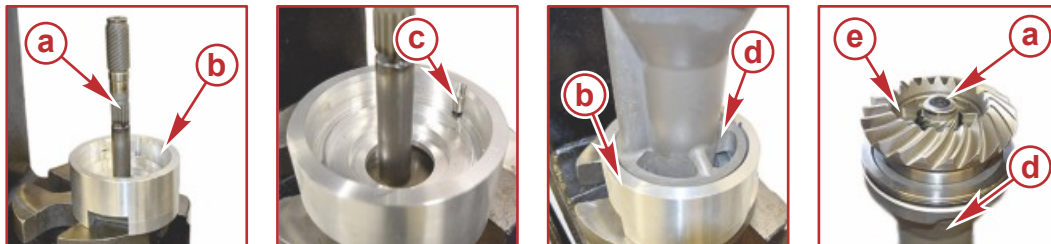

63998

- a - Threaded shaft tool
- b - Press fixture base tool
- c - Alignment pin
- d - Bearing carrier
- e - Rear gear bearing assembly


Threaded Shaft Tool	8M0142983
Press Fixture Base Tool	8M0142976

18. Press the rear gear bearing assembly into the bearing carrier as follows.

NOTE: It may be necessary to use a torch lamp to apply heat to the bearing carrier to aide in installation of the rear gear bearing assembly.

- a. Set the threaded clutch assembly tool on top of the rear gear bearing assembly.
- b. Set the bearing tool on top of the threaded clutch assembly tool, then set the press fixture retainer tool on top of the bearing tool.

c. Press the rear gear bearing assembly into the bearing carrier until the gear stops rotating.

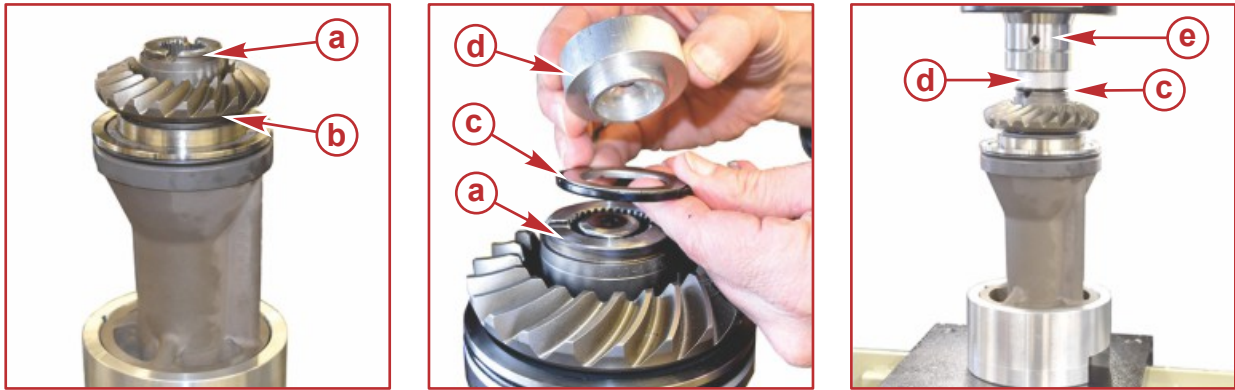

64000

- a - Threaded clutch assembly tool
- b - Rear gear bearing assembly
- c - Bearing tool
- d - Press fixture retainer tool
- e - Press


Torch Lamp	91- 63209
Threaded Clutch Assembly Tool	8M0145393
Bearing Tool	31-861792
Press Fixture Retainer Tool	8M0142974

19. Check the bearing carrier rolling torque as follows.

- a. Secure the assembled bearing carrier in a vise.
- b. Insert the gear assembly driver tool.
- c. Use a torque wrench to check rolling torque. Ensure that it is within the specified torque.

Description	Nm	lb-in.	lb-ft
Rolling torque	0.90–6.21	8–55	–

- If the rolling torque is within specification, bearing carrier assembly is complete.
- If the rolling torque is not within specification, the bearing carrier must be disassembled and the cause corrected.

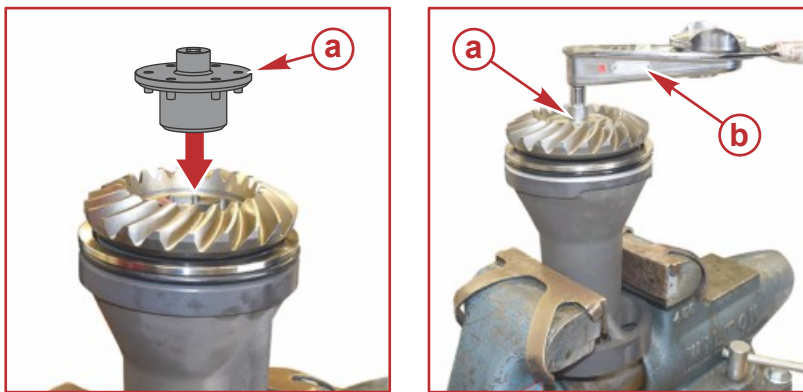

64001


- a - Gear assembly driver tool
- b - Torque wrench

Gear Assembly Driver Tool	8M0142414
---------------------------	-----------

Driveshaft Removal, Inspection, Disassembly, and Assembly

Driveshaft Removal

1. Remove the driveshaft bearing retainer with the driveshaft bearing retainer wrench.

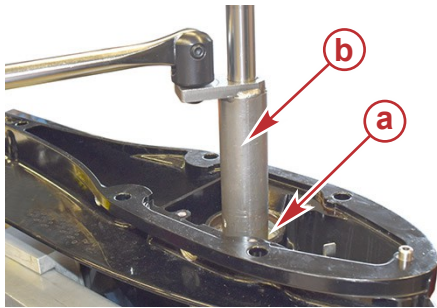


- a - Retainer
- b - Driveshaft bearing retainer wrench

63643

Driveshaft Bearing Retainer Wrench	91-43506T
------------------------------------	-----------

2. Remove the shims and spacer from the propeller shaft, if not already removed.

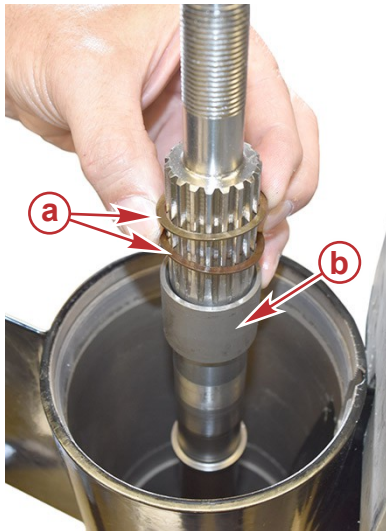

- a - Shims
- b - Spacer

63655

3. Ensure the bearing carrier shims are removed.




- a - Gear housing
- b - Bearing carrier shims

63602

4. Insert the pinion nut holder into the gear housing with the slot facing the pinion gear. It may be necessary to lift and rotate the driveshaft to align the pinion gear nut into the pinion nut holder.
5. Install the propeller shaft holder over the propeller shaft and into the gear housing to maintain the pinion nut holder alignment.
6. Install the driveshaft holding tool onto the driveshaft.


7. Use the driveshaft holding tool to loosen the pinion nut.

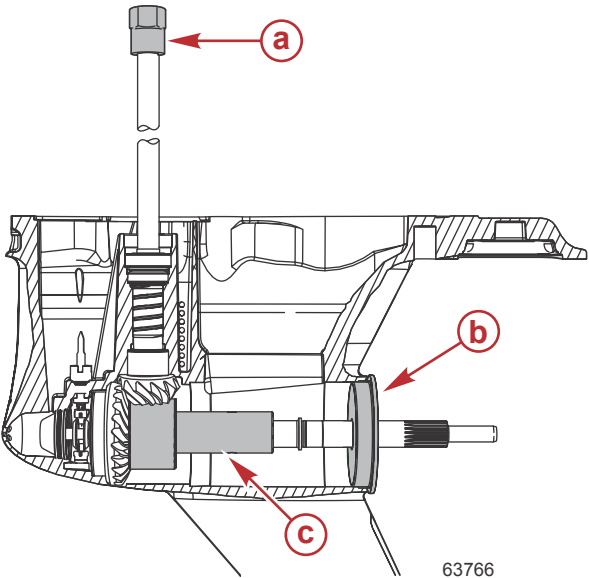

- a - Driveshaft holding tool
- b - Propeller shaft holder
- c - Pinion nut holder

Driveshaft Holding Tool	91-889958T
Pinion Nut Holder	91-8M0036288
Propeller Shaft Holder	91-8M0035594

8. If the driveshaft is broken, place the propeller shaft adapter onto the propeller shaft splines. Use the shift shaft handle tool to hold the shift shaft against the rear gear, and loosen the pinion nut by rotating the propeller shaft counterclockwise.

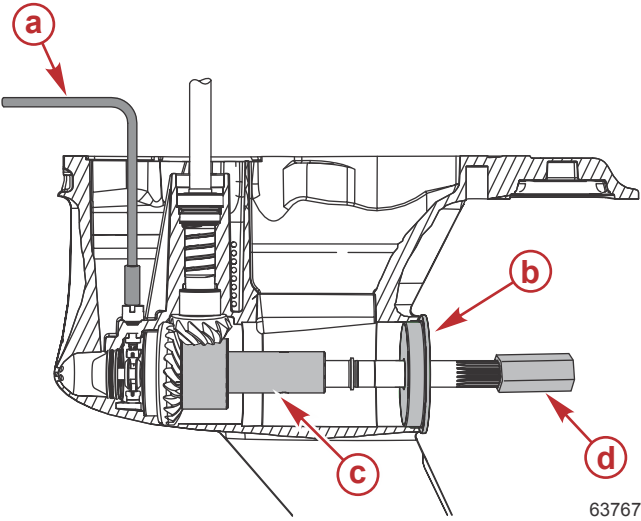


- a - Shift shaft handle tool
- b - Propeller shaft holder
- c - Pinion nut holder
- d - Propeller shaft adapter

Shift Shaft Handle Tool	8M0142973
Propeller Shaft Holder	91-8M0035594
Pinion Nut Holder	91-8M0036288
Propeller Shaft Adapter	8M0147118

9. Remove all of the tools.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)


10. Remove the driveshaft by pulling the driveshaft straight out of the gear housing.

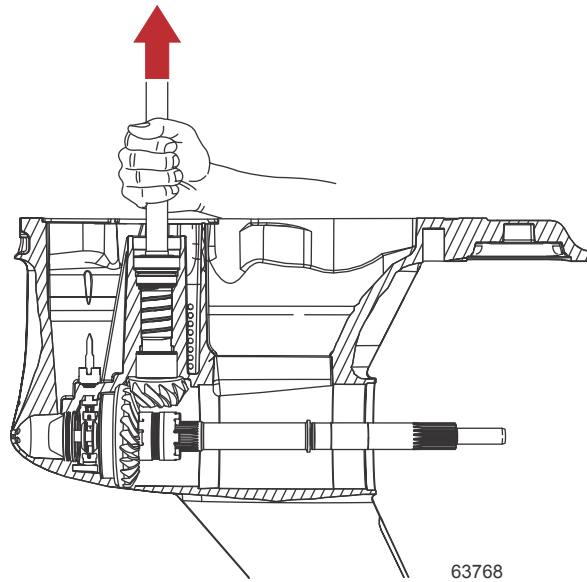

11. If the pinion gear is seized onto the driveshaft, clamp the driveshaft in a soft jaw vise. Place a block of wood on the gear housing mating surface. Use a mallet and carefully tap the gear housing away from the driveshaft.

IMPORTANT: Striking a gear housing directly with a mallet can distort the gear housing causing gear housing failure.


IMPORTANT: The pinion bearing rollers can fall out of the pinion bearing race after the driveshaft is removed. Do not lose the 21 rollers.

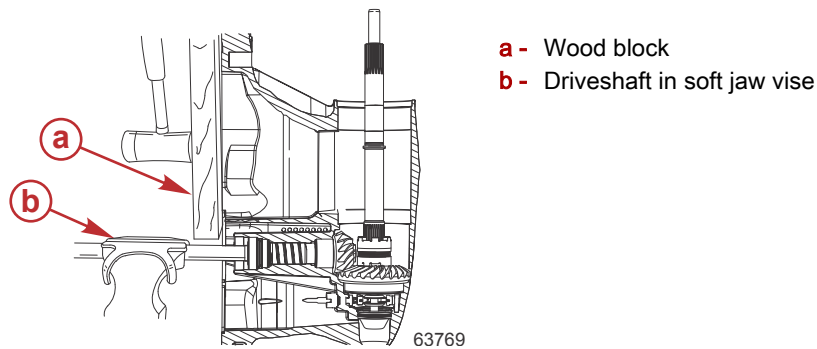

12. Move the propeller shaft downward to retrieve the pinion gear and nut from inside the gear housing.

NOTE: The washer will likely come out with the pinion gear. Do not lose the washer.

13. Remove the driveshaft bearing cup and shims with a slide hammer. Retain the shims for installation.

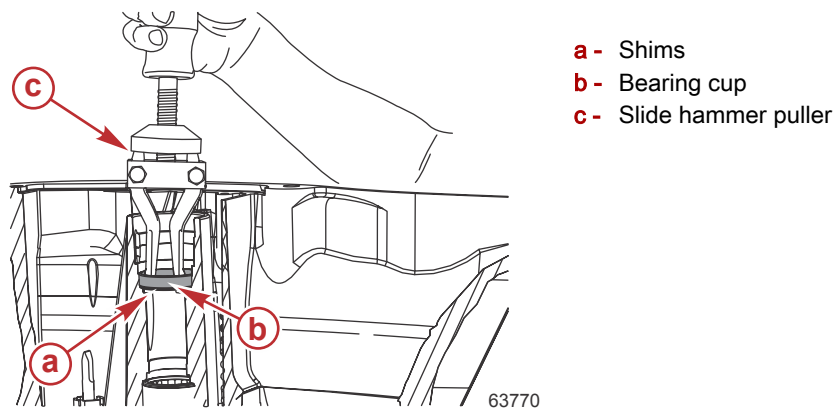

Slide Hammer

91-34569A 1


Driveshaft Inspection

1. Clean all parts with a suitable solvent and dry with compressed air. Do not spin the bearings.

⚠ WARNING

Spin-drying bearings with compressed air can cause serious injury or death. The bearings can explode, even if spun at very slow speeds. Do not allow the bearings to spin when drying with compressed air.

2. Inspect the driveshaft bearing cups for pits, grooves, uneven wear, discoloration, or embedded particles. Replace the bearings and bearing cups if any of these conditions are found.
3. Inspect the pinion bearing surface on the driveshaft for pits, grooves, uneven wear, discoloration, or embedded particles. Replace the pinion bearing and the driveshaft if any of these conditions are found.
4. Inspect the splines at both ends of the driveshaft for a worn or twisted condition. Replace the driveshaft if any of these conditions are found.
5. Inspect the water pump base oil seals contact area of the driveshaft for grooves. Replace the driveshaft if grooves are found.

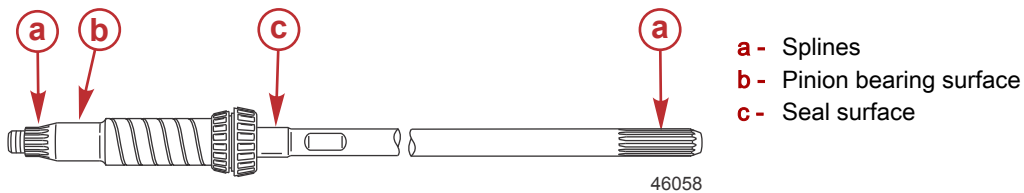


6. Inspect the pinion gear for pits, chipped or broken teeth, fractures, and excessive or uneven wear. Replace the pinion gear and the front gear as a set if any of these conditions are found.

Driveshaft Disassembly

NOTE: Do not remove the tapered roller bearings from the driveshaft unless replacement is required. The bearings cannot be reused after removal.

NOTE: If one of the driveshaft tapered roller bearings is damaged, both tapered bearings must be replaced as a set.

1. Use the lower bearing cup removed from the gear housing and place the cup on top of a vise, leaving the vise jaws open to allow the driveshaft to slide through.
2. Hold onto the driveshaft and tap on the top of the shaft with a dead blow hammer. Do not drop the driveshaft.

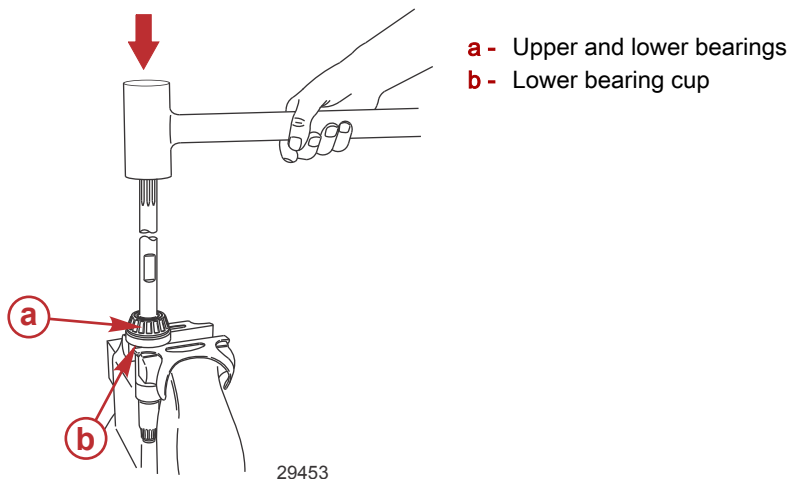


Driveshaft Assembly

1. Apply High Performance Gear Lubricant on the inside diameter of the driveshaft tapered bearings.
2. Install the lower tapered roller bearing to the driveshaft, with the small outside diameter of the bearing facing towards the pinion gear end of the driveshaft.
3. Thread a used pinion nut onto the end of the driveshaft. Leave approximately 2 mm (1/16 in.) of nut threads exposed. The driveshaft threads must not extend beyond the nut or thread damage will result when pressing the bearing on.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

4. Press the lower bearing onto the driveshaft with the driveshaft bearing installation tool.

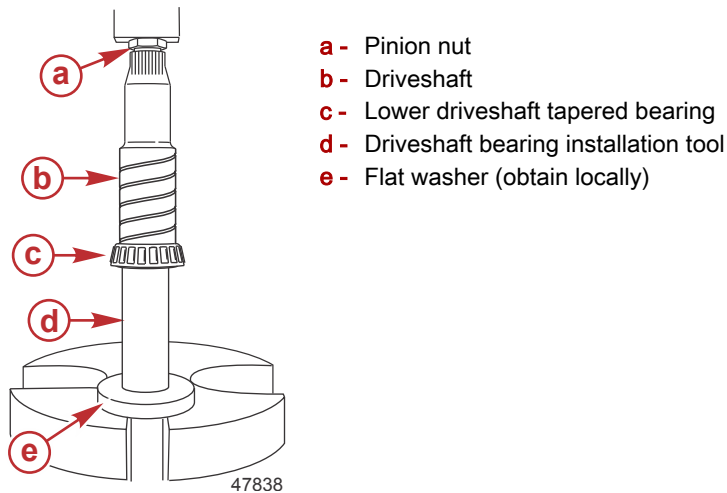


- a - Pinion nut
- b - Driveshaft
- c - Lower driveshaft tapered bearing
- d - Driveshaft bearing installation tool
- e - Flat washer (obtain locally)

Driveshaft Bearing Installation Tool	91-8M0052590
--------------------------------------	--------------

Tube Ref No.	Description	Where Used	Part No.
87	High Performance Gear Lubricant	Inside diameter of the driveshaft tapered bearings	92-858064K01

5. Install the upper bearing onto the driveshaft, with the large outside diameter of the bearing facing the pinion gear end of the driveshaft.
6. Press the upper bearing onto the driveshaft with the driveshaft bearing installation tool.

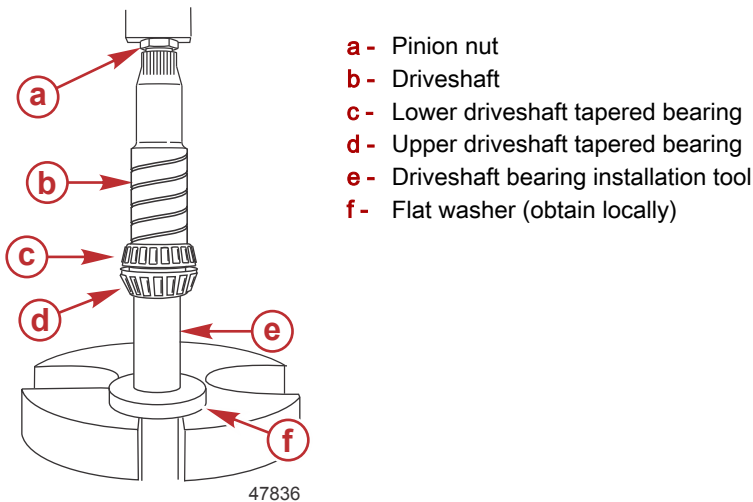

- a - Pinion nut
- b - Driveshaft
- c - Lower driveshaft tapered bearing
- d - Upper driveshaft tapered bearing
- e - Driveshaft bearing installation tool
- f - Flat washer (obtain locally)


Driveshaft Bearing Installation Tool	91-8M0052590
--------------------------------------	--------------

Propeller Shaft Assembly and Front Gear Bearing Cup

Removal

NOTE: The front gear and propeller shaft assembly can only be removed from the gear housing after the driveshaft and pinion gear have been removed.

1. On right-hand rotation gear housings, tilt the propeller shaft to the starboard side of the gear housing and remove the shaft. On left-hand rotation gear housings, tilt the propeller shaft to the port side of the gear housing and remove the shaft.

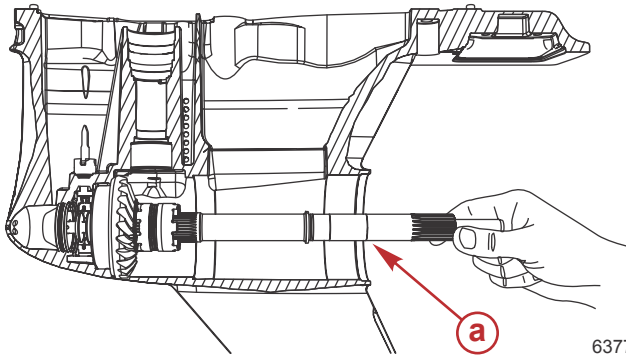


a - Propeller shaft

63772


2. Remove the front gear bearing cup and shims. Measure and make note of the shim thickness. If the shims are not damaged, they may be reused.

NOTE: Two notches are provided in the gear housing, just forward of the front gear bearing cup, to position the puller jaws for easier removal of the bearing cup and shims.

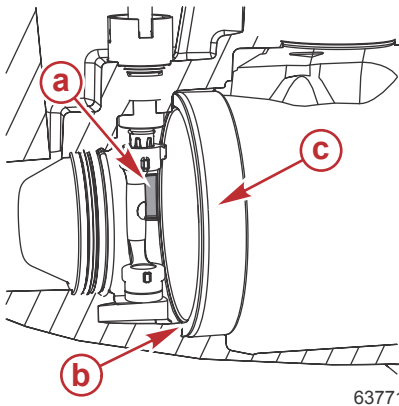

a - Notches
b - Shims
c - Front gear bearing cup

63771

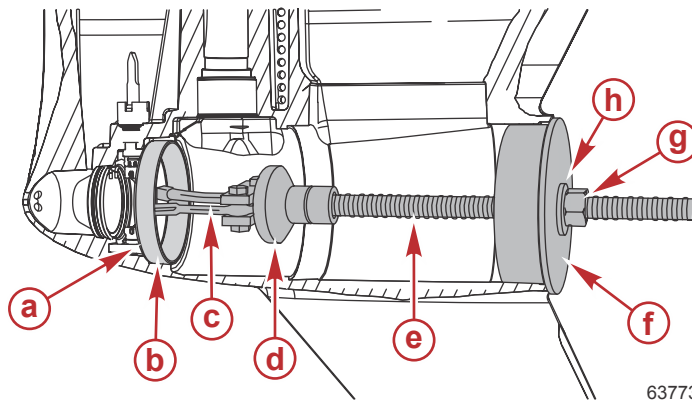

a - Shims
b - Bearing cup
c - Jaws (from slide hammer puller kit)
d - Puller head (from slide hammer puller kit)
e - Puller shaft
f - Propeller shaft holder
g - Nut
h - Washer

63773


Slide Hammer	91-34569A 1
Bearing Removal and Installation Kit	91- 31229A 7
Propeller Shaft Holder	91-8M0035594

Component Disassembly


NOTE: When performing the next step, all of the parts are free to come apart. Work closely over a workbench to avoid dropping or damaging the parts and to avoid personal injury.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

1. Ensure the propeller shaft thrust spacer and shims are removed.

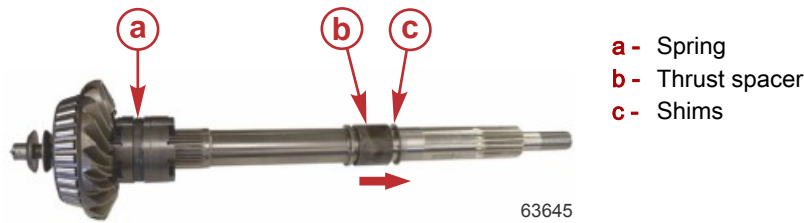


2. Remove the spring around the clutch, being careful not to overstretch it during removal. If the spring does not coil back to its normal position after it has been removed, it must be replaced.
3. Remove the cross pin that goes through the clutch.
4. Remove the remainder of the components.

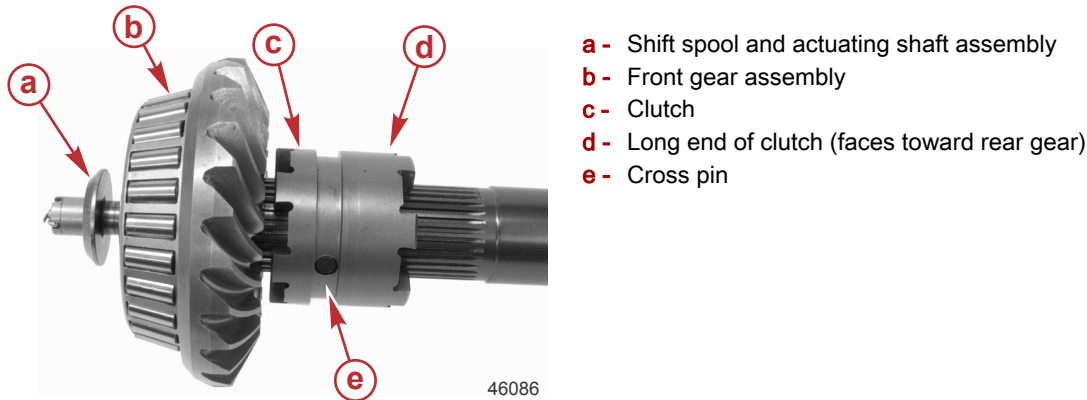

Inspection


1. Clean all the parts with a suitable solvent and dry the parts thoroughly with compressed air. Be careful not to spin the bearings.
2. Inspect the sliding clutch jaws for damage. Replace the clutch if the jaws are chipped or rounded off.
3. The propeller shaft uses two tapered roller bearing and cup assemblies for propeller shaft support.
 - a. One tapered bearing is just forward of the bearing carrier seals. Refer to the **Bearing Carrier Disassembly** section for information on accessing this bearing for inspection.
 - b. The other tapered bearing is located inside of the front gear assembly. Remove the front gear assembly from the propeller shaft. Remove the snap ring retainer and flat washer from the front gear assembly to remove the tapered bearing for inspection.

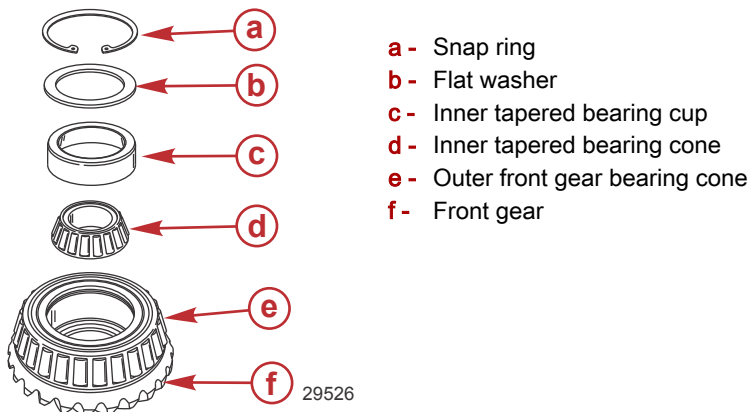

NOTE: The outer front gear bearing should not be removed from the front gear unless replacement is necessary. The bearing is not reusable if it is removed.

4. Inspect the propeller shaft splines at both ends for a broken, worn, or twisted condition. Replace the propeller shaft if any of these conditions exist.
5. Inspect the surface of the propeller shaft where the bearing carrier seal lips contact the shaft. If the oil seals have made grooves, replace the propeller shaft and oil seals.

6. Inspect the propeller shaft for a bent condition using V-blocks and a dial indicator.
 - a. Position the propeller shaft bearing surfaces on the V-blocks.
 - b. Adjust the height of the V-blocks to level the propeller shaft.
 - c. Position the dial indicator tip forward of the propeller shaft threads.
7. Rotate the propeller shaft and observe the dial indicator movement. If the indicator in the dial moves more than 0.23 mm (0.009 in.), replace the propeller shaft.

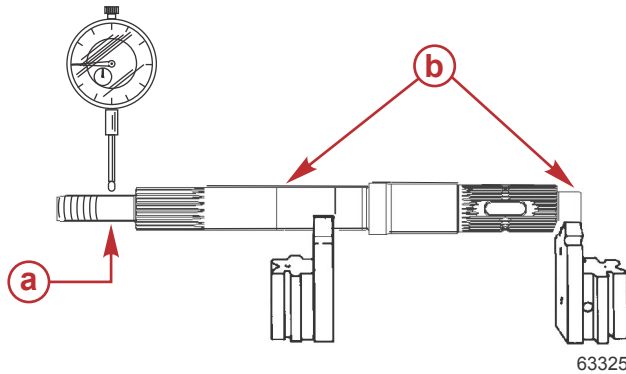


a - Check movement with dial indicator here
 b - Seal surface area

Propeller Shaft	
Runout	0.23 mm (0.009 in.)
Dial Indicator	91- 58222A 1

Front Gear Assembly

Component Inspection

1. Clean the front gear assembly and the front gear bearing cup with a suitable solvent and dry with compressed air. Be careful not to spin the bearings.
2. Inspect the gear for pits, chipped or broken teeth, hairline fractures, and excessive or uneven wear. Replace the front gear and the pinion gear as a set if any defects are found.
3. Inspect the clutch jaws of the gear for damage. The surfaces must not be chipped or rounded off. Replace both the front gear and pinion gear as a set if any of these conditions exist.

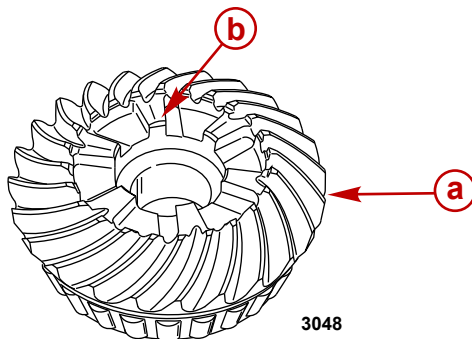

a - Front gear teeth
 b - Clutch jaws

4. Inspect the propeller shaft tapered roller bearing on the inside of the front gear and its respective bearing cup. If either the bearing or the bearing cup surface is pitted, grooved, scored, worn unevenly, discolored from overheating, or has embedded particles, remove and replace the tapered roller bearing assembly.
5. Inspect the tapered roller bearing pressed onto the front gear and the bearing surface on the front gear bearing cup. If either the roller bearing or the bearing surface of the front gear bearing cup is pitted, grooved, scored, worn unevenly, discolored from overheating, or has embedded particles, replace the front gear bearing cup and remove and replace the tapered roller bearing.

Disassembly


IMPORTANT: Do not remove the pressed on tapered roller bearing from the front gear unless replacement of the bearing is required. The bearing cannot be reused after it has been removed.

1. If inspection determines that replacement of the front gear tapered bearing is required, separate the gear from the bearing as follows:

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- a. Install the universal puller plate between the front gear and the tapered bearing.
- b. Place the assembly on a press and press the gear out of the bearing with a suitable mandrel.

NOTE: The tapered bearing cup and cone must be replaced as a set.

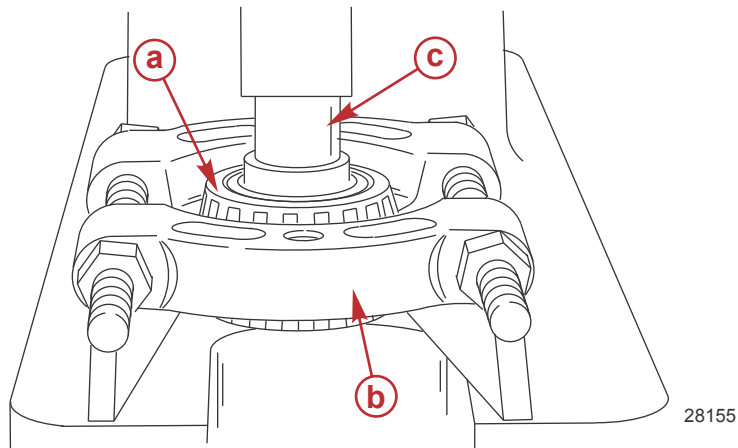


- a - Front gear bearing
- b - Universal puller plate
- c - Mandrel

Universal Puller Plate	91-37241
------------------------	----------

2. If inspection determines that replacement of the propeller shaft tapered roller bearing is required, remove the bearing as follows:

IMPORTANT: Use suitable eye protection when removing or installing the snap ring.

- a. Use snap ring pliers to remove the snap ring. Remove the tapered roller bearing assembly out of the inside of the front gear.

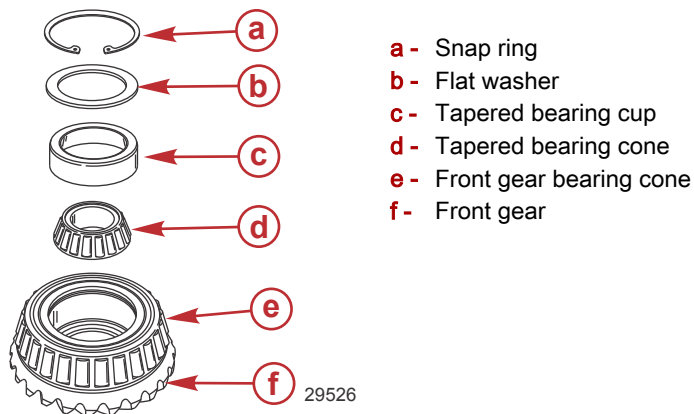


- a - Snap ring
- b - Flat washer
- c - Tapered bearing cup
- d - Tapered bearing cone
- e - Front gear bearing cone
- f - Front gear

Assembly

1. Use a suitable mandrel to press the tapered roller bearing onto the front gear. Press on the inner bearing race until the bearing contacts the gear.

IMPORTANT: Use a block of wood under the gear as shown to prevent damage to the gear while installing the bearing.

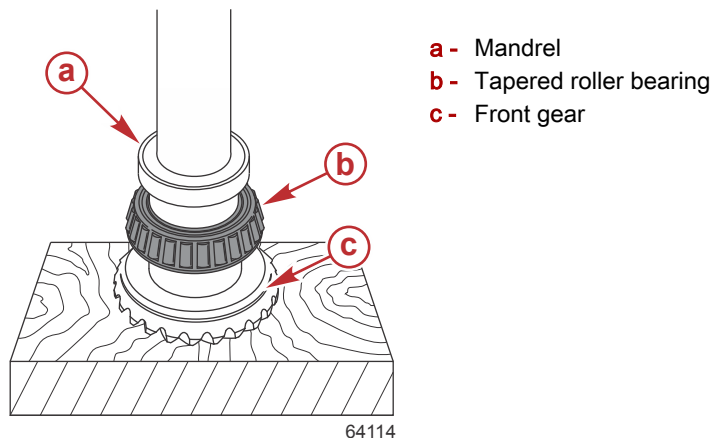


- a - Mandrel
- b - Tapered roller bearing
- c - Front gear

- Apply High Performance Gear Lubricant to the I.D. of the front gear. Install a new tapered roller bearing cone, race, and flat washer into the front gear until the bearing seats.

IMPORTANT: Use suitable eye protection when removing or installing the snap ring.

- Install the snap ring into the groove of the front gear to secure the tapered roller bearing assembly.

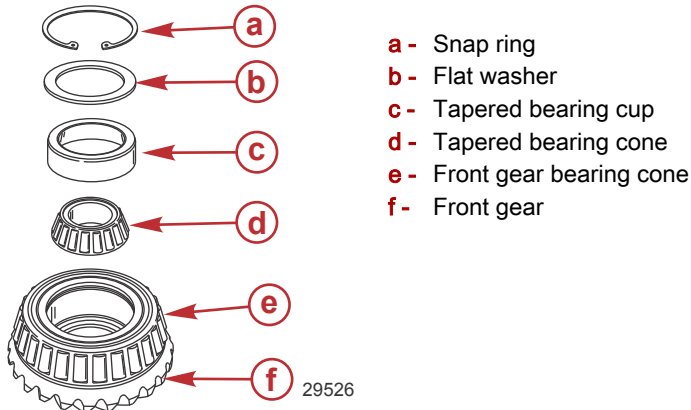


Tube Ref No.	Description	Where Used	Part No.
87	High Performance Gear Lubricant	Inside diameter of front gear	92-858064K01


Shift Spool Assembly

Inspection

- Clean the assembly with solvent and dry all parts using compressed air.
- Inspect the shift spool assembly for damage. Small nicks and burrs may be smoothed. If any parts are damaged or worn excessively, replace the complete shift spool assembly.
- Inspect the shift spool for wear in the area where the shift crank comes into contact.

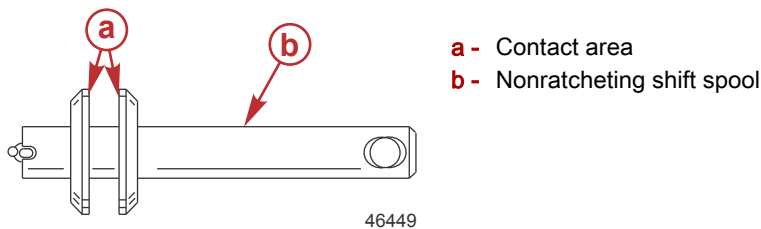

- Verify the spool spins freely.
- Verify the spool has end play. The end play may be achieved by turning the castle nut clockwise down until it is snug and then backing off the nut counterclockwise to the first cotter pin slot.

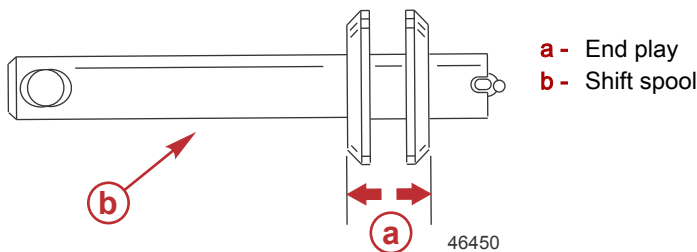

Shift Spool	
End play	0.05–0.25 mm (0.002–0.010 in.)

Disassembly

NOTE: If the spool spins freely and has the proper clearance, it will not be necessary to disassemble and reassemble the spool. If the spool does not function properly, proceed with the following disassembly procedures.


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

NOTE: Disassembly of the shift spool is for cleaning and inspection of the internal parts due to an improperly functioning shift spool assembly or debris in the gear housing and/or shift spool assembly. Individual components for the shift spool are not available as replacement parts. If the shift spool does not function properly and the following cleaning and adjustment procedures do not correct the problem, replace the shift spool assembly.

1. Remove and discard the cotter pin.
2. Remove the castle nut and spool.

Reassembly

1. Place the shift spool onto the shift spool shaft.
2. Screw the castle nut down until it touches the spool and a slight resistance is felt.
3. Loosen the castle nut until the cotter pin slot of the nut is aligned with the hole in the shaft. If the castle nut is threaded down and the cotter pin slot is already aligned at the hole in the shift spool shaft, back the castle nut off until the next available slot in the nut is aligned with the hole in the shaft.
4. Insert a new cotter pin and bend the ends of the cotter pin in opposite directions.
5. Verify the spool has end play. If it does not, adjust the castle nut again.

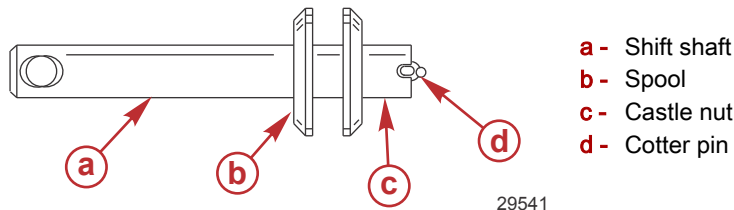

29541


Shift Spool	
End play	0.05–0.25 mm (0.002–0.010 in.)

6. If this adjustment did not produce the desired results, it will be necessary to disassemble, clean, and reassemble the shift spool assembly. If the spool assembly has already been disassembled and cleaned, replace the shift spool assembly.

Shift Shaft Removal and Assembly

Removal


1. Remove the shift shaft assembly from the gear housing using the shift shaft tool and 1 in. socket.

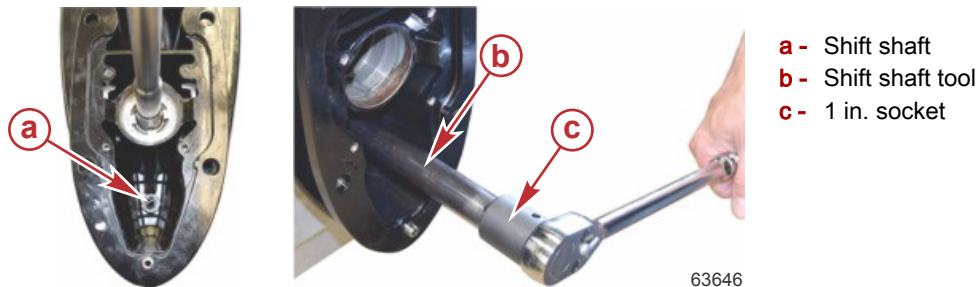

63646

Shift Shaft Tool	8M0142969
------------------	-----------

2. Remove the shift crank from the inside of the gear housing. Clean it with a suitable solvent and dry it thoroughly with compressed air. Inspect for wear in the areas that contact the shift spool and inspect the splines and the pivot pin for damage or wear.

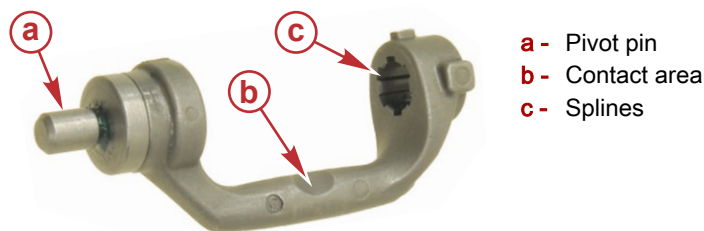

57835


Disassembly and Inspection

1. Secure the shift shaft assembly in a vise as shown.

⚠ CAUTION


Wear eye protection when performing the following procedure. Failure to do so may cause personal injury.

- a. Remove the snap ring from the end of the shift shaft.
- b. Remove the bushing from the shift shaft.

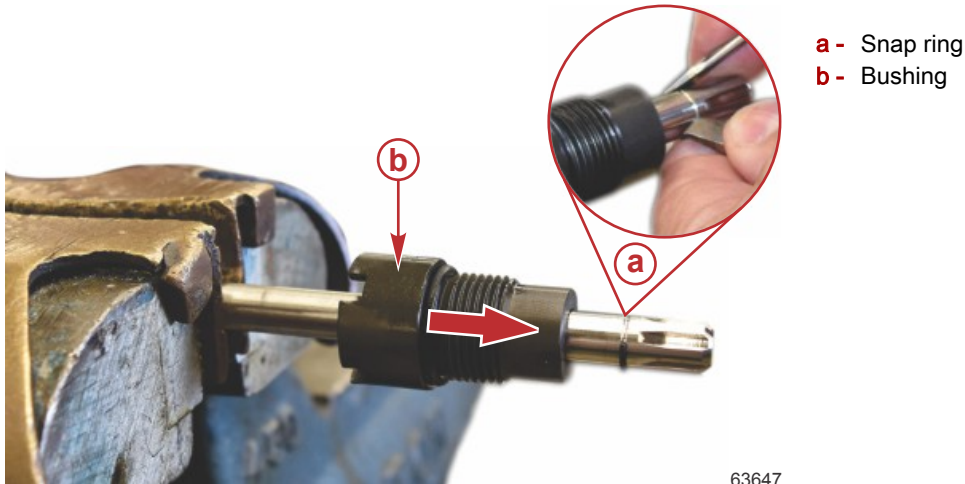

63647

2. Remove the rubber grommet, snap ring, seal, and O-ring from the shift shaft bushing.

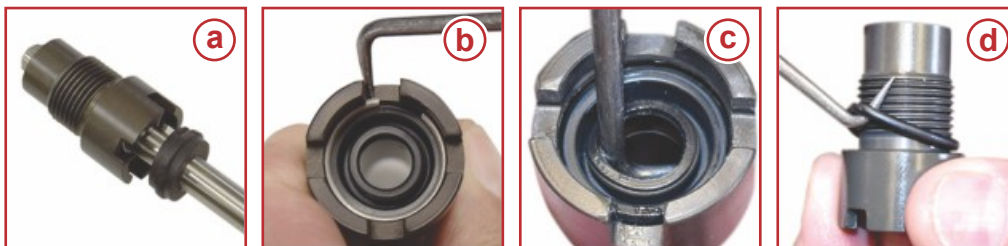

63648

- a - Rubber grommet
- b - Snap ring
- c - Seal
- d - O-ring


3. Clean all components with a suitable solvent and dry with compressed air.
4. Inspect all of the components.
 - a. Inspect the shift shaft bushing for damage or leaks.
 - b. Inspect the O-ring and rubber grommet for damage or excessive wear.
5. Inspect the shift shaft splines and oil seal surface for corrosion or excessive wear. Replace the shift shaft if either of these conditions are found.

Assembly


1. Lubricate the O-ring with 2-4-C with PTFE and install onto the shift shaft bushing.
2. Using a suitable mandrel, press the oil seal into the shift shaft bushing with the lips of the seal facing out.
3. Lubricate the oil seal lips with 2-4-C with PTFE.


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- Install the snap ring to secure the seal.

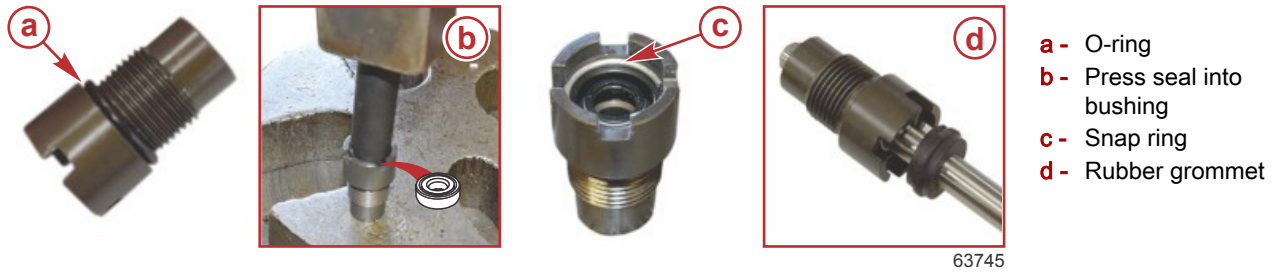

- Install the rubber grommet onto the shift shaft.
- Install the shift shaft bushing onto the shift shaft.
- Install the snap ring on the end of the shift shaft.
- Lubricate the threads of the shift shaft bushing with 2-4-C with PTFE.

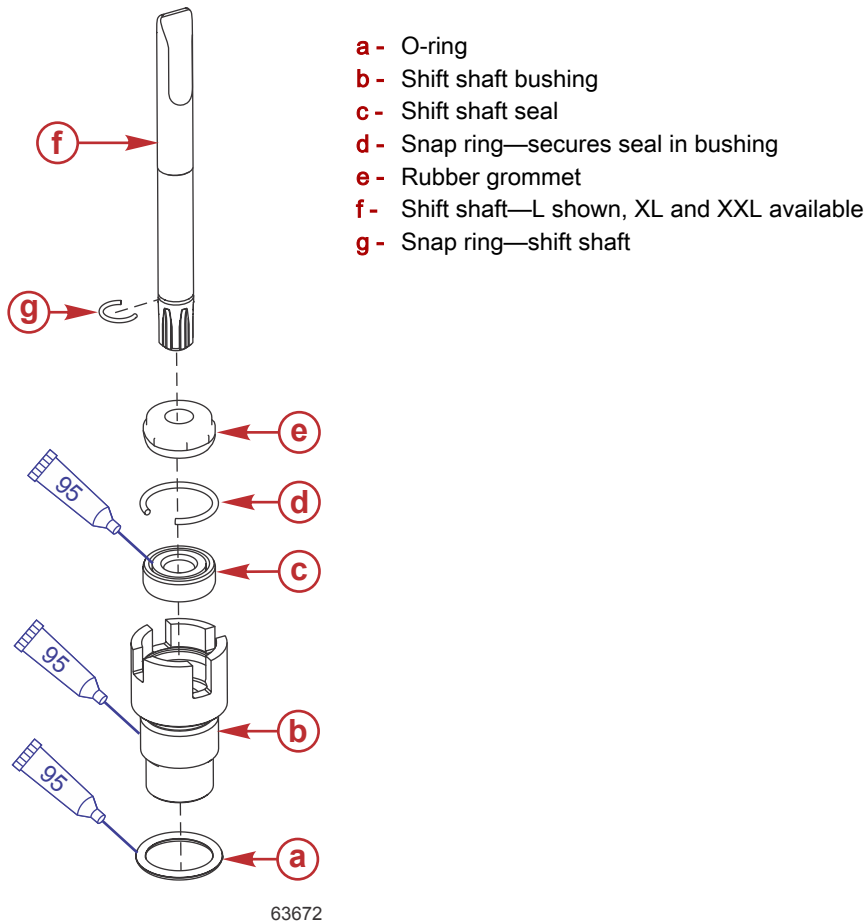


Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Shift shaft bushing threads, O-ring, and oil seal lip	92-802859A 1

Pinion Bearing Removal

NOTE: Inspect the pinion bearing surface on the driveshaft. The condition of the driveshaft at this location gives an indication of the condition of the roller bearing. Replace the lower pinion bearing (rollers and race as a set) if the driveshaft is pitted, grooved, scored, worn unevenly, discolored from overheating, or has embedded particles.


IMPORTANT: All roller bearings (21) must be in place inside the bearing race while driving the pinion bearing from the gear housing. It is recommended that the cardboard tube provided with a new pinion bearing be used to keep the bearings in place while driving out the old pinion bearing.

IMPORTANT: Do not use the bearing race or rollers after they have been removed.

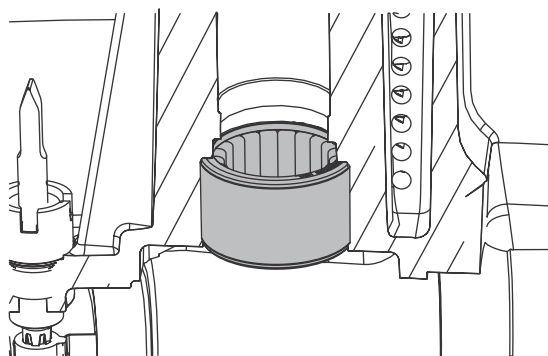

Pinion bearing

Remove and discard the pinion bearing race and rollers using the tools as shown.

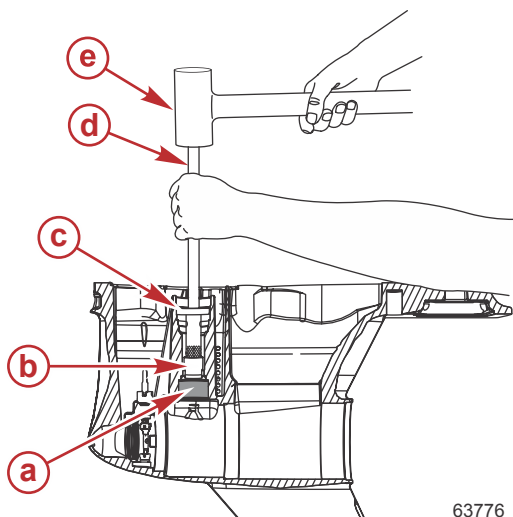

- a** - Pinion bearing
- b** - Driver head
- c** - Pilot washer
- d** - Driver rod
- e** - Dead blow hammer

Pinion Bearing Removal Tool	91-8M0046348
Pilot Washer	91-36571T
Driver Rod	91- 37323

Gear Housing Inspection


1. Clean the gear housing with a suitable solvent and a hard bristle (not wire) brush. Dry the gear housing with compressed air. Ensure that all sealants, locking agents, and debris are removed.
2. Verify the two oil circulation holes in the driveshaft bore are clear and free of debris.
3. Inspect the gear housing for excessive corrosion, impact, or any other damage. Excessive damage or corrosion requires replacement of the gear housing.
4. Inspect the bearing carrier retainer threads in the gear housing for corrosion or stripped threads. Damage or corrosion to the threads requires replacement of the gear housing.

NOTE: The driveshaft bearing cups are a slip fit within the driveshaft bore and may show signs of movement. All other bearing cups are press fit and should not show any signs of movement.

5. Inspect the bearing cone and cup contact area with the gearcase bearing bore for evidence of the bearing cup spinning. Check that the bearing cups are not loose in the bearing bores. A press fit type bearing bore in which the cup is loose will require replacement of the gear housing.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- Inspect for blockage in the water inlet holes and the speedometer hole and clean as necessary. Be careful not to enlarge the speedometer hole, as this could cause erroneous speedometer readings.

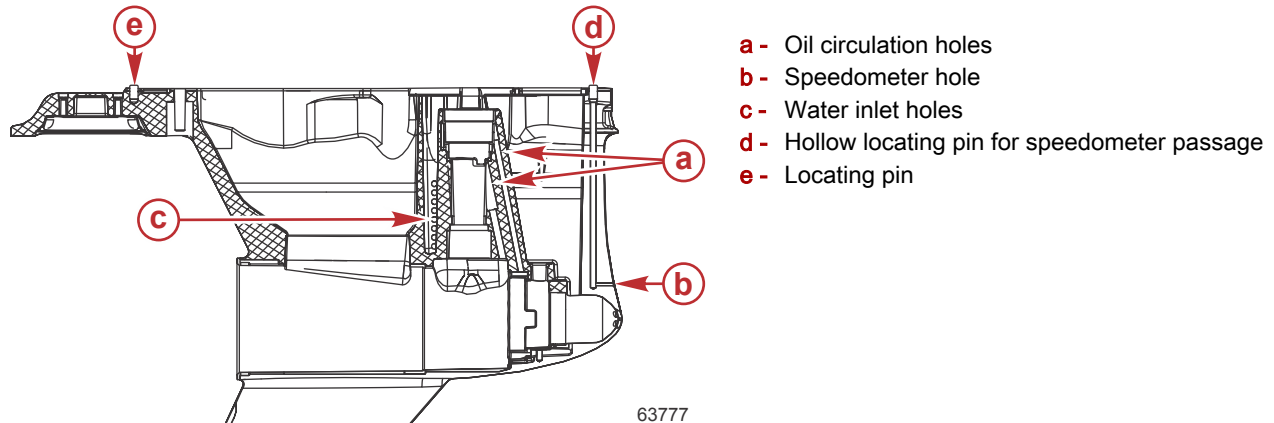


- Verify the locating pins are in place in the gear housing and the corresponding holes in the driveshaft housing are not elongated. The driveshaft may break if the housings are not aligned properly due to missing locating pins or elongated holes.

Front Gear Bearing Cup Installation


NOTE: If the front gear, front gear bearing and cup, or gear housing were not replaced, install the same measurement of shims that were removed. If the front gear, front gear bearing and cup, or gear housing were replaced, install 0.762 mm (0.030 in.) shims.

- Lubricate the front gear bearing cup bore with High Performance Gear Lubricant.
- Install the shims into the front gear bearing cup bore.

IMPORTANT: Verify the bearing cup is positioned as straight as possible to avoid damaging the bore while pressing the bearing cup in.

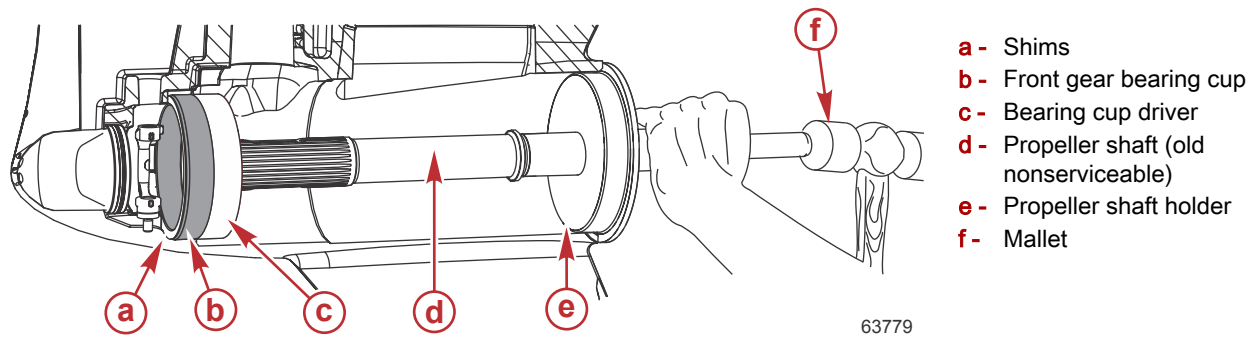


Bearing Cup Driver	91-885592T
Propeller Shaft Holder	91-8M0035594

Tube Ref No.	Description	Where Used	Part No.
 87	High Performance Gear Lubricant	Front gear bearing cup bore	92-858064K01

Shift Shaft Installation

IMPORTANT: The shift crank has a tab on it. The tab faces aft in right-hand rotation gear housings. The tab faces forward in left-hand rotation gear housings.

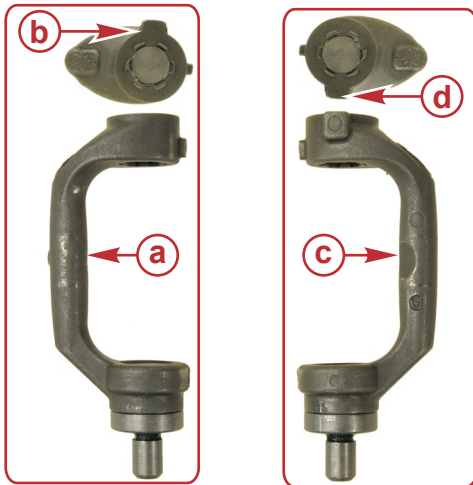


53482

Shift crank

- a** - Left-hand rotation aft view—shift crank toward port
- b** - Left-hand rotation top view—tab facing forward
- c** - Right-hand rotation aft view—shift crank toward starboard
- d** - Right-hand rotation top view—tab facing aft

1. Place the shift crank into the pivot pin hole in the forward section of the gear housing. Ensure that the shift crank faces towards the starboard side of the gear housing for right-hand rotation gear housings. Ensure that the shift crank faces toward the port side of the gear housing for left-hand rotation gear housings.

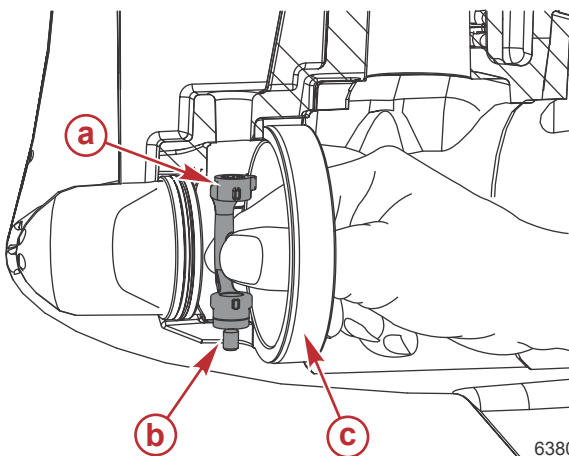

63807

Right-hand rotation shown

- a** - Shift crank
- b** - Pivot pin
- c** - Front gear bearing cup

2. Install the shift shaft assembly into the gear housing. Engage the splined end of the shift shaft with the shift crank. Ensure that the flat at the tip of the shift shaft is parallel with the direction of the shift crank.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

NOTE: The shift crank is shown outside of the gear housing for clarity.




63923

XL shift shaft shown

- a** - Left-hand rotation shift shaft and crank orientation
- b** - Right-hand rotation shift shaft and crank orientation
- c** - Incorrect shift shaft orientation

3. Tighten the shift shaft bushing to the specified torque using the shift shaft tool and a 1 in. socket.


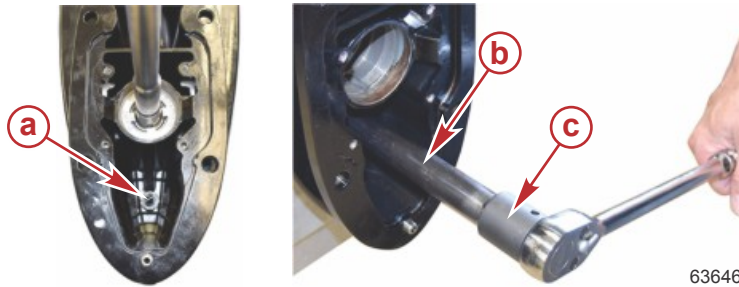


63646

- a** - Shift shaft
- b** - Shift shaft tool
- c** - 1 in. socket

Shift Shaft Tool	8M0142969		
Description	Nm	lb-in.	lb-ft
Shift shaft bushing	54.2	-	40

4. Operate the shift shaft with the shift shaft handle tool to ensure it has engaged into the shift crank. The proper neutral position can be identified below.

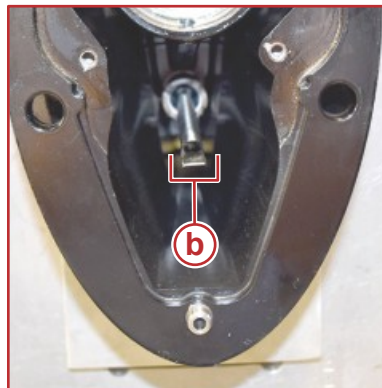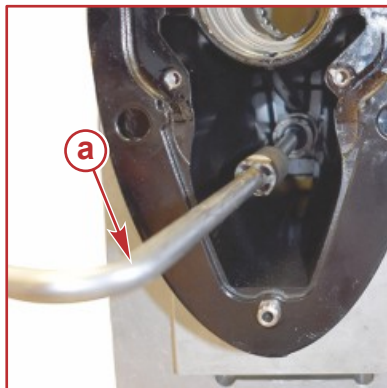

63924

XL shift shaft shown


- a** - Shift shaft handle tool
- b** - Neutral position

Shift Shaft Handle Tool	8M0142973
-------------------------	-----------

Pinion Bearing Installation


IMPORTANT: Never install a pinion bearing that was removed from a gear housing. Always install a new pinion bearing.

1. Lubricate the gearcase pinion bearing bore with High Performance Gear Lubricant.
2. Install the pinion bearing onto the pinion bearing installation tool so the letter and number side of the bearing faces up.
3. Insert the pinion bearing installation tool and bearing into the gear housing pinion bearing bore.
4. Install the puller plate onto the puller rod and insert the puller rod into the gear housing driveshaft bore. Thread the puller rod into the pinion bearing installation tool.
5. Secure the puller rod and tighten the nut until the pinion bearing installation tool contacts the gear housing.

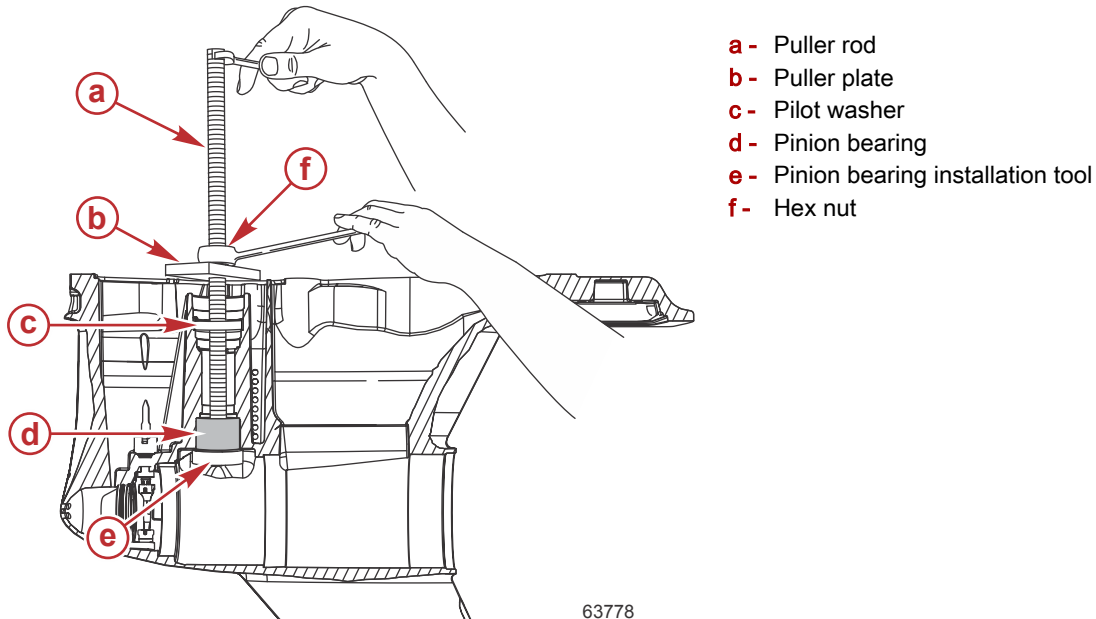

63778

Bearing Removal and Installation Kit	91- 31229A 7
Pinion Bearing Installation Tool	91-8M0046360

Tube Ref No.	Description	Where Used	Part No.
 87	High Performance Gear Lubricant	Gearcase pinion bearing bore	92-858064K01

Driveshaft Bearing Rolling Torque and Pinion Gear Height

IMPORTANT: The sequence of setting up the driveshaft bearing rolling torque and pinion height must be completed before checking the front and rear gear backlash. Failure to set the driveshaft bearing rolling torque and pinion height prior to checking the front and rear gear backlash may cause errors in determining the correct lash, and will increase assembly time of the gear housing to factory specifications.

Driveshaft and Pinion Gear Installation

NOTE: If the original shims were not retained, or if the pinion gear, driveshaft, driveshaft upper tapered roller bearing and cup, or gear housing were replaced, start by installing a 0.508 mm (0.020 in.) shim for the lower tapered roller bearing.


NOTE: If the original shims were retained or the measurement is known, and none of the above listed parts were replaced, install the same shims or same amount of shims.

IMPORTANT: Do not apply Loctite 271 Threadlocker to the threads of the pinion gear nut until after the pinion height, pinion bearing rolling torque, and front gear backlash have been confirmed.


1. Place the lower tapered bearing shims into the driveshaft housing bore.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)


2. Install the lower tapered bearing cup into the driveshaft housing bore.

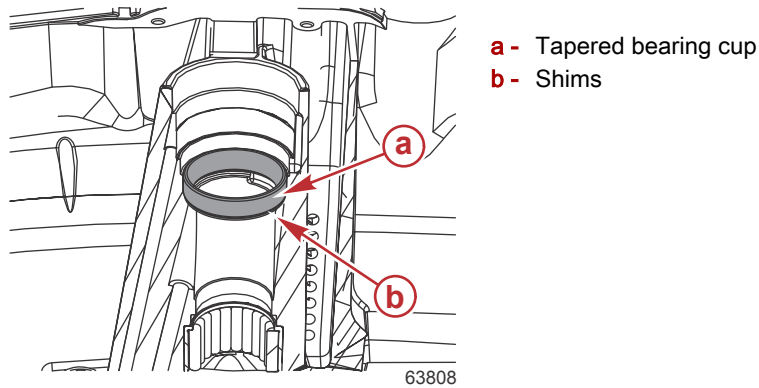

3. Install the front gear assembly.
IMPORTANT: The front gear must be installed to support the pinion nut holding tool.
4. Install the pinion gear and driveshaft.
5. Secure the pinion gear with the pinion nut and washer.
NOTE: Install the pinion gear nut with the flat side of the nut away from the pinion gear.
6. Install the upper driveshaft tapered roller bearing shim.
7. Install the upper driveshaft tapered roller bearing cup. Apply 2-4-C with PTFE to the retainer threads and install the retainer.

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Retainer threads	92-802859A 1

8. Install the driveshaft holding tool.
9. Install the propeller shaft into the front gear.
10. Install the pinion nut holding tool over the propeller shaft and secure the pinion nut with the pinion nut holding tool.
11. Install the propeller shaft holder.
12. Use the driveshaft holding tool to tighten the pinion nut to the specified torque.

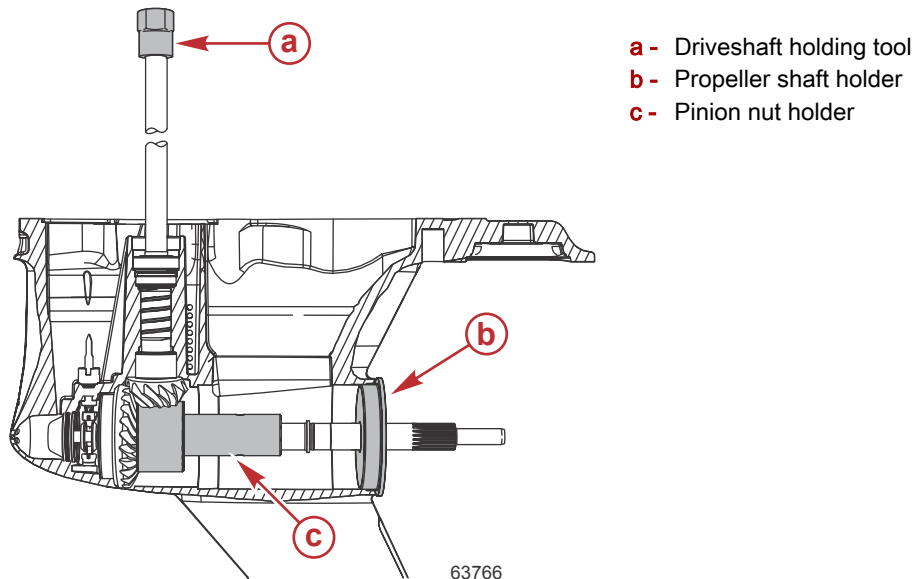


Driveshaft Holding Tool	91-889958T
Pinion Nut Holder	91-8M0036288
Propeller Shaft Holder	91-8M0035594

Description	Nm	lb-in.	lb-ft
Pinion nut with washer	169.5	-	125

- Remove the driveshaft holding tool, propeller shaft holder, pinion nut holding tool, propeller shaft, and front gear.

Driveshaft Bearing Rolling Torque

- Use the driveshaft bearing retainer wrench to tighten the upper driveshaft bearing retainer to the specified torque.

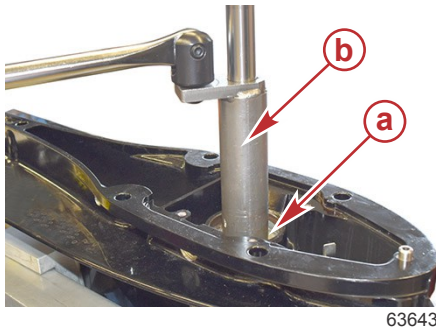

- a - Retainer
- b - Driveshaft bearing retainer wrench

Driveshaft Bearing Retainer Wrench	91-43506T
------------------------------------	-----------

Description	Nm	lb-in.	lb-ft
Retainer	135.5	-	100

- Install the driveshaft holding tool.

Driveshaft Holding Tool	91-889958T
-------------------------	------------


- Use the driveshaft holding tool to check the driveshaft bearing rolling torque. Units correctly assembled to this point would be within the specified rolling torque range. If the rolling torque is not within specification, the shim under the upper tapered roller bearing cup will need to be changed and the rolling torque rechecked. If the rolling torque is too high, add shims under the upper bearing cup. If the rolling torque is too low, remove shims from under the upper bearing cup.

Description	Nm	lb-in.	lb-ft
Driveshaft bearing rolling torque	0.45-1.13	4-10	-

Checking and Adjusting Pinion Gear Height with Pinion Gear Locating Tool 91-8M0046443

NOTE: The front gear, propeller shaft, and bearing carrier must be removed from the gear housing prior to checking the pinion gear height.

- Place the pinion gear locating tool into the gear housing, aligning the window in the tool with the pinion gear.
- Insert the thickest feeler gauge that fits snugly between one tooth of the pinion gear and the high point of the shimming tool. Record the measurement.

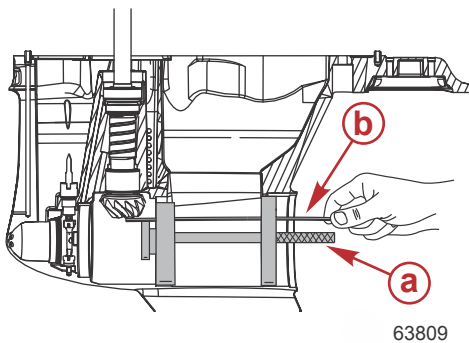

- a - Pinion gear locating tool
- b - Feeler gauge

Pinion Gear Locating Tool	91-8M0046443
---------------------------	--------------

- Rotate the driveshaft 120° in a clockwise direction and measure the clearance (height). Record the measurement.
- Repeat this process until three measurements have been recorded.
- Add the three measurements together and divide the sum by three to get the average pinion gear height. Make note of this average measurement.

Pinion Gear Specification	
Height	0.635 mm (0.025 in.)

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- If the average pinion gear height is not within specification, add or subtract shims beneath the lower and upper driveshaft tapered bearing cups.

IMPORTANT: Add or subtract shims beneath the lower and upper driveshaft bearing cups proportionally to maintain the driveshaft bearing rolling torque.

- Install the removed components and tighten the retainer to the specified torque.

Description	Nm	lb-in.	lb-ft
Retainer	135.5	-	100


- Rotate the driveshaft a minimum of three full turns in a clockwise direction. Check the pinion gear height. If the pinion gear clearance is not within specification, adjust the shim thickness and repeat this process until the average pinion gear height is within specification.
- Verify the driveshaft bearing rolling torque is within specification.

Description	Nm	lb-in.	lb-ft
Driveshaft bearing rolling torque	0.45-1.13	4-10	-

- Remove the pinion gear locating tool, driveshaft, pinion gear, and front gear.

Propeller Shaft Assembly


- Install the sliding clutch, with the long end of the clutch facing toward the rear gear, onto the propeller shaft. Align the cross pin holes in the clutch with the slot in the propeller shaft.
- Assemble the front gear assembly to the propeller shaft.
- Assemble the shift spool assembly into the propeller shaft, making sure the cross pin hole of the shift spool shaft is aligned with the clutch.
- Assemble the cross pin through the sliding clutch, through the propeller shaft, and through the shift spool shaft hole.

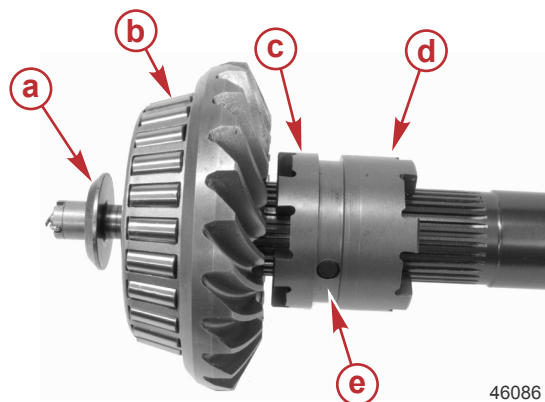

- a - Shift spool and actuating shaft assembly
- b - Front gear assembly
- c - Clutch
- d - Long end of clutch (facing toward the rear gear)
- e - Cross pin

- Assemble the cross pin retaining spring over the propeller end of the propeller shaft and wind it around the clutch over the cross pin hole. Be careful not to distort or stretch the spring while assembling it.

IMPORTANT: Verify the spring is wound on so that it does not cross over on itself and that it lies flat against the clutch once it is assembled. If it does not lie flat against the clutch, a new spring must be installed.

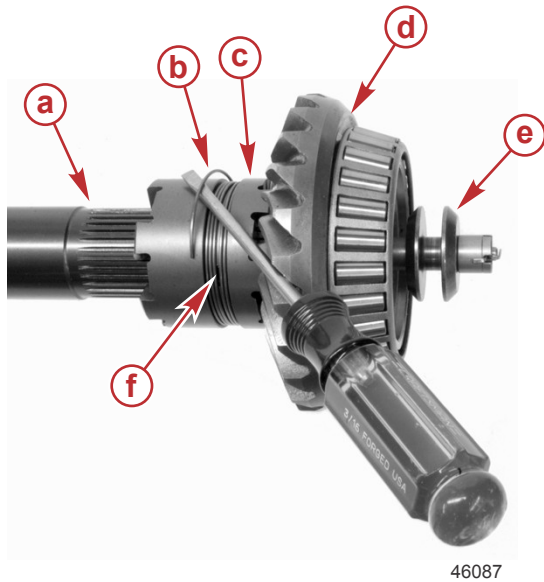


- a - Propeller shaft
- b - Cross pin retaining spring
- c - Sliding clutch
- d - Front gear assembly
- e - Shift spool and actuating shaft assembly
- f - Cross pin (hidden)

46087


Propeller Shaft Installation

1. Verify the shift crank is positioned properly before installing the propeller shaft. The shift crank should face towards the starboard side of the gear housing for right-hand rotation gear housings, and should face toward the port side of the gear housing for left-hand rotation gear housings.

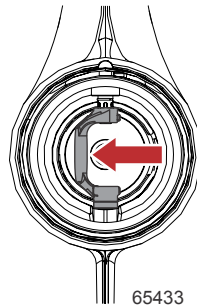

65433

Shift crank position—left-hand rotation

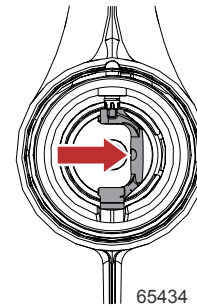


65434

Shift crank position—right-hand rotation

NOTE: The shift/clutch assembly should be in the neutral position when installing the propeller shaft.

2. To allow for the engagement of the shift spool with the shift crank, tilt the propeller end of the propeller shaft assembly to the starboard side of the gear housing for right-hand rotation gear housings and to the port side of the gear housing for left-hand rotation gear housings. Hold the shift shaft in neutral while installing the propeller shaft.

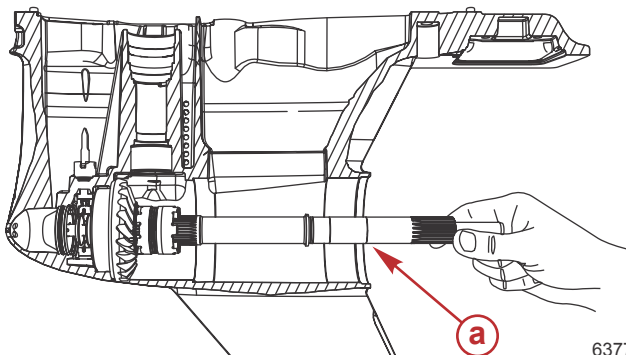

- a - Propeller shaft

63772


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- Operate the shift shaft to ensure it has been properly installed. On right-hand rotation gear housings, the sliding clutch should move forward when the shift shaft is turned counterclockwise. The sliding clutch should move aft when the shift shaft is turned clockwise. On left-hand rotation gear housings, the sliding clutch should move forward when the shift shaft is turned clockwise. The sliding clutch should move aft when the shift shaft is turned counterclockwise. Hold the shift shaft handle tool in the neutral position, and ensure that the propeller shaft rotates freely in either direction.

Shift Shaft Handle Tool	8M0142973
-------------------------	-----------


Driveshaft and Pinion Gear Final Installation

- Apply Loctite 271 Threadlocker to the threads of the pinion gear nut and place the pinion gear nut and washer into the slot of the pinion nut holder.

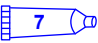Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	Pinion gear nut threads	92-809819


NOTE: Install the pinion gear nut with the flat side of the nut away from the pinion gear.

NOTE: For ease of installation, glue the washer to the pinion gear using 3M Adhesive, Bellows Adhesive, or equivalent.

Tube Ref No.	Description	Where Used	Part No.
 27	Bellows Adhesive	Driveshaft pinion gear washer	92-86166Q1

NOTE: Do not apply Loctite 271 Threadlocker to the pinion nut until the front gear backlash setting is finalized. Do not reuse the old pinion nut. Install a new pinion nut after backlash is finalized.

- Place the pinion gear into the gear housing.
- With the propeller shaft horizontal, insert the pinion nut holder with the nut and washer into the gear housing.
- Insert the driveshaft into the gear housing driveshaft bore. It may be necessary to rotate the driveshaft to engage the driveshaft splines into the pinion gear splines.
- Start the pinion nut onto the driveshaft threads by rotating the driveshaft until the nut is snug.
- Install the propeller shaft holder into the gear housing to hold the propeller shaft and the pinion nut holder in position.
- Tighten the pinion nut to the specified torque by turning the driveshaft using the driveshaft holding tool and torque wrench.

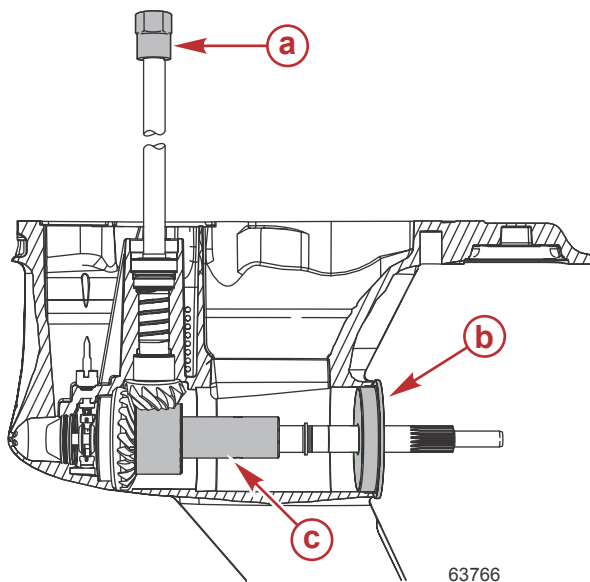


- a** - Driveshaft holding tool
- b** - Propeller shaft holder
- c** - Pinion nut holder

Driveshaft Holding Tool	91-889958T
Pinion Nut Holder	91-8M0036288
Propeller Shaft Holder	91-8M0035594

Description	Nm	lb-in.	lb-ft
Pinion nut with washer	169.5	-	125

- Apply 2-4-C with PTFE to the retainer threads and install the retainer. Tighten the retainer to the specified torque.

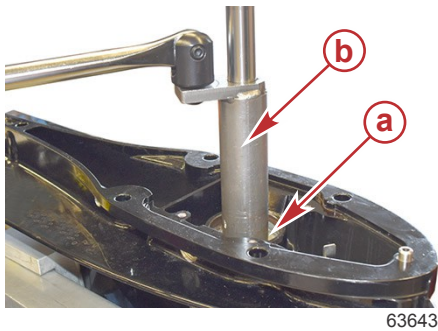

- a - Retainer
- b - Driveshaft bearing retainer wrench

Driveshaft Bearing Retainer Wrench	91-43506T
------------------------------------	-----------

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Retainer threads	92-802859A 1

Description	Nm	lb-in.	lb-ft
Retainer	135.5	-	100


- Remove the propeller shaft holder, pinion nut holder, and driveshaft bearing retainer wrench.

Front Gear Backlash

IMPORTANT: Backlash values are only valid if the pinion height is within specification.


- Install the propeller shaft thrust spacer onto the propeller shaft. Do not install the propeller shaft shims at this time.
- Install the bearing carrier shims.

NOTE: If the original shims were not retained, start by installing a 0.559 mm (0.022 in.) shim in right-hand rotation gear housings, and a 0.813 mm (0.032 in.) shim in left-hand rotation gear housings.

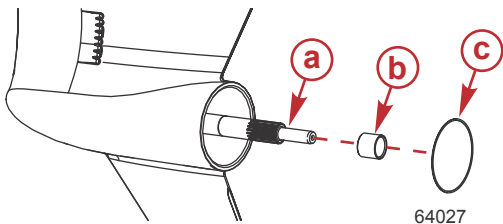

- a - Propeller shaft
- b - Thrust spacer
- c - Bearing carrier shim

IMPORTANT: Prior to installing the bearing carrier into a gearcase equipped with the heavy-duty 31.75 mm (1.25 in.) diameter propeller shaft, install the bearing carrier installation tool over the propeller shaft. This tool will prevent the bearing carrier seal lips from being damaged by the propeller shaft splines. Remove the tool after the bearing carrier is installed.

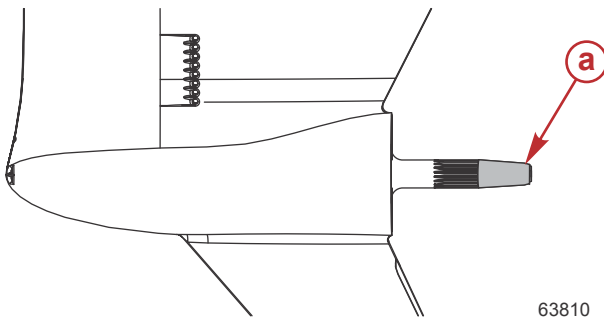


- a - Bearing carrier installation tool

Bearing Carrier Installation Tool	91-8M0059911
-----------------------------------	--------------

- Place the bearing carrier assembly into the gear housing. Carefully align the rear propeller shaft tapered bearing with the propeller shaft. It may be necessary to turn the driveshaft to align the teeth of the pinion and rear gears.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

4. Lubricate the bearing carrier retainer nut threads with 2-4-C with PTFE. Install the locking tab washer and bearing carrier retainer into the gear housing. Use the bearing carrier retainer nut tool to thread the retainer on hand-tight.

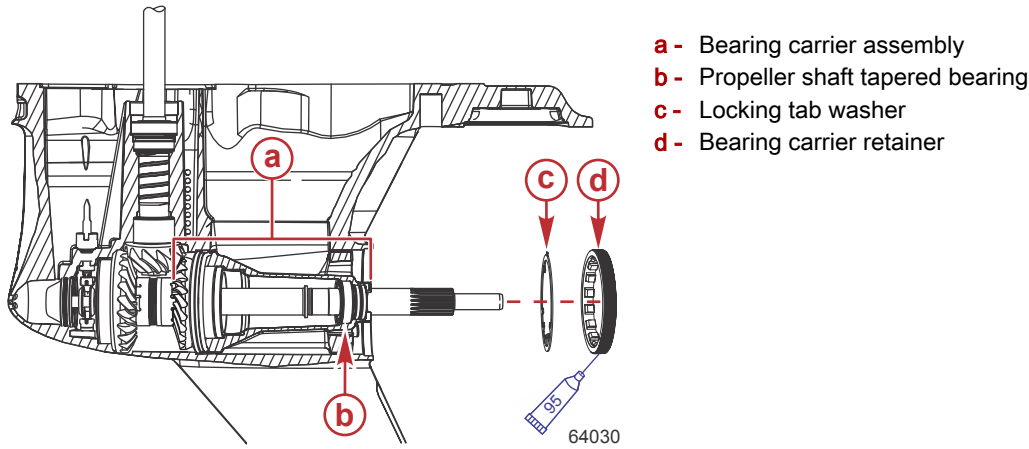


- a - Bearing carrier assembly
- b - Propeller shaft tapered bearing
- c - Locking tab washer
- d - Bearing carrier retainer

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Bearing carrier retainer nut threads	92-802859A 1

Bearing Carrier Retainer Nut Tool	91-8M0046632
-----------------------------------	--------------

5. Apply forward pressure to the propeller shaft as follows.
- a. Install the puller jaws assembly onto the bearing carrier bosses and propeller shaft.
 - b. Tighten the puller bolt to the specified torque. Rotate the driveshaft three turns clockwise and check the puller bolt torque.

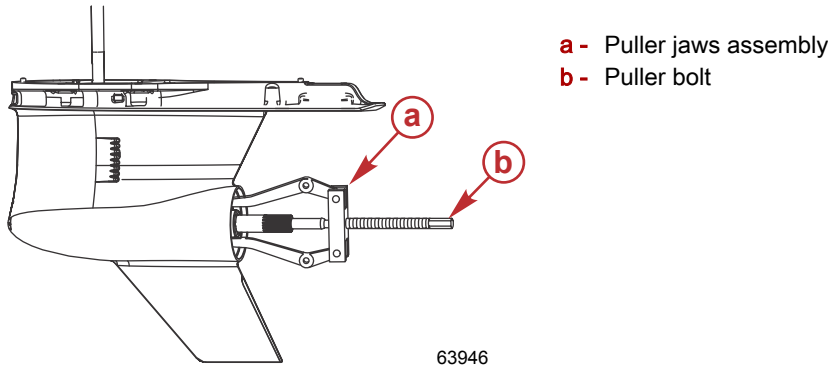


- a - Puller jaws assembly
- b - Puller bolt

Puller Jaws Assembly	91-46086A1
----------------------	------------

Description	Nm	lb-in.	lb-ft
Puller bolt	5.6	50	-

- Install a dial indicator and align the pointer so it is perpendicular to the "5" mark on the backlash indicator tool. Tighten the indicator tool onto the driveshaft and rotate the driveshaft so the dial indicator needle makes one full revolution and comes to "0" on the dial indicator scale.

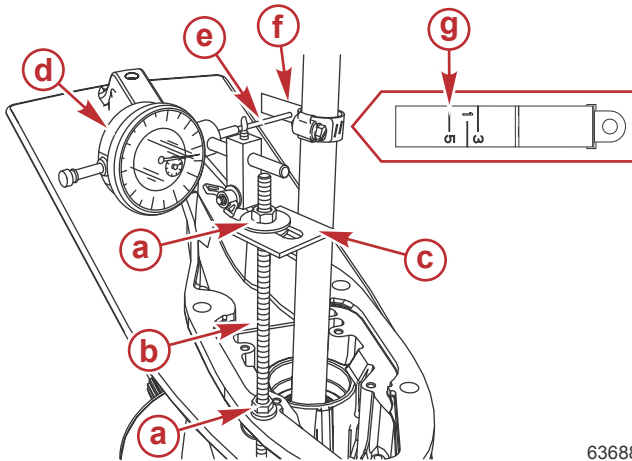

- a - Nuts (4) (obtain locally)
- b - Threaded rod (obtain locally)
- c - Dial indicator adapter
- d - Dial indicator
- e - Indicator pointer
- f - Backlash indicator tool
- g - Backlash indicator tool—5 mark

63688

Dial Indicator Adapter	91-83155
Dial Indicator	91- 58222A 1
Backlash Indicator Tool	91-8M0053505

- Lightly turn the driveshaft back and forth. This is the amount of backlash. No movement should be noticed at the propeller shaft. Record the amount of backlash.
- Loosen the indicator tool and rotate the driveshaft 120° clockwise.
- Align the pointer so it is perpendicular to the "5" mark on the backlash indicator tool. Tighten the indicator tool onto the driveshaft and rotate the driveshaft so the dial indicator needle makes one full revolution and comes to "0" on the dial indicator scale.
- Lightly turn the driveshaft back and forth. No movement should be noticed at the propeller shaft. Record the amount of backlash. Repeat this for a total of three backlash measurements.
- Add the three measurements together and divide the sum by three. This is the average front gear backlash.

IMPORTANT: Backlash values are as measured with the backlash indicator tool set at the "5" mark and are only valid if the pinion height is within specification.

Front Gear Backlash Specification	
Right-hand rotation—forward	0.508–0.609 mm (0.020–0.024 in.)
Left-hand rotation—reverse	0.787–0.965 mm (0.031–0.038 in.)

- If the backlash is less than the specification, remove shims in front of the front gear bearing cup to obtain the correct backlash.

Example (backlash is too low—right-hand rotation)	
Front gear backlash average specification:	0.56 mm (0.022 in.)
Subtract the front gear backlash measurement:	0.25 mm (0.010 in.)
Remove this quantity of shims:	0.31 mm (0.012 in.)
Provides backlash of:	0.56 mm (0.022 in.)

- If the backlash is more than the specification, add shims in front of the front gear bearing cup to obtain the correct backlash.


Example (backlash is too high—right-hand rotation)	
Front gear backlash measurement:	1.02 mm (0.040 in.)
Subtract the front gear backlash average specification:	0.56 mm (0.022 in.)
Add this quantity of shims:	0.46 mm (0.018 in.)
Provides backlash of:	0.56 mm (0.022 in.)

NOTE: By adding or subtracting 0.025 mm (0.001 in.) shim, the backlash will change approximately 0.025 mm (0.001 in.).

- Remove the puller jaw assembly and puller bolt.

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

- When the backlash is within specification, apply Loctite 271 Threadlocker to the threads of a new pinion nut and tighten to the specified torque.

Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	Threads of pinion nut	92-809819

Description	Nm	lb-in.	lb-ft
Pinion nut with washer	169.5	–	125

Rear Gear Backlash


IMPORTANT: Backlash values are only valid if the pinion height is within specification.

NOTE: The propeller shaft shims must be removed from the propeller shaft to check the rear gear backlash.

- Tighten the bearing carrier retainer nut to the specified torque as follows:

IMPORTANT: Before tightening the bearing carrier retainer to the specified torque, the gear housing must be bolted to the driveshaft housing or securely fastened in a gear housing holding fixture to avoid possible damage to the gear housing.

- Use the bearing carrier retainer nut tool to tighten the retainer nut to the first specified torque.
- Rotate the propeller shaft several times to seat the propeller shaft tapered roller bearings in their races.
- Use the bearing carrier retainer nut tool to tighten the retainer nut to the second specified torque.

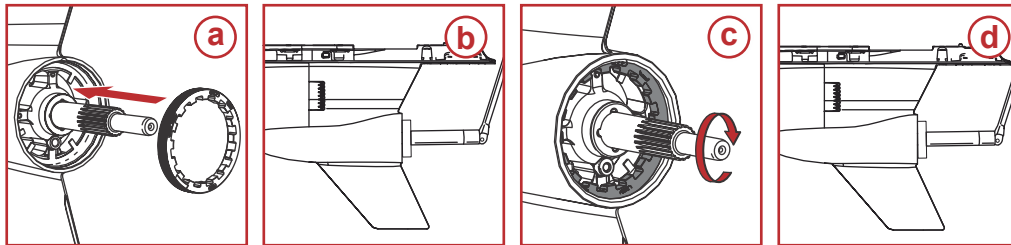

63820


- Install bearing carrier retainer nut
- Tighten to first specified torque
- Rotate propeller shaft
- Tighten to final specified torque

Description		Nm	lb-in.	lb-ft
Bearing carrier retainer nut (refer to NOTE)	First	135.5	–	100
	Second	285	–	210
	Final	Rotate an additional 3.8 cm (1.5 in.)		

NOTE: Tighten the retainer nut to 135.5 Nm (100 lb-ft), and then check the rolling torque on the propeller shaft. If the torque is within specification, tighten the retainer nut to 285 Nm (210 lb-ft). Proceed to the next step to rotate the retainer nut an additional 3.8 cm (1.5 in.).


Bearing Carrier Retainer Nut Tool	91-8M0046632
-----------------------------------	--------------

- Tighten the retainer nut an additional 3.8 cm (1.5 in.) to achieve the final desired torque as follows:
 - On a piece of masking tape, mark a distance of 3.8 cm (1.5 in.).

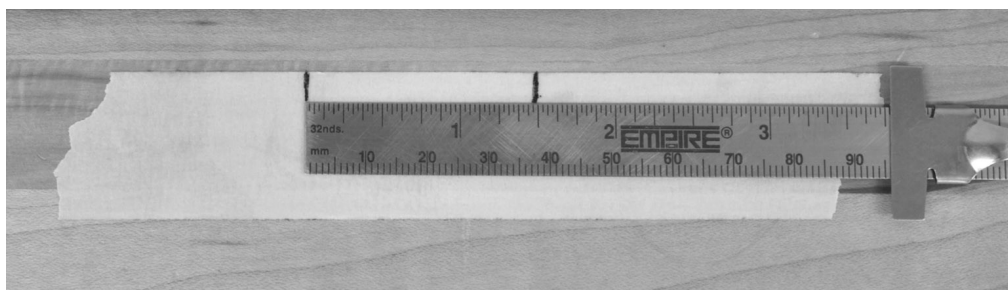

66380

- ii. On a second piece of masking tape, mark it with a single line.
- iii. With the bearing carrier retainer nut tool installed on the gear housing, place the masking tape with the distance mark onto the gear housing. Place the masking tape with the single line onto the bearing carrier retainer nut tool, aligning the marks on the masking tape.

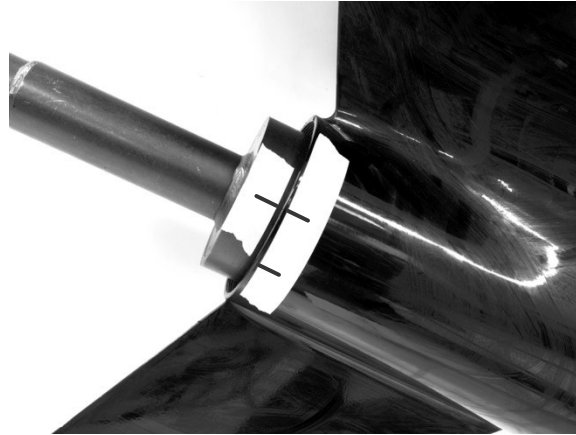


66382

- iv. Tighten the bearing carrier retainer nut so the masking tape with the single line aligns with the second mark on the masking tape.



66383

- e. Remove the bearing carrier retainer nut tool from the propeller shaft.
2. Install a dial indicator and align the pointer so it is perpendicular to the "5" mark on the backlash indicator tool. Tighten the indicator tool onto the driveshaft and rotate the driveshaft so the dial indicator needle makes one full revolution and comes to "0" on the dial indicator scale.
 3. Apply pressure on the propeller shaft by holding the shift crank against the rear gear.

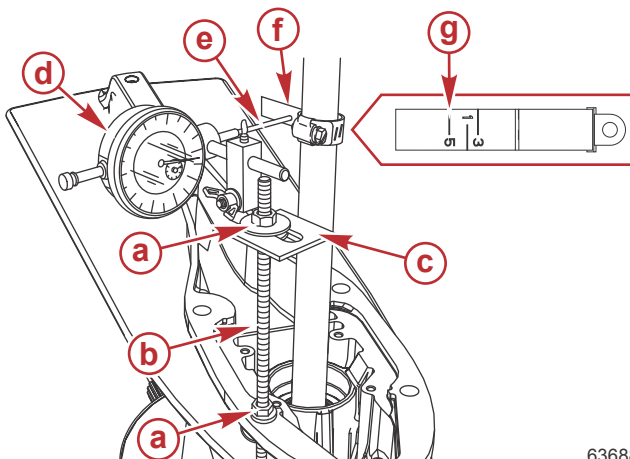

- a - Nuts (4) (obtain locally)
- b - Threaded rod (obtain locally)
- c - Dial indicator adapter
- d - Dial indicator
- e - Indicator pointer
- f - Backlash indicator tool
- g - Backlash indicator tool—5 mark

63688

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

Dial Indicator Adapter	91-83155
Dial Indicator	91- 58222A 1
Backlash Indicator Tool	91-8M0053505

- Lightly turn the driveshaft back and forth. This is the amount of backlash. No movement should be noticed at the propeller shaft. Record the amount of backlash.
- Loosen the indicator tool and rotate the driveshaft 120° clockwise.
- Align the pointer so it is perpendicular to the "5" mark on the backlash indicator tool. Tighten the indicator tool onto the driveshaft and rotate the driveshaft so the dial indicator needle makes one full revolution and comes to "0" on the dial indicator scale.
- Lightly turn the driveshaft back and forth. No movement should be noticed at the propeller shaft. Record the amount of backlash. Repeat this for a total of three backlash measurements.
- Add the three measurements together and divide the sum by three. This is the average rear gear backlash.
IMPORTANT: Backlash values are as measured with the backlash indicator tool set at the "5" mark and are only valid if the pinion height is within specification.

Rear Gear Backlash Specification	
Right-hand rotation 1.75:1 ratio—reverse	0.787–0.940 mm (0.031–0.037 in.)
Right-hand rotation 1.85:1 ratio—reverse	1.067–1.219 mm (0.042–0.048 in.)
Left-hand rotation—forward	0.457–0.584 mm (0.018–0.023 in.)


- If the backlash is less than the specification, add shims in front of the bearing carrier thrust ring to obtain the correct backlash.

Example (backlash is too low—right-hand rotation 1.75:1 ratio)	
Rear gear backlash average specification:	0.86 mm (0.034 in.)
Subtract the rear gear backlash measurement:	0.56 mm (0.022 in.)
Add this quantity of shims:	0.31 mm (0.012 in.)
Provides backlash of:	0.86 mm (0.034 in.)

- If the backlash is more than the specification, remove shims in front of the bearing carrier thrust ring to obtain the correct backlash.

Example (backlash is too high—right-hand rotation 1.75:1 ratio)	
Rear gear backlash measurement:	1.40 mm (0.055 in.)
Subtract the rear gear backlash average specification:	0.86 mm (0.034 in.)
Remove this quantity of shims:	0.46 mm (0.018 in.)
Provides backlash of:	0.86 mm (0.034 in.)

NOTE: By adding or subtracting 0.025 mm (0.001 in.) shim, the backlash will change approximately 0.025 mm (0.001 in.).

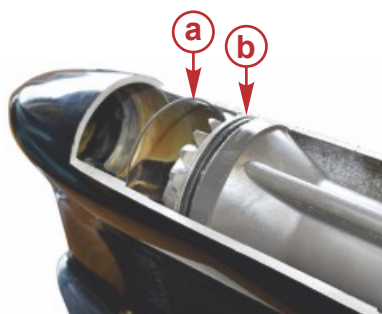

64031

- a - Shim
- b - Bearing carrier thrust ring


Propeller Shaft Bearing Preload

NOTE: All gear housing components must be installed and correctly shimmed before checking propeller shaft bearing preload. The propeller shaft tapered roller bearing must be properly seated in the race during installation. The driveshaft retainer should be tightened to the specified torque.

Description	Nm	lb-in.	lb-ft
Driveshaft retainer	135.5	–	100

IMPORTANT: Install a maximum of two shims on the propeller shaft to obtain the specified propeller shaft rolling torque. To obtain the specified rolling torque, shims of different thicknesses may have to be interchanged. Do not use a shim thinner than 0.51 mm (0.020 in.).


1. Remove the bearing carrier.
2. Install the new thrust spacer onto the new propeller shaft.
3. Install a shim onto the propeller shaft. Do not use a shim smaller than 0.51 mm (0.020 in.) shim thickness. A maximum of two shims may be installed on the shaft to obtain the specified rolling torque. If two shims are required, install the thinner shim last.

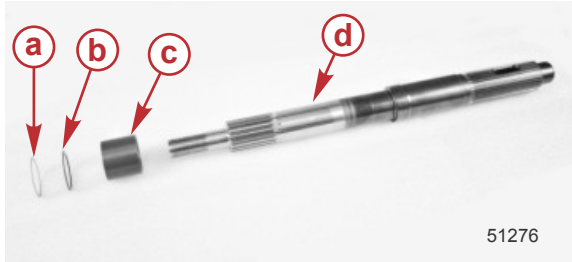

- a - Thin shim if required (install onto propeller shaft last)
- b - Shim
- c - Thrust spacer
- d - Propeller shaft

4. Install the bearing carrier installation tool onto the propeller shaft.


IMPORTANT: Prior to installing the bearing carrier into a gear housing equipped with the heavy-duty 31.75 mm (1.25 in.) diameter propeller shaft, install the bearing carrier installation tool over the propeller shaft. This tool will protect the bearing carrier seal lips from being damaged by the propeller shaft splines. Remove the tool after the bearing carrier is installed.

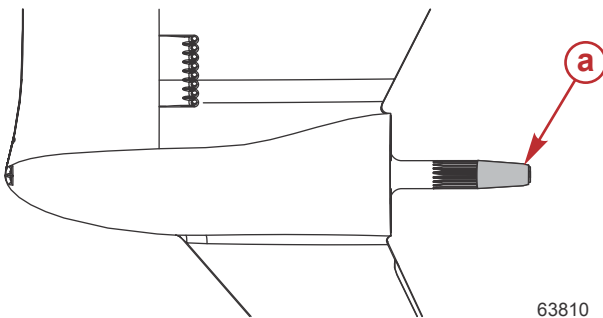

- a - Bearing carrier installation tool


Bearing Carrier Installation Tool	91-8M0059911
-----------------------------------	--------------

5. Install the bearing carrier, aligning the rear propeller shaft bearing with the propeller shaft. It may be necessary to turn the driveshaft to align the teeth of the pinion gear with the rear gear.
6. Install the locating pin.

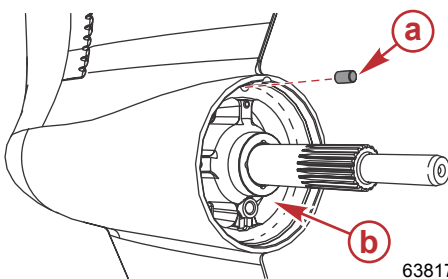

- a - Locating pin
- b - Bearing carrier assembly installed


7. Insert the small rectangular tab of the tab washer into its corresponding slot in the gear housing at the 12 o'clock position above the bearing carrier while aligning the large rectangular tab of the tab washer with its corresponding slot below the lubricant fill/drain hole in the bearing carrier.

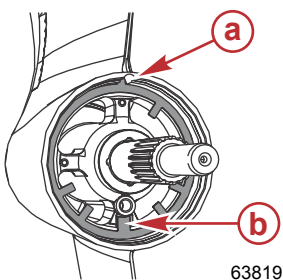

- a - Small rectangular tab
- b - Larger rectangular tab

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

8. With the gear housing in neutral, install the bearing carrier retainer nut.
IMPORTANT: Before tightening the bearing carrier retainer nut to the specified torque, the gear housing must be bolted to the driveshaft housing or securely fastened in a gear housing holding fixture to avoid possible damage to the gear housing.
9. Use the bearing carrier retainer nut tool to tighten the retainer nut to the first specified torque.
10. Rotate the propeller shaft several times to seat the propeller shaft tapered roller bearings in their races.
11. Use the bearing carrier retainer nut tool to tighten the retainer nut to the second specified torque.

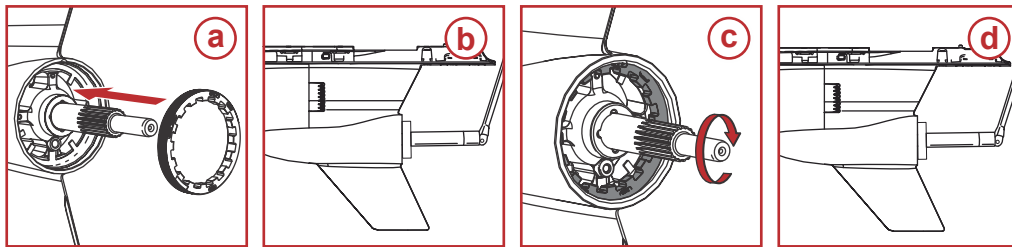

63820


- a - Install bearing carrier retainer nut
- b - Tighten to first specified torque
- c - Rotate propeller shaft
- d - Tighten to final specified torque

Description		Nm	lb-in.	lb-ft
Bearing carrier retainer nut (refer to NOTE)	First	135.5	–	100
	Second	285	–	210
	Final	Rotate an additional 3.8 cm (1.5 in.)		

NOTE: Tighten the retainer nut to 135.5 Nm (100 lb-ft), and then check the rolling torque on the propeller shaft. If the torque is within specification, tighten the retainer nut to 285 Nm (210 lb-ft). Proceed to the next step to rotate the retainer nut an additional 3.8 cm (1.5 in.).

Bearing Carrier Retainer Nut Tool	91-8M0046632
-----------------------------------	--------------

12. Tighten the retainer nut an additional 3.8 cm (1.5 in.) to achieve the final desired torque as follows:
 - a. On a piece of masking tape, mark a distance of 3.8 cm (1.5 in.).

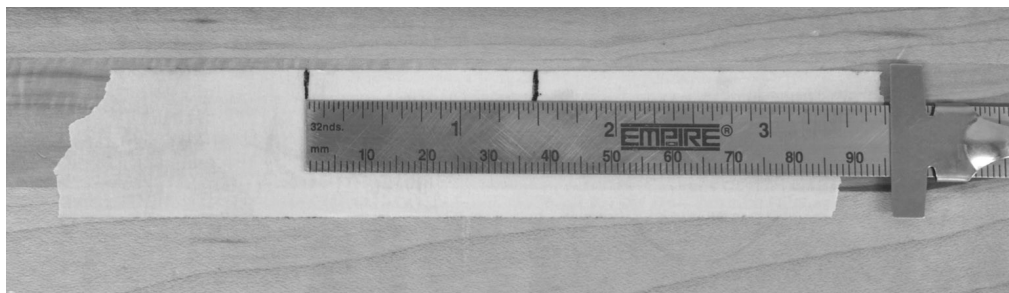

66380

- b. On a second piece of masking tape, mark it with a single line.

- c. With the bearing carrier retainer nut tool installed on the gear housing, place the masking tape with the distance mark onto the gear housing. Place the masking tape with the single line onto the bearing carrier retainer nut tool, aligning the marks on the masking tape.



66382

- d. Tighten the bearing carrier retainer nut so the masking tape with the single line aligns with the second mark on the masking tape.




66383

13. Remove the bearing carrier retainer nut tool from the propeller shaft.
 14. If the gear housing is secured in a stand, use the shift shaft handle tool to hold the clutch in the neutral position.

Shift Shaft Handle Tool	8M0142973
-------------------------	-----------

15. Install the propeller shaft adapter. Using a torque wrench, rotate the propeller shaft in the direction of normal rotation with a slow steady motion.

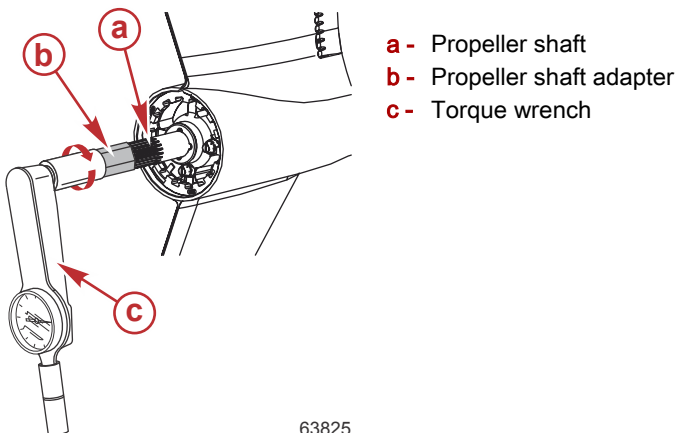

63825

Propeller Shaft Adapter	8M0147118
-------------------------	-----------

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

16. Verify the rolling torque is within specification for new or used bearings.

Description	Nm	lb-in.	lb-ft
Bearing rolling torque (new bearings)	1.1–2.0	10–18	–
Bearing rolling torque (used bearings)	0.45–1.1	4–10	–

NOTE: Bearing preload will change approximately 0.056 Nm (0.5 lb-in.) of rolling torque per 0.025 mm (0.001 in.) of shim change.


17. If the rolling torque is too high, install a thinner shim on the propeller shaft aft of the thrust spacer. If the torque is too low, install a thicker shim. Be certain the shims are installed aft of the thrust spacer.

IMPORTANT: Install a maximum of two shims on the propeller shaft to obtain the specified propeller shaft rolling torque. To obtain the specified rolling torque, shims of different thicknesses may have to be interchanged. Do not use a shim thinner than 0.51 mm (0.020 in.).

NOTE: Each time the shims are changed, the tightening process for the bearing carrier retainer nut must be followed to ensure that the rolling torque is within specifications.

Bearing Carrier Final Installation

1. Remove the bearing carrier and lubricate the following as specified:
 - a. Lubricate the bearing carrier O-ring with 2-4-C with PTFE.
 - b. Lubricate both the forward and aft outer diameters of the bearing carrier and gear housing area where the carrier will seat with 2-4-C with PTFE.
 - c. Fill the space between the propeller shaft seals with 2-4-C with PTFE.

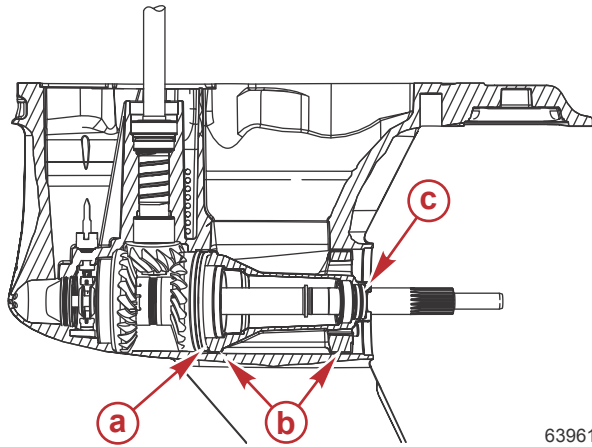


- a - O-ring
- b - Forward and aft outer diameters of bearing carrier
- c - Propeller shaft seals

63961

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Bearing carrier O-ring, forward and aft outer diameters of bearing carrier, gearcase area where bearing carrier will seat, space between propeller shaft oil seals	92-802859A 1

NOTE: Applying 2-4-C with PTFE to the rear gear thrust bearing, thrust washer, spacer, and shim will help keep the components in alignment when installing the bearing carrier assembly into the gearcase.

IMPORTANT: Prior to installing the bearing carrier into a gear housing utilizing the heavy-duty 31.75 mm (1.25 in.) diameter propeller shaft, install the bearing carrier installation tool over the propeller shaft. This tool will protect the bearing carrier seal lips from being damaged by the propeller shaft splines. Remove the tool after the bearing carrier is installed.

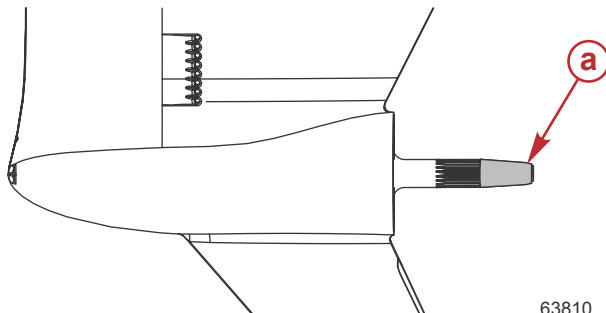


- a - Bearing carrier installation tool


63810

Bearing Carrier Installation Tool	91-8M0059911
-----------------------------------	--------------


- Place the bearing carrier assembly into the gear housing, being careful to align the rear propeller shaft bearing. It may be necessary to turn the driveshaft to align the teeth of the pinion gear and the rear gear.
- Install the bearing carrier locating pin.

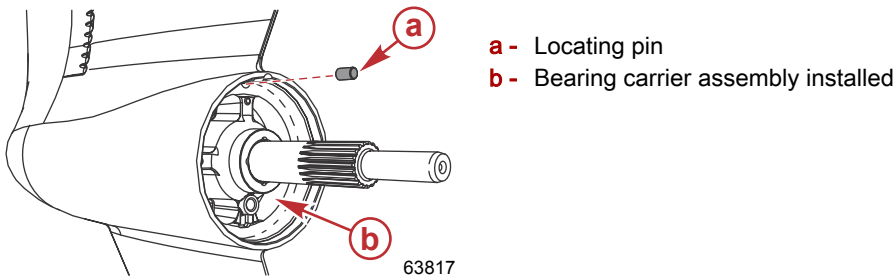

- Insert the small rectangular tab of the tab washer into its corresponding slot in the gear housing at the 12 o'clock position above the bearing carrier while aligning the large rectangular tab of the tab washer with its corresponding slot below the bearing carrier.

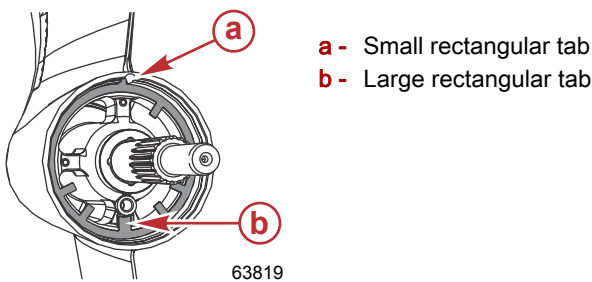


- Apply 2-4-C with PTFE to the bearing carrier retainer nut threads and the corresponding gear housing threads. Install the retainer into the gear housing hand-tight.

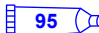Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Bearing carrier retainer nut threads and corresponding gear housing threads	92-802859A 1

IMPORTANT: Before tightening the bearing carrier retainer nut to the specified torque, the gear housing must be bolted to the driveshaft housing or securely fastened in a gear housing holding fixture to avoid possible damage to the gear housing.

- Use the bearing carrier retainer nut tool to tighten the bearing carrier retainer nut to the first specified torque. Rotate the propeller shaft several times to seat the tapered roller bearings. The retainer nut can then be tightened to the second specified torque.

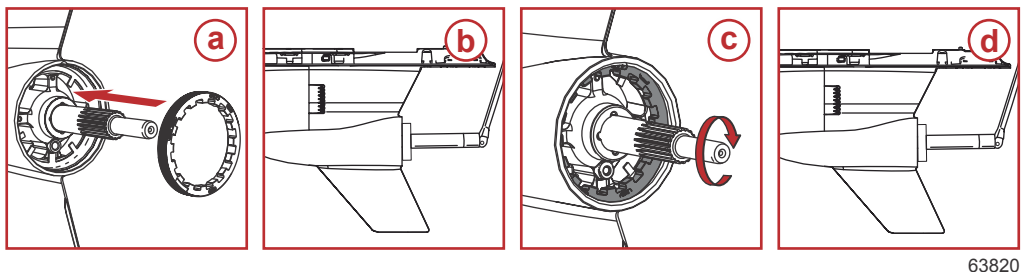

- a** - Install bearing carrier retainer nut hand-tight
- b** - Tighten to first specified torque
- c** - Rotate propeller shaft
- d** - Tighten to final specified torque


Description		Nm	lb-in.	lb-ft
Bearing carrier retainer nut (refer to NOTE)	First	135.5	-	100
	Second	285	-	210
	Final	Rotate an additional 3.8 cm (1.5 in.)		

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

NOTE: Tighten the retainer nut to 135.5 Nm (100 lb-ft), and then check the rolling torque on the propeller shaft. If the torque is within specification, tighten the retainer nut to 285 Nm (210 lb-ft). Proceed to the next step to rotate the retainer nut an additional 3.8 cm (1.5 in.).

Bearing Carrier Retainer Nut Tool	91-8M0046632
-----------------------------------	--------------

7. Tighten the retainer nut an additional 3.8 cm (1.5 in.) to achieve the final desired torque as follows:
 - a. On a piece of masking tape, mark a distance of 3.8 cm (1.5 in.).

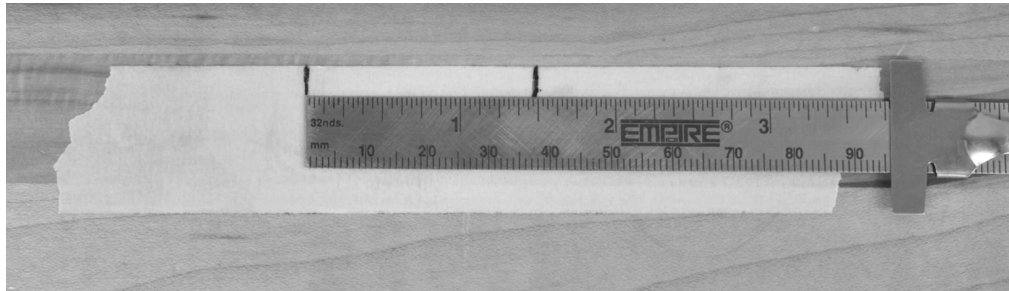

66380

- b. On a second piece of masking tape, mark it with a single line.
 - c. With the bearing carrier retainer nut tool installed on the gear housing, place the masking tape with the distance mark onto the gear housing. Place the masking tape with the single line onto the bearing carrier retainer nut tool, aligning the marks on the masking tape.



66382


- d. Tighten the bearing carrier retainer nut so the masking tape with the single line aligns with the second mark on the masking tape.




66383

NOTE: If one tab of the tab washer does not align between two of the notches on the retainer nut, continue to tighten the retainer nut until alignment is achieved. Do not loosen the retainer nut to achieve alignment.

8. Bend one tab of the tab washer aft (outward) into a space between two of the notches of the retainer. Bend all the remaining tabs forward (inward).
9. Apply 2-4-C with PTFE to the torpedo ring threads.
10. Install the torpedo ring onto the gear housing. Tighten the ring to the specified torque.
11. Install the torpedo ring set screw with a 3/32 inch Allen wrench, and tighten to the specified torque.

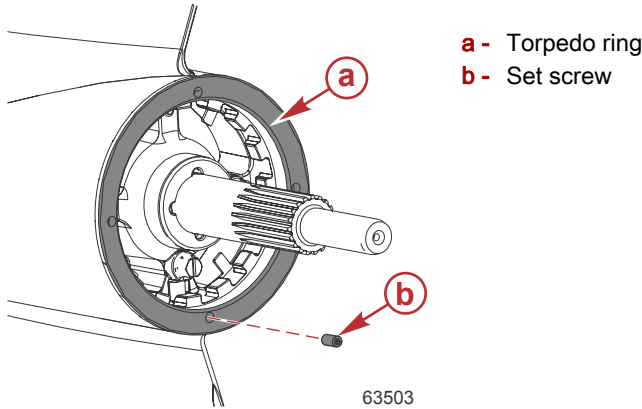

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Torpedo ring threads	92-802859A 1


Torpedo Ring Installation Tool	91-8M0039309
--------------------------------	--------------


Description	Nm	lb-in.	lb-ft
Torpedo ring	68	–	50
Set screw	2.8	25	–

Oil Seal Carrier Installation

Driveshaft Bearing Retainer Wrench	91-43506T
------------------------------------	-----------

1. Lubricate the oil seal carrier oil seal lips, space between the seals, and the O-ring with 2-4-C with PTFE.

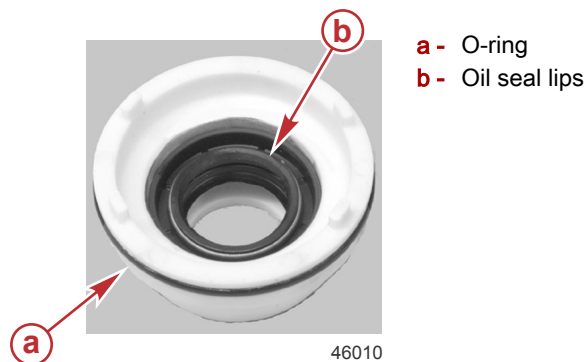


Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Oil seal carrier oil seal lips, space between the seals, and the O-ring	92-802859A 1

2. Install the oil seal carrier over the driveshaft and into the gearcase.

NOTE: The oil seal carrier may be lightly tapped into position by sliding the driveshaft bearing retainer wrench over the driveshaft.


Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

3. Install the retaining ring above the oil seal carrier.

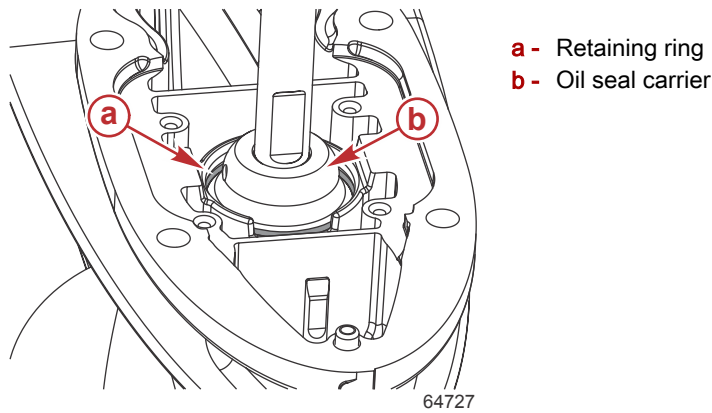

Water Pump Installation

1. Install the lower gasket, top cover, rubber-coated stainless steel gasket, faceplate, and top beaded gasket.

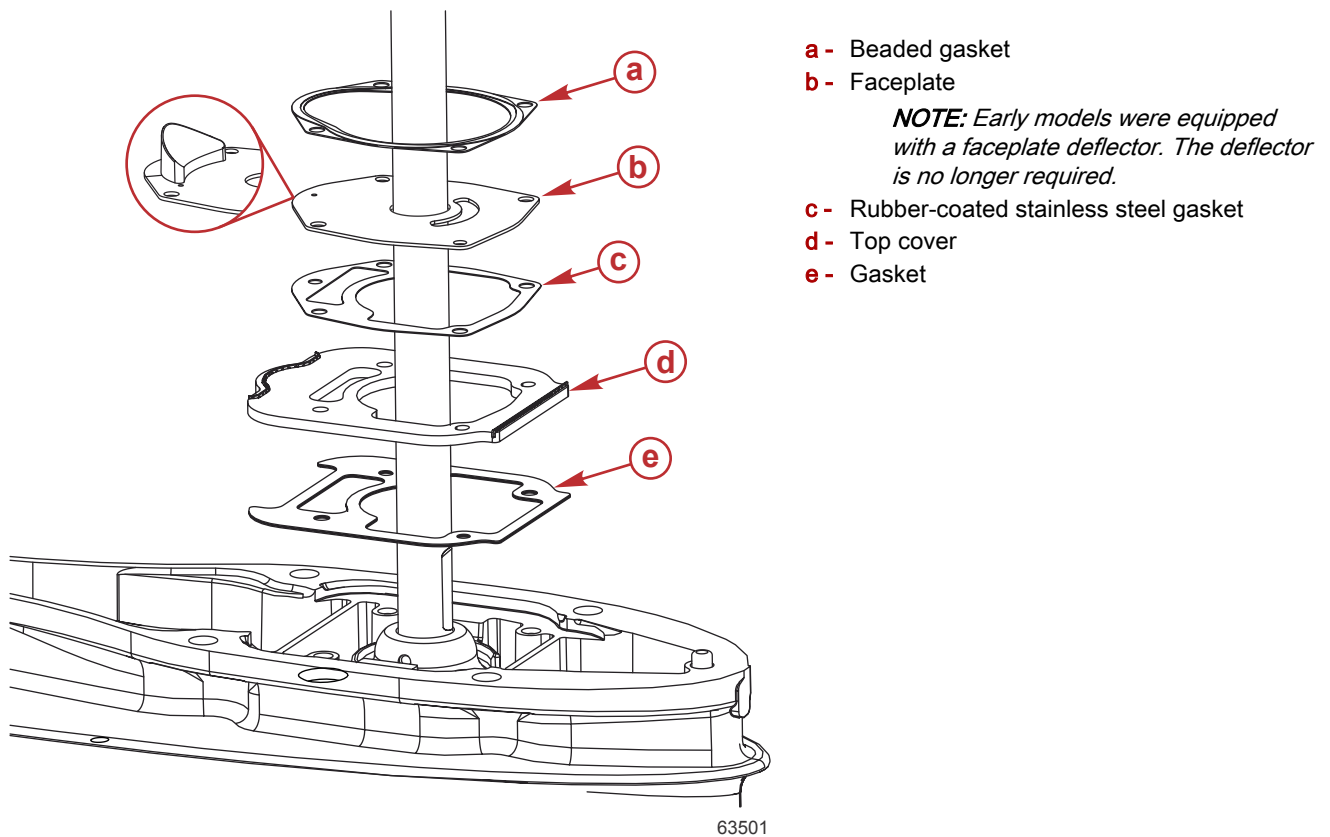


2. Apply a small amount of 2-4-C with PTFE onto the flat surface of the impeller key and install the key onto the driveshaft keyway.


Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Flat surface of impeller key	92-802859A 1

3. Install the water pump impeller onto the driveshaft and over the impeller key.

IMPORTANT: Do not install a used impeller with the blades oriented in a reversed direction from the original rotation. Premature impeller failure will occur.

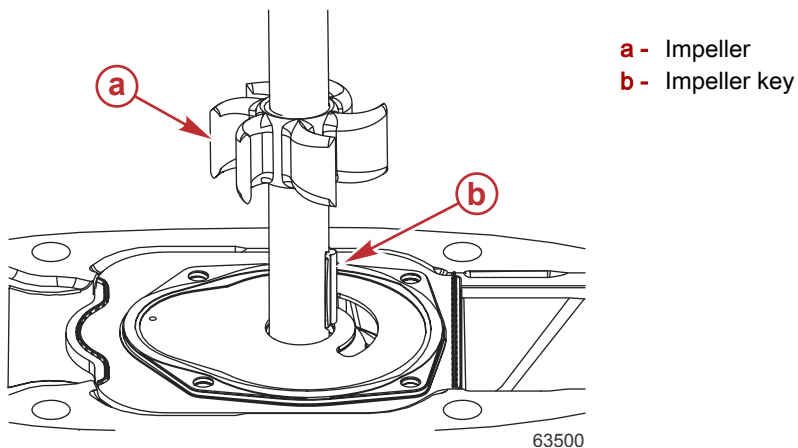


- Apply 2-4-C with PTFE to the inside of the water pump cover. Position the water pump cover over the driveshaft. Rotate the driveshaft in a clockwise direction while pushing down on the water pump cover.

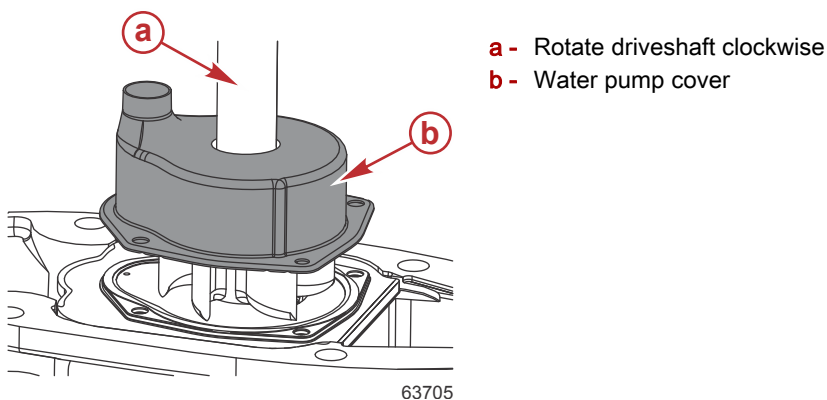


Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Inside of the water pump cover	92-802859A 1

- Apply Loctite 271 Threadlocker to each water pump screw, and install the four screws into the water pump housing. Tighten the screws in the sequence shown to the specified torque.

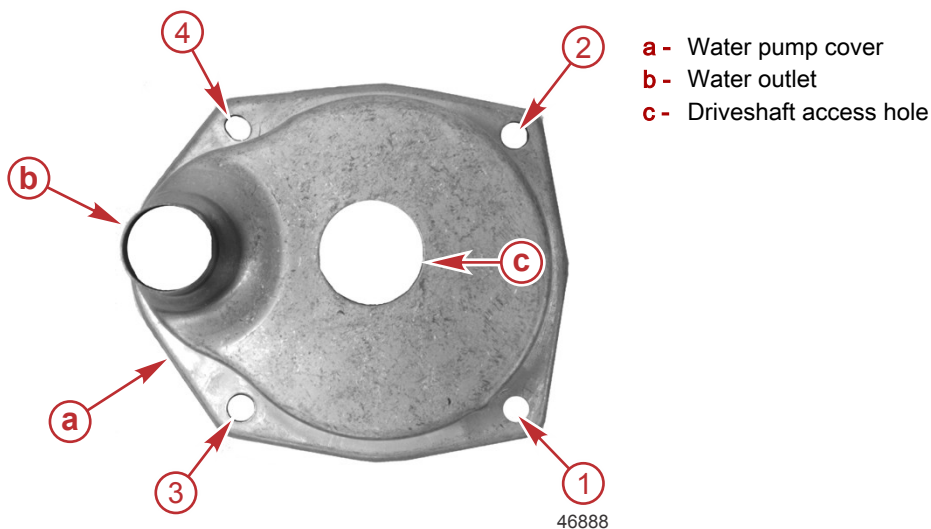


Description	Nm	lb-in.	lb-ft
Water pump screws	6.8	60	-

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	Water pump screws	92-809819

6. Install the driveshaft seal and use the tool provided in the seal kit or the water pump kit to press the seal down.


IMPORTANT: If the driveshaft seal is not installed at the proper height, air will be drawn into the water pump, causing the engine to overheat.

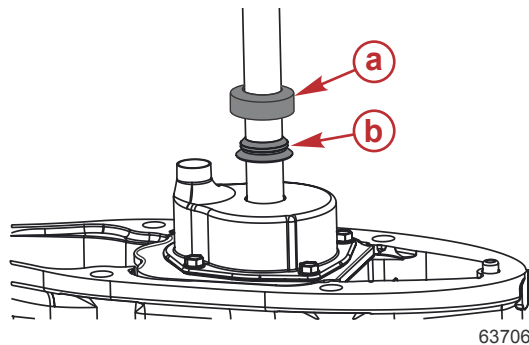

- a - Driveshaft seal installation tool
b - Driveshaft seal

Driveshaft Seal Installation Tool	91-818769
-----------------------------------	-----------


7. If the tool is not available, press the seal against the water pump housing until the height of the seal is 11.1 ± 0.3 mm (0.437 ± 0.012 in.).

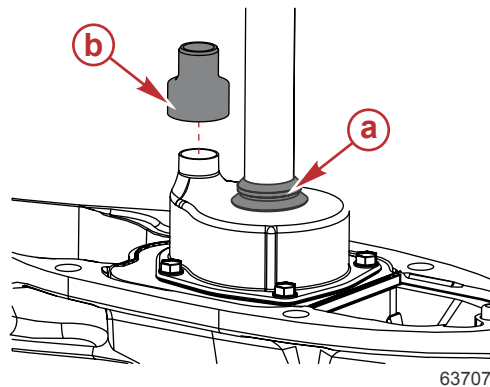

- a - Driveshaft seal
b - Water seal coupler

IMPORTANT: After the water pump is installed, do not rotate the driveshaft counterclockwise.

8. Apply 2-4-C with PTFE to the O-ring in the water seal coupler. Install the water seal coupler onto the water pump cover.

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Water seal coupler O-ring	92-802859A 1

Checking Gear Housing Operation


Prior to filling the gear housing with lubricant, check the gear housing for proper shift operation, as follows:

NOTE: Rotate the driveshaft in a clockwise direction while performing these tests.

Right-Hand Rotation

1. Rotate the shift shaft counterclockwise to the forward motion position. The propeller shaft should rotate clockwise and then lock.
2. Rotate the shift shaft clockwise to the reverse motion position. The propeller shaft should rotate counterclockwise and then lock.

3. Rotate the shift shaft to a point halfway between the forward and reverse motion position. This should be the neutral position. The propeller shaft should rotate freely both clockwise and counterclockwise.

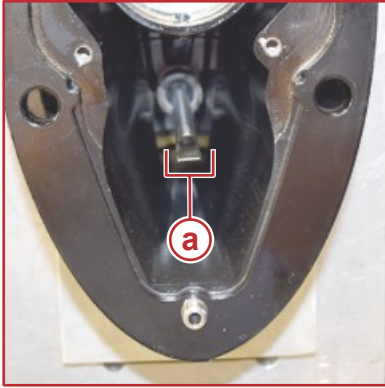


a - Shift shaft in neutral position

65169

IMPORTANT: If the shifting operation is not as described, the gear housing must be disassembled and the shift crank reversed. Refer to Shift Shaft Installation.

Left-Hand Rotation

1. Rotate the shift shaft counterclockwise to the forward motion position. The propeller shaft should rotate counterclockwise and then lock.
2. Rotate the shift shaft clockwise to the reverse motion position. The propeller shaft should rotate clockwise and then lock.
3. Rotate the shift shaft to a point halfway between the forward and reverse motion position. This should be the neutral position. The propeller shaft should rotate freely both clockwise and counterclockwise.

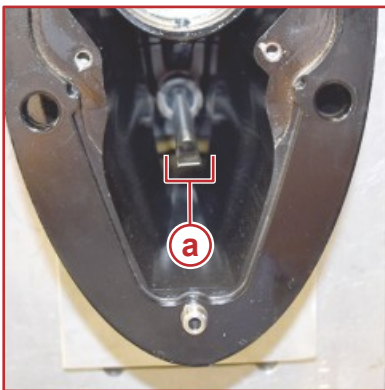

a - Shift shaft in neutral position

65169

IMPORTANT: If the shifting operation is not as described, the gear housing must be disassembled and the shift crank reversed. Refer to Shift Shaft Installation.


NOTE: Before installing the gear housing to the driveshaft housing, check for any leaks. Refer to **Gear Housing Pressure Test** for instructions.

Gear Housing Installation


⚠ WARNING

Accidental starting can cause serious injury. Before removing or installing the gear housing, disconnect and isolate the spark plug leads. Disable the ignition system by removing the keys from the ignition (if equipped) and engaging the lanyard stop switch to prevent the engine from starting.

1. On AMS models, ensure that the lower exhaust relief muffler is installed. On CMS models, ensure that the lower relief plug is installed.

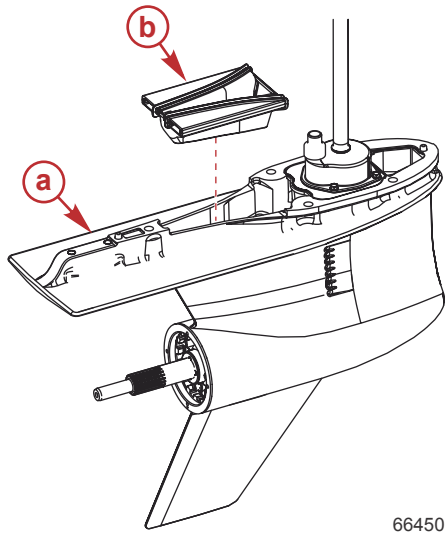

- AMS models**
a - Gear housing
b - Lower exhaust relief muffler

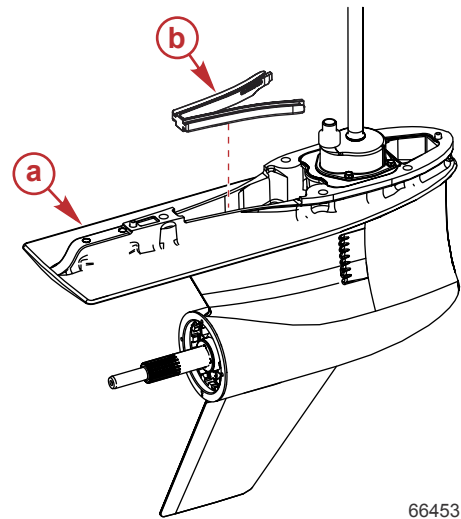


- CMS models**
a - Gear housing
b - Lower relief plug

2. Lubricate the splines of the driveshaft with Extreme Grease. Do not allow lubricant on top of the shift shaft or driveshaft.

NOTICE


Installing the gear housing to the powerhead without adequately cleaning the top of the driveshaft can result in severe product damage. Any lubricant trapped in the space between the driveshaft and the crankshaft prevent the two from properly engaging. Always clean the top of the driveshaft before installing the gear housing.

Tube Ref No.	Description	Where Used	Part No.
	Extreme Grease	Shift shaft splines and driveshaft splines	8M0071842

3. On right-hand rotation gearcases, use the shift shaft tool to rotate the shift shaft counterclockwise into the front (forward) gear. For left-hand rotation gearcases, use the shift shaft tool to rotate the shift shaft clockwise into the front (reverse) gear.
NOTE: It may be necessary to rotate the propeller shaft to ensure that the clutch is engaged.

Shift Shaft Handle Tool	8M0142973
-------------------------	-----------


4. Ensure that the notch on the shift shaft coupler aligns with the notch on the shift actuator output shaft.

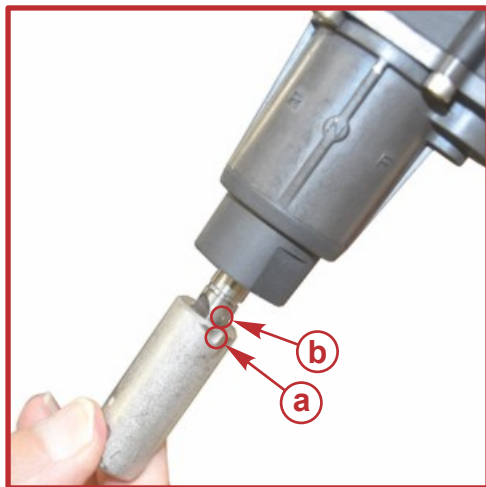


- a** - Notch on shift shaft coupler
b - Notch on shift actuator output shaft

65132

5. On right-hand rotation gearcases, use a 15 mm wrench to rotate the shift shaft coupler so the notch on the coupler is aligned with the "F" marking on the shift actuator. For left-hand rotation gearcases, use a 15 mm wrench to rotate the shift shaft coupler so the notch on the coupler is aligned with the "R" marking on the shift actuator.

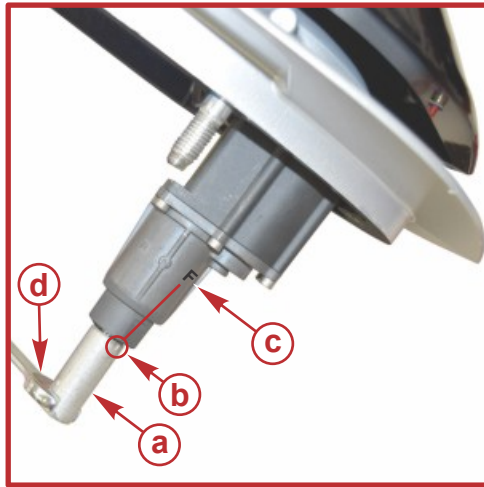

65127

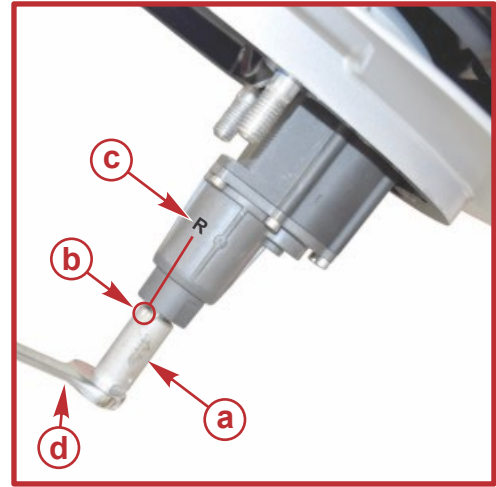

65128

Right-hand rotation models

- a** - Shift shaft coupler
- b** - Tab on shift shaft coupler
- c** - "F" marking on shift actuator
- d** - Wrench


Left-hand rotation models

- a** - Shift shaft coupler
- b** - Tab on shift shaft coupler
- c** - "R" marking on shift actuator
- d** - Wrench

6. Position the gear housing so the driveshaft is protruding into the driveshaft housing.
7. Move the gear housing up toward the driveshaft housing while aligning the water pump coupler to the water tube and the shift shaft into the shift shaft coupler.

NOTE: If the driveshaft splines will not align with the crankshaft splines, rotate the propeller shaft slightly to reposition the splines.


8. Secure the gear housing assembly to the driveshaft housing with four side mounting locknuts and washers; two on each side. Do not fully tighten the nuts at this time.

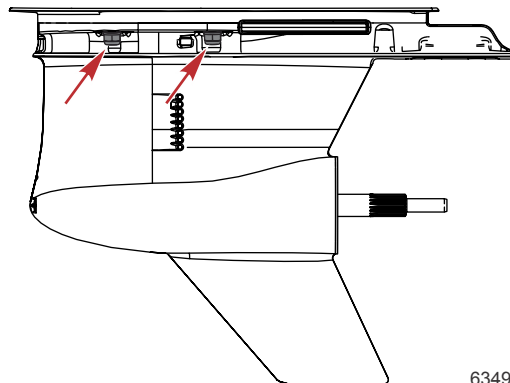

63494

Right-Hand and Left-Hand Rotation (5.44 in. Diameter)

9. Install the nut and washer to the underside of the anti-ventilation plate, just forward of the anode plate. Do not tighten the nut at this time.

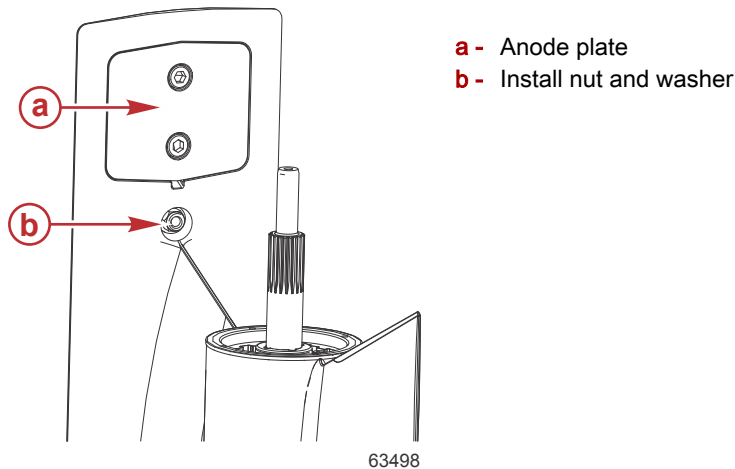


10. Check the shift shaft spline engagement and correct if necessary.
11. Evenly tighten the four side mounting locknuts, and the nut on the underside of the anti-ventilation plate to the specified torque.


Description	Nm	lb-in.	lb-ft
Side mounting locknuts (4), and nut on underside of anti-ventilation plate (1)	60	-	44

Gear Lubricant Filling Instructions—Non-SeaPro Models

NOTE: After the gear housing has been serviced, perform a pressure test prior to filling with lubricant. Refer to **Gear Housing Pressure Test** for instructions.

1. Remove the vent plug from the gear housing.
2. Remove the fill plug from the gear housing.
3. Inspect the fill and vent plug sealing washers for cuts or abrasions. Replace the washers if necessary.
IMPORTANT: Never add lubricant to the gear housing without removing the vent plug. The gear housing cannot be filled if the vent plug is not removed because of trapped air. Fill the gear housing only when the housing is in a vertical position.
4. Slowly fill the housing through the fill hole with High Performance Gear Lubricant until the lubricant flows out of the vent hole and no air bubbles are visible.
5. Install the vent plug into the vent hole.
IMPORTANT: Do not lose more than 15 cc (0.5 fl oz) of gear lubricant while installing the fill plug.
6. Remove the fill tube or hose from the fill hole and quickly install the fill plug into the fill hole. Tighten the fill and vent plugs to the specified torque.

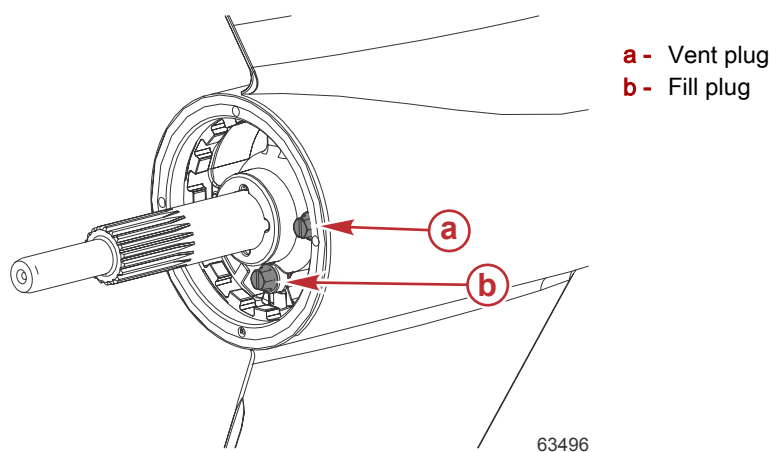

Tube Ref No.	Description	Where Used	Part No.
 87	High Performance Gear Lubricant	Gear housing	92-858064K01

Description	Nm	lb-in.	lb-ft
Fill and vent plugs	11.3	100	–

Gear Lubricant Filling Instructions—SeaPro Models

NOTE: After the gear housing has been serviced, perform a pressure test prior to filling with lubricant. Refer to **Gear Housing Pressure Test** for instructions.

1. Place the outboard in the tilted up position.
2. Remove the upper vent plug.

IMPORTANT: Never add lubricant to the gear housing without first removing the vent plug.

3. Remove the front fill/drain plug from the torpedo. Place the lubricant tube into the fill hole.
4. Add High Performance Gear Lubricant until it is visible at the upper vent plug hole.


IMPORTANT: Inspect the fill/drain and vent plug sealing washers for cuts or abrasions. Replace the washers if damaged.

5. Stop adding the lubricant. Install the upper vent plug and sealing washer before removing the lubricant tube.
6. Remove the lubricant tube and quickly install the cleaned fill/drain plug and sealing washer. Tighten the front fill/drain plug and upper vent plug to the specified torque.

IMPORTANT: Do not lose more than 30 cc (1 fl oz) of gear lubricant while installing the front fill/drain plug.



- a - Remove upper vent plug
- b - Remove front fill/drain plug
- c - Add gear lube
- d - Install upper vent plug
- e - Install front fill/drain plug

Tube Ref No.	Description	Where Used	Part No.
 87	High Performance Gear Lubricant	Gear housing	92-858064K01

Description	Nm	lb-in.	lb-ft
Upper vent plug/sealing washer	11.3	100	–
Front fill/drain plug	11.3	100	–

Notes:

Steering

Section 7A - Power Steering


Table of Contents

Power Steering Specifications.....	7A-2	Installation Procedure.....	7A-15
Power Steering Cylinder Components.....	7A-4	Connection of the Hydraulic Hoses to the Power Steering Pump.....	7A-16
Power Steering Systems.....	7A-6	Connection of the Hydraulic Hoses to the Steering Helm.....	7A-17
Single Helm - Single Cylinder.....	7A-6	Connection of the Hydraulic Hoses to the Steering Cylinder.....	7A-20
Dual Helm - Single Cylinder.....	7A-7	Electrical Connections to the Steering Pump.....	7A-21
Dual Station Steering Helm Identification.....	7A-7	Filling Power Steering System with Engine Not Running.....	7A-22
Single Helm - Dual Cylinder.....	7A-8	Filling Power Steering System with Engine Running	7A-24
Dual Helm - Dual Cylinder.....	7A-9	Wiring Diagrams.....	7A-26
Dual Station Steering Helm Identification.....	7A-9	Single-Engine Battery Architecture Diagram.....	7A-26
Troubleshooting the Power Steering System.....	7A-10	Dual-Engine Battery Architecture Diagram.....	7A-28
Testing the Power Steering Driver Module.....	7A-10	Triple-Engine Battery Architecture Diagram.....	7A-30
Power Steering Cylinder.....	7A-11	Quad-Engine Battery Architecture Diagram.....	7A-32
Steering Cylinder.....	7A-11		
Steering Cylinder End Cap.....	7A-13		
Power Steering Installation.....	7A-15		
Power Steering System.....	7A-15		
Use of Multiple Cylinders for Multiple Outboards.....	7A-15		



Power Steering Specifications

Power Steering Specifications	
Fluid type	SAE 0W-30 Synthetic Power Steering Fluid
Capacity	Typical 1–2 liters (1–2 US qt)
Current draw	Shall not exceed 75 amps
Steering ratio (40 cc helm and single steering cylinder, lock to lock)	4.1 turns
Steering ratio (50 cc helm with dual steering cylinders, lock to lock)	6.5 turns

Lubricant, Sealant, Adhesives


Tube Ref No.	Description	Where Used	Part No.
	Synthetic Power Steering Fluid SAE 0W-30	Steering cylinder housing O-ring	92-858077K01
		Piston seal, wear ring, and O-rings	
		Power steering pump	

Special Tools

Steering Cylinder End Cap Socket	8M0078614
 <p>5080</p>	Removes the power steering cylinder end cap.
Power Steering Module Primer Kit	91-895040K01
 <p>5547</p>	Bleeds the power steering system without running the engine.

Notes:

Power Steering Cylinder Components

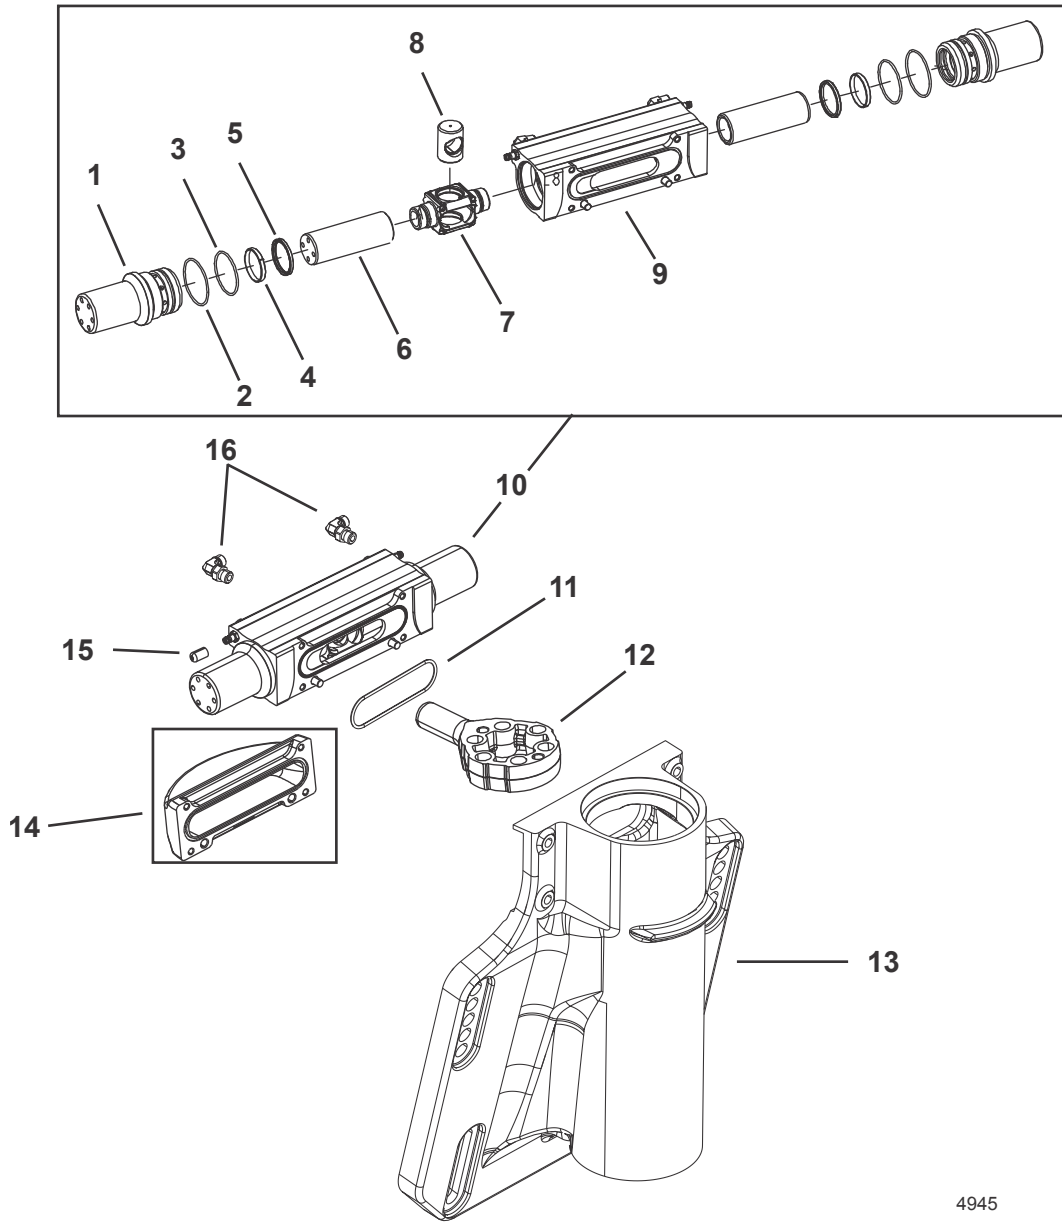


4945

Power Steering Cylinder Components

Ref. No.	Qty.	Description	Torque		
			Nm	lb-in.	lb-ft
1	2	End cap	271	-	200
2	2	O-ring			
3	2	O-ring			
4	2	Wear ring			
5	2	Seal			
6	2	Piston			
7	1	Center union assembly			
8	1	Pivot pin assembly			
9	1	Steering housing			
10	1	Steering cylinder assembly			
11	1	Seal			
12	1	Steering arm			
13	1	Pedestal			
14	1	Cover counter rotation			
15	1	Cap bleeder			
16	2	Elbow			


Power Steering Systems

Single Helm - Single Cylinder

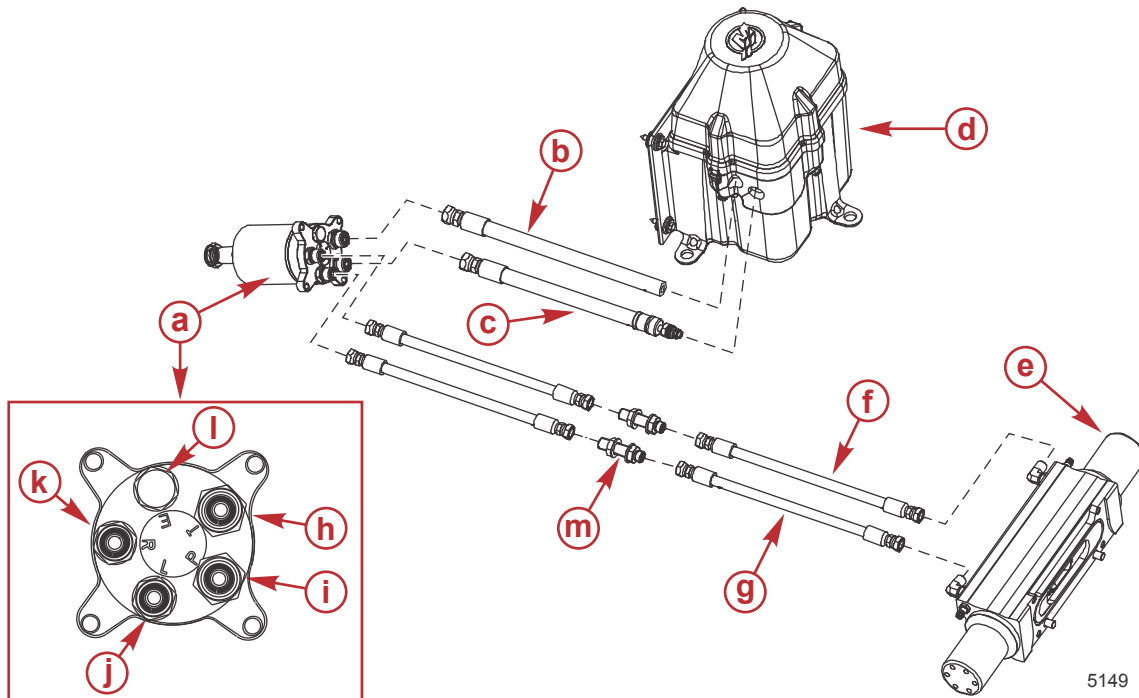

- a** - Helm
- b** - Tank hose (T)
- c** - Pressure hose (P)
- d** - Power steering pump module
- e** - Power steering cylinder
- f** - Starboard steering hose (R-STAR)
- g** - Port steering hose (L-PORT)
- h** - "T" - Tank connection
- i** - "P" - Pressure connection
- j** - "L" - Port connection
- k** - "R" - Starboard connection
- l** - Plug
- m** - Bulkhead fitting (2) (optional)

Dual Helm - Single Cylinder

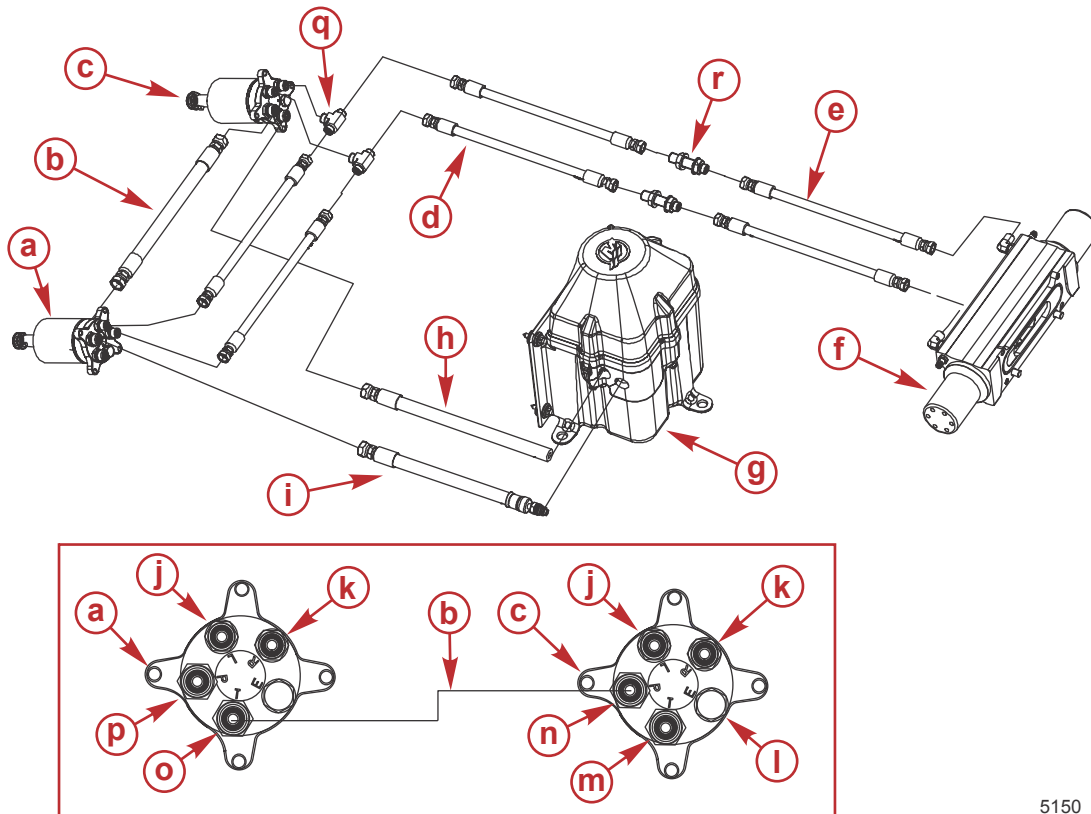

5150


- a - Dual helm 1
- b - Tank 1 to pressure 2 hose
- c - Standard helm 2
- d - Port steering hose (L PORT)
- e - Starboard steering hose (R STAR)
- f - Power steering cylinder
- g - Power steering pump module
- h - Tank hose (T)
- i - Pressure hose (P)
- j - "L" - Port connection
- k - "R" - Starboard connection
- l - Plug
- m - "T" - Tank 2 connection
- n - "P" - Pressure 2 connection
- o - "T" - Tank 1 connection (to "P" 2)
- p - "P" - Pressure 1 connection
- q - T-fitting (2)
- r - Bulkhead fitting (2)

Dual Station Steering Helm Identification

IMPORTANT: The dual station steering helm must be mounted as the primary helm (first in-line from the pump).


Power Steering

The external appearance of the dual station steering helm is very similar to a standard steering helm. The only external difference between helms is that the standard steering helm has two plugs located in the front end of the helm.

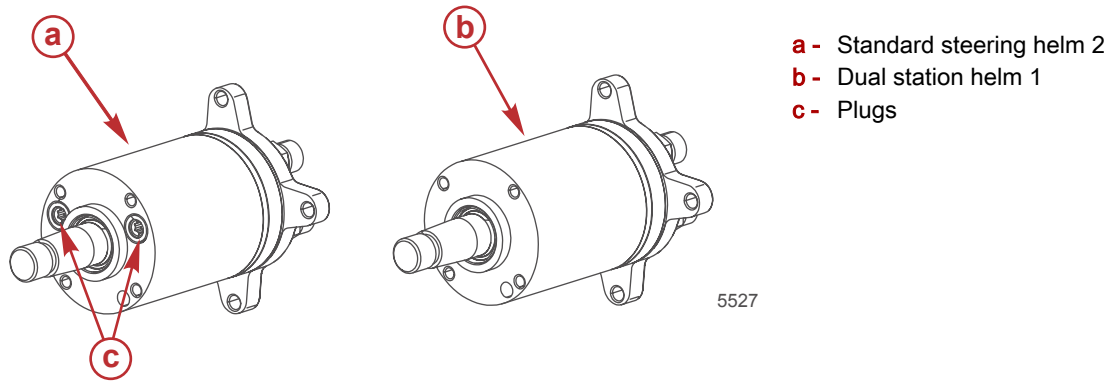

5527


Single Helm - Dual Cylinder

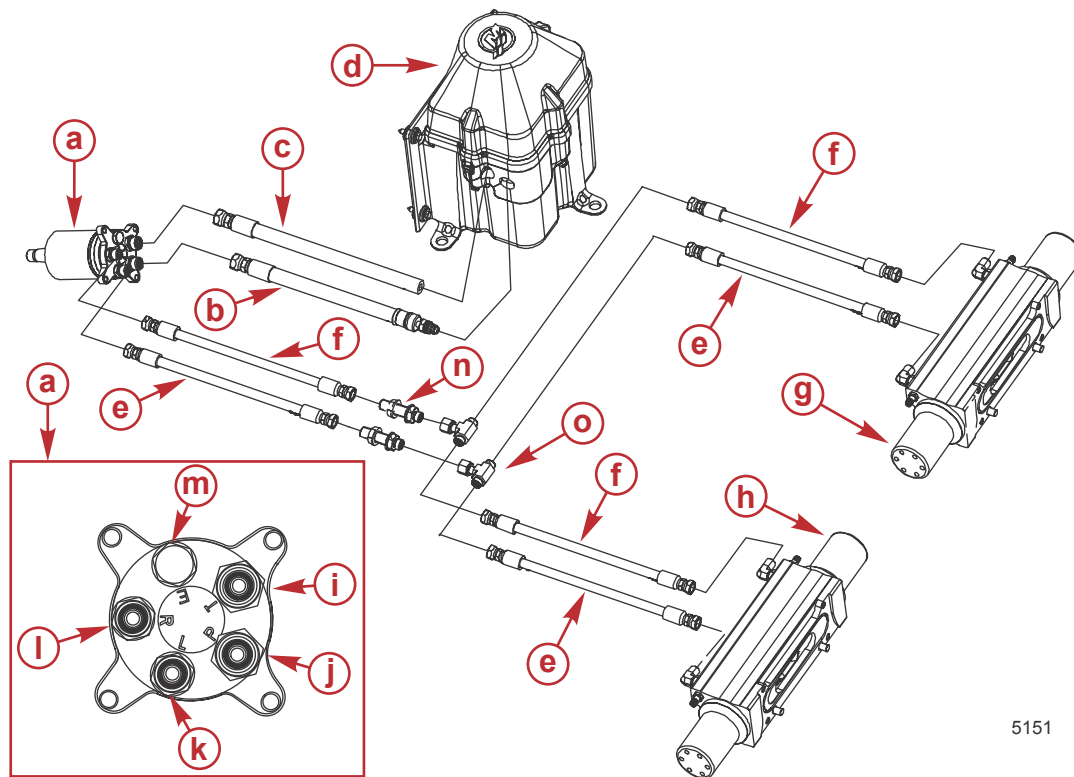

5151

- a** - Helm
- b** - Pressure hose (P)
- c** - Tank hose (T)
- d** - Power steering pump module
- e** - Port steering hose (L PORT)
- f** - Starboard steering hose (R STAR)
- g** - Power steering cylinder 1
- h** - Power steering cylinder 2
- i** - "T" - Tank connection
- j** - "P" - Pressure connection
- k** - "L" - Port connection
- l** - "R" - Starboard connection
- m** - Plug
- n** - Bulkhead fitting (2)
- o** - Swivel T-fitting (2)

Dual Helm - Dual Cylinder

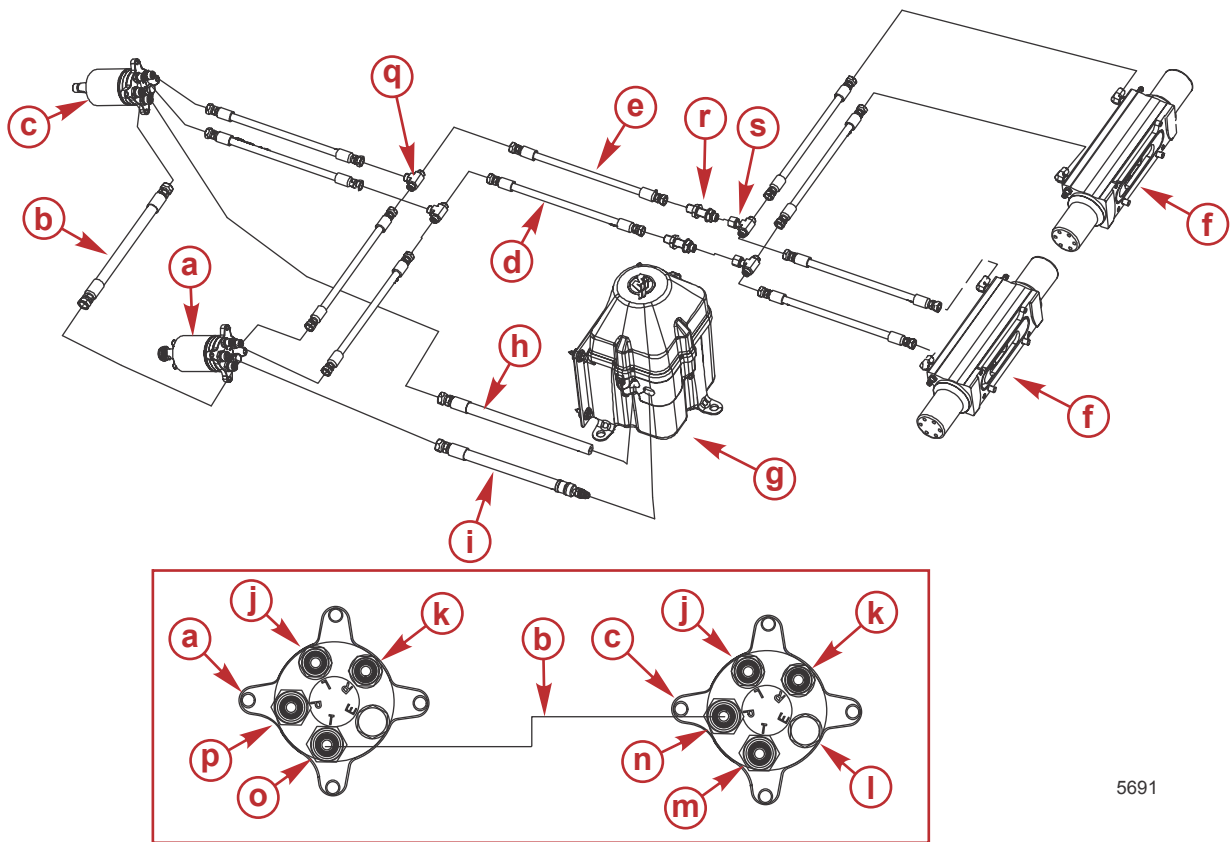

5691


- a - Dual helm 1
- b - Tank 1 to pressure 2 hose
- c - Standard helm 2
- d - Port steering hose
- e - Starboard steering hose
- f - Power steering cylinder
- g - Power steering pump module
- h - Tank hose
- i - Pressure hose
- j - "L" - Port connection
- k - "R" - Starboard connection
- l - Plug
- m - "T" - Tank 2 connection
- n - "P" - Pressure 2 connection
- o - "T" - Tank 1 connection (to "P" 2)
- p - "P" - Pressure 1 connection
- q - T-fitting (2)
- r - Bulkhead fitting (2)
- s - Swivel T-fitting (2)

Dual Station Steering Helm Identification

IMPORTANT: The dual station steering helm must be mounted as the primary helm (first in-line from the pump).

Power Steering

The external appearance of the dual station steering helm is very similar to a standard steering helm. The only external difference between helms is that the standard steering helm has two plugs located in the front end of the helm.

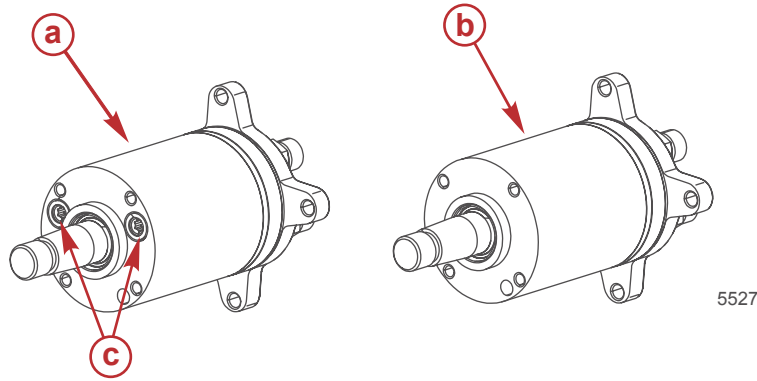

- a - Standard steering helm 2
- b - Dual station helm 1
- c - Plugs


5527

Troubleshooting the Power Steering System

Problem	Possible Cause	Remedy
Power steering system operates (pump runs), but the outboard does not steer.	Hose connections.	Check the pressure and tank hoses for correct connections at helm.
Power steering system operates (pump runs), but the outboard does not steer, steers slowly, or erratic. Hose connections are correct.	Air in system.	Bleed the power steering system. Refer to Filling Power Steering System with Engine Running .
Power steering pump does not operate (pump does not run).	Blown fuse.	1. Check fuse at power steering pump. Replace if blown. 2. Check battery connection.
Power steering pump does not operate (pump does not run). Fuse is good.	Driver module.	1. Check pin connections. Refer to Testing the Power Steering Driver Module . Replace if defective. 2. Start pump with primer module. If pump starts, replace driver module. Refer to Filling Power Steering System with Engine Not Running .
Power steering pump does not operate (pump does not run). Fuse is good. Driver module is good.	Driver module harness.	Check the driver module harness connections. Replace if defective.
Power steering pump does not operate (pump does not run). Fuse is good. Driver module is good. Signal harness is good.	Outboard PCM.	Test the PCM. Refer to Section 1F - Troubleshooting with the Computer Diagnostic System (CDS G3) .

Testing the Power Steering Driver Module

- Use the following circuit to test the power steering driver module.

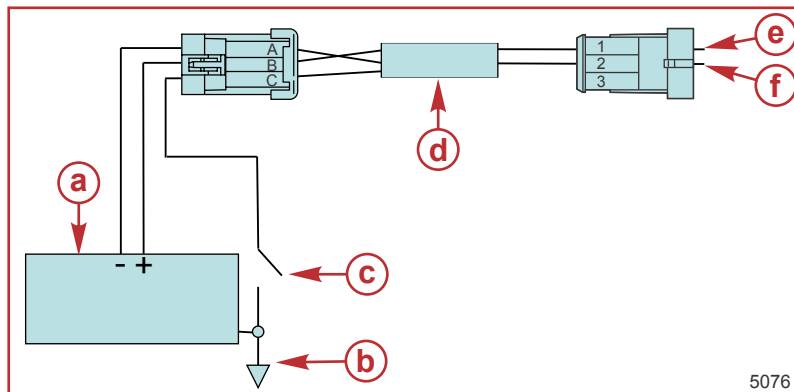

- a - 12-volt DC power supply
- b - Ground
- c - Switch
- d - Power steering driver module (PSDM)
- e - Test output pin 1
- f - Test output pin 2

5076

2. The PSDM input connects to the engine's main harness via a 3-way waterproof connector.
 - a. Pin A provides system ground
 - b. Pin B provides key switch battery voltage
 - c. Pin C provides engine run signal
3. The PSDM output connects to the electric power hydraulic steering (EPHS) unit via a second 3-way waterproof connector.
 - a. Pin 1 provides conditioned engine run signal
 - b. Pin 2 provides key switch battery voltage
 - c. Pin 3 is empty
4. Test the following power steering driver module functional characteristics.

Input Conditions	Output Results	With Respect to :
Pin A = ground Pin B = 12.0 V Pin C = open	Pin 1 = Less than 1 V Pin 2 = 12.6 V or battery voltage	Pin A
Pin A = ground Pin B = 12.0 V Pin C = ground	Pin 1 = 11.5 - 12.5 V Pin 2 = 12.6 V or battery voltage	Pin A


5. Check the driver module for cracks, corrosion, separation of material and broken or partially separated leads.
6. If the driver module does not pass the test specifications or material defects are found, discard the driver module. The power steering driver module is not a repairable component.

Power Steering Cylinder

Steering Cylinder


Removal

1. Disconnect the port and starboard hoses from steering cylinder. Label the port and starboard hoses for reference. Cap and plug the steering cylinder and hose end fittings.
2. Plug the hose ends and cap the elbow fittings on the steering cylinder.
3. Flatten the lock tabs on the steering cylinder mounting screw retainer.
4. Remove the two mounting screws on each side of the outboard pedestal. Remove the steering cylinder from the pedestal.

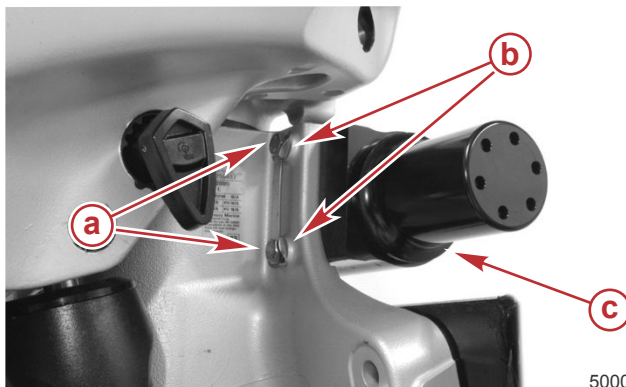

- a - Steering cylinder mounting screws (4) M8 x 30
- b - Retainer lock tab
- c - Steering cylinder


- Remove the O-ring from the steering cylinder housing.

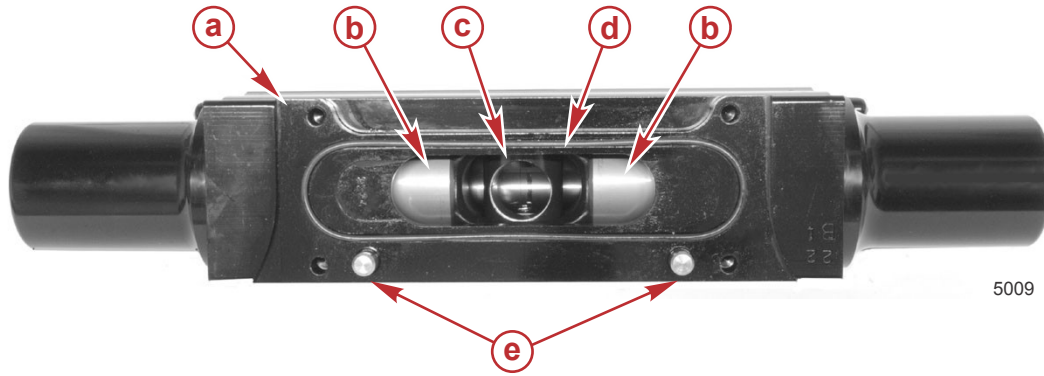


- a** - Steering cylinder housing
- b** - Steering cylinder piston
- c** - Pivot pin assembly and center union assembly
- d** - O-ring
- e** - Dowel pin (2)

Installation

- Ensure that the mounting surface of the steering cylinder housing and pedestal are free of nicks and burrs.
- Install a new lubricated O-ring seal on the steering cylinder mounting surface.

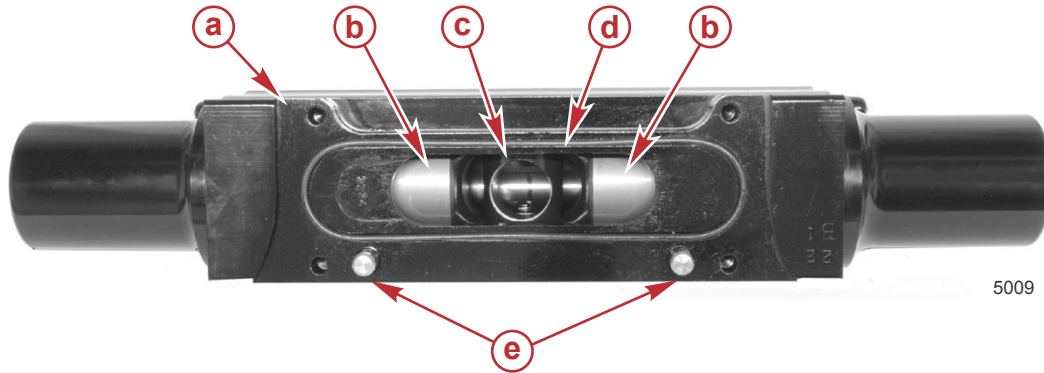


- a** - Steering cylinder housing
- b** - Steering cylinder piston
- c** - Pivot pin assembly and center union assembly
- d** - Steering cylinder housing O-ring
- e** - Dowel pin (2)

Tube Ref No.	Description	Where Used	Part No.
 138	Synthetic Power Steering Fluid SAE 0W-30	Steering cylinder housing O-ring	92-858077K01


- Align the steering arm to the center position.

- Install the steering cylinder on the pedestal.

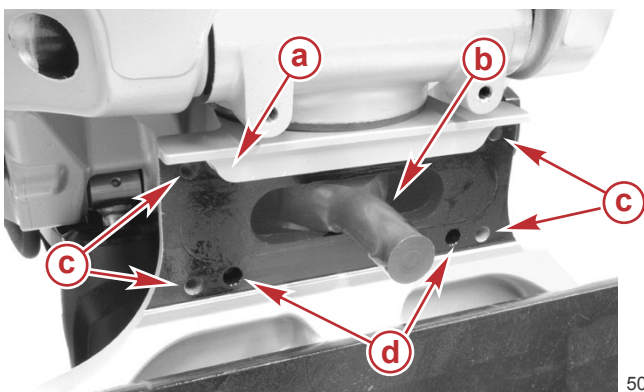

- a - Pedestal
- b - Steering arm
- c - Through holes for mounting screws
- d - Dowel pin holes

- Secure the steering cylinder with four screws and two retainers.
- Tighten the mounting screws to the specified torque.
- Bend the retainer lock tab over a flat of each mounting screw.

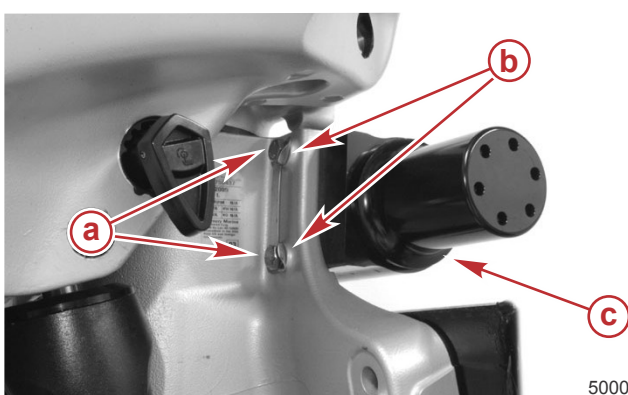

- a - Steering cylinder mounting screws (4) M8 x 30
- b - Retainer lock tab
- c - Steering cylinder

Description	Nm	lb-in.	lb-ft
Steering cylinder mounting screw	24.9	-	18.3


Steering Cylinder End Cap

Removal

IMPORTANT: When servicing hydraulic systems or components, make sure that the work area is clean. Do not use cloth rags to clean components, lint may contaminate the system. Cap or plug all open hydraulic connections. Place disassembled components in clean plastic bags when not working on them. The slightest amount of contamination in the hydraulic system may damage components or cause the system to malfunction.

IMPORTANT: If the end cap is removed while the steering cylinder is on the engine, then all four mounting screws must be replaced.

While the outboard engine is mounted to the transom, remove the end cap from the steering cylinder housing using a steering cylinder end cap socket.

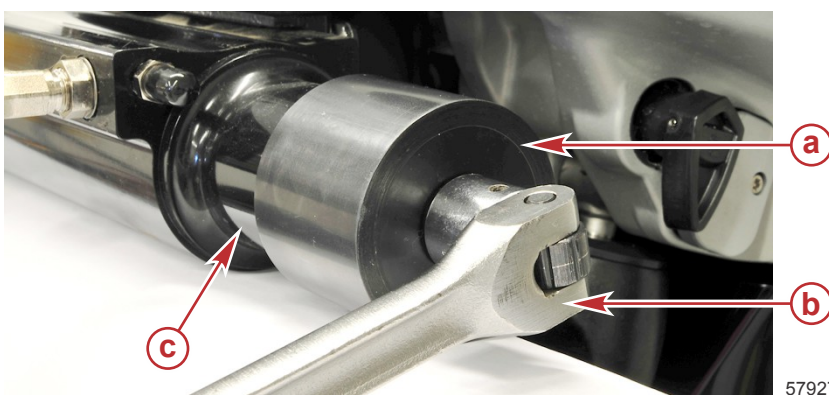


- a - Steering cylinder end cap socket
- b - Breaker bar
- c - Steering cylinder end cap

Steering Cylinder End Cap Socket	8M0078614
----------------------------------	-----------

Seal Replacement

1. Remove the two O-rings from the end cap. Using a pick tool, remove the wear ring and piston seal from the inside diameter of the end cap.


IMPORTANT: Do not use a tool that will damage the end cap when removing the O-rings, wear ring, or piston seal.

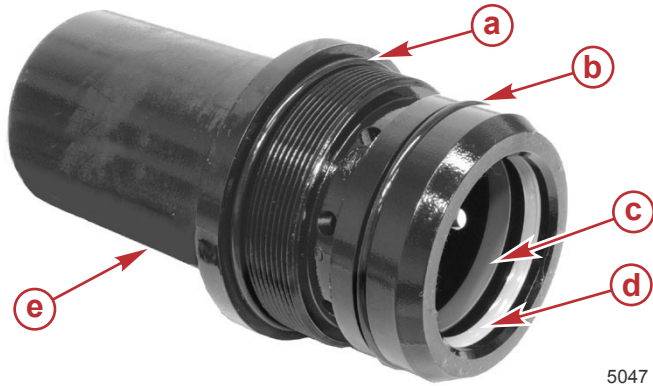

- a - O-ring
- b - O-ring
- c - Wear ring
- d - Piston seal
- e - Steering cylinder end cap


5047

2. Thoroughly clean the end cap.
3. Install a new lubricated wear ring, piston seal, and O-rings.

Tube Ref No.	Description	Where Used	Part No.
 138	Synthetic Power Steering Fluid SAE 0W-30	Piston seal, wear ring, and O-rings	92-858077K01

Installation

Assemble the power steering cylinder end cap onto the steering housing. Using the steering cylinder end cap socket, tighten the end cap to the specified torque.

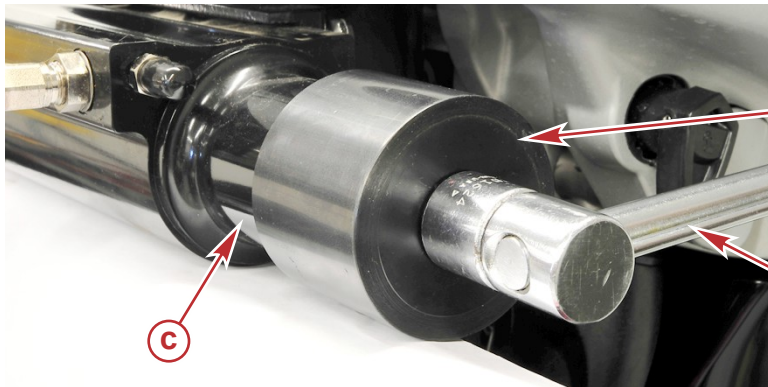

- a - Steering cylinder end cap socket
- b - Torque wrench
- c - Steering cylinder end cap

57928

Steering Cylinder End Cap Socket	8M0078614
----------------------------------	-----------


Description	Nm	lb-in.	lb-ft
Steering cylinder end cap	271	-	200

IMPORTANT: If the end cap was removed with the cylinder still mounted to the engine pedestal, then the four mounting screws must be replaced. Tighten the new steering cylinder mounting screws to the specified torque, and bend each retainer lock tab over a flat of each mounting screw.

Description	Nm	lb-in.	lb-ft
Steering cylinder mounting screw	24.9	-	18.3

Power Steering Installation

Power Steering System

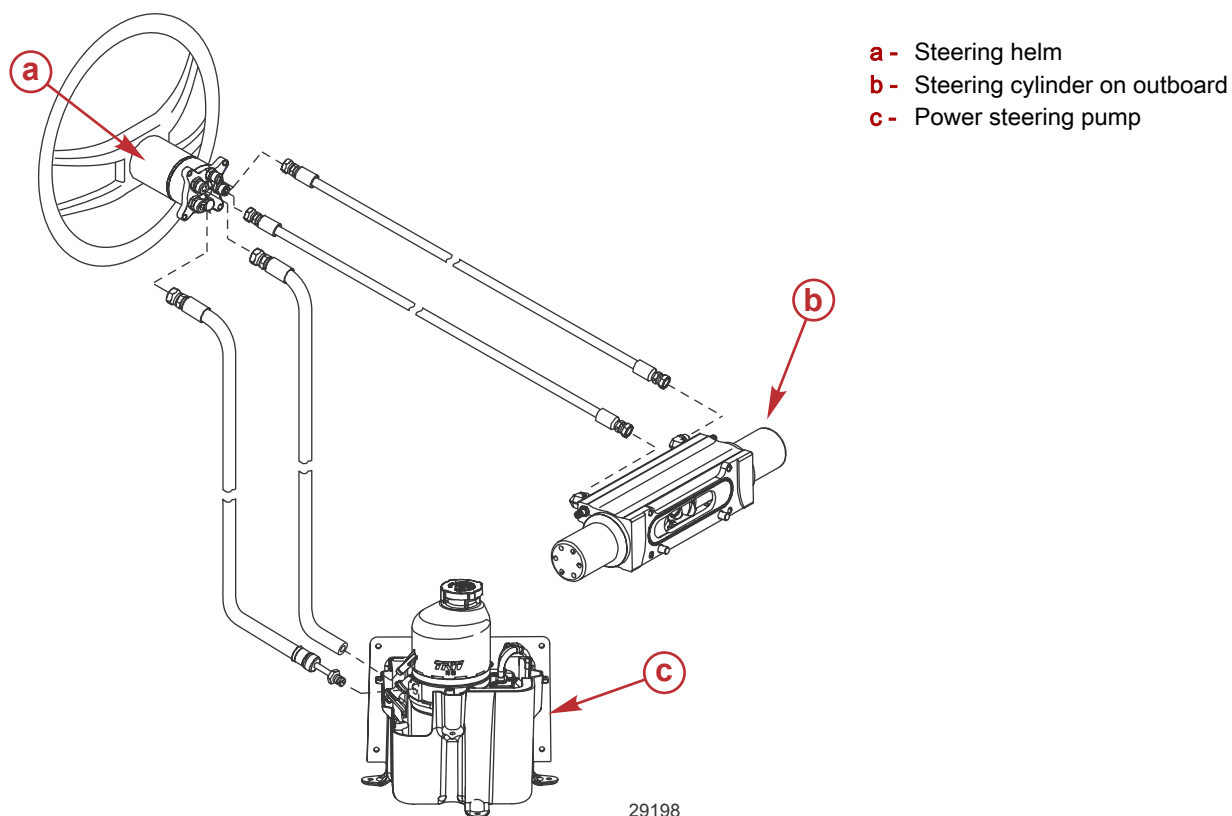

Use of Multiple Cylinders for Multiple Outboards

On some large or heavy dual outboard boats, the steering forces generated in extreme maneuvers may create loads that exceed the pump's pressure capacity. The operator may feel intermittent periods of load feedback at the steering wheel. The steering wheel may feel hard to turn for brief periods during these extreme maneuvers. If steering performance is deemed unacceptable for the application, a second accessory cylinder may be rigged. Do not use more than two steering cylinders, however.

Whenever the number of cylinders is increased, the number of turns of the steering wheel, lock-to-lock, also increases. This is because connecting the cylinders in parallel to decrease the steering effort also increases the displacement. The increase is a linear relationship; that is, doubling the number of cylinders will double the number of turns, lock-to-lock. The only way to reduce the number of turns is to increase the capacity at the helm, accordingly.

Therefore, whenever a vessel uses two steering cylinders, the standard 40 cc helm should be replaced with a 50 cc helm.

Installation Procedure

Selecting a Location for the Power Steering Pump

⚠ WARNING

Dirt or contaminants in the hydraulic steering system can damage the steering system's internal components. Damaged components can lead to serious injury or death due to loss of boat control. Do not allow dirt or contamination to enter the helm, lines, or cylinder of this steering system and perform all hydraulic inspections, service, or assembly procedures in a clean work area.


Select a mounting location (on the floor or the side of the internal bulkhead) for the installation of the power steering pump that meets the following requirements:

- Do not mount the pump on an angle greater than 15° off of vertical.
- The pump electrical wiring must reach the battery.
- The power steering signal driver must reach the thrust vector module (TVM) using only the supplied extension harness.
- The pump should be mounted in an area that allows sound enclosure, cover removal, and easy access to the fill cap.

Power Steering


- Do not mount the pump in a location where the pump can fill with water.
- Install the pump in an area where bilge water will not contaminate the pump.
- The pump must be mounted with enough room to allow proper operation of the drain.
- To reduce transmitted noise, mount the pump on a wood or fiberglass surface. Avoid mounting the pump on aluminum or steel surfaces.
- To reduce noise on aluminum or metal hulls, isolate the steering hoses from the hull with suitable nonabrasive hangers.

Required Mounting Clearances for the Power Steering Pump

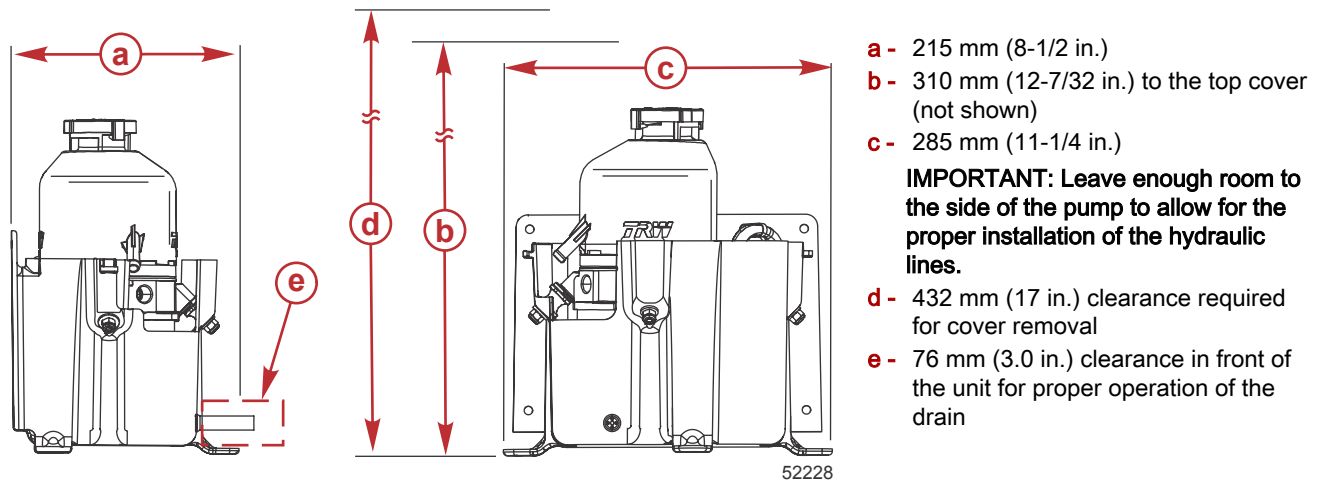

Installing the Power Steering Pump

1. The power steering pump can be mounted in either of two ways:
 - On a side of the internal bulkhead
 - On the floor
2. Mount the power steering pump at the selected location, using appropriate fastening hardware suitable for the type of material and thickness of the mounting surface.

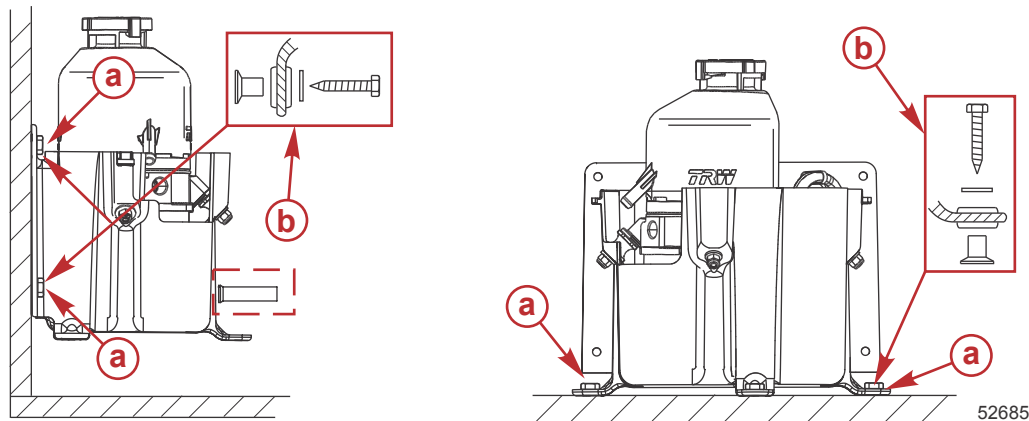


- Mounted on the side of an internal bulkhead**
- a** - Lag screws or through bolts (3 or 4)
 - b** - Mounting hardware

Connection of the Hydraulic Hoses to the Power Steering Pump

1. Remove and discard the yellow protector cap from the reservoir.


2. Connect the low-pressure hydraulic hose from the steering helm to the low-pressure fitting on the pump reservoir as shown. Fasten the hose to the fitting with a hose clamp.

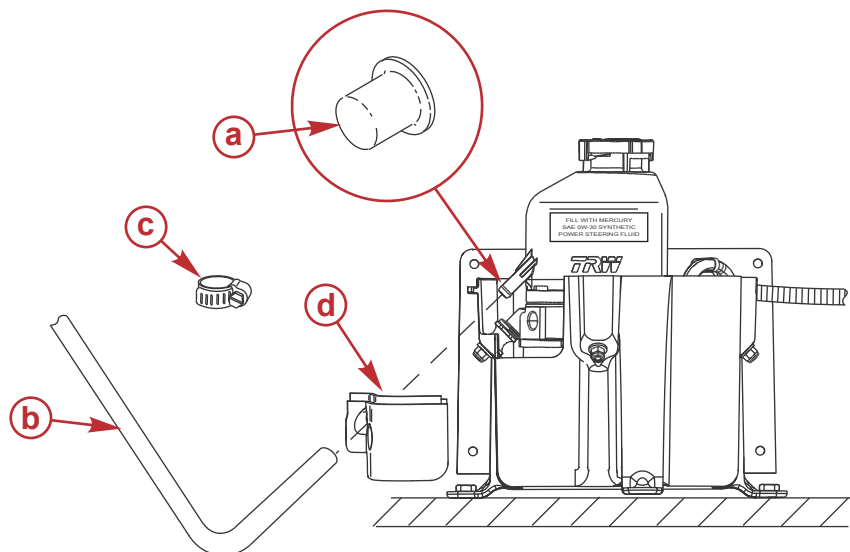

10628

- a - Yellow protector cap (remove and discard)
- b - Low-pressure hydraulic hose from steering helm
- c - Hose clamp
- d - Grommet

3. Remove and discard the cap and plug from the ends of the dampening hose.
4. Ensure that the O-ring seal is on the end of the dampening hose fitting.
5. Connect the high-pressure dampening hose to the power steering pump.
6. Ensure that the O-ring seal is on the end of a high-pressure hydraulic steering hose fitting.
7. Connect the high-pressure hydraulic hose from the steering helm to the dampening hose.
8. Install the grommet onto the power steering pump enclosure.

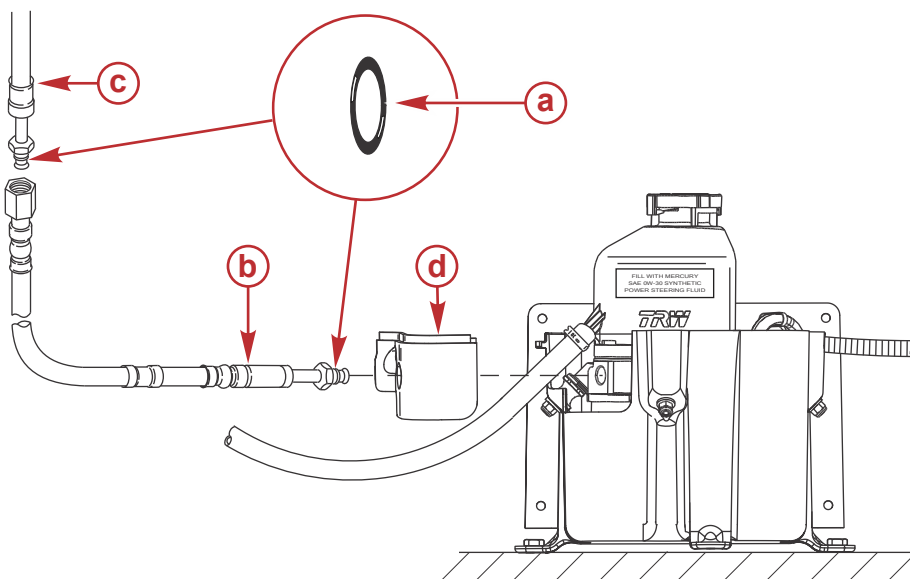

10624


- a - O-ring
- b - Dampening hose
- c - High-pressure hydraulic steering hose
- d - Grommet

Connection of the Hydraulic Hoses to the Steering Helm

NOTE: Hoses must be routed up, through the steering helm opening in the dash, and secured to the helm fittings prior to mounting the steering helm.

1. Place the steering hoses through one backing plate on the internal side of the dashboard. Route the steering hoses through the drilled opening, and place the required amount of backing plates on the hoses on the external side of the dashboard.


NOTE: The number of backing plates varies depending on helm displacement.

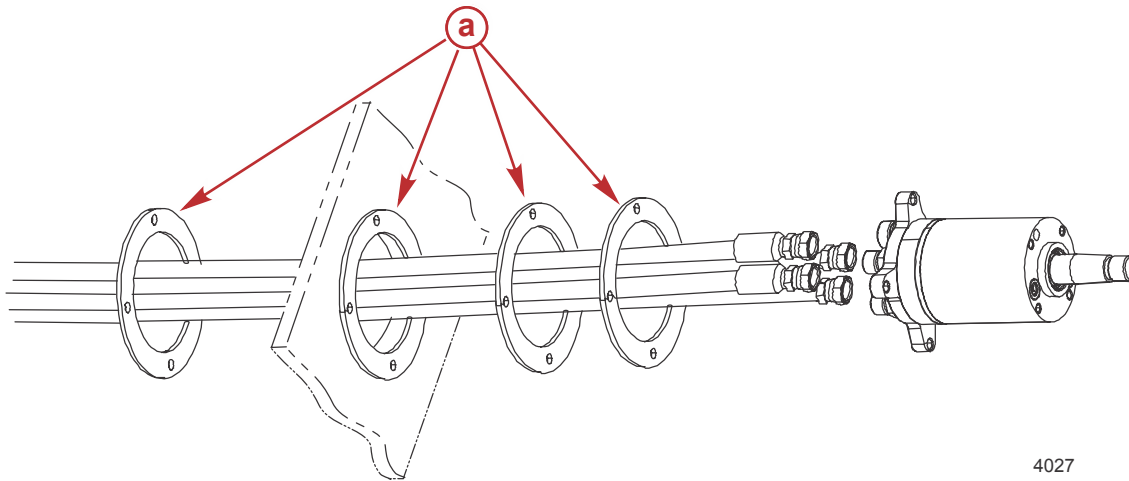

4027

a - Backing plates


2. Remove and discard the shipping caps from the ends of the four fittings on the steering helm. Ensure that the O-ring seals did not lift off with the shipping caps.
3. Ensure that the O-ring seals are in place on the end of the steering helm fittings.

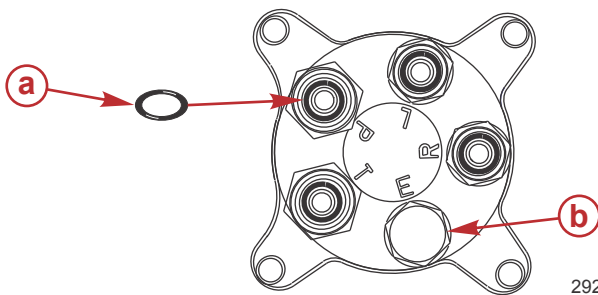

- a - O-ring seals (4)**
- b - Plug—not used**

29203

4. Make the hose connections to the steering helm as shown. Use a thin wrench and hold the helm fittings from turning while tightening the hoses. Do not overtighten the hose connections.

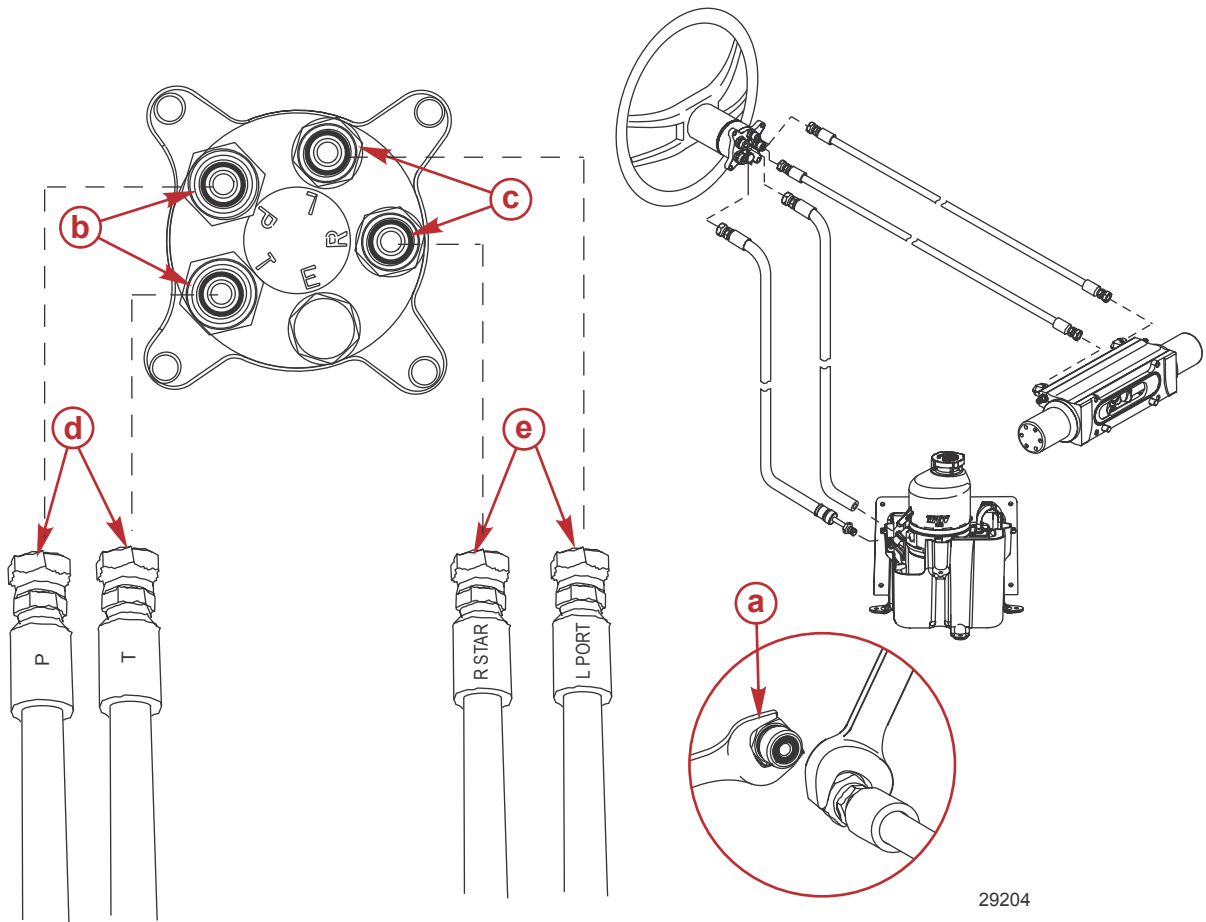


29204

- a** - Thin wrench
- b** - Helm hex fitting wrench size (P and T)—19 mm (3/4 in.)
- c** - Helm hex fitting wrench size (R and L)—16 mm (5/8 in.)
- d** - Hydraulic hose hex fitting wrench size (P and T)—21 mm (13/16 in.)
- e** - Hydraulic hose hex fitting wrench size (R STAR and L PORT)—18 mm (11/16 in.)

Helm Fitting ID Mark	Hose ID Mark	Description
P	P	Pressure from pump to helm
T	T	Tank low pressure return to pump
R	R STAR	Hose connects to starboard side of steering cylinder
L	L PORT	Hose connects to port side of steering cylinder

Connection of the Hydraulic Hoses to the Steering Cylinder


1. Route the hydraulic hoses to the outboard steering cylinder. Bulkhead fittings are available if an opening does not exist in the engine well.

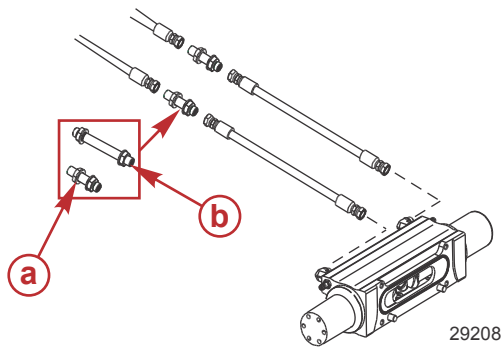

- a - Bulkhead fitting—bulkhead thickness up to 1.9 cm (0.75 in.) (22-892517)
- b - Bulkhead fitting—bulkhead thickness up to 7.62 cm (3 in.) (22-892518)


NOTE: The 90° hose fittings on the steering cylinder can be rotated to align with the hose routing. Straight hose fittings (22-892519) are also available.

2. Position the 90° hose fittings to the desired direction. Loosen the fastening nuts in order to rotate. Position the fittings and tighten the fastening nuts.

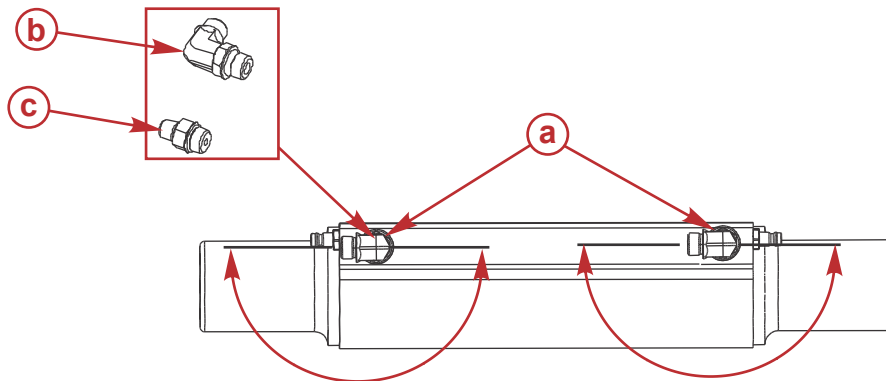


- a - Position fittings
- b - 90° fitting
- c - Straight fitting

3. Remove and discard the shipping caps from the two fittings on the steering cylinder. Ensure that the O-ring seals did not lift off with the shipping caps.
4. Ensure that the O-ring seals are in place on the end of each fitting.

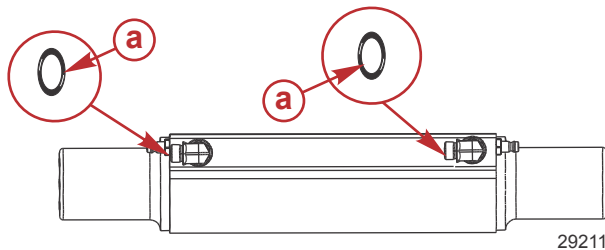


- a - O-rings

5. Make the hydraulic steering hose connections to the steering cylinder as shown.

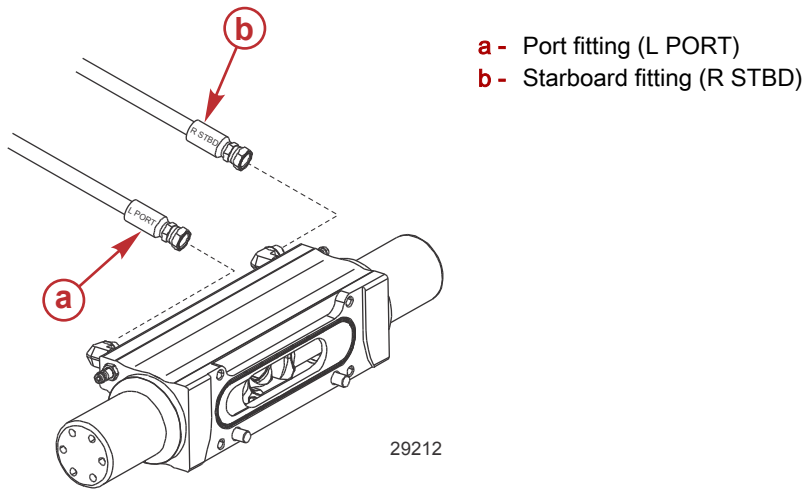

Electrical Connections to the Steering Pump

NOTE: For single engine installation, the power steering pump battery cables should be connected directly to the outboard starting battery.

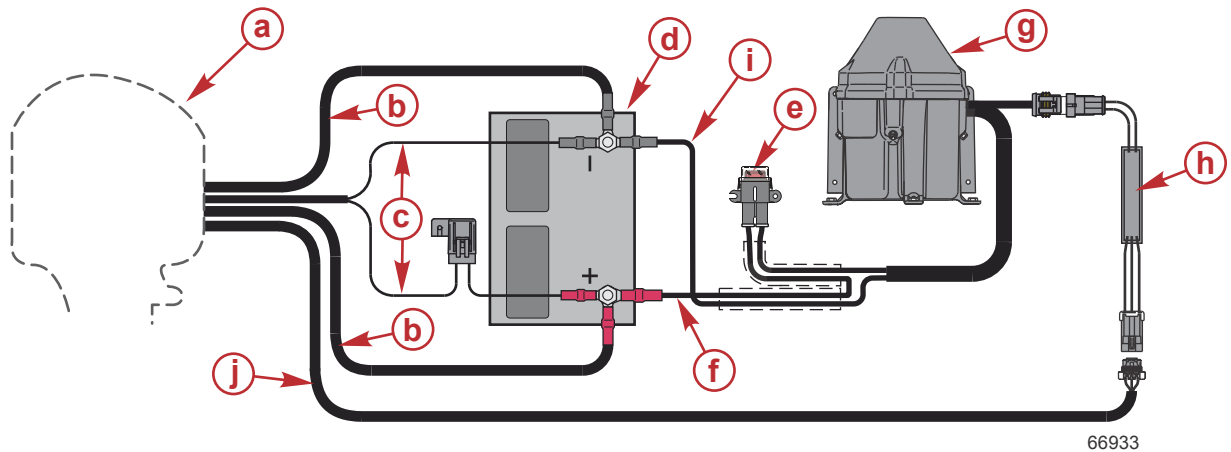


Single engine application

- a - Engine
- b - Battery cables
- c - DTS power harness
- d - Battery
- e - Power steering fuse—60 amp
- f - Power steering pump 12-volt positive harness
- g - Power steering pump
- h - Power steering pump driver module harness
- i - Power steering pump ground harness
- j - Power steering signal harness

Power Steering

NOTE: On multiple installations, the automatic power switch (APS) (87-895091K01) must be used to connect all outboard starting batteries to the power steering pump. The APS allows battery voltage to be drawn from the starting battery with the highest state of charge.

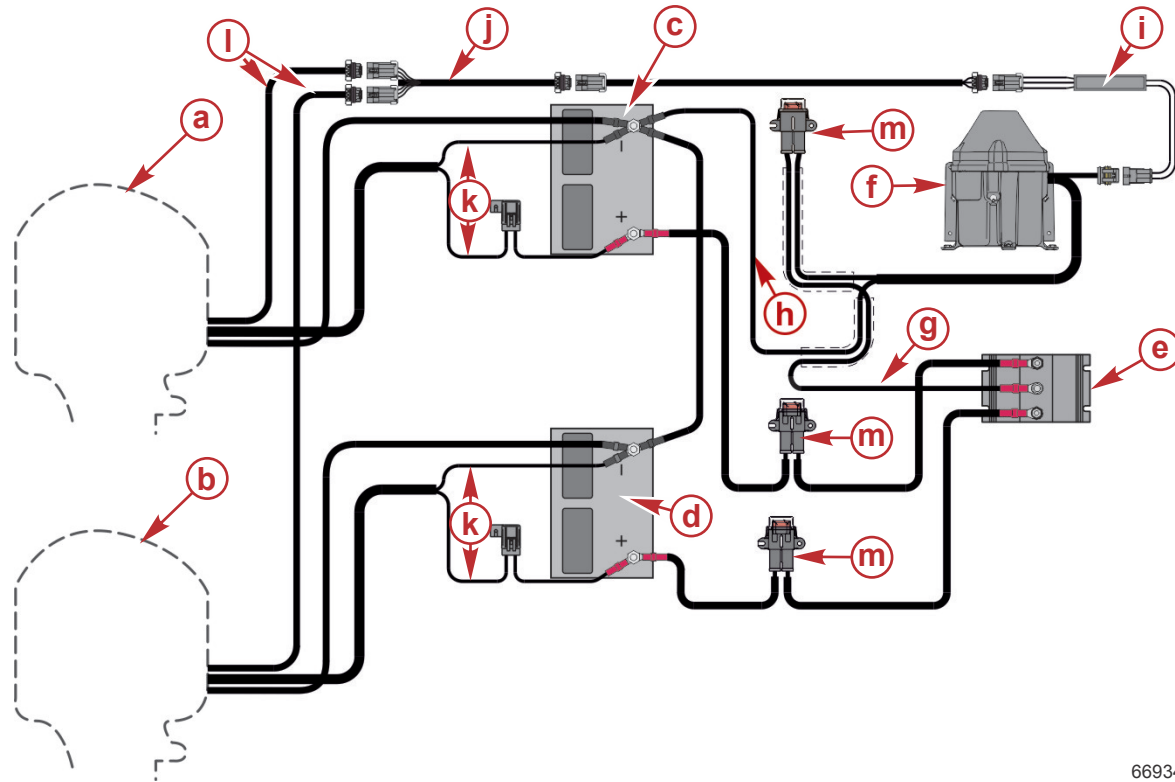


66934

Dual engine application

- a** - Port engine
- b** - Starboard engine
- c** - Port engine cranking battery
- d** - Starboard engine cranking battery
- e** - Automatic power switch (APS)
- f** - Power steering pump
- g** - Power steering pump to APS output terminal
- h** - Power steering pump to cranking battery negative
- i** - Power steering pump driver module harness
- j** - Dual engine power steering adapter
- k** - DTS power harness
- l** - Power steering signal harness
- m** - Fuse—60 amp


Filling Power Steering System with Engine Not Running

Use Synthetic Power Steering Fluid SAE 0W-30 in the power steering system. In an emergency, if the recommended power steering fluid is not available, any full synthetic engine oil can be temporarily used. The power steering fluid should then be drained and replaced with Synthetic Power Steering Fluid SAE 0W-30 as soon as possible to avoid loss of performance in the power steering system.

Tube Ref No.	Description	Where Used	Part No.
 138	Synthetic Power Steering Fluid SAE 0W-30	Power steering pump	92-858077K01


1. Disconnect the power steering signal harness from the engine signal harness.

- Connect the power steering module primer kit to the power steering pump and a 12-volt positive (+) power source as shown.

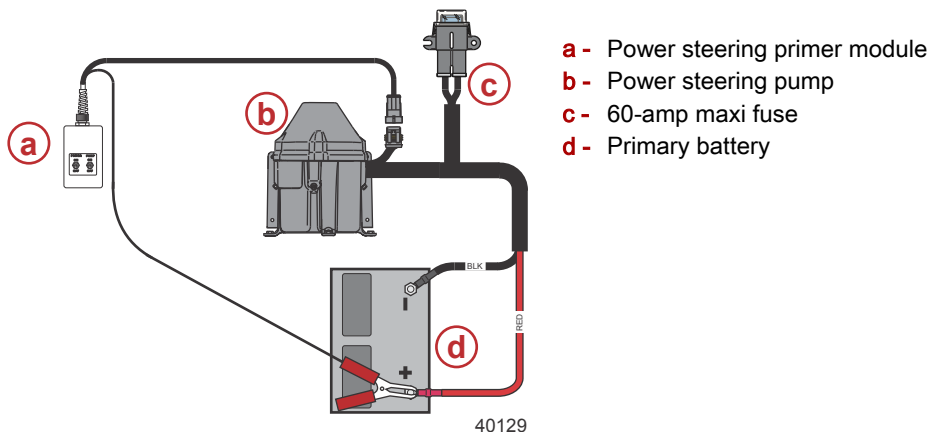

Power Steering Module Primer Kit	91-895040K01
----------------------------------	--------------

- Remove the fill cap from the power steering pump.
- Fill the pump tank with the recommended power steering fluid.

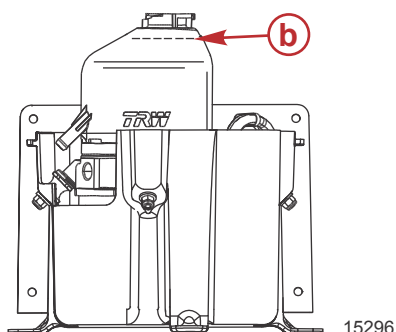

IMPORTANT: The power steering module primer has two switches, "POWER"—"ON" and "OFF", and "PUMP"—"ON" and "OFF." To power up and activate the power steering pump, there are two steps: 1) Turn the "POWER" switch to the "ON" position to power up the pump, wait for two seconds, then, 2) Turn the "PUMP" switch to the "ON" position to activate the pump.


IMPORTANT: Do not run the pump out of fluid. If the pump draws air during bleeding, the resulting rebleeding will take two to three times longer than the initial bleeding.

- Power up and activate the pump until the fluid level drops halfway. Turn off both switches on the power steering module primer and refill the pump tank. Repeat this operation until the pump tank stays full.
- Power up and activate the pump while slowly turning the steering wheel toward the full lock position in one direction. Carefully monitor the fluid level until the fluid level drops halfway. Stop turning the steering wheel and refill the pump tank. Repeat this operation turning the steering wheel from lock to lock 10 times until the pump tank stays full.
- To bleed any air left in the steering system, power up and activate the pump. Turn the steering wheel in one direction until the full lock position is met.
- Attach an 8 mm I.D. (5/16 in. I.D.) transparent bleed hose to the bleed valve on the end of the steering cylinder that the front of the engine is nearest to. Route the bleed hose into the pump tank.

NOTE: Do not bleed the power steering fluid into a different container, this will only be pumping fluid out of the system that was just filled up.

Power Steering

- Open the bleed valve to release any remaining air in the power steering system. Allow adequate time, depending on the length of the power steering hose, for air to escape from the system. Tighten the bleed valve securely and remove the bleed hose.

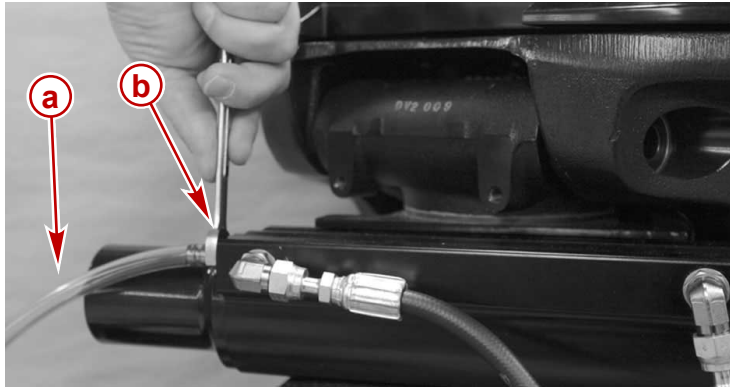

- a - Bleed hose
- b - Bleed valve in steering cylinder

3640


- Turn the steering wheel to the opposite full lock position, and repeat steps 8 and 9.
- Replace the fill cap on the power steering pump.
- Turn off both switches, remove the power steering module primer, and reconnect the power steering signal harness from the engine to the pump.
- If desired, the power steering system can be checked after sitting overnight to remove any air that may be left in the system. Repeat the steps for bleeding the steering system, preceding.

Filling Power Steering System with Engine Running

- Remove the filler cap from the power steering pump.
- Fill the pump tank with the recommended power steering fluid.



- a - Cap
- b - Full level

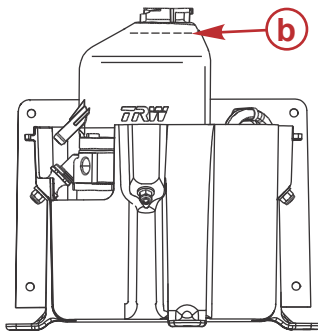


15296

- Start and run the engine until the power steering pump fluid level drops halfway. Turn off the engine and refill the pump. Repeat this operation until the pump stays full.
- Start and run the engine while slowly turning the steering wheel toward the full lock position in one direction. Carefully monitor the fluid level until the fluid level drops halfway. Stop turning the wheel, turn off the engine, and refill the pump tank. Repeat this operation turning the steering wheel from lock to lock 10 times until the pump tank stays full.
- To bleed any air left in the steering system, start and run the engine, and turn the steering wheel in one direction until the full lock position is met.
- Attach an 8 mm (5/16 in.) I.D. transparent bleed hose to the bleed valve on the end of the steering cylinder that the front of the engine is nearest to. Route the bleed hose into the pump tank.

NOTE: Do not bleed the power steering fluid into a different container, as this will only be pumping fluid out of the system that was just filled.

7. Open the bleed valve to release any remaining air in the power steering system. Allow adequate time, depending on the length of the power steering hose, for air to escape from the system. Tighten the bleed valve securely and remove the bleed hose.

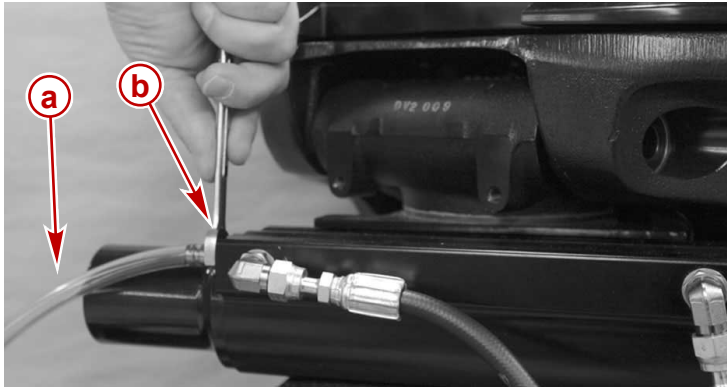


- a - Bleed hose
- b - Bleed valve in steering cylinder

3640

8. Turn the steering wheel to the opposite full lock position, and repeat the procedure for bleeding the steering system.
9. Replace the filler cap on the power steering pump.
10. If desired, the power steering system can be checked after sitting overnight to remove any air that may be left in the system. Repeat the steps for bleeding the steering system, preceding.


Wiring Diagrams

Single-Engine Battery Architecture Diagram

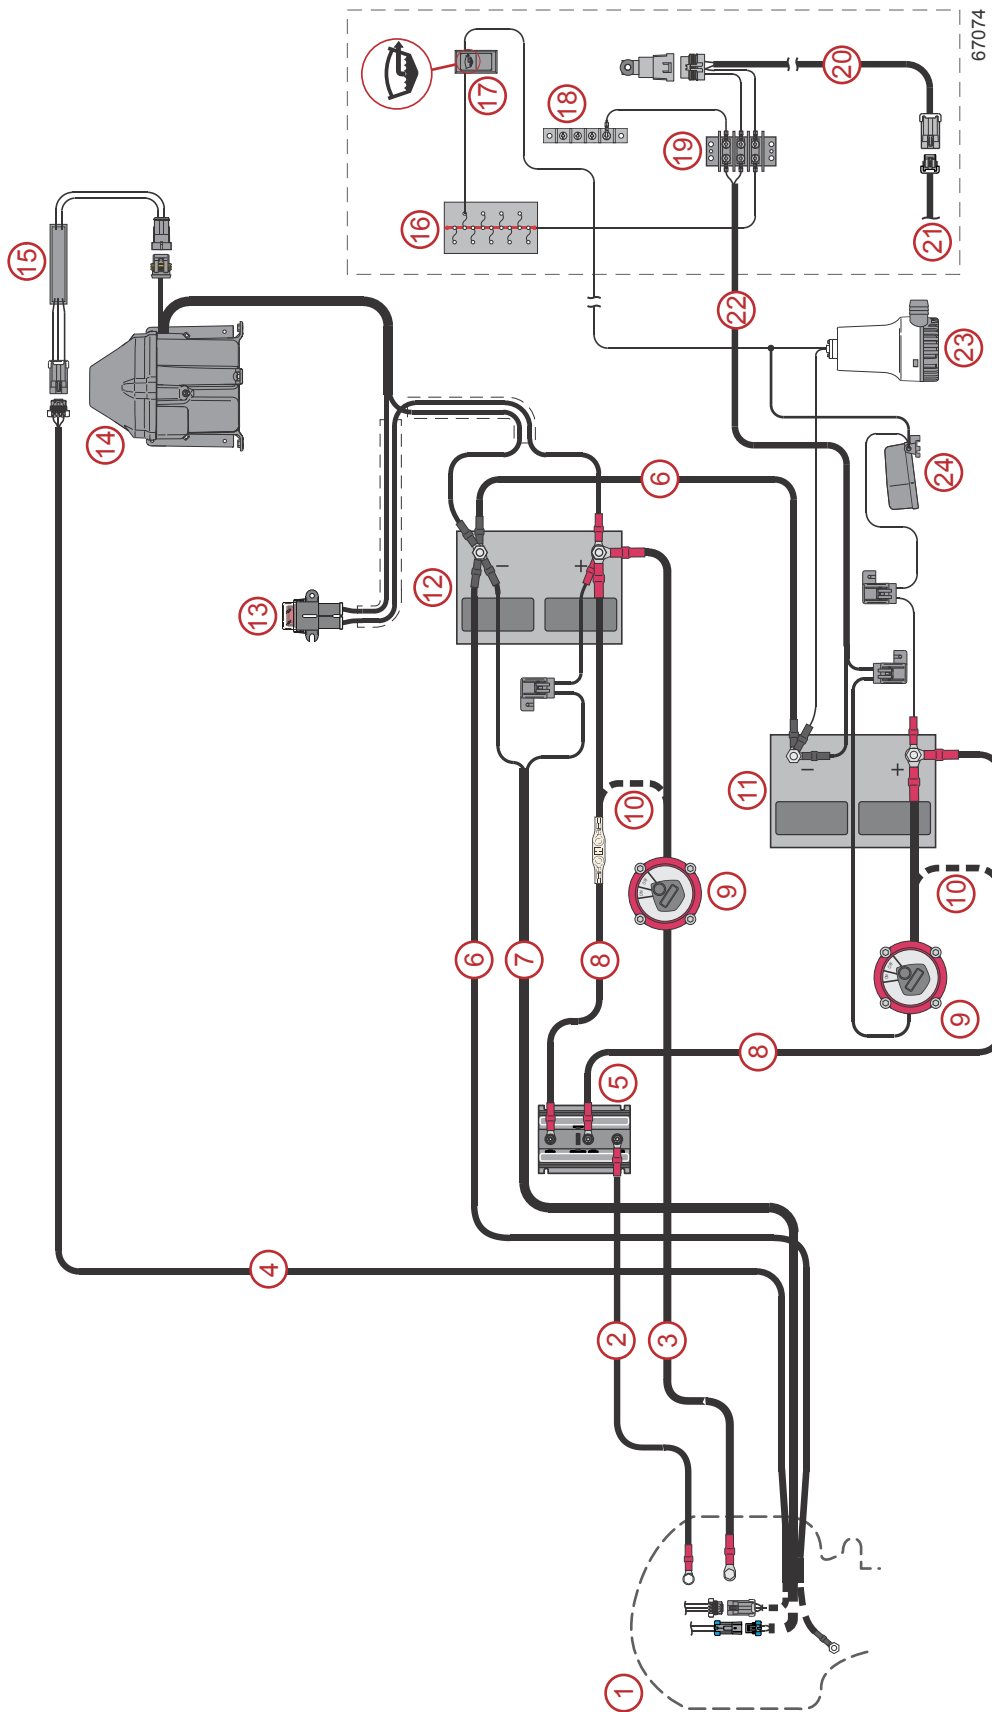


- 1 - Engine
- 2 - Alternator wire
- 3 - Positive battery cable
- 4 - Power steering signal harness
- 5 - Battery isolator
- 6 - Negative battery cable
- 7 - Clean power harness
- 8 - Fused harness
- 9 - Battery switch
- 10 - Alternate connection option
- 11 - Auxiliary battery
- 12 - Starting battery
- 13 - 60-amp maxi fuse
- 14 - Power steering pump
- 15 - Power steering driver module harness
- 16 - Fuse panel
- 17 - Bilge pump switch
- 18 - Ground terminal block
- 19 - Terminal block
- 20 - Relay harness
- 21 - DTS command module harness
- 22 - Accessory power harness
- 23 - Bilge pump
- 24 - Bilge pump float switch

Dual-Engine Battery Architecture Diagram

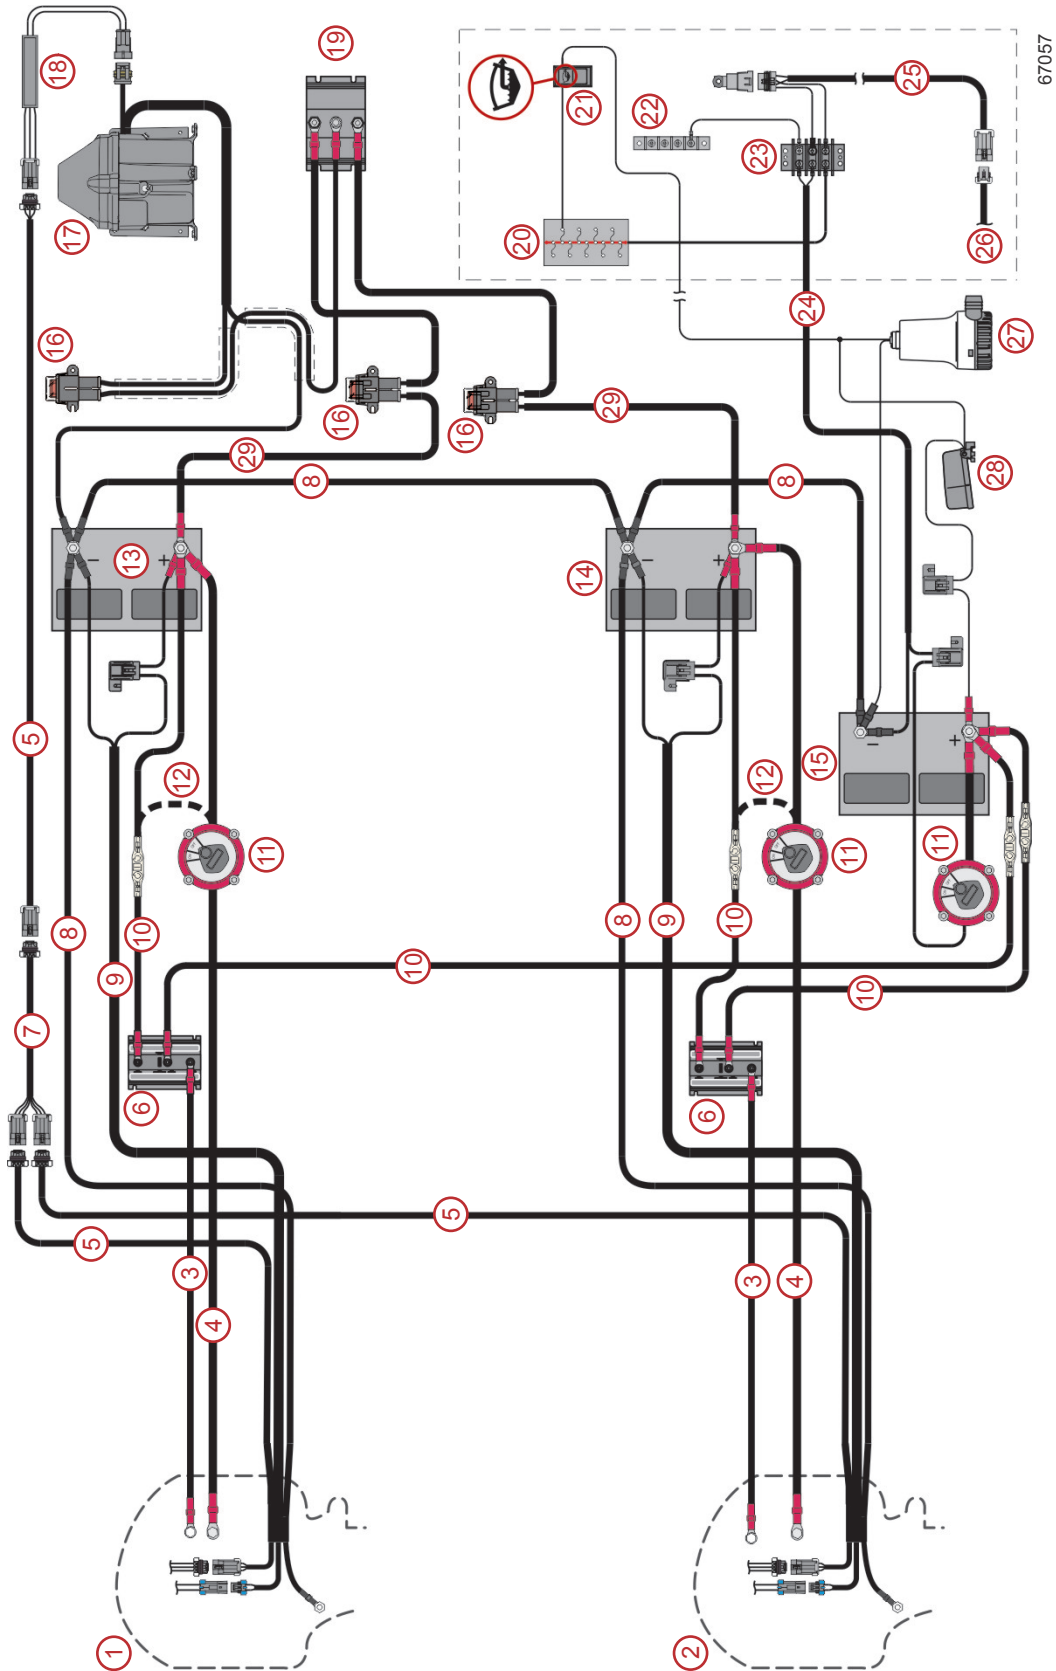


- 1 - Port engine
- 2 - Starboard engine
- 3 - Alternator wire
- 4 - Positive battery cable
- 5 - Power steering signal harness
- 6 - Battery isolator
- 7 - Dual-engine power steering signal harness adapter
- 8 - Negative battery cable
- 9 - Clean power harness
- 10 - Fused harness
- 11 - Battery switch
- 12 - Alternate connection option
- 13 - Port engine starting battery
- 14 - Starboard engine starting battery
- 15 - Auxiliary battery
- 16 - 60-amp maxi fuse
- 17 - Power steering pump
- 18 - Power steering driver module harness
- 19 - Automatic power switch (APS)
- 20 - Fuse panel
- 21 - Bilge pump switch
- 22 - Ground terminal block
- 23 - Terminal block
- 24 - Accessory power harness
- 25 - Relay harness
- 26 - DTS command module harness
- 27 - Bilge pump
- 28 - Bilge pump float switch
- 29 - Positive battery cable with 60-amp maxi fuse

Triple-Engine Battery Architecture Diagram

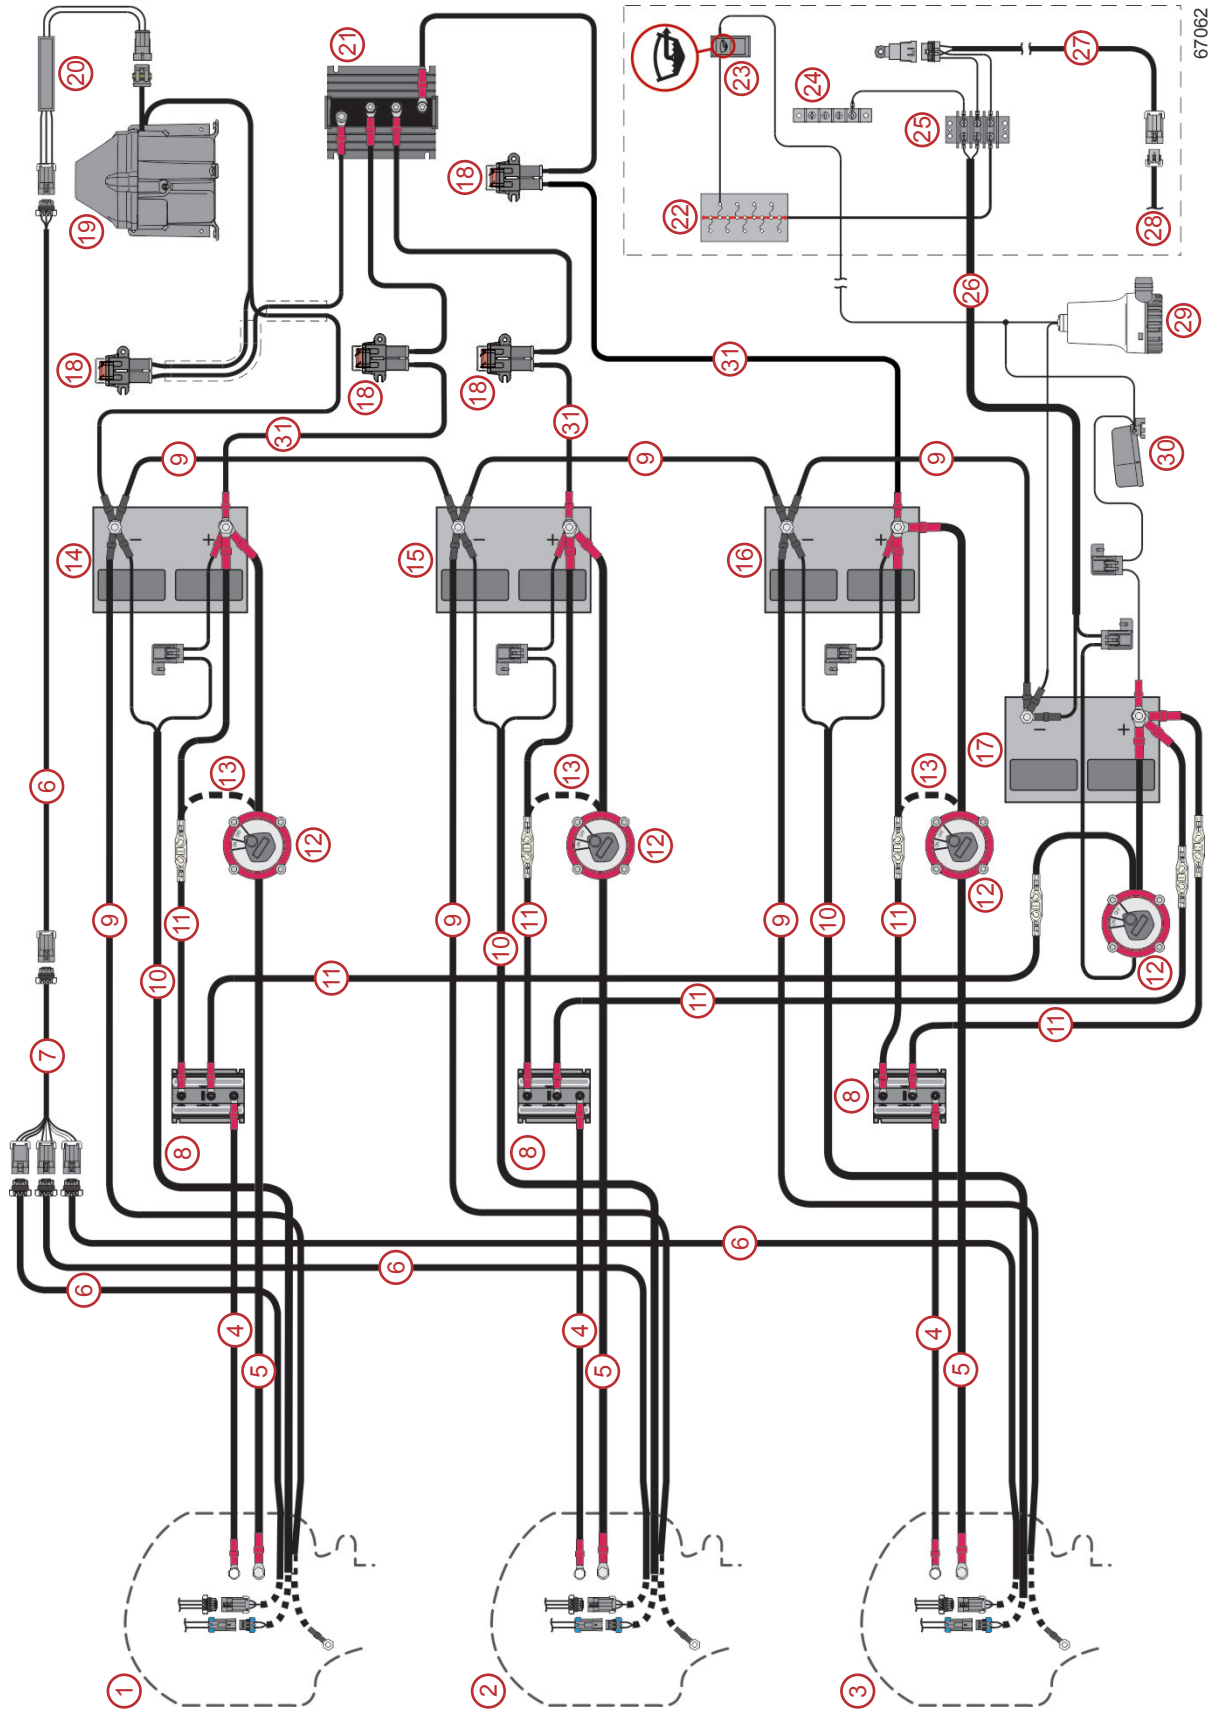

- 1 - Port engine
- 2 - Center engine
- 3 - Starboard engine
- 4 - Alternator wire
- 5 - Positive battery cable
- 6 - Power steering signal harness
- 7 - Triple-engine power steering signal harness adapter
- 8 - Battery isolator
- 9 - Negative battery cable
- 10 - Clean power harness
- 11 - Fused harness
- 12 - Battery switch
- 13 - Alternate connection option
- 14 - Port engine starting battery
- 15 - Center engine starting battery
- 16 - Starboard engine starting battery
- 17 - Auxiliary battery
- 18 - 60-amp maxi fuse
- 19 - Power steering pump
- 20 - Power steering driver module harness
- 21 - Automatic power switch (APS)
- 22 - Fuse panel
- 23 - Bilge pump switch
- 24 - Ground terminal block
- 25 - Terminal block
- 26 - Accessory power harness
- 27 - Relay harness
- 28 - DTS command module harness
- 29 - Bilge pump
- 30 - Bilge pump float switch
- 31 - Positive battery cable with 60-amp maxi fuse

Quad-Engine Battery Architecture Diagram

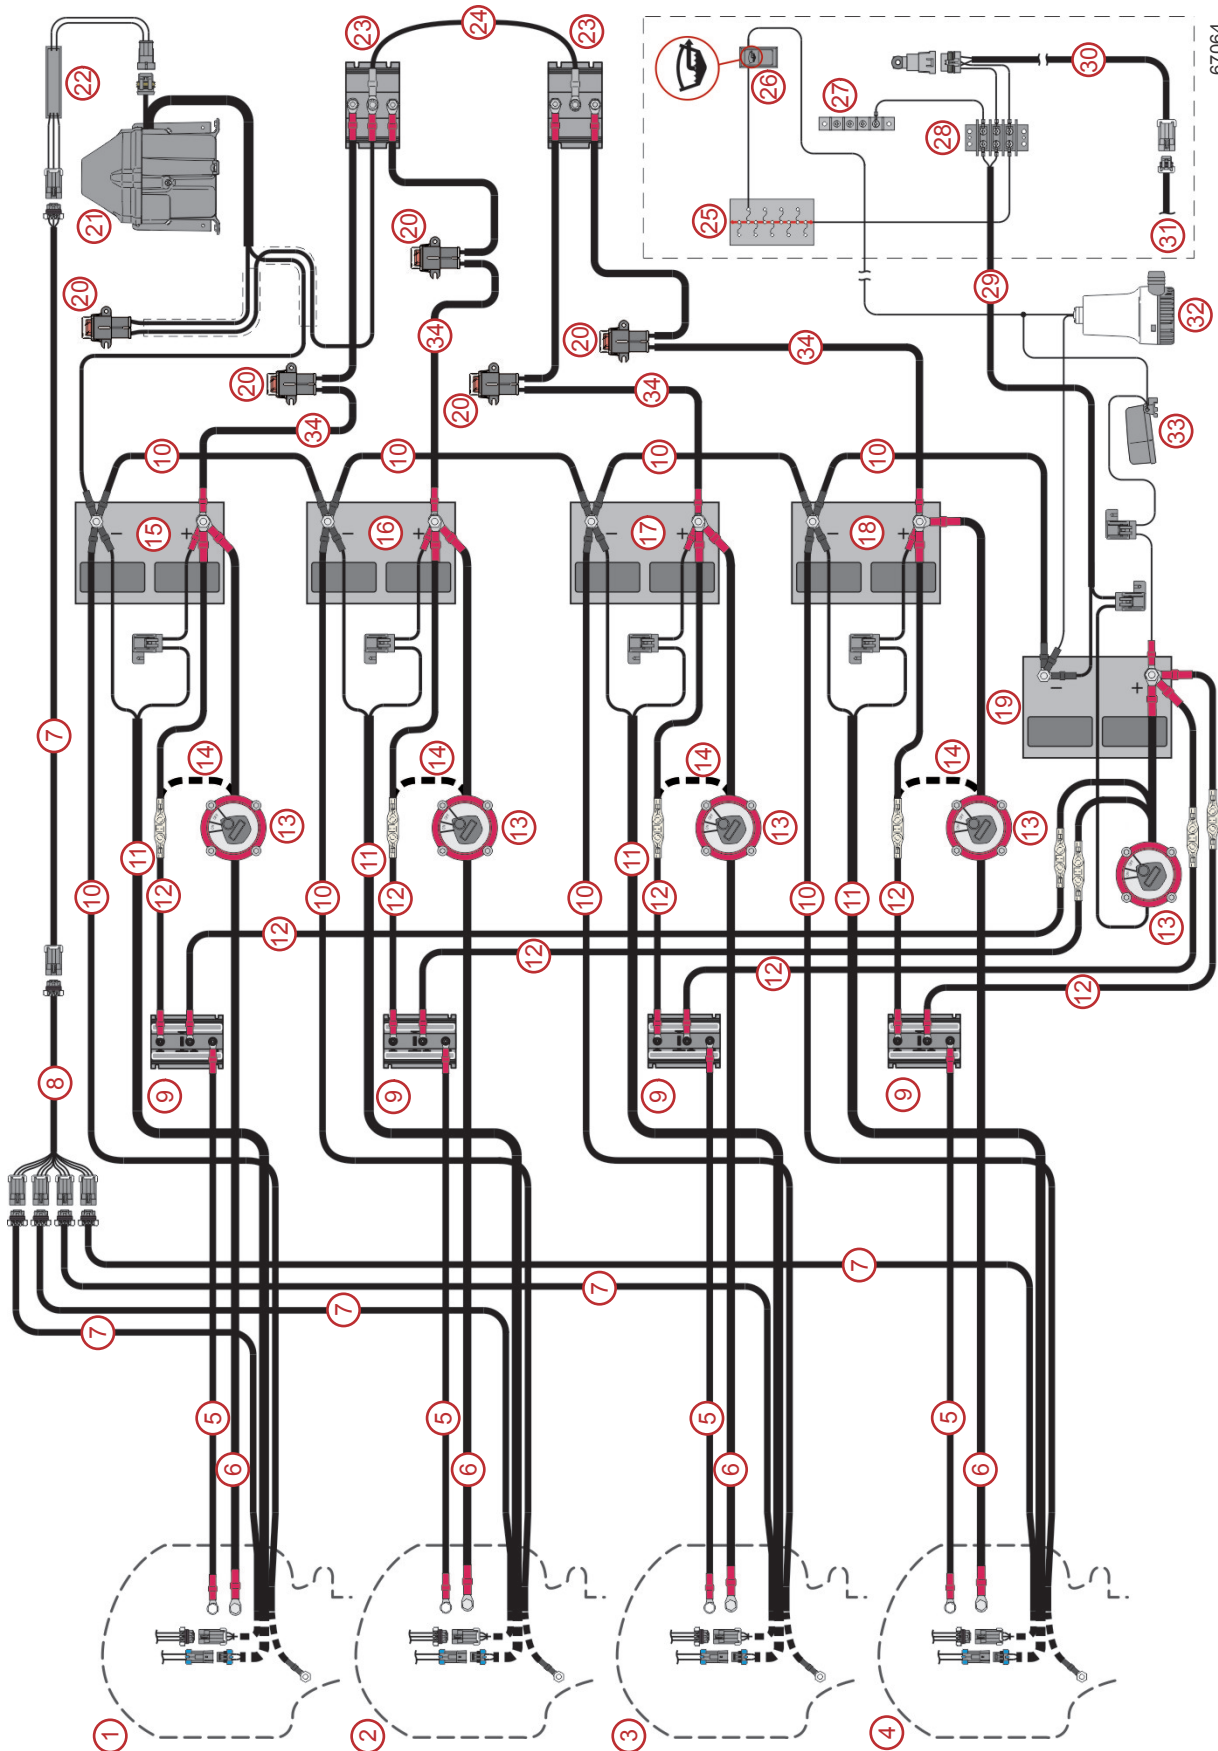

- 1 - Port outside engine
- 2 - Port inside engine
- 3 - Starboard inside engine
- 4 - Starboard outside engine
- 5 - Alternator wire
- 6 - Positive battery cable
- 7 - Power steering signal harness
- 8 - Quad engine power steering signal harness adapter
- 9 - Battery isolator
- 10 - Negative battery cable
- 11 - Clean power harness
- 12 - Fused harness
- 13 - Battery switch
- 14 - Alternate connection option
- 15 - Port outside engine starting battery
- 16 - Port inside engine starting battery
- 17 - Starboard inside engine starting battery
- 18 - Starboard outside engine starting battery
- 19 - Auxiliary battery
- 20 - 60-amp maxi fuse
- 21 - Power steering pump
- 22 - Power steering driver module harness
- 23 - Automatic power switch (APS)
- 24 - APS jumper cable 15.24 cm (6 in.) or less; 8 gauge PVC at 105 °C (221 °F)
- 25 - Fuse panel
- 26 - Bilge pump switch
- 27 - Ground terminal block
- 28 - Terminal block
- 29 - Accessory power harness
- 30 - Relay harness
- 31 - DTS command module harness
- 32 - Bilge pump
- 33 - Bilge pump float switch
- 34 - Positive battery cable with 60-amp maxi fuse

Notes:

Steering


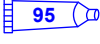

Section 7B - AMS Tie Bar Kits

Table of Contents


Dual Tie Bar.....	7B-2	Liquid Tie Bar Kit.....	7B-10
Dual Tie Bar Kit Installation.....	7B-2	Component Contained In Liquid Tie Bar Kit	
Maintenance Instructions.....	7B-5	(893396A02).....	7B-10
Plus One Tie Bar.....	7B-6	Liquid Tie Bar Installation.....	7B-10
Tie Bar Plus One Kit Installation.....	7B-6	Bleeding Instructions.....	7B-11
Maintenance Instructions.....	7B-10	Realignment Instructions.....	7B-12

**7
B**

Lubricant, Sealant, Adhesives

Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	First four threads of tie bar arm attaching screws	92-809819
		Threads of the clevis/tie bar arm attaching bolts and nuts	
		First four threads of tie bar attaching screws	
 95	2-4-C with PTFE	Clevis attaching bolt shoulders	92-802859A 1
		Clevis/tie bar arm attaching bolt shoulder	
 138	Synthetic Power Steering Fluid SAE 0W-30	Steering system	92-858077K01

Special Tools

Power Steering Module Primer Kit	91-895040K01
 5547	Bleeds power steering system without running engine.

Dual Tie Bar

Dual Tie Bar Kit Installation


IMPORTANT
Kit 8M0096314 is used for outboard centerline spacing 66–68.6 cm (26–27 in.)
Kit 8M0096315 is used for outboard centerline spacing 68.6–73.7 cm (27–29 in.)
Kit 8M0096316 is used for outboard centerline spacing 73.7–78.7 cm (29–31 in.)
Kit 8M0096317 is used for outboard centerline spacing 78.7–83.8 cm (31–33 in.)
Kit 8M0096319 is used for outboard centerline spacing 83.8–88.9 cm (33–35 in.)
Kit 8M0097267 is used for outboard centerline spacing 88.9–94 cm (35–37 in.)

IMPORTANT: The tie bar arms must be fastened to each engine using special screws. The use of any other unauthorized fastener may result in the tie bar arm disconnecting from the engine.


WARNING

Improper fasteners or improper installation procedures can result in loosening or disengagement of the tie bar. This can cause a sudden, unexpected loss of boat control, resulting in serious injury or death due to occupants being thrown within or out of the boat. Always use required components and follow all tie bar installation instructions and torque procedures.

1. Install the tie bar arm onto each engine with two M10 x 1.5 x 75 mm screws, two stainless steel washers, and two tab washers. Apply Loctite 271 Threadlocker to the first four threads of the screws.

Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	First four threads of tie bar arm attaching screws	92-809819

- Install the locating tab of each tab washer through the retainer locating hole in the tie bar arm. Hold the tab washer in position and tighten the screws to the specified torque. Bend each locking tab of the tab washer against the flat of each screw.

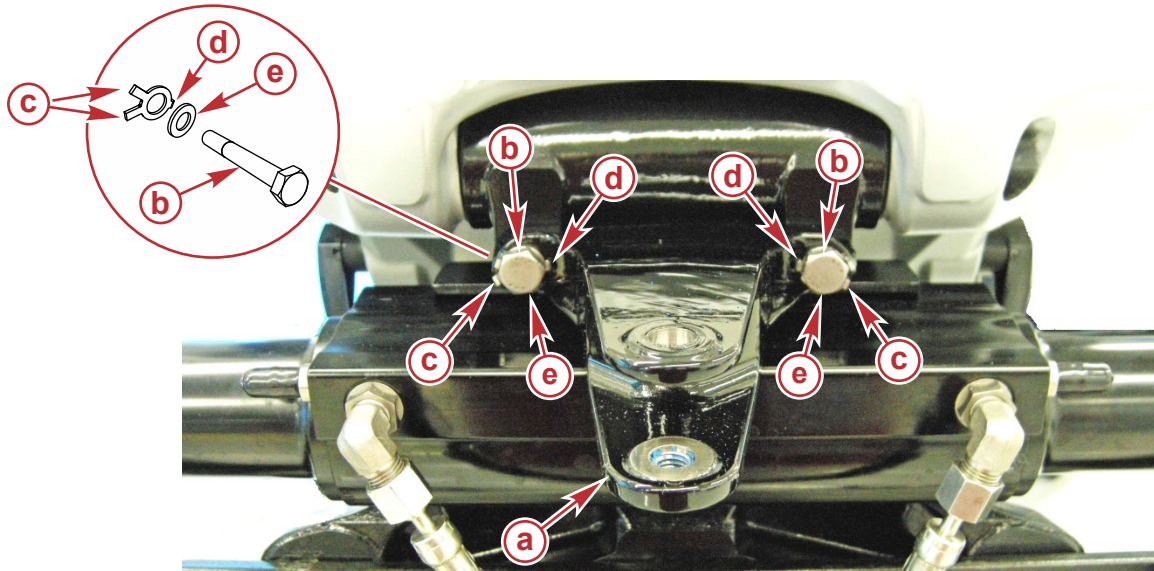


57498

- a** - Tie bar arm
- b** - M10 x 1.5 x 75 mm screw
- c** - Locking tab
- d** - Retainer locating tab
- e** - Stainless steel washer

Description	Nm	lb-in.	lb-ft
Tie bar arm attaching screw (M10 x 1.5 x 75 mm)	90	-	66.4


- Measure the distance between the tie bar arm centers. Record the distance.

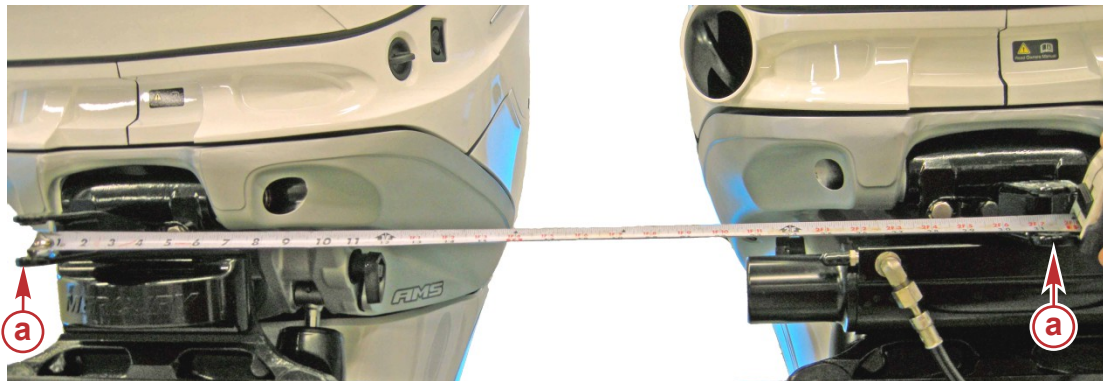

57499

- a** - Tie bar arm centers

4. Measure the distance between the propeller shaft centers. Record the distance.

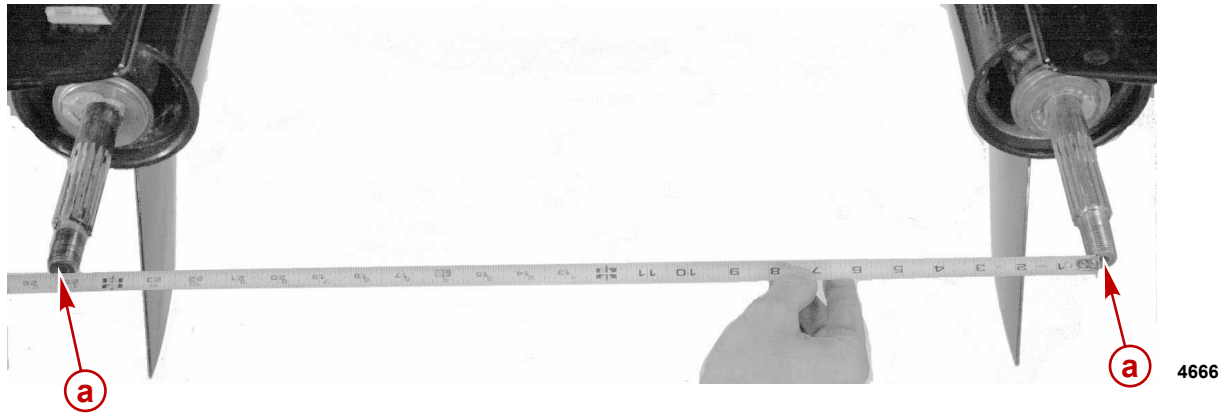

a - Propeller shaft centers


5. Adjust the engines to equalize both measurements. Record the new measurement.

IMPORTANT: The tie rod end must be threaded into the coupler a minimum of 30 mm (1.18 in.), and the jam nut tightened against the coupler to 50 Nm (36.9 lb-ft) of torque to prevent the coupler from turning. Insufficient engagement of the tie rod threads could result in the tie rods pulling out of the coupler and disengaging the steering tie rod.

⚠ WARNING

Improper fasteners or improper installation procedures can result in loosening or disengagement of the tie bar. This can cause a sudden, unexpected loss of boat control, resulting in serious injury or death due to occupants being thrown within or out of the boat. Always use required components and follow all tie bar installation instructions and torque procedures.

6. Thread the M20 jam nut onto the tie rod end, then thread the tie rod end onto the tie rod coupler a minimum of 30 mm (1.18 in.).
7. Ensure that the bushings are in each tie rod end.
8. Ensure that the flanged bushings are in both sides of each clevis.
9. Install a clevis onto the end of the coupler and onto the tie rod end. Apply 2-4-C with PTFE to the M10 x 1.5 x 42 mm clevis attaching bolt shoulders. Install and tighten the clevis attaching bolts to the specified torque, then tighten the M10 jam nuts to the specified torque while holding the clevis attaching bolt head with a wrench.

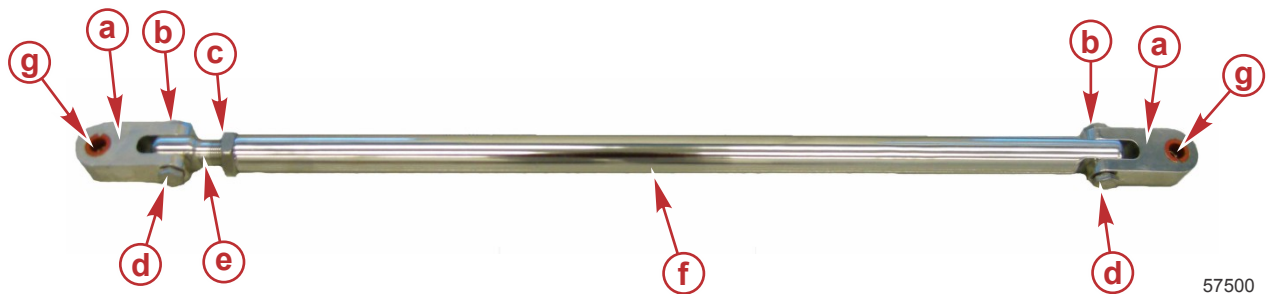

- a - Clevis
- b - M10 jam nut
- c - M20 jam nut
- d - Clevis attaching bolt (M10 x 1.5 x 42 mm)
- e - Tie rod end
- f - Coupler
- g - Flanged bushings

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Clevis attaching bolt shoulders	92-802859A 1


Description	Nm	lb-in.	lb-ft
Clevis attaching bolt (M10 x 1.5 x 42 mm) (tighten first)	25	–	18.4
M10 jam nut (tighten second while holding the bolt with a wrench)	50	–	36.9

- Install one side of the tie bar assembly onto one of the tie bar arms. Apply 2-4-C with PTFE to the M10 x 1.5 x 50.5 mm clevis attaching bolt shoulders. Secure the tie bar assembly with a M10 x 1.5 x 50.5 mm bolt and M10 jam nut.

NOTE: To aid in the installation of the second tie bar mount bolt, turn the tie bar coupler to help align the mounting bolt holes between the tie bar arms and the tie bar clevises.
- Adjust the tie bar length to match the measurement recorded in step 5 by turning the coupler or the tie rod end.

IMPORTANT: Ensure that the tie rod end is threaded into the coupler a minimum of 30 mm (1.18 in.).
- Install the free end of the tie bar assembly onto the other tie bar arm. Ensure that the engines are centered.
- Tighten the M10 x 1.5 x 50.5 mm clevis/tie bar arm attaching bolt to the specified torque, then tighten the M10 jam nut to the specified torque while holding the bolt head with a wrench.
- When the engines are centered, tighten the M20 jam nut against the coupler to the specified torque.

IMPORTANT: If the M10 x 1.5 x 50.5 mm clevis/tie bar arm attaching bolts and M10 jam nuts are removed after initial installation, Loctite 271 Threadlocker should be applied to the threads of the clevis/tie bar arm attaching bolts and nuts prior to installation to ensure retention.

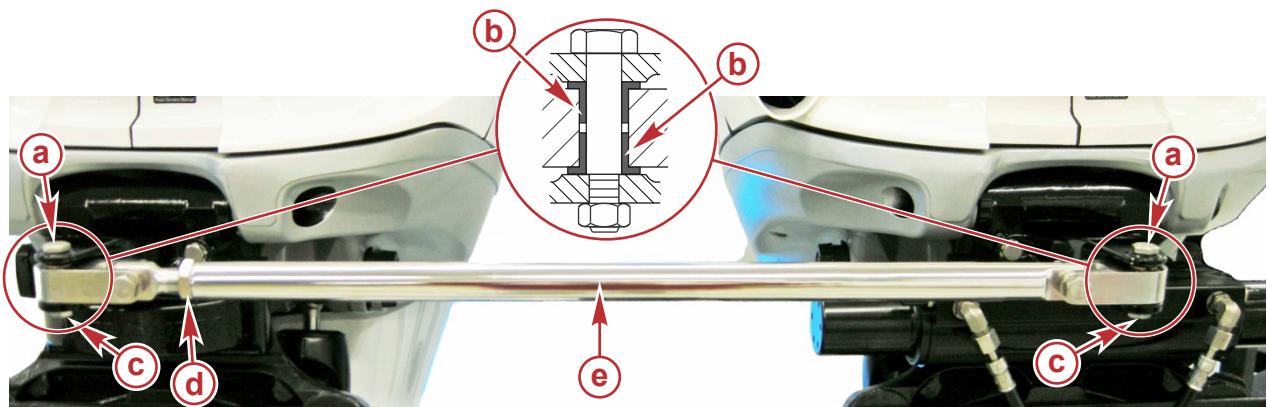

57502

- a - Clevis/tie bar arm attaching bolts (M10 x 1.5 x 50.5 mm)
- b - Flanged bushing (12 x 12 mm)
- c - M10 jam nut
- d - M20 jam nut
- e - Coupler

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Clevis/tie bar arm attaching bolt shoulder	92-802859A 1
7	Loctite 271 Threadlocker	Threads of the clevis/tie bar arm attaching bolts and nuts	92-809819

Description	Nm	lb-in.	lb-ft
Clevis/tie bar arm attaching bolts (M10 x 1.5 x 50.5 mm) (tighten first)	25	–	18.4
M10 jam nut (tighten second while holding the bolt with a wrench)	50	–	36.9
M20 jam nut	50	–	36.9

⚠ WARNING

Incorrect steering system installation can result in serious injury or death. After completing installation and before operating the outboard, check steering operation. The outboard must turn left and right in conjunction with the steering wheel. Check the steering through the full range and at all tilt angles.

Maintenance Instructions

Maintenance inspection is the owner's responsibility and must be performed at the specific intervals.
 Normal service - Every 50 hours of operation or 60 days (whichever comes first).

AMS Tie Bar Kits

Severe service - Every 25 hours of operation or 30 days (whichever comes first).

NOTE: Operation in saltwater is considered severe service.

1. Check steering system components for wear. Replace any worn parts.
2. Check steering system fasteners to ensure they are torqued to correct specifications.
3. Refer to operating and maintenance instructions for power steering system.

Plus One Tie Bar

Tie Bar Plus One Kit Installation

IMPORTANT


Kit 8M0096320 is used for outboard centerline spacing 66–68.6 cm (26–27 in.)
Kit 8M0096321 is used for outboard centerline spacing 68.6–73.7 cm (27–29 in.)
Kit 8M0096322 is used for outboard centerline spacing 73.7–78.7 cm (29–31 in.)
Kit 8M0096323 is used for outboard centerline spacing 78.7–83.8 cm (31–33 in.)
Kit 8M0096324 is used for outboard centerline spacing 83.8–88.9 cm (33–35 in.)
Kit 8M0097268 is used for outboard centerline spacing 88.9–94 cm (35–37 in.)

IMPORTANT: The tie bar arms must be fastened to each engine using special screws. The use of any other unauthorized fastener may result in the tie bar arm disconnecting from the engine.


WARNING

Improper fasteners or improper installation procedures can result in loosening or disengagement of the tie bar. This can cause a sudden, unexpected loss of boat control, resulting in serious injury or death due to occupants being thrown within or out of the boat. Always use required components and follow all tie bar installation instructions and torque procedures.

1. Install the tie bar arm onto each engine with two M10 x 1.5 x 75 mm screws, two stainless steel washers, and two tab washers. Apply Loctite 271 Threadlocker to the first four threads of the screws.

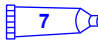Tube Ref No.	Description	Where Used	Part No.
 7	Loctite 271 Threadlocker	First four threads of tie bar attaching screws	92-809819

- Install the locking tab of each tab washer through the retainer locating hole in the tie bar arm. Hold the tab washer in position and tighten the screws to the specified torque. Bend each locking tab of the tab washer against the flat of each screw.

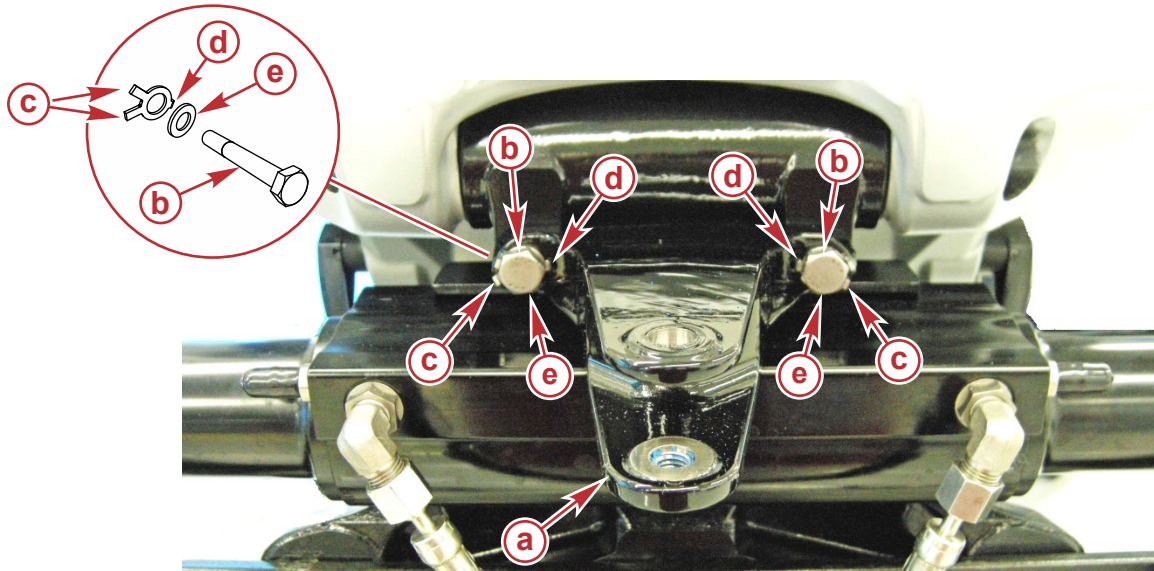


57498

- a** - Tie bar arm
- b** - Tie bar arm attaching screw (M10 x 1.5 x 75 mm)
- c** - Locking tab
- d** - Retainer locating tab
- e** - Stainless steel washer

Description	Nm	lb-in.	lb-ft
Tie bar arm attaching screw (M10 x 1.5 x 75 mm)	90	-	66.4


- Measure the distance between the tie bar arm centers and record the distance.

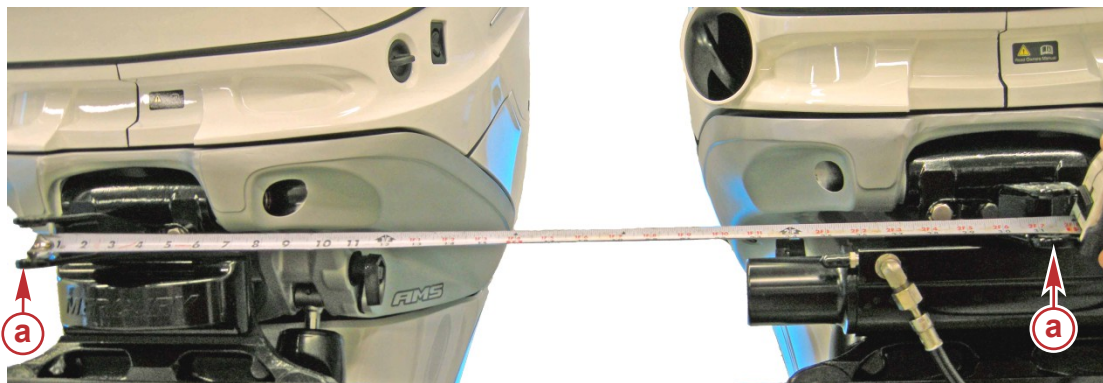

57499

- a** - Tie bar arm centers

4. Measure the distance between the propeller shaft centers and record the distance.

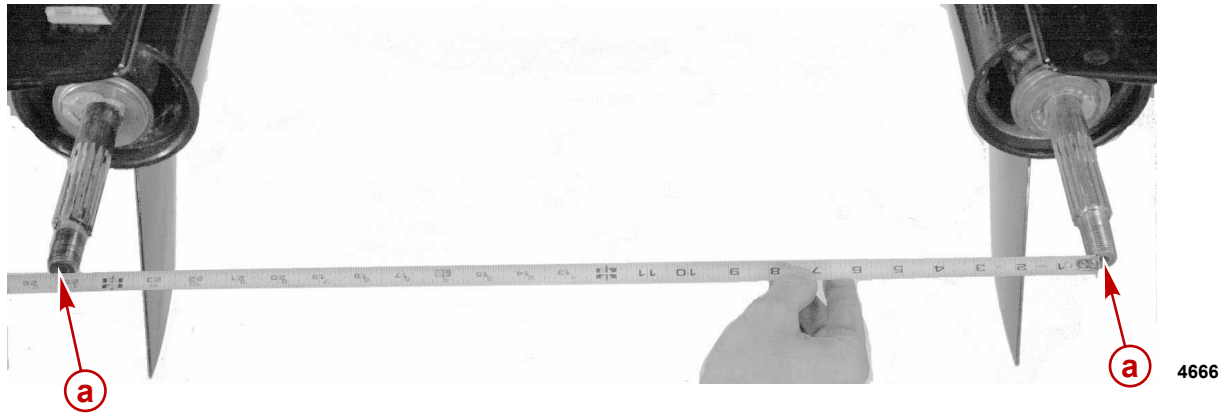

a - Propeller shaft centers

5. Adjust the engines to equalize both measurements. Record the new measurement.


IMPORTANT: Both tie rod ends must be threaded into the coupler a minimum of 30 mm (1.18 in.), and the jam nut tightened against the coupler to 50 Nm (36.9 lb-ft) of torque to prevent the coupler from turning. Insufficient engagement of the tie rod threads could result in the tie rods pulling out of the coupler and disengaging the steering tie rod.

⚠ WARNING

Improper fasteners or improper installation procedures can result in loosening or disengagement of the tie bar. This can cause a sudden, unexpected loss of boat control, resulting in serious injury or death due to occupants being thrown within or out of the boat. Always use required components and follow all tie bar installation instructions and torque procedures.

6. Thread the jam nut onto the tie rod end, then thread the tie rod end into the tie rod coupler a minimum of 30 mm (1.18 in.).
7. Ensure that the bushings are in each tie rod end.
8. Ensure that the flanged bushings are in each side of the clevis.


NOTE: On triple engine installations, install the double clevis assembly onto the center engine. On quadruple engine installations, install the double clevis assemblies onto the center engines. Single clevis assemblies are always used on the outside engines.
9. Apply 2-4-C with PTFE to the clevis/tie bar arm attaching bolt shoulder. Install one side of the tie bar assembly onto the center/inner engine. Secure the tie bar assembly to the center engine with a M10 x 1.5 x 50.5 mm bolt and M10 jam nut. Do not tighten the fasteners until final adjustments have been made.

Tube Ref No.	Description	Where Used	Part No.
 95	2-4-C with PTFE	Clevis/tie bar arm attaching bolt shoulder	92-802859A 1

10. Adjust the tie bar length to match the measurement recorded in step 5 by turning the free end of the tie bar assembly.


IMPORTANT: Ensure that the tie rod end is threaded into the coupler a minimum of 30 mm (1.18 in.).
11. Install the free end of the tie bar assembly onto the other tie bar arm. Ensure that the engines are centered.
12. When the engines are centered, tighten the bolts, M10 nuts, and M20 nut against the coupler to the specified torque.

IMPORTANT: Tighten the bolts to the specified torque first, then torque the nuts to the specified torque while holding the bolt heads with a wrench.

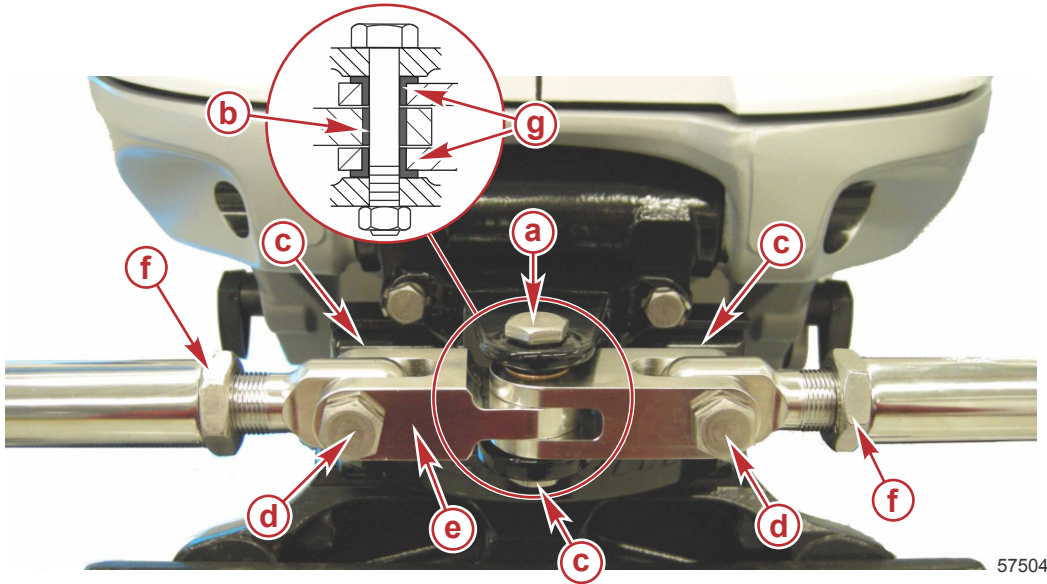

57504

- a** - Clevis/tie bar arm attaching bolt (M10 x 1.5 x 50.5 mm)
- b** - Bushing
- c** - M10 jam nut (hidden)
- d** - Clevis attaching bolt (M10 x 1.5 x 42 mm)
- e** - Clevis
- f** - M20 jam nut
- g** - Flanged bushing

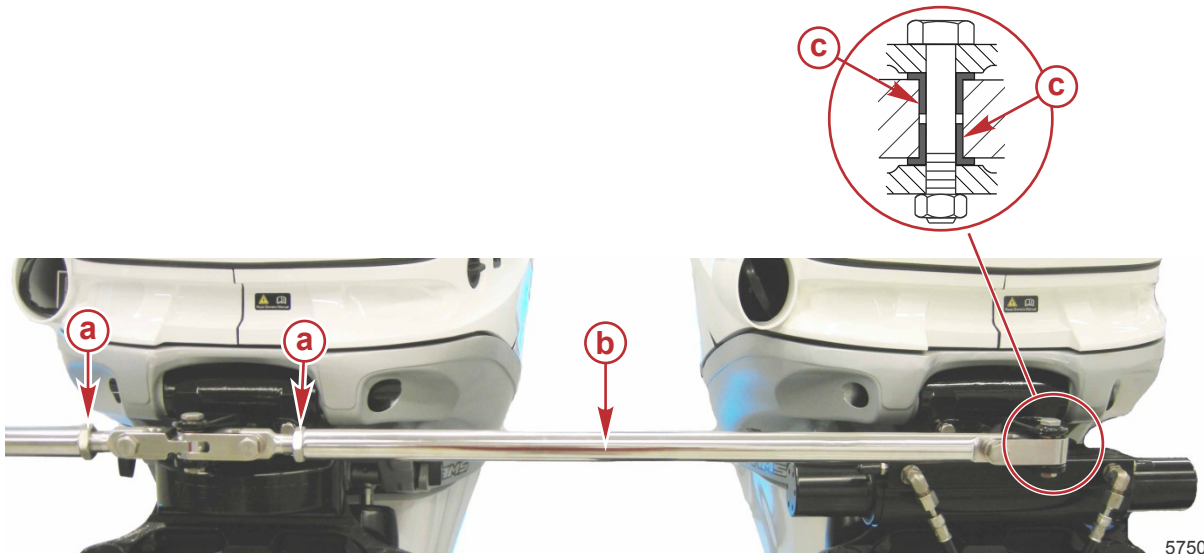

57505

- a** - M20 jam nut
- b** - Coupler
- c** - Flanged bushing (12 x 7 mm)

Description	Nm	lb-in.	lb-ft
Clevis/tie bar arm attaching bolt (M10 x 1.5 x 50.5 mm)	25	–	18.4
Clevis attaching bolt (M10 x 1.5 x 42 mm)	25	–	18.4
M10 jam nut (hidden)	50	–	36.9

AMS Tie Bar Kits

Description	Nm	lb-in.	lb-ft
M20 jam nut	50	-	36.9

Tube Ref No.	Description	Where Used	Part No.
95	2-4-C with PTFE	Clevis/tie bar arm attaching bolt shoulder	92-802859A 1

⚠ WARNING

Incorrect steering system installation can result in serious injury or death. After completing installation and before operating the outboard, check steering operation. The outboard must turn left and right in conjunction with the steering wheel. Check the steering through the full range and at all tilt angles.

Maintenance Instructions

Maintenance inspection is the owner's responsibility and must be performed at the specific intervals.

Normal service - Every 50 hours of operation or 60 days (whichever comes first).


Severe service - Every 25 hours of operation or 30 days (whichever comes first).

NOTE: Operation in saltwater is considered severe service.

1. Check steering system components for wear. Replace any worn parts.
2. Check steering system fasteners to ensure they are torqued to correct specifications.
3. Refer to operating and maintenance instructions for power steering system.

Liquid Tie Bar Kit


Component Contained In Liquid Tie Bar Kit (893396A02)

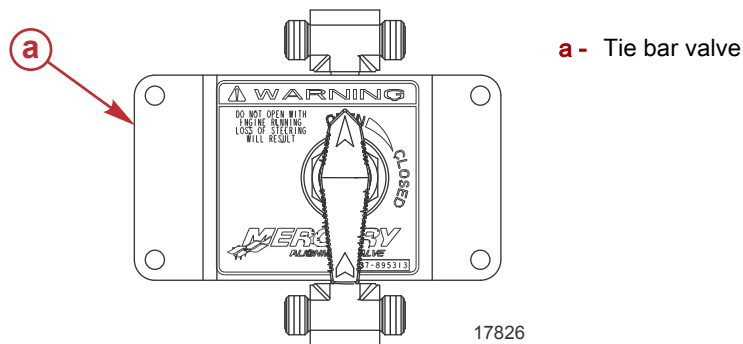

Liquid Tie Bar Installation

1. Mount the tie bar valve in an area where the valve will be accessible for making periodic realignments.
2. Install the steering cylinder (896500A01) to the left-hand rotation outboard (XL, XXL). Follow the installation instructions which are provided with the steering cylinder.
3. Refer to the **Mercury Precision Parts Accessories Guide** and order the hydraulic hoses in the required length.
4. Connect the hydraulic hoses to the steering helm and power steering pump following the instructions which accompany the steering helm and pump.

5. Connect the hydraulic hoses between the tie bar valve and steering cylinders.

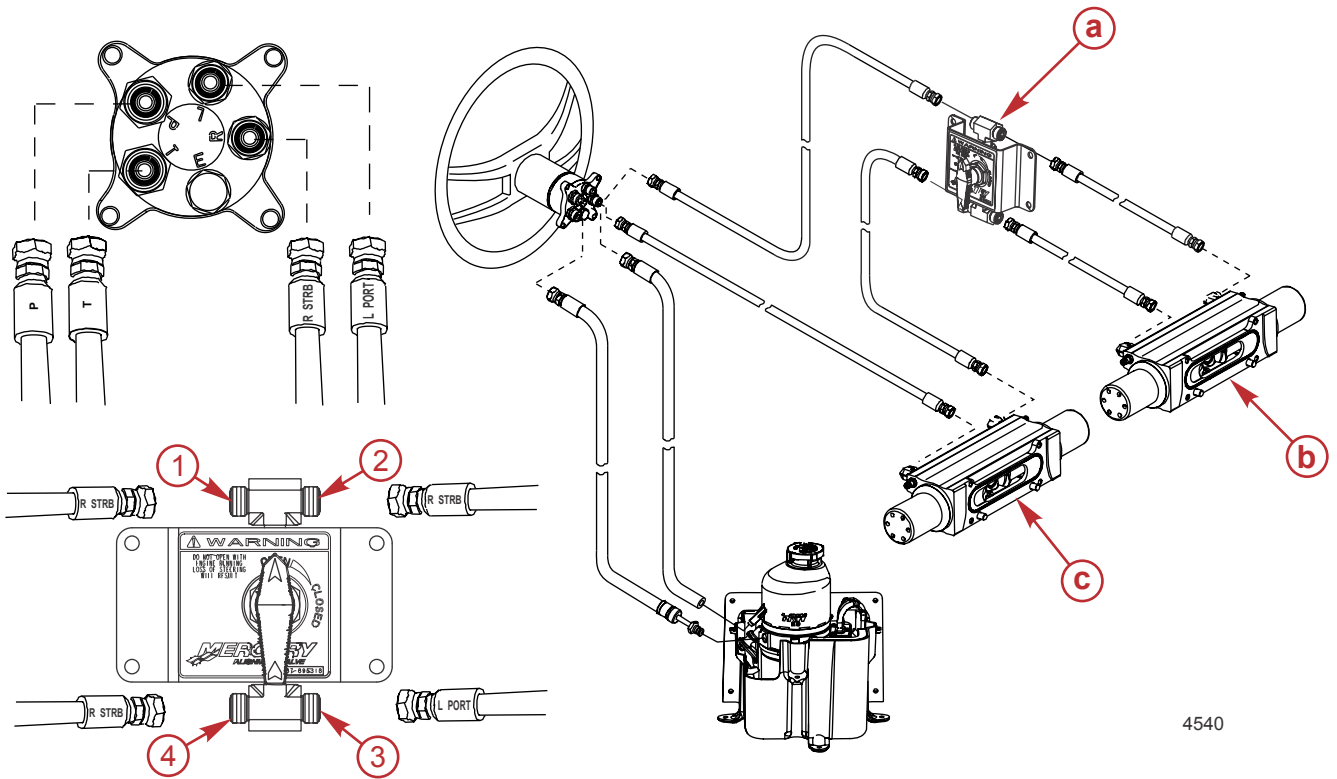

4540

- a - Tie bar valve
- b - Steering cylinder, starboard outboard
- c - Steering cylinder, port outboard

Steering Helm Fitting ID Mark	Hose ID Mark	Description
P	P	Pressure from pump to helm
T	T	Tank low pressure return to pump
R	R STRB	Hose connects to tie bar valve
L	L PORT	Hose connects to port side fitting on port steering cylinder

Tie Bar Valve Fitting ID	Hose ID Mark	Description
1	R STRB	Hose connects to R fitting on steering helm
2	R STRB	Hose connects to starboard side fitting on starboard steering cylinder
3	L PORT	Hose connects to port side fitting on starboard steering cylinder
4	R STRB	Hose connects to starboard side fitting on port steering cylinder

6. Open the tie bar valve.
7. Fill the steering system with Synthetic Power Steering Fluid SAE 0W-30. Follow the filling instructions provided with the power steering pump. Complete the bleeding instructions following.


Tube Ref No.	Description	Where Used	Part No.
138	Synthetic Power Steering Fluid SAE 0W-30	Steering system	92-858077K01

Bleeding Instructions

1. When bleeding the power steering system, have the engines running, or electrically operate the power steering pump using the power steering module primer kit.

Power Steering Module Primer Kit	91-895040K01
----------------------------------	--------------

- Open the tie bar valve.

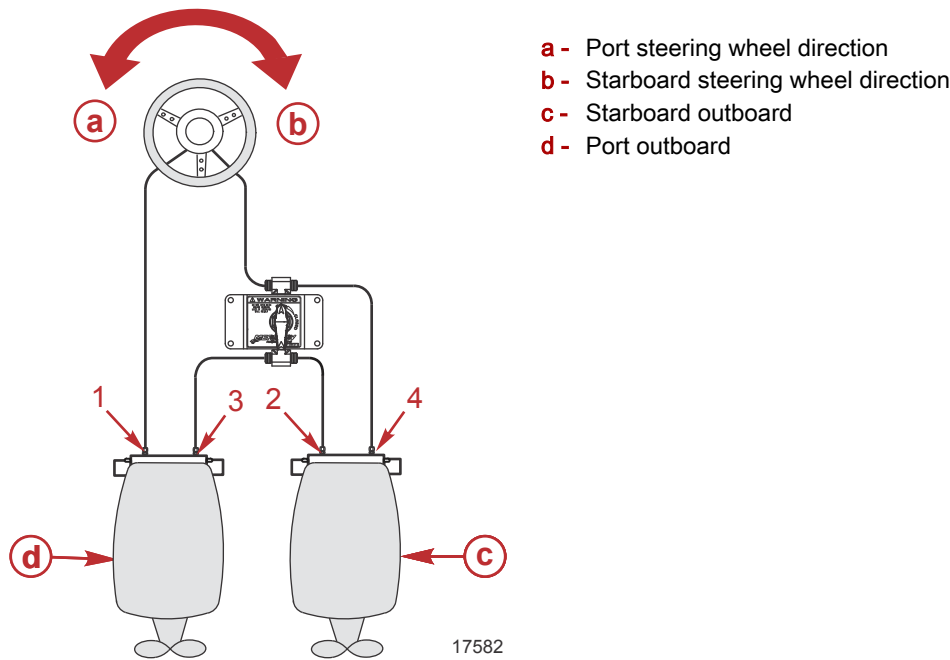

NOTE: Attach an 8 mm (5/16 in.) I.D. transparent bleed hose to the bleed fitting being opened. Route the other end of the bleed hose back into the steering pump tank. Do not bleed the power steering fluid into a different container, this will only be pumping fluid out of the system that was just filled up.

- Turn the steering wheel to starboard until the port outboard is facing bleed fitting 1 and contacting the full steering stop. Open bleed fitting 1 until an air free stream of fluid comes from the fitting. Close bleed fitting 1.
- Take hold of the starboard outboard and turn it manually so it is facing bleed fitting 2 and contacting the full steering stop. Open bleed fitting 2 until an air free stream of fluid comes from the fitting. Close bleed fitting 2.
- Open bleed fitting 3. Take hold of the port outboard and manually turn it so it is facing bleed fitting 3 and contacting the full steering stop. Leave bleed fitting 3 open until an air free stream of fluid comes from the fitting. Close bleed fitting 3.
- Open bleed fitting 4. Take hold of the starboard outboard and manually turn it so it is facing bleed fitting 4 and contacting the full steering stop. Leave bleed fitting 4 open until an air free stream of fluid comes from the fitting. Close bleed fitting 4.
- Close the tie bar valve.
- Refer to **Realignment Instructions** (following) to align the outboards.

Realignment Instructions

During normal usage, it is possible for the outboards to become misaligned. Outboard alignment should be checked before each use.

If misalignment occurs, complete the following steps to realign.


Propellers too Far Apart

- On models with power steering, have the engines running, or electrically operate the power steering pump using the power steering module primer kit.

Power Steering Module Primer Kit	91-895040K01
----------------------------------	--------------

- Turn the steering wheel to full starboard. Both outboards will move. The starboard outboard will contact its full steering stop first.
- After the starboard outboard contacts its full steering stop, open the tie bar valve.
- Continue to turn the steering wheel to full starboard until the port outboard contacts its full steering stop.

- Close the tie bar valve.

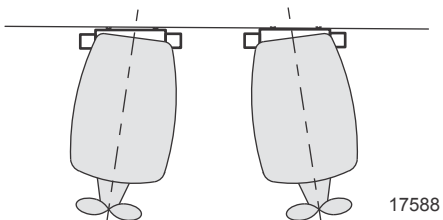


Propellers too Close Together

- On models with power steering, have the engines running, or electrically operate the power steering pump using the power steering module primer kit.

Power Steering Module Primer Kit	91-895040K01
----------------------------------	--------------

- Turn the steering wheel to full port. Both outboards will move. The starboard outboard will contact its full steering stop first.
- After the starboard outboard contacts its full steering stop, open the tie bar valve.
- Continue to turn the steering wheel to full port until the port outboard contacts its full steering stop.
- Close the tie bar valve.

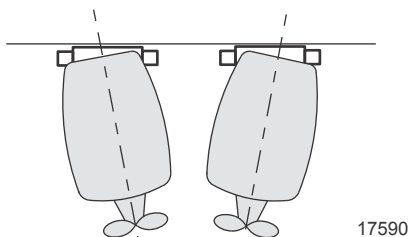

Notes:

Color Diagrams

Section 8A - Color Diagrams

Table of Contents


V8 (200–300 HP) Oil Flow Diagram.....	8A-4	V8 (200–300 HP) Cooling Diagram.....	8A-5
---------------------------------------	------	--------------------------------------	------

**8
A**

Notes:

Notes:


V8 (200–300 HP)
Oil Flow Diagram

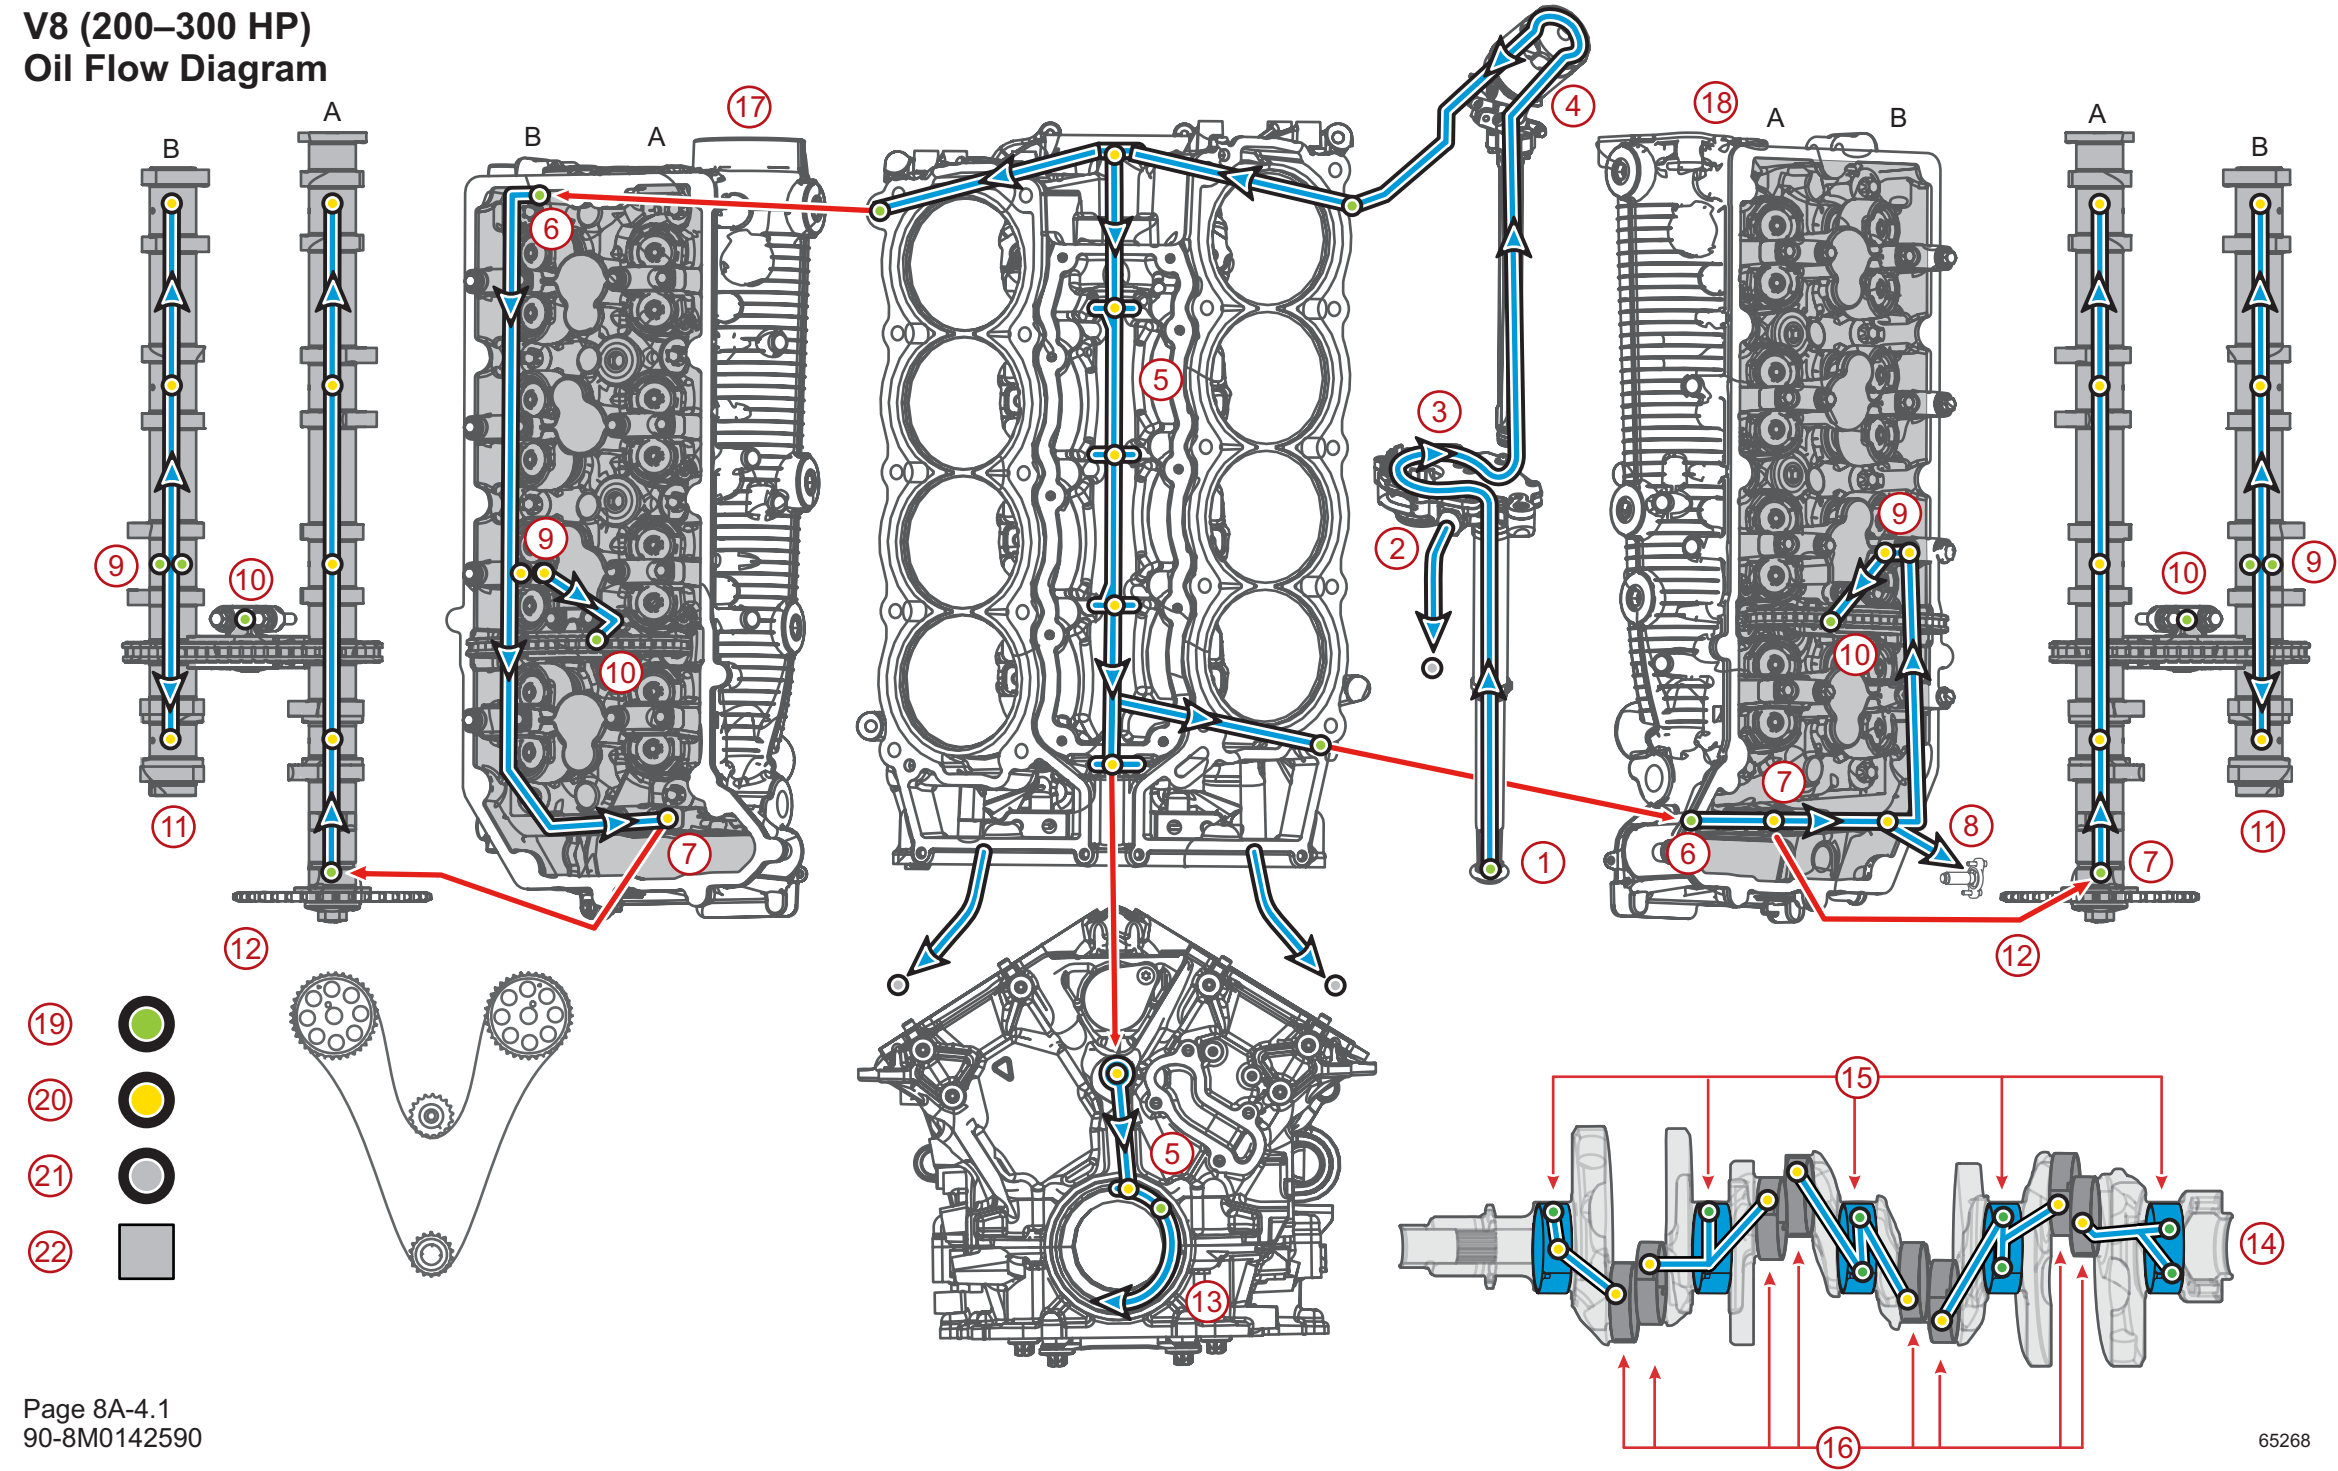

V8 (200–300 HP) Oil Flow Diagram

- 1 - Oil pickup
- 2 - Oil pressure relief valve
- 3 - Oil pump
- 4 - Oil filter
- 5 - Oil gallery
- 6 - High-pressure oil in
- 7 - Exhaust side camshaft oil feed
- 8 - Timing chain tensioner
- 9 - Intake side camshaft oil feed
- 10 - Oil feed to cam chain drive tensioner
- 11 - Intake camshaft
- 12 - Exhaust camshaft
- 13 - Bedplate
- 14 - Crankshaft
- 15 - Main bearing
- 16 - Connecting rod bearing
- 17 - Port cylinder head
- 18 - Starboard cylinder head
- 19 - Oil entry point
- 20 - Oil distribution point
- 21 - Oil return
- 22 - Oil wet surface

V8 (200–300 HP)
Cooling Diagram

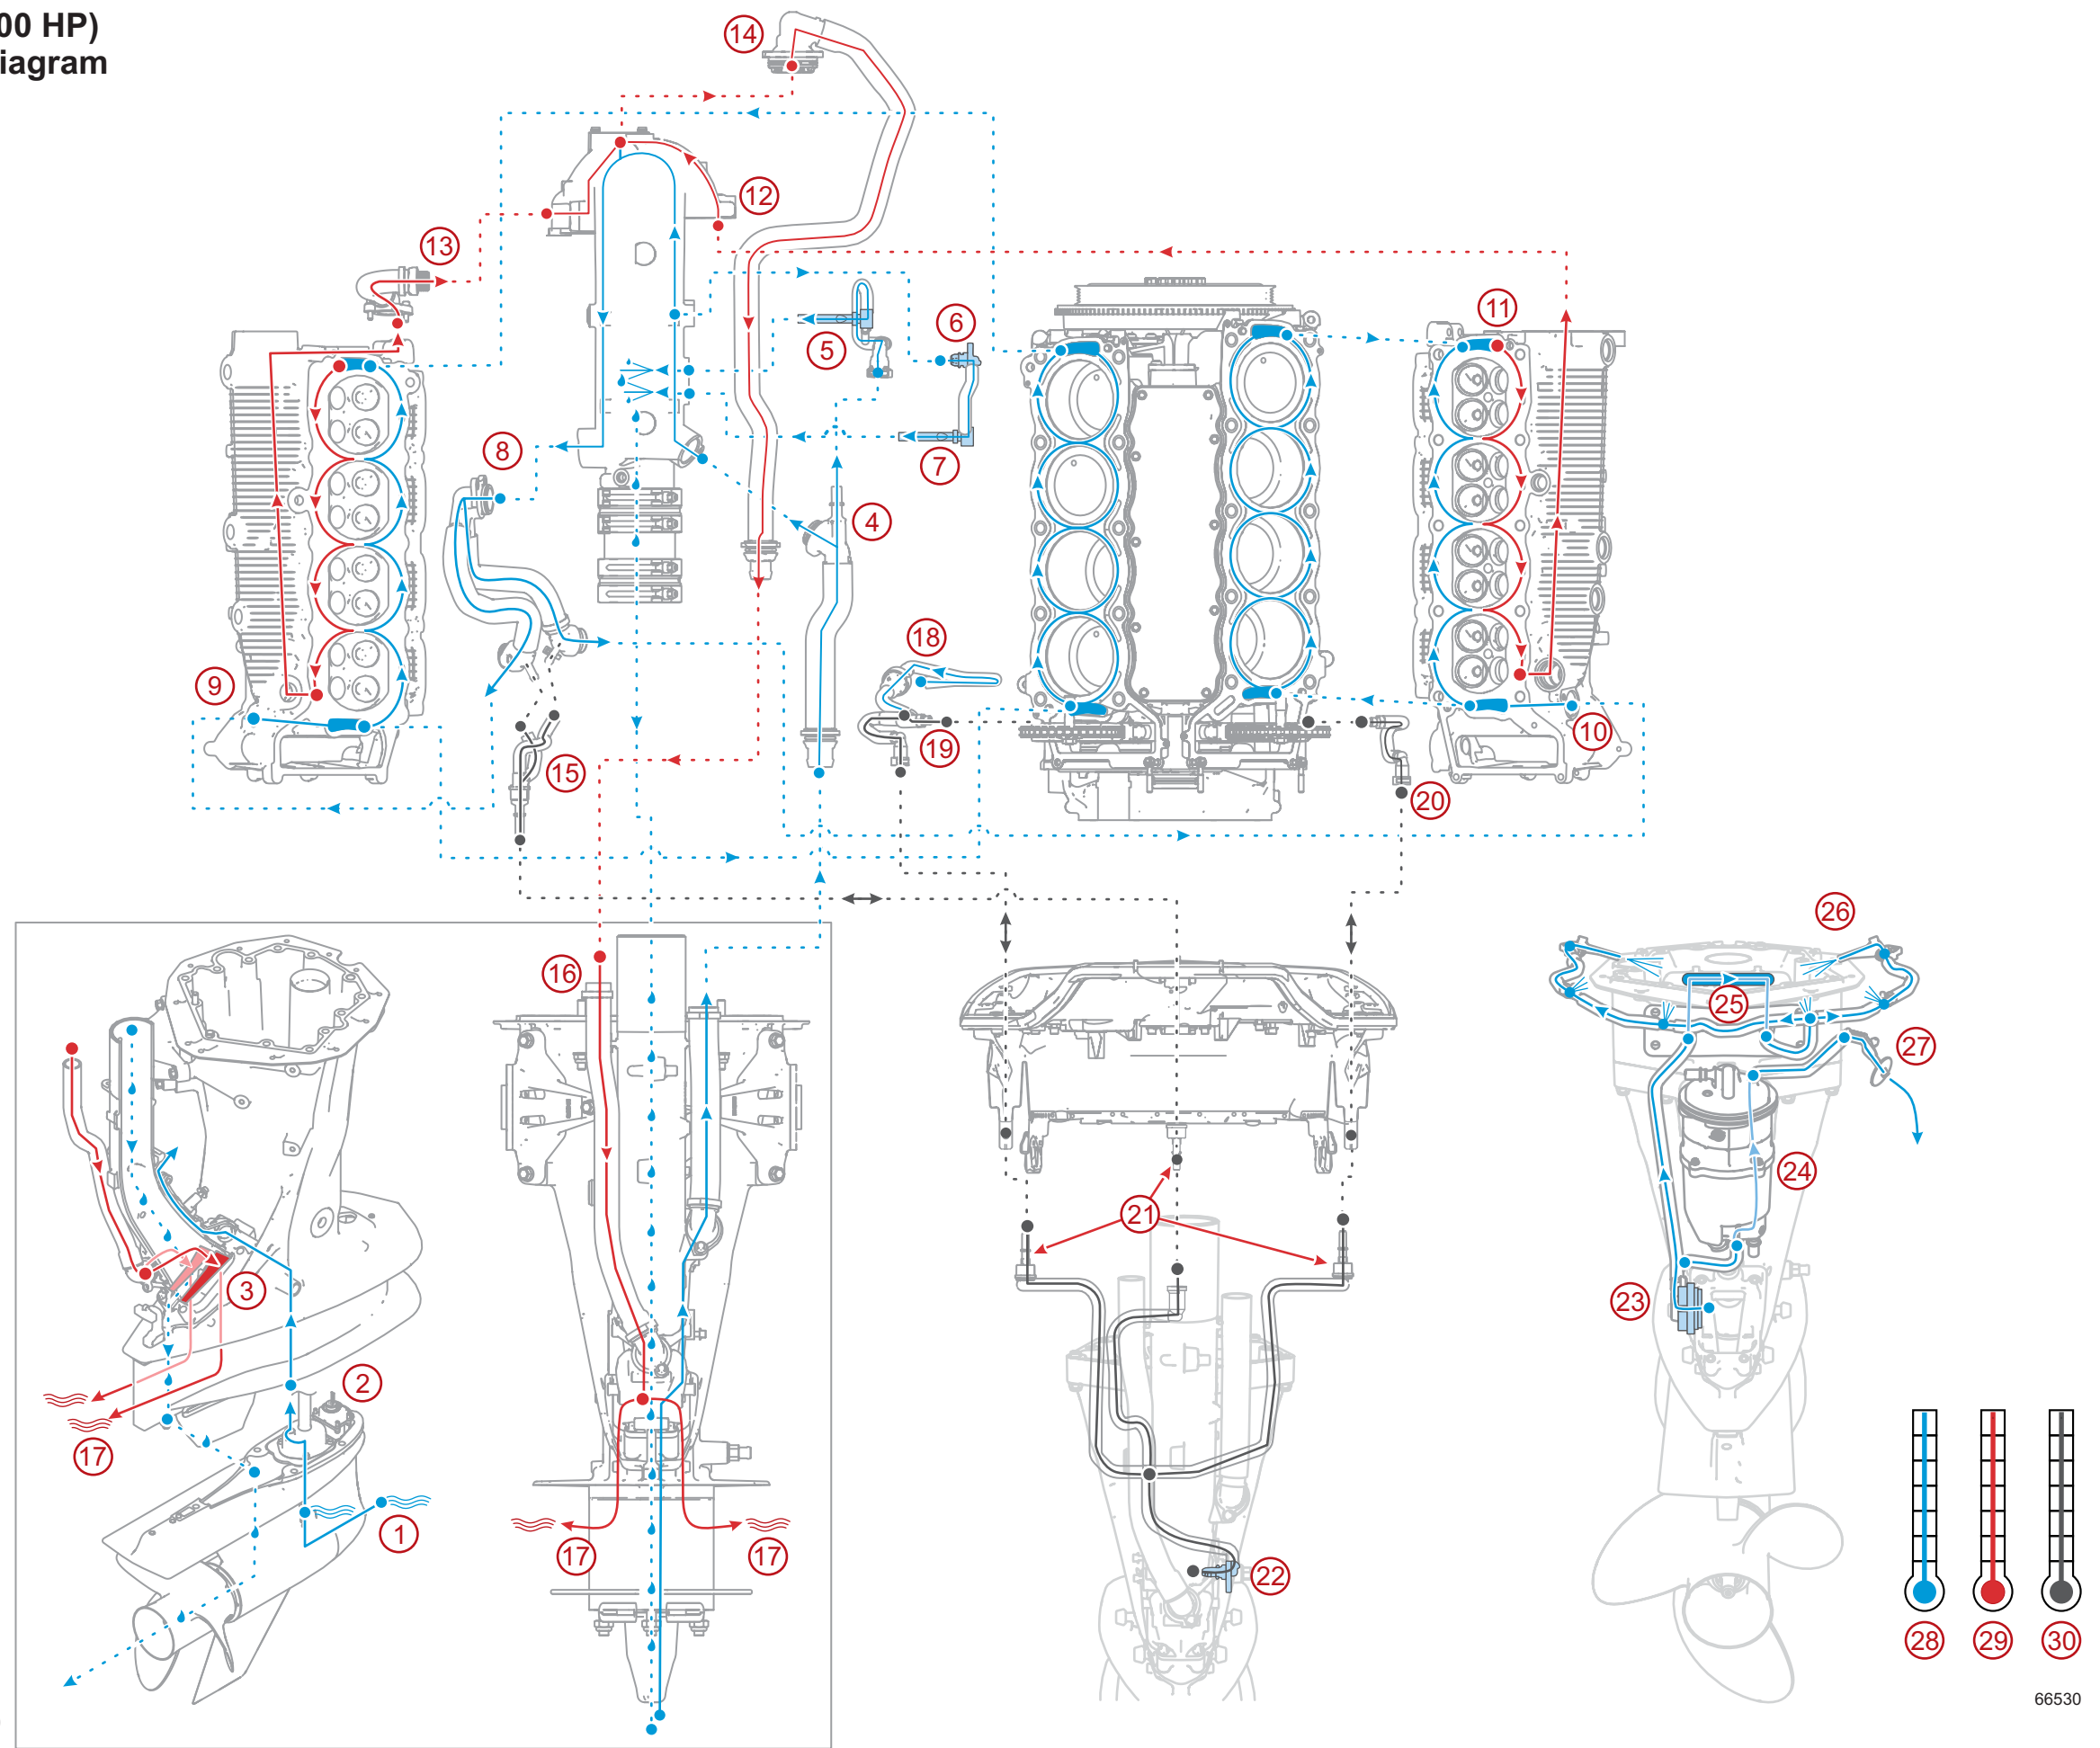

V8 (200–300 HP) Cooling Diagram

- 1 - Water pickups
- 2 - Water pump
- 3 - Lower exhaust tube grommet
- 4 - Exhaust tube sprayer strainer
- 5 - Exhaust sprayer
- 6 - Exhaust sprayer strainer
- 7 - Exhaust sprayer
- 8 - Engine water supply (to heads)
- 9 - Port head engine water supply fittings
- 10 - Starboard head engine water supply fittings
- 11 - Optional water pressure sensor
- 12 - Water temperature sensor
- 13 - Port engine water outlet
- 14 - Thermostat
- 15 - Head drain chap plate Y-fitting
- 16 - Thermostat outlet water
- 17 - Thermostat water exit
- 18 - Flush valve
- 19 - Port block drain and Y-fitting
- 20 - Starboard block drain
- 21 - Block and head drain quick-connect fittings
- 22 - Block and head drain strainer
- 23 - Water pump indicator midsection strainer
- 24 - Fuel supply module
- 25 - Engine mount cooler
- 26 - Midsection oil cooler sprayer
- 27 - Water pump indicator
- 28 - Cold water (supply)
- 29 - Hot water (return)
- 30 - Block and head drain

Notes:



www.mercurymarine.com.au
41-71 Bessemer Drive
Dandenong South, Victoria 3175 Australia

www.mercurymarine.com
P.O. Box 1939
Fond du Lac, WI 54936-1939 USA

www.brunswick-marine.com
Parc Industriel de Petit-Rechain
B-4800 Verviers, Belgium

